


# Service Manual

## Air-to-Water Hydromodule + Tank

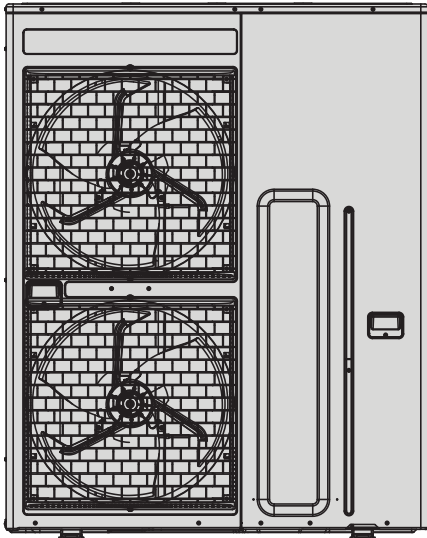

**Outdoor Unit**  
**WH-WDG09ME8**  
**WH-WDG12ME8**  
**WH-WDG16ME8**


**Destination**  
**Europe**

Please file and use this manual with the Service Manual for Model No. WH-ADC0316M9E82, WH-ADC0316M9E83, WH-ADC0316M9E81, WH-SDC0316M9E8, WH-CME8, Order No. PCZ2406001CE, PCZ2411003CE, PCZ2507014CE, PCZ2411004CE, PCZ2410002CE.

### **WARNING**

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the products dealt with in this service information by anyone else could result in serious injury or death.

### **IMPORTANT SAFETY NOTICE**

There are special components used in this equipment which are important for safety. These parts are marked by  in the Schematic Diagrams, Circuit Board Diagrams, Exploded Views and Replacement Parts List. It is essential that these critical parts should be replaced with manufacturer's specified parts to prevent shock, fire or other hazards. Do not modify the original design without permission of manufacturer.

### **PRECAUTION OF LOW TEMPERATURE**

In order to avoid frostbite, be assured of no refrigerant leakage during the installation or repairing of refrigerant circuit.

### **CAUTION**

#### **R290 REFRIGERANT**

This AIR-TO-WATER HEATPUMP contains and operates with refrigerant R290.  
**THIS PRODUCT MUST ONLY BE INSTALLED OR SERVICED BY QUALIFIED PERSONNEL**  
 Refer to National, State, Territory and local legislation, regulations, codes, installation & operation manuals,  
 before the installation, maintenance and/or service of this product.

# TABLE OF CONTENTS



<b>1. Safety Precautions</b> .....	<b>4</b>	14.5 Auto Restart Control .....	168
<b>2. Precautions for Use of R290 Refrigerant</b> .....	<b>6</b>	14.6 Indication Panel .....	168
<b>3. Specifications</b> .....	<b>10</b>	14.7 Indoor Back-Up Heater Control (Excluding when Operating in Standalone) .....	169
3.1 WH-ADC0316M9E82 WH-WDG09ME8 .....	10	14.8 Tank Heater Control (Excluding when Operating in Standalone).....	170
3.2 WH-ADC0316M9E83 WH-WDG09ME8 .....	14	14.9 Base Pan Heater Control (Optional).....	171
3.3 WH-ADC0316M9E81 WH-WDG09ME8 .....	18	14.10 Force Heater Mode .....	171
3.4 WH-SDC0316M9E8 WH-WDG09ME8 .....	22	14.11 Powerful Operation .....	173
3.5 WH-CME8 WH-WDG09ME8 .....	25	14.12 Quiet Operation.....	173
3.6 WH-ADC0316M9E82 WH-WDG12ME8 .....	28	14.13 Sterilization Mode .....	174
3.7 WH-ADC0316M9E83 WH-WDG12ME8 .....	32	14.14 DHW Circulation Pipe Sterilization Operation ..	175
3.8 WH-ADC0316M9E81 WH-WDG12ME8 .....	36	.....	175
3.9 WH-SDC0316M9E8 WH-WDG12ME8 .....	40	14.15 Outdoor Ambient Thermo OFF Control ....	175
3.10 WH-CME8 WH-WDG12ME8 .....	43	14.16 Alternative Outdoor Ambient Sensor Control ..	175
3.11 WH-ADC0316M9E82 WH-WDG16ME8 .....	46	.....	175
3.12 WH-ADC0316M9E83 WH-WDG16ME8 .....	50	14.17 Force DHW mode .....	176
3.13 WH-ADC0316M9E81 WH-WDG16ME8 .....	54	14.18 SMART DHW mode .....	176
3.14 WH-SDC0316M9E8 WH-WDG16ME8 .....	58	14.19 Efficiency Tank Mode Operation.....	177
3.15 WH-CME8 WH-WDG16ME8 .....	61	14.20 Anti Freeze Control .....	178
<b>4. Features</b> .....	<b>64</b>	14.21 Solar Operation (Optional).....	181
<b>5. Location of Controls and Components</b> .....	<b>65</b>	14.22 Boiler Bivalent Control .....	182
5.1 Indoor Unit .....	65	14.23 External Room Thermostat Control (Optional) ..	184
5.2 Outdoor Unit.....	99	.....	184
<b>6. Dimensions</b> .....	<b>100</b>	14.24 Three Ways Valve Control .....	185
6.1 Outdoor Unit.....	100	14.25 Two Ways Valve Control.....	185
<b>7. Refrigeration and Water Cycle Diagram</b> .....	<b>101</b>	14.26 Anti-Stick Mode Operation .....	186
<b>8. Block Diagram</b> .....	<b>104</b>	14.27 External OFF/ON Control .....	187
<b>9. Wiring Connection Diagram</b> .....	<b>105</b>	14.28 External Compressor Switch (Optional PCB) ..	188
9.1 Outdoor Unit.....	105	.....	188
<b>10. Electronic Circuit Diagram</b> .....	<b>106</b>	14.29 Heat/Cool Switch (Optional PCB).....	188
10.1 Outdoor Unit.....	106	14.30 SG Ready Control (Optional PCB) .....	189
<b>11. Printed Circuit Board</b> .....	<b>107</b>	14.31 Demand Control (Optional PCB) .....	191
11.1 Outdoor Unit.....	107	14.32 Holiday Mode .....	192
<b>12. Installation Instruction</b> .....	<b>110</b>	14.33 Dry Concrete .....	192
12.1 Outdoor Unit.....	110	14.34 Flow Sensor .....	192
12.2 Appendix .....	128	<b>15. Protection Control</b> .....	<b>193</b>
12.3 Service and Maintenance .....	142	15.1 Protection Control for All Operations .....	193
<b>13. Installation and Servicing Air-to-Water using R290</b> .....	<b>143</b>	15.2 Protection Control for Heating Operation.....	195
13.1 About R290 Refrigerant .....	143	.....	195
13.2 Characteristics of R290 Refrigerant.....	143	15.3 Protection Control for Cooling Operation.....	198
13.3 Refrigerant piping installation • Tools used in services .....	145	.....	198
13.4 New installation, and Repairing of Refrigerant Cycle System Procedures .....	149	<b>16. Servicing Guide</b> .....	<b>199</b>
13.5 Servicing .....	150	16.1 How to Take Out Front Plate .....	199
<b>14. Operation and Control</b> .....	<b>152</b>	16.2 Test Run .....	199
14.1 Basic Function .....	152	16.3 Expansion Vessel (1) (ID) Pre Pressure Checking .....	199
14.2 Water Pump .....	163	16.4 How to Adjust Pump Speed .....	200
14.3 Extra Pump Function (Optional) .....	166	16.5 How to Unlock Cool Mode .....	201
14.4 Water Circuit Part Safety .....	168	16.6 EEPROM Factory Default Data Setup Procedure .....	202
		16.7 Dry Concrete Setup .....	203
		<b>17. Maintenance Guide</b> .....	<b>205</b>
		17.1 Maintenance for Magnetic Water Filter Set .....	210
		.....	210
		<b>18. Troubleshooting Guide</b> .....	<b>212</b>
		18.1 Refrigeration Cycle System .....	212

18.2 Relationship Between the Condition of the Air-to-Water Heatpump Indoor and Outdoor Units and Electric Current.....	213
18.3 Breakdown Self Diagnosis Function.....	214
18.4 Error Codes Table .....	216
18.5 Self-Diagnosis Method .....	219
<b>19. Disassembly and Assembly Instructions ....</b>	<b>266</b>
19.1 Outdoor Unit .....	266
<b>20. Technical Data .....</b>	<b>270</b>
20.1 Operation Characteristics .....	270
20.2 Heating Capacity Table .....	282
20.3 Cooling Capacity Table .....	288
<b>21. Exploded View and Replacement Parts List .....</b>	<b>289</b>
21.1 Outdoor Unit .....	289




• Specifications, designs and contents in this Service Manual are subject to change without notice.

# 1. Safety Precautions















 




- Read the following “SAFETY PRECAUTIONS” carefully before installation.
- This manual also includes 3-phase content, but the images on the following pages show only 1-phase. Please read “12.1.6 Connect the Cable to the Outdoor Unit” carefully.
- Electrical works and water installation works must be done by licensed electrician and licensed water system installer respectively. Be sure to use the correct rating and main circuit for the model to be installed.
- The refrigerant cycle is completed within the outdoor unit, so refrigerant pipework and pump-down operations are not required.
- The caution items stated here must be followed because these important contents are related to safety. The meaning of each indication used is as below. Incorrect installation due to ignorance or negligence of the instructions will cause harm or damage, and the seriousness is classified by the following indications.
- Please keep the operation and installation manuals with the unit after installation.



















 <b>WARNING</b>	This indication shows the possibility of causing death or serious injury.
 <b>CAUTION</b>	This indication shows the possibility of causing injury or damage to properties only.














The items to be followed are classified by the symbols:

	Symbols with white background indicate prohibited items.
 	Symbols with dark background must be executed.

 - Carry out test run to confirm that no abnormality occurs after the installation. Then, explain to user the operation, care and maintenance as stated in instructions.
- This appliance is not designed to be accessible to the general public.
- If there is any doubt about the installation procedure or operation, always contact the authorized dealer for advice and information.










 <b>WARNING</b>	
1. Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer. Any unfit method or using incompatible material may cause product damage, burst or serious injury.	
2. Do not install outdoor unit near balcony railings. If the outdoor unit is installed on the balcony of a high-rise building, small children may climb onto the outdoor unit and climb over the railing, which may lead to an accident.	
3. Do not use unspecified cable or joint cable for power supply cable. Do not share the single outlet with other electrical appliances. Poor contact, poor insulation or over current will cause electrical shock or fire.	
4. Do not tie up the power supply cable into a bundle by band. Abnormal temperature rise on power supply cable may happen.	
5. Do not insert your fingers or other objects into the unit, high speed rotating fan may cause injury. 	
6. Do not sit on or step on the unit, you may fall down accidentally. 	
7. Do not purchase unauthorized electrical parts for installation, service, maintenance and etc.. They might cause electrical shock or fire.	
8. Do not modify wires of Outdoor Unit for installation of other components (such as heaters). Overloading of wires or wire connection points may cause electrical shock or fire.	
9. Do not pierce or burn as the appliance is pressurized. Do not expose the appliance to heat above 360°C, flame, sparks, or other sources of ignition. Else, it may explode and cause injury or death.	
10. Do not add or replace refrigerant other than specified type. It may cause product damage, burst and injury etc.	
11. Do not use a joint cable for the outdoor connection; otherwise, it may cause overheating or a fire at the connection.	
12. Do not install the outdoor unit at place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire.	
13. Do not release refrigerant while repairing refrigeration components. Be careful of liquid refrigerants as it can cause frostbite.	
14. Keep plastic bag (packaging material) away from small children, it may cling to nose and mouth and prevent breathing.	
15. For water circuit installation work, follow to relevant European and national regulations (including EN61770) and local plumbing and building regulation codes.	
16. For electrical work, follow local wiring standards and regulations and this installation instructions. An independent circuit and single outlet must be used. If electrical circuit capacity is not enough or defect found in the electrical work, it will cause electrical shock or fire.	




 <b>WARNING</b>		
17.	Comply with national wiring rules or country-specific safety measures in terms of residual current (Installing a Residual Current Device (RCD) on-site is strongly recommended).	
18.	Engage authorized dealer or specialist for installation. If installation done by the user is incorrect, it will cause water leakage, electrical shock or fire.	
19.	Only use the supplied or specified installation parts. Else, it may cause unit vibrate, fall, water leakage, electrical shock, or fire.	
20.	For installation of refrigeration system, strictly follow this installation procedures. Incorrect installation may cause water leakage, which may lead to electrical shock or fire.	
21.	Install at a strong and firm location which is able to withstand weight of the set. If the strength is not enough or installation is not properly done, the set will drop and cause injury.	
22.	For outdoor connections, use the specified outdoor connection cable. Refer to instruction <b>12.1.6 Connect the Cable to the Outdoor Unit</b> and ensure it is connected tightly. Clamp the cable so that no external force will be acted on the terminal. If the connection or securing is not perfect, it may cause overheating or a fire at the connection.	
23.	Ensure that the combination of the indoor unit and outdoor unit is as specified in the catalog. <b>Combinations of a 1-phase indoor unit with a 3-phase outdoor unit are not authorized.</b>	
24.	Wiring must be properly routed to ensure that the control board cover is correctly secured. If the control board cover is not fully secured, it will cause fire or electrical shock.	
25.	After installation is complete, make sure that there is no refrigerant gas leak. There is a risk of fire or explosion if the refrigerant contacts fire.	
26.	If refrigerant gas leaks during operation, ventilate the room. Extinguish all sources of fire, if any. If the refrigerant contacts fire, there is a possibility of fire / explosion.	
27.	This installation may be subjected to building regulation approval applicable to respective country that may require to notify the local authority before installation.	
28.	If there is any doubt about the installation procedure or operation, always contact the authorized dealer for advice and information.	
29.	When installing electrical equipment at wooden building of metal lath or wire lath, in accordance with electrical facility standard, no electrical contact between equipment and building is allowed. Insulator must be installed in between.	
30.	Any work carried out on the outdoor unit after removing any panels which is secured by screws, must be carried out under the supervision of authorized dealer and licensed installation contractor.	
31.	Be aware that R290 Refrigerant is odourless and flammable.	
32.	Ensure the correct polarity is maintained throughout all wiring. Otherwise, it will cause electrical shock or fire.	
33.	This equipment must be properly earthed. Electrical earth must not be connected to gas pipe, water pipe, earth of lightning rod and telephone. Otherwise, it may cause electrical shock in case of insulation breakdown or earth fault of the outdoor unit.	

 <b>CAUTION</b>		
1.	Do not touch sharp edges, such as aluminum fins, as they may cause injury. 	
2.	Ensure that the insulation of the power cable does not come into contact with hot areas (e.g. water pipes) to prevent insulation failure (melting) of the power cable.	
3.	Prevent liquid or vapor from entering sumps or sewers since vapor is heavier than air and may form suffocating atmospheres.	
4.	Select an installation location which is easy for maintenance. Incorrect installation, service or repair of this outdoor unit may increase the risk of rupture and this may result in loss, damage or injury and/or property.	
5.	Power supply connection <ul style="list-style-type: none"> <li>• Power supply point should be in easily accessible place for power disconnection in case of emergency.</li> <li>• Comply with local national wiring standard, regulation, and this installation instruction.</li> <li>• It is strongly recommended to make a permanent connection to a circuit breaker with a minimum contact gap of 3.0mm. <ul style="list-style-type: none"> <li>- For Power supply, refer to "Isolating Devices" and "Recommended RCD" in the table for Power Supply Cable on <b>12.1.6 Connect the Cable to the Outdoor Unit</b>.</li> </ul> </li> </ul>	
6.	Installation work. It may need two or more people to carry out the installation work. The weight of outdoor unit might cause injury if carried by one person.	
7.	Ensure that the required ventilation openings are free from obstacles.	
8.	Water piping in the occupied space should be installed in such a way as to prevent accidental damage during operation and service.	
9.	Be careful not to subject the water piping to excessive vibration or pulsation.	
10.	Protect water piping from accidental burst that may be caused by moving furniture or rebuilding activities.	
11.	<ul style="list-style-type: none"> <li>• The water piping should be routed to the shortest possible length. Avoid using dented pipes and avoid sharp bending.</li> <li>• It must be ensured that water piping is protected from physical damage.</li> </ul>	

## 2. Precautions for Use of R290 Refrigerant

- Pay close attention to the following points:

 <b>WARNING</b>	
1. Mixing different types of refrigerants in the system is prohibited.	
2. Do not place any part of the refrigeration circuit (evaporator, air cooler, AHU, condenser, or liquid receiver) or pipework near heat source, naked flame, or gas appliance or electric heater in operation.	
3. Operation, maintenance, repair and recovery of refrigerants must be carried out by personnel trained and certified in the use of flammable refrigerants and in accordance with the manufacturer's recommendations. Personnel who operate, service or maintain the relevant parts of the system or equipment must be trained and certified.	
4. The user, owner or their authorized representative shall, where required by national regulations, regularly check alarms, mechanical ventilation, and detectors at least once a year to ensure they are functioning correctly.	
5. A logbook shall be maintained. The results of these checks shall be recorded in the logbook.	
6. In case of occupied space ventilation, it must be ensured that there are no obstacles.	
7. Before operating a new refrigeration system, the person responsible for operating the system must ensure that trained and certified operators are instructed in the construction, supervision, operation and maintenance of the refrigeration system, as well as the safety measures to be observed and the properties and handling of the refrigerants used in accordance with the operating manual. The general requirements for trained and certified personnel are as follows: a) Knowledge of legislation, regulations and standards relating to flammable refrigerants. b) Detailed knowledge and skills in handling flammable refrigerants, personal protective equipment, refrigerant leak prevention, cylinder handling, charging, leak detection, recovery, and disposal. c) Able to understand and apply in practice the requirements of national laws, regulations and standards. d) Continuously undergoing regular and further training to maintain the expertise.	
8. Ensure that protective devices, refrigeration circuits and accessories are adequately protected against adverse environmental effects (e.g. risk of water freezing in the relief pipe or accumulation of dirt and debris).	

 <b>CAUTION</b>	
<p>Installation</p> <ul style="list-style-type: none"> <li>• Must comply with national gas regulations, state and local laws and regulations. Notify the relevant authorities in accordance with all applicable regulations.</li> </ul> <p>1. • It must be ensured that the mechanical connections are accessible for maintenance. • If mechanical ventilation is required, the ventilation openings must be kept free from obstacles. • For disposal of the product, follow the precautions in #12 and comply with national regulations. • Always contact your local municipal office for appropriate handling.</p>	
<p>Servicing</p> <p>2-1. Service personnel</p> <ul style="list-style-type: none"> <li>• Qualified personnel engaged in work or entry into refrigerant circuits must have a valid qualification from an industry-recognised assessment body. This assessment body certifies the ability to safely handle refrigerants according to the industry-accepted assessment specifications.</li> <li>• Maintenance should only be carried out in accordance with the equipment manufacturer's recommendations. Maintenance and repairs requiring the assistance of other skilled persons shall be carried out under the supervision of persons competent in the use of flammable refrigerants.</li> <li>• Maintenance should only be carried out in accordance with the manufacturer's recommendations.</li> <li>• The system is inspected, regularly supervised, and maintained by trained and certified service personnel employed by the user or responsible party.</li> <li>• Make sure that the charged refrigerant do not leak.</li> </ul> <p>2-2. Work procedures</p> <ul style="list-style-type: none"> <li>• As the system contains flammable refrigerant, a safety inspection is required before commencing work on the system to ensure that the risk of ignition has been minimised. When repairing refrigeration unit, follow the precautions in 2-2 through 2-8.</li> </ul> <p>2. • To minimise the risk of flammable gas or vapour being present during the execution of the work, the work must be carried out under controlled procedures. • All maintenance and other staff working on site shall be instructed and supervised as to the nature of the work being carried out. • Avoid working in enclosed spaces. Always keep away from the source, and maintain a safety distance of at least 2 metres or perform zoning of open space areas of at least a 2-metre radius. • Wear suitable protective equipment, including respiratory protection, depending on the situation. • Keep ignition sources and hot metal surfaces away.</p> <p>2-3. Checking for presence of refrigerant</p> <ul style="list-style-type: none"> <li>• The area should be checked with a suitable refrigerant detector before and during the work to ensure that the technician is aware of potential flammable atmosphere.</li> <li>• Ensure that the leak detection device used is suitable for use with flammable refrigerants, i.e. that it is not producing sparks, properly sealed or intrinsically safe.</li> <li>• If a leak/spill occurs, ventilate the area immediately and stay upwind and away from the leak/spill.</li> <li>• In the event of a leak/spill, notify persons downwind of the leak/spill, isolate the imminent danger area and ensure that unauthorized persons do not enter the area.</li> </ul>	

 CAUTION

2-4. Availability of fire extinguishers

- When performing high-temperature work on refrigeration unit or related components, suitable fire extinguishing equipment must be prepared at hand.
- Provide a powder fire extinguisher or CO<sub>2</sub> extinguisher near the charging area.

2-5. No ignition sources

- Personnel carrying out work related to refrigeration systems must not use ignition sources in such a way as to create a fire or explosion hazard. Smoking is not allowed when carrying out such work.
- All possible ignition sources, including cigarette smoking, must be kept well away from the site of installation, repair or removal. While performing such works, flammable refrigerants may be released into the surrounding space.
- Before carrying out any work, check the surroundings of the equipment to ensure that there are no flammability and/or ignition hazards.
- "No Smoking" signs must be displayed.

2-6. Well-ventilated areas

- Before work into refrigerant circuit or working with fire, ensure that the area is outdoor or adequately ventilated.
- Some degree of ventilation shall be maintained while the work is being carried out.
- Ventilation must safely disperse the released refrigerant, preferably to the outside atmosphere.

2-7. Checking refrigeration equipment

- In case of change of electrical components, the changed components must be fit for the purpose and to the correct specification.

2.

- Always follow the manufacturer's maintenance and service guidelines.
- If there is any doubt, contact the manufacturer's technical department.
- The following checks must be applied to equipment using flammable refrigerants:
  - Ventilators and exhaust vents are in good working order and free from obstacles.
  - If an indirect refrigeration circuit is used, the presence of refrigerant in the secondary circuit should be checked.
  - Keep equipment markings remain visible and legible. Any illegible signs or markings should be corrected.
  - Refrigeration piping and components are installed in a position where they are less exposed to substances that may corrode the refrigerant, unless the components are made of inherently corrosion-resistant materials or are adequately protected against corrosion.



2-8. Checking electrical equipment

- Repair and maintenance of electrical components must include initial safety checks and component inspection procedures.
- Initial safety checks must include, but are not limited to:
  - Capacitor has been discharged: This check must be carried out in a safe manner to avoid the possibility of sparks.
  - No live electrical components or wiring are exposed during charging, recovery or purging of the system.
  - Earth connection is continuous.
- Always follow the manufacturer's maintenance and service guidelines.
- If there is any doubt, contact the manufacturer's technical department.
- If a fault exists that could compromise safety, power supply must not be connected to the circuit until the problem has been resolved.
- If the fault cannot be corrected immediately but the operation needs to continue, a suitable temporary solution should be used.
- Then, the owner of the equipment must be notified or reported so that all parties are subsequently informed.

Repairing sealed components

- During repair of sealed components, all power supply must be disconnected from the equipment being worked on before removing sealed covers, etc.
  - If it is absolutely necessary to supply power to equipment during servicing, a permanently operating form of leak detection should be located at the most critical points to warn of potentially hazardous situations.
  - Particular attention must be paid to the following points to ensure that work on electrical components does not alter the casing in such a way as to affect the level of protection: These include damaged cables, excessive numbers of connections, terminals that differ from the original specifications, damaged seals and improperly fitted glands.
- 3.
- Ensure that the equipment is securely fitted.
  - Ensure that seals and sealing materials have not deteriorated to such an extent that they no longer serve the purpose of preventing the ingress of flammable atmosphere.
  - Replacement parts shall be in accordance with the manufacturer's specifications.



Note: Use of silicone sealant may inhibit the effectiveness of some types of leak detection equipment. Intrinsically safe explosion-proof components do not need to be isolated before work.

Repairing intrinsically safe components

- Do not apply any permanent inductive or capacitive loads to the circuit without ensuring that this will not exceed the permissible voltage and current for the equipment in use.
- 4.
- Intrinsically safe components are the only type that can work in the presence of a flammable atmosphere.
  - The test equipment must be at the correct rating.
  - Replace components only with parts specified by the manufacturer. Use of parts not specified by the manufacturer may result in refrigerant leakage and ignition of the refrigerant in the atmosphere.



Cabling

- Ensure that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or other adverse environmental effects.
- 5.
- The checks should also take into account the effects of ageing and continuous vibration from sources such as compressors and fans.



Detection of flammable refrigerants

- 6.
- The following items are prohibited during detection:
- Do not use potential ignition sources to search for or detect refrigerant leaks.
  - Do not use detectors that rely on naked flames.



 **CAUTION**

The following leak detection methods are considered acceptable for all refrigerant systems

- No leakage shall be detected if a detection device with a sensitivity of 5 grams or more of refrigerant per year is used under a pressure of at least 0.25 times the maximum permissible pressure (>0.98 MPa, max 3.90 MPa). An example is universal sniffer.
  - Electronic leak detectors can be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need recalibration. (Calibration of the detector should be carried out in an area free from refrigerant.)
7.
  - Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used.
  - Leak detection device must be set to a percentage of the LFL of the refrigerant, calibrated to the refrigerant used, and the appropriate percentage of gas (up to 25%) is confirmed.
  - Leak detection fluids are also suitable for use with most refrigerants, including bubble and fluorescent agents. Avoid using detergents containing chlorine, as chlorine may react with refrigerants and corrode copper tubes.
  - If a leak is suspected, all ignition sources must be removed or extinguished.
  - If a refrigerant leak which requires brazing is found, all refrigerant must be recovered from the system. To remove the refrigerant, precautions #8 must be followed.



**Removal and evacuation**

- Conventional procedures shall be used when working into the refrigerant circuit for repair or for any other purpose. However, it is important to follow best practice since flammability is a consideration. The following procedures must be followed:
- Remove refrigerant -> • Purge the circuit with inert gas -> • Create vacuum -> • Purge with inert gas ->
  - Open the circuit by cutting.
  - Do not use brazing.
8.
  - The charged refrigerant shall be recovered in the correct recovery cylinder.
  - The system must be purged with OFN to secure the appliance safe. (Remarks: OFN = oxygen-free nitrogen, a type of inert gas)
  - This process may need to be repeated several times.
  - Do not use compressed air or oxygen for this task.
  - Purging must be achieved by breaking the vacuum in the system with OFN, continuing to fill until the working pressure is reached, then venting to atmosphere, and finally reducing the pressure to vacuum.
  - This process must be repeated until there is no refrigerant in the system. (until the purge gas concentration detected by the leak detector is below 0.25 LFL) \* 0.25 LFL = 0.525 Vol%
  - When the final OFN charge is used, the system must be vented to atmospheric pressure to allow work to be carried out.
  - This operation is absolutely essential when brazing pipes.
  - Ensure that the outlet of the vacuum pump is not near an ignition source and that ventilation is available.



**Charging procedures**

9.
  - In addition to conventional charging procedures, the following requirements must be followed:
    - When charging equipment is used, ensure that contamination of different refrigerants does not occur.
    - Hoses and lines should be as short as possible to minimise the amount of refrigerant contained in them.
    - Cylinders must be stored in the appropriate position according to instructions.
    - Ensure that the refrigeration system is earthed before charging refrigerant into the system.
    - Label the system. once the charging is complete. (if not yet completed)
    - Extreme care must be taken not to overfill the cooling system.
  - Before refilling the system, a pressure test must be carried out with OFN. (See #8)
  - The system must be leak tested after completion of charging and before commissioning.
  - A follow-up leak test must be carried out before leaving the site.
  - Static build-up may occur while charging and purging refrigerant and it can cause hazardous conditions. To avoid fire and/or explosion, earth the containers and equipment before charging/releasing to dissipate static electricity during transport.



**Decommissioning**

- Before carrying out this procedure, it is important that the technician is familiar with the equipment and all its details.
  - It is recommended to recover all refrigerants safely.
  - Reuse of recovered refrigerants is prohibited.
  - It is important that electrical power is available before commencing the work.
    - a) Become familiar with the equipment and its operation.
    - b) Electrically isolate the system.
    - c) Before carrying out the procedure, ensure that:
      - If required, mechanical handling equipment can be used for handling refrigerant cylinders.
      - All personal protective equipment and leak detectors are available and used correctly.
      - The recovery process is always supervised by a competent person.
      - Recovery devices and cylinders comply with appropriate standards.
10.
  - d) Make sure that the cylinder is placed on the scale before commencing recovery.
  - e) Start the recovery machine and operate it according to the instructions.
  - f) Do not overfill the cylinder. (No more than 80 % volume liquid charge)
  - g) Do not exceed the maximum working pressure of the cylinder, even temporarily.
  - h) Once the cylinder has been correctly filled and the process completed, ensure that the cylinder and equipment are promptly removed from the site and that all shut-off valves on the equipment are closed.
  - Static build-up may occur while charging and purging refrigerant and it can cause hazardous conditions. To avoid fire and explosion, earth the containers and equipment before charging/releasing to dissipate static electricity during transport.



 CAUTION

Labelling

- 11.
- The equipment shall be labelled to indicate that it has been decommissioned and empty of refrigerant.
  - Labels shall be dated and signed.
  - Ensure that a label is attached to the equipment indicating that the equipment contains flammable refrigerants.



Recovery

- 12.
- When removing refrigerant from a system for maintenance or decommissioning, it is recommended to remove all refrigerant safely.
  - When transferring refrigerant into cylinders, always use only suitable refrigerant recovery cylinders.
  - Ensure that the correct number of cylinders are available to accommodate the total charge of the system.
  - All cylinders used are designated for recovered refrigerants and labelled for that refrigerant. (i.e. special cylinders for recovery of refrigerant)
  - The cylinder must be equipped with a pressure relief valve and associated shut-off valve in good working order.
  - Before recovery is commenced, the recovery cylinder is vented and, if possible, cooled.
  - Recovery equipment must have a set of instructions on the equipment at hand, be in good working order and be suitable for the recovery of flammable refrigerants.
  - Ensure that the recovery equipment is not a potential source of ignition and is suitable for the refrigerant being used.
  - In addition, a set of calibrated scales must be available and in good working order.
  - Hoses must be in good condition with leak-free disconnect couplings.
  - Before using the recovery machine, make sure that it is fully operational and properly maintained, and that relevant electrical components are sealed to prevent ignition in the event of a refrigerant release. If there is any doubt, contact the manufacturer.
  - The recovered refrigerant should be returned to the refrigerant supplier in a suitable recovery cylinder and the relevant waste transfer note should be prepared.
  - Do not mix refrigerants in the recovery unit, especially in the cylinder.
  - When removing compressor or compressor oil, ensure that it is exhausted to an acceptable level so that no flammable refrigerant remains in the lubricant.
  - The exhaust process must be carried out before the compressor is returned to the supplier.
  - To facilitate this process, only electrical heating to the compressor body is used.
  - Any draining of oil from the system must be carried out safely.



### 3. Specifications

#### 3.1 WH-ADC0316M9E82 WH-WDG09ME8

Item		Unit	Outdoor Unit			
Performance Test Condition		EN 14511				
		EN 14825				
Cooling Capacity	Condition (Ambient/Water)	A35W7				
	kW	9.00				
	BTU/h	30700				
Cooling EER	W/W	3.61				
Heating Capacity	Condition (Ambient/Water)	A7W35	A2W35			
	kW	9.00	9.00			
	BTU/h	30700	30700			
Heating COP	W/W	5.10	3.81			
Heating Erp	Low Temperature Application (W35)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	9.0	9.0	10.0	
	Tbiv/TOL	°C	2 / 2	-10 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	6.01 / 237	4.84 / 191	4.23 / 166	
	Annual Consumption	kWh	2001	3842	5828	
	Class		A+++	A+++	A++	
	Medium Temperature Application (W55)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	9.0	10.0	10.0	
	Tbiv/TOL	°C	2 / 2	-7 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	4.17 / 164	3.57 / 140	3.12 / 122	
	Annual Consumption	kWh	2885	5786	7907	
	Class		A+++	A++	A+	
	DHW		Warmer	Average	Colder	
	Application	Climate				
	COP / nwh	(W/W) / %	3.35 / 134	3.00 / 120	2.20 / 88	
	AEC	kWh	765	855	1166	
	Noise Level	dB (A) ***	Cooling: -		Heating: -	
		Power Level dB ****	Cooling: 61		Heating: 62	
dB *****		-		Heating: 54		
Air Flow	m <sup>3</sup> /min (ft <sup>3</sup> /min)	Cooling: 90.0 (3178) Heating: 76.0 (2684)				
Refrigeration Control Device		Expansion Valve				
Refrigeration Oil	cm <sup>3</sup>	PZ68S (1600)				
Refrigerant	kg (oz)	R290, 1.58 (55.7) (Pre-charged) (-) (Maximum)				
F-GAS	GWP	-				
	CO <sub>2</sub> eq (ton) (Precharged / Maximum)	-				
Dimension	Height	mm (inch)	1520 (59-27/32)			
	Width	mm (inch)	1200 (47-1/4)			
	Depth	mm (inch)	370 (14-9/16)			

Item		Unit	Outdoor Unit		
Net Weight		kg (lbs)	151 (333)		
Pipe Diameter (Inner)		mm	25		
Standard Length		m (ft)	5.0 (16.4)		
Maximum Pipe Length		m (ft)	30.0 (98.4)		
I/D & O/D Height Difference		m (ft)	30.0 (98.4)		
Water Pipe Connector	Indoor	inch	1-1/4		
	Outdoor		1-1/4		
Compressor	Type		Hermetic Motor Compressor (Involute Scroll)		
	Motor Type		Synchronous Electric Motor (6-poles)		
	Rated Output	kW	3.10		
Fan	Type		Propeller Fan		
	Material		PP		
	Motor Type		DC (8-poles)		
	Input Power	kW	-		
	Output Power	W	120 × 2		
	Fan Speed	rpm	Cooling: 480 Heating: 420		
Heat Exchanger	Fin material		Aluminium (Blue Coat)		
	Fin Type		Corrugated Fin		
	Row × Stage × FPI		2 × 58 × 18		
	Size (W × H × L)	mm	44 × 1473.2 × 868.2:902.7		
Hot Water Coil	Type		Brazed Plate		
	No. of Plates		30		
	Size (W × H × L)	mm	65.2 × 524 × 117		
	Water Flow Rate	l/min (m <sup>3</sup> /h)	Cooling: 25.8 (1.5) Heating: 25.8 (1.5)		
Power Source (Phase, Voltage, Cycle)		∅	Three		
		V	400		
		Hz	50		
Input Power	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	kW		Cooling: 2.49	Heating: 1.76	Heating: 2.36
Maximum Input Power For Heatpump System		kW	7.30		
Outdoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 11.0 / 7.30k		
Indoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 13.1 / 9.00k		
Power Supply 3 : Phase (∅) / Max. Current (A) / Max. Input Power (W)			- / - / -		
Starting Current		A	3.8		
Running Current	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	A		Cooling: 3.8	Heating: 2.7	Heating: 3.6
Maximum Current For Heatpump System		A	11.0		
Power Factor Power factor means total figure of compressor and outdoor fan motor.	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	%		Cooling: 95	Heating: 95	Heating: 95
Power Cord	Number of core		-		
	Length	m (ft)	-		
Thermostat			Electronic Control		
Protection Device			Electronic Control		
Pressure Relief Valve Water Circuit		kPa	Open: 400, Close: 280		

Item		Unit	Outdoor Unit
Operation Range	Outdoor Ambient	°C (min. / max.)	Cooling: 10 / 43 Heating (Tank): -25 / 43 Heating (Circuit): -25 / 35
	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 25 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 25 / 75 (Above Ambient -15 °C) * <sup>4</sup>
Internal Pressure Differential		kPa	Cooling: 25.0 Heating: 25.0
Pump	Motor Type		Brushless DC Motor (Sensorless vector control system)
	No. of Speed		Variable speed
	Input Power	W	175
Flow Sensor	Type		Vortex (VVX20)
	Measuring range	l/min	5 ~ 60

Item		Unit	Indoor Unit	
Performance Test Condition			EN 14511	
			EN 14825	
Noise Level		dB (A) ***	Cooling: 22	Heating: 22
		Power Level dB ****	Cooling: 35	Heating: 35
Dimension	Depth	mm (inch)	602 (23-45/64)	
	Width	mm (inch)	599 (23-37/64)	
	Height	mm (inch)	1642 (64-41/64)	
Net Weight		kg (lbs)	89 (196)	
Water Pipe Diameter	Room	mm (inch)	31 (1-1/4)	
	Shower	mm (inch)	19 (3/4)	
Water Drain Hose Inner Diameter		mm (inch)	17.00 (11/16)	
Pressure Release Valve		kPa	Open: 800, Close: 640	
Protection Device		A	Residual Current Circuit Breaker (40)	
Expansion Vessel	Volume	l	12	
	MWP	bar	10	
Capacity of Integrated Electric Heater / OLP TEMP		kW / °C	9.00 / 85	
Tank Volume (Spec / Nett)		L	200 / 185	
Max. Tank Water Set Temperature		°C	65	
Tank Coil Surface		m <sup>2</sup>	1.8	
Maximum Working Pressure	Heat / Cool	Bar	4.0	
	Tank Circuit	Bar	10.0	
Operating Pressure	Tank Unit	Bar	3.5	
	Expansion Relief Valve	Bar	8.0	
Expansion Vessel Pre-charge Pressure (DHW Circuit)		Bar	3.5	
Pressure Reducing Valve Set Pressure (DHW Circuit)		Bar	3.5	

Item		Unit	Indoor Unit
Pressure Vessel	Material		EN-1.4521
	Volume	L	185
	Design Pressure	Bar	10
Heat Exchanger	Material		EN-1.4521
	Diameter	mm	22
	Thickness	mm	0.8
	Surface Area	m <sup>2</sup>	1.8
	Total Length	m	25
DHW Tank	Total Corrosion ion (Chloride + Sulphate + Nitric)	mg/L	< 250
	Conductivity @ Water Tank Water Temperature < 65°C	µS/cm	< 1250 @ 25°C
	Saturation Index (LSI) @ 20°C		> -4.0 / < 0.4
	PH		6.0 - 9.5

**Note:**

- In case it is necessary to indicate the air flow volume in (l/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the “extra-low” temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*3 When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*4 Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

### 3.2 WH-ADC0316M9E83 WH-WDG09ME8

Item		Unit	Outdoor Unit			
Performance Test Condition			EN 14511			
			EN 14825			
Cooling Capacity	Condition (Ambient/Water)		A35W7			
	kW		9.00			
	BTU/h		30700			
Cooling EER	W/W		3.61			
Heating Capacity	Condition (Ambient/Water)		A7W35	A2W35		
	kW		9.00	9.00		
	BTU/h		30700	30700		
Heating COP	W/W		5.10	3.81		
Heating Erp	Low Temperature Application (W35)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	9.0	9.0	10.0	
	Tbiv/TOL	°C	2 / 2	-10 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	6.01 / 237	4.84 / 191	4.23 / 166	
	Annual Consumption	kWh	2001	3842	5828	
	Class		A+++	A+++	A++	
	Medium Temperature Application (W55)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	9.0	10.0	10.0	
	Tbiv/TOL	°C	2 / 2	-7 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	4.17 / 164	3.57 / 140	3.12 / 122	
	Annual Consumption	kWh	2885	5786	7907	
	Class		A+++	A++	A+	
	DHW		Warmer	Average	Colder	
	Application	Climate				
	COP / nwh	(W/W) / %	3.35 / 134	3.10 / 124	2.35 / 94	
	AEC	kWh	1252	1353	1785	
	Noise Level		dB (A) ***	Cooling: -		Heating: -
			Power Level dB ****	Cooling: 61		Heating: 62
		dB *****	-		Heating: 54	
Air Flow		m <sup>3</sup> /min (ft <sup>3</sup> /min)	Cooling: 90.0 (3178) Heating: 76.0 (2684)			
Refrigeration Control Device			Expansion Valve			
Refrigeration Oil		cm <sup>3</sup>	PZ68S (1600)			
Refrigerant		kg (oz)	R290, 1.58 (55.7) (Pre-charged) (-) (Maximum)			
F-GAS	GWP		-			
	CO <sub>2</sub> eq (ton) (Precharged / Maximum)		-			
Dimension	Height	mm (inch)	1520 (59-27/32)			
	Width	mm (inch)	1200 (47-1/4)			
	Depth	mm (inch)	370 (14-9/16)			

Item		Unit	Outdoor Unit		
Net Weight		kg (lbs)	151 (333)		
Pipe Diameter (Inner)		mm	25		
Standard Length		m (ft)	5.0 (16.4)		
Maximum Pipe Length		m (ft)	30.0 (98.4)		
I/D & O/D Height Difference		m (ft)	30.0 (98.4)		
Water Pipe Connector	Indoor	inch	1-1/4		
	Outdoor		1-1/4		
Compressor	Type		Hermetic Motor Compressor (Involute Scroll)		
	Motor Type		Synchronous Electric Motor (6-poles)		
	Rated Output	kW	3.10		
Fan	Type		Propeller Fan		
	Material		PP		
	Motor Type		DC (8-poles)		
	Input Power	kW	-		
	Output Power	W	120 × 2		
	Fan Speed	rpm	Cooling: 480 Heating: 420		
Heat Exchanger	Fin material		Aluminium (Blue Coat)		
	Fin Type		Corrugated Fin		
	Row × Stage × FPI		2 × 58 × 18		
	Size (W × H × L)	mm	44 × 1473.2 × 868.2:902.7		
Hot Water Coil	Type		Brazed Plate		
	No. of Plates		30		
	Size (W × H × L)	mm	65.2 × 524 × 117		
	Water Flow Rate	l/min (m <sup>3</sup> /h)	Cooling: 25.8 (1.5) Heating: 25.8 (1.5)		
Power Source (Phase, Voltage, Cycle)		∅	Three		
		V	400		
		Hz	50		
Input Power	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	kW		Cooling: 2.49	Heating: 1.76	Heating: 2.36
Maximum Input Power For Heatpump System		kW	7.30		
Outdoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 11.0 / 7.30k		
Indoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 13.1 / 9.00k		
Power Supply 3 : Phase (∅) / Max. Current (A) / Max. Input Power (W)			- / - / -		
Starting Current		A	3.8		
Running Current	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	A		Cooling: 3.8	Heating: 2.7	Heating: 3.6
Maximum Current For Heatpump System		A	11.0		
Power Factor Power factor means total figure of compressor and outdoor fan motor.	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	%		Cooling: 95	Heating: 95	Heating: 95
Power Cord	Number of core		-		
	Length	m (ft)	-		
Thermostat			Electronic Control		
Protection Device			Electronic Control		
Pressure Relief Valve Water Circuit		kPa	Open: 400, Close: 280		

Item		Unit	Outdoor Unit
Operation Range	Outdoor Ambient	°C (min. / max.)	Cooling: 10 / 43 Heating (Tank): -25 / 43 Heating (Circuit): -25 / 35
	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 25 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 25 / 75 (Above Ambient -15 °C) * <sup>4</sup>
Internal Pressure Differential		kPa	Cooling: 25.0 Heating: 25.0
Pump	Motor Type		Brushless DC Motor (Sensorless vector control system)
	No. of Speed		Variable speed
	Input Power	W	175
Flow Sensor	Type		Vortex (VVX20)
	Measuring range	l/min	5 ~ 60

Item		Unit	Indoor Unit	
Performance Test Condition			EN 14511	
			EN 14825	
Noise Level		dB (A) ***	Cooling: 22	Heating: 22
		Power Level dB ****	Cooling: 35	Heating: 35
Dimension	Depth	mm (inch)	602 (23-45/64)	
	Width	mm (inch)	599 (23-37/64)	
	Height	mm (inch)	2036	
Net Weight		kg (lbs)	105 (231)	
Water Pipe Diameter	Room	mm (inch)	31 (1-1/4)	
	Shower	mm (inch)	19 (3/4)	
Water Drain Hose Inner Diameter		mm (inch)	17.00 (11/16)	
Pressure Release Valve		kPa	Open: 800, Close: 640	
Protection Device		A	Residual Current Circuit Breaker (40)	
Expansion Vessel	Volume	l	12	
	MWP	bar	10	
Capacity of Integrated Electric Heater / OLP TEMP		kW / °C	9.00 / 85	
Tank Volume (Spec / Nett)		L	270 / 260	
Max. Tank Water Set Temperature		°C	65	
Tank Coil Surface		m <sup>2</sup>	2.4	
Maximum Working Pressure	Heat / Cool	Bar	4.0	
	Tank Circuit	Bar	10.0	
Operating Pressure	Tank Unit	Bar	3.5	
	Expansion Relief Valve	Bar	8.0	
Expansion Vessel Pre-charge Pressure (DHW Circuit)		Bar	3.5	
Pressure Reducing Valve Set Pressure (DHW Circuit)		Bar	3.5	

Item		Unit	Indoor Unit
Pressure Vessel	Material		EN-1.4521
	Volume	L	260
	Design Pressure	Bar	10
Heat Exchanger	Material		EN-1.4521
	Diameter	mm	22
	Thickness	mm	0.8
	Surface Area	m <sup>2</sup>	2.4
	Total Length	m	25
DHW Tank	Total Corrosion ion (Chloride + Sulphate + Nitric)	mg/L	< 250
	Conductivity @ Water Tank Water Temperature < 65°C	µS/cm	< 1250 @ 25°C
	Saturation Index (LSI) @ 20°C		> -4.0 / < 0.4
	PH		6.0 - 9.5

**Note:**

- In case it is necessary to indicate the air flow volume in (l/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the “extra-low” temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*3 When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*4 Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

### 3.3 WH-ADC0316M9E81 WH-WDG09ME8

Item		Unit	Outdoor Unit			
Performance Test Condition			EN 14511			
			EN 14825			
Cooling Capacity	Condition (Ambient/Water)		A35W7			
	kW		9.00			
	BTU/h		30700			
Cooling EER	W/W		3.61			
Heating Capacity	Condition (Ambient/Water)		A7W35	A2W35		
	kW		9.00	9.00		
	BTU/h		30700	30700		
Heating COP	W/W		5.10	3.81		
Heating Erp	Low Temperature Application (W35)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	9.0	9.0	10.0	
	Tbiv/TOL	°C	2 / 2	-10 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	6.01 / 237	4.84 / 191	4.23 / 166	
	Annual Consumption	kWh	2001	3842	5828	
	Class		A+++	A+++	A++	
	Medium Temperature Application (W55)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	9.0	10.0	10.0	
	Tbiv/TOL	°C	2 / 2	-7 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	4.17 / 164	3.57 / 140	3.12 / 122	
	Annual Consumption	kWh	2885	5786	7907	
	Class		A+++	A++	A+	
	DHW		Warmer	Average	Colder	
	Application	Climate				
	COP / nwh	(W/W) / %	2.70 / 108	2.51 / 100	1.82 / 73	
	AEC	kWh	476	512	706	
	Noise Level		dB (A) ***	Cooling: -		Heating: -
			Power Level dB ****	Cooling: 61		Heating: 62
		dB *****	-		Heating: 54	
Air Flow		m <sup>3</sup> /min (ft <sup>3</sup> /min)	Cooling: 90.0 (3178) Heating: 76.0 (2684)			
Refrigeration Control Device			Expansion Valve			
Refrigeration Oil		cm <sup>3</sup>	PZ68S (1600)			
Refrigerant		kg (oz)	R290, 1.58 (55.7) (Pre-charged) (-) (Maximum)			
F-GAS	GWP		-			
	CO <sub>2</sub> eq (ton) (Precharged / Maximum)		-			
Dimension	Height	mm (inch)	1520 (59-27/32)			
	Width	mm (inch)	1200 (47-1/4)			
	Depth	mm (inch)	370 (14-9/16)			

Item		Unit	Outdoor Unit		
Net Weight		kg (lbs)	151 (333)		
Pipe Diameter (Inner)		mm	25		
Standard Length		m (ft)	5.0 (16.4)		
Maximum Pipe Length		m (ft)	30.0 (98.4)		
I/D & O/D Height Difference		m (ft)	30.0 (98.4)		
Water Pipe Connector	Indoor	inch	1-1/4		
	Outdoor		1-1/4		
Compressor	Type		Hermetic Motor Compressor (Involute Scroll)		
	Motor Type		Synchronous Electric Motor (6-poles)		
	Rated Output	kW	3.10		
Fan	Type		Propeller Fan		
	Material		PP		
	Motor Type		DC (8-poles)		
	Input Power	kW	-		
	Output Power	W	120 × 2		
	Fan Speed	rpm	Cooling: 480 Heating: 420		
Heat Exchanger	Fin material		Aluminium (Blue Coat)		
	Fin Type		Corrugated Fin		
	Row × Stage × FPI		2 × 58 × 18		
	Size (W × H × L)	mm	44 × 1473.2 × 868.2:902.7		
Hot Water Coil	Type		Brazed Plate		
	No. of Plates		30		
	Size (W × H × L)	mm	65.2 × 524 × 117		
	Water Flow Rate	l/min (m <sup>3</sup> /h)	Cooling: 25.8 (1.5) Heating: 25.8 (1.5)		
Power Source (Phase, Voltage, Cycle)		∅	Three		
		V	400		
		Hz	50		
Input Power	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	kW		Cooling: 2.49	Heating: 1.76	Heating: 2.36
Maximum Input Power For Heatpump System		kW	7.30		
Outdoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 11.0 / 7.30k		
Indoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 13.1 / 9.00k		
Power Supply 3 : Phase (∅) / Max. Current (A) / Max. Input Power (W)			- / - / -		
Starting Current		A	3.8		
Running Current	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	A		Cooling: 3.8	Heating: 2.7	Heating: 3.6
Maximum Current For Heatpump System		A	11.0		
Power Factor Power factor means total figure of compressor and outdoor fan motor.	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	%		Cooling: 95	Heating: 95	Heating: 95
Power Cord	Number of core		-		
	Length	m (ft)	-		
Thermostat			Electronic Control		
Protection Device			Electronic Control		
Pressure Relief Valve Water Circuit		kPa	Open: 400, Close: 280		

Item		Unit	Outdoor Unit
Operation Range	Outdoor Ambient	°C (min. / max.)	Cooling: 10 / 43 Heating (Tank): -25 / 43 Heating (Circuit): -25 / 35
	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 25 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 25 / 75 (Above Ambient -15 °C) * <sup>4</sup>
Internal Pressure Differential		kPa	Cooling: 25.0 Heating: 25.0
Pump	Motor Type		Brushless DC Motor (Sensorless vector control system)
	No. of Speed		Variable speed
	Input Power	W	175
Flow Sensor	Type		Vortex (VVX20)
	Measuring range	l/min	5 ~ 60

Item		Unit	Indoor Unit	
Performance Test Condition			EN 14511	
			EN 14825	
Noise Level		dB (A) ***	Cooling: 22	Heating: 22
		Power Level dB ****	Cooling: 35	Heating: 35
Dimension	Depth	mm (inch)	602 (23-45/64)	
	Width	mm (inch)	599 (23-37/64)	
	Height	mm (inch)	1293	
Net Weight		kg (lbs)	77 (170)	
Water Pipe Diameter	Room	mm (inch)	31 (1-1/4)	
	Shower	mm (inch)	19 (3/4)	
Water Drain Hose Inner Diameter		mm (inch)	17.00 (11/16)	
Pressure Release Valve		kPa	Open: 800, Close: 640	
Protection Device		A	Residual Current Circuit Breaker (40)	
Expansion Vessel	Volume	l	12	
	MWP	bar	10	
Capacity of Integrated Electric Heater / OLP TEMP		kW / °C	9.00 / 85	
Tank Volume (Spec / Nett)		L	127 / 120	
Max. Tank Water Set Temperature		°C	65	
Tank Coil Surface		m <sup>2</sup>	1.3	
Maximum Working Pressure	Heat / Cool	Bar	4.0	
	Tank Circuit	Bar	10.0	
Operating Pressure	Tank Unit	Bar	3.5	
	Expansion Relief Valve	Bar	8.0	
Expansion Vessel Pre-charge Pressure (DHW Circuit)		Bar	3.5	
Pressure Reducing Valve Set Pressure (DHW Circuit)		Bar	3.5	

Item		Unit	Indoor Unit
Pressure Vessel	Material		EN-1.4521
	Volume	L	120
	Design Pressure	Bar	10
Heat Exchanger	Material		EN-1.4521
	Diameter	mm	22
	Thickness	mm	0.8
	Surface Area	m <sup>2</sup>	1.3
	Total Length	m	25
DHW Tank	Total Corrosion ion (Chloride + Sulphate + Nitric)	mg/L	< 250
	Conductivity @ Water Tank Water Temperature < 65°C	µS/cm	< 1250 @ 25°C
	Saturation Index (LSI) @ 20°C		> -4.0 / < 0.4
	PH		6.0 - 9.5

**Note:**

- In case it is necessary to indicate the air flow volume in (l/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the “extra-low” temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*3 When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*4 Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

### 3.4 WH-SDC0316M9E8 WH-WDG09ME8

Item		Unit	Outdoor Unit			
Performance Test Condition		EN 14511				
		EN 14825				
Cooling Capacity	Condition (Ambient/Water)	A35W7				
	kW	9.00				
	BTU/h	30700				
Cooling EER	W/W	3.61				
Heating Capacity	Condition (Ambient/Water)	A7W35	A2W35			
	kW	9.00	9.00			
	BTU/h	30700	30700			
Heating COP	W/W	5.10	3.81			
Heating Erp	Low Temperature Application (W35)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	9.0	9.0	10.0	
	Tbiv/TOL	°C	2 / 2	-10 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	6.01 / 237	4.84 / 191	4.23 / 166	
	Annual Consumption	kWh	2001	3842	5828	
	Class		A+++	A+++	A++	
	Medium Temperature Application (W55)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	9.0	10.0	10.0	
	Tbiv/TOL	°C	2 / 2	-7 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	4.17 / 164	3.57 / 140	3.12 / 122	
	Annual Consumption	kWh	2885	5786	7907	
	Class		A+++	A++	A+	
	DHW		Warmer	Average	Colder	
	Application	Climate				
	COP / nwh	(W/W) / %	-	-	-	
	AEC	kWh	-	-	-	
	Noise Level	dB (A) ***		Cooling: -		Heating: -
		Power Level dB ****		Cooling: 61		Heating: 62
dB *****		-		Heating: 54		
Air Flow	m <sup>3</sup> /min (ft <sup>3</sup> /min)		Cooling: 90.0 (3178) Heating: 76.0 (2684)			
Refrigeration Control Device	Expansion Valve					
Refrigeration Oil	cm <sup>3</sup>		PZ68S (1600)			
Refrigerant	kg (oz)		R290, 1.58 (55.7) (Pre-charged) (-) (Maximum)			
F-GAS	GWP		-			
	CO <sub>2</sub> eq (ton) (Precharged / Maximum)		-			
Dimension	Height	mm (inch)	1520 (59-27/32)			
	Width	mm (inch)	1200 (47-1/4)			
	Depth	mm (inch)	370 (14-9/16)			

Item		Unit	Outdoor Unit		
Net Weight		kg (lbs)	151 (333)		
Pipe Diameter (Inner)		mm	25		
Standard Length		m (ft)	5.0 (16.4)		
Maximum Pipe Length		m (ft)	30.0 (98.4)		
I/D & O/D Height Difference		m (ft)	30.0 (98.4)		
Water Pipe Connector	Indoor	inch	1-1/4		
	Outdoor		1-1/4		
Compressor	Type		Hermetic Motor Compressor (Involute Scroll)		
	Motor Type		Synchronous Electric Motor (6-poles)		
	Rated Output	kW	3.10		
Fan	Type		Propeller Fan		
	Material		PP		
	Motor Type		DC (8-poles)		
	Input Power	kW	-		
	Output Power	W	120 × 2		
	Fan Speed	rpm	Cooling: 480 Heating: 420		
Heat Exchanger	Fin material		Aluminium (Blue Coat)		
	Fin Type		Corrugated Fin		
	Row × Stage × FPI		2 × 58 × 18		
	Size (W × H × L)	mm	44 × 1473.2 × 868.2:902.7		
Hot Water Coil	Type		Brazed Plate		
	No. of Plates		30		
	Size (W × H × L)	mm	65.2 × 524 × 117		
	Water Flow Rate	l/min (m <sup>3</sup> /h)	Cooling: 25.8 (1.5) Heating: 25.8 (1.5)		
Power Source (Phase, Voltage, Cycle)		∅	Three		
		V	400		
		Hz	50		
Input Power	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	kW		Cooling: 2.49	Heating: 1.76	Heating: 2.36
Maximum Input Power For Heatpump System		kW	7.30		
Outdoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 11.0 / 7.30k		
Indoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 13.1 / 9.00k		
Power Supply 3 : Phase (∅) / Max. Current (A) / Max. Input Power (W)			- / - / -		
Starting Current		A	3.8		
Running Current	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	A		Cooling: 3.8	Heating: 2.7	Heating: 3.6
Maximum Current For Heatpump System		A	11.0		
Power Factor Power factor means total figure of compressor and outdoor fan motor.	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	%		Cooling: 95	Heating: 95	Heating: 95
Power Cord	Number of core		-		
	Length	m (ft)	-		
Thermostat			Electronic Control		
Protection Device			Electronic Control		
Pressure Relief Valve Water Circuit		kPa	Open: 400, Close: 280		

Item		Unit	Outdoor Unit
Operation Range	Outdoor Ambient	°C (min. / max.)	Cooling: 10 / 43 Heating (Tank): -25 / 43 Heating (Circuit): -25 / 35
	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 25 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 25 / 75 (Above Ambient -15 °C) * <sup>4</sup>
Internal Pressure Differential		kPa	Cooling: 25.0 Heating: 25.0
Pump	Motor Type		Brushless DC Motor (Sensorless vector control system)
	No. of Speed		Variable speed
	Input Power	W	175
Flow Sensor	Type		Vortex (VVX20)
	Measuring range	l/min	5 ~ 60

Item		Unit	Indoor Unit	
Performance Test Condition			EN 14511	
			EN 14825	
Noise Level		dB (A) ***	Cooling: 22	Heating: 22
		Power Level dB ****	Cooling: 35	Heating: 35
Dimension	Depth	mm (inch)	348	
	Width	mm (inch)	500	
	Height	mm (inch)	892	
Net Weight		kg (lbs)	29 (64)	
Water Pipe Diameter	Room	mm (inch)	31 (1-1/4)	
Water Drain Hose Inner Diameter		mm (inch)	17.00 (11/16)	
Pressure Release Valve		kPa	-	
Protection Device		A	Residual Current Circuit Breaker (40)	
Expansion Vessel	Volume	l	12	
	MWP	bar	10	
Capacity of Integrated Electric Heater / OLP TEMP		kW / °C	9.00 / 85	
Tank Volume (Spec / Nett)		L	-	
Max. Tank Water Set Temperature		°C	75	
Tank Coil Surface		m <sup>2</sup>	-	
Maximum Working Pressure	Heat / Cool	Bar	4.0	

**Note:**

- In case it is necessary to indicate the air flow volume in (l/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the “extra-low” temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*<sup>3</sup> When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*<sup>4</sup> Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

### 3.5 WH-CME8 WH-WDG09ME8

Item		Unit	Outdoor Unit			
Performance Test Condition			EN 14511			
			EN 14825			
Cooling Capacity	Condition (Ambient/Water)		A35W7			
	kW		9.00			
	BTU/h		30700			
Cooling EER		W/W	3.61			
Heating Capacity	Condition (Ambient/Water)		A7W35	A2W35		
	kW		9.00	9.00		
	BTU/h		30700	30700		
Heating COP		W/W	5.10	3.81		
Heating Erp	Low Temperature Application (W35)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	9.0	9.0	10.0	
	Tbiv/TOL	°C	2 / 2	-10 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	6.01 / 237	4.84 / 191	4.23 / 166	
	Annual Consumption	kWh	2001	3842	5828	
	Class		A+++	A+++	A++	
	Medium Temperature Application (W55)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	9.0	10.0	10.0	
	Tbiv/TOL	°C	2 / 2	-7 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	4.17 / 164	3.57 / 140	3.12 / 122	
	Annual Consumption	kWh	2885	5786	7907	
	Class		A+++	A++	A+	
	DHW		Warmer	Average	Colder	
	Application	Climate				
	COP / nwh	(W/W) / %	-	-	-	
	AEC	kWh	-	-	-	
	Noise Level		dB (A) ***	Cooling: -		Heating: -
			Power Level dB ****	Cooling: 61		Heating: 62
dB *****			-		Heating: 54	
Air Flow		m <sup>3</sup> /min (ft <sup>3</sup> /min)	Cooling: 90.0 (3178) Heating: 76.0 (2684)			
Refrigeration Control Device			Expansion Valve			
Refrigeration Oil		cm <sup>3</sup>	PZ68S (1600)			
Refrigerant		kg (oz)	R290, 1.58 (55.7) (Pre-charged) (-) (Maximum)			
F-GAS	GWP		-			
	CO <sub>2</sub> eq (ton) (Precharged / Maximum)		-			
Dimension	Height	mm (inch)	1520 (59-27/32)			
	Width	mm (inch)	1200 (47-1/4)			
	Depth	mm (inch)	370 (14-9/16)			

Item		Unit	Outdoor Unit		
Net Weight		kg (lbs)	151 (333)		
Water Pipe Connector	Indoor	inch	-		
	Outdoor		1-1/4		
Compressor	Type		Hermetic Motor Compressor (Involute Scroll)		
	Motor Type		Synchronous Electric Motor (6-poles)		
	Rated Output	kW	3.10		
Fan	Type		Propeller Fan		
	Material		PP		
	Motor Type		DC (8-poles)		
	Input Power	kW	-		
	Output Power	W	120 × 2		
	Fan Speed	rpm	Cooling: 480 Heating: 420		
Heat Exchanger	Fin material		Aluminium (Blue Coat)		
	Fin Type		Corrugated Fin		
	Row × Stage × FPI		2 × 58 × 18		
	Size (W × H × L)	mm	44 × 1473.2 × 868.2:902.7		
Hot Water Coil	Type		Brazed Plate		
	No. of Plates		30		
	Size (W × H × L)	mm	65.2 × 524 × 117		
	Water Flow Rate	l/min (m <sup>3</sup> /h)	Cooling: 25.8 (1.5) Heating: 25.8 (1.5)		
Power Source (Phase, Voltage, Cycle)		Ø	Three		
		V	400		
		Hz	50		
Input Power	Condition (Ambient/Water)	A35W7	A7W35	A2W35	
	kW	Cooling: 2.49	Heating: 1.76	Heating: 2.36	
Maximum Input Power For Heatpump System		kW	7.30		
Outdoor Power Supply : Phase (Ø) / Max. Current (A) / Max. Input Power (W)			3Ø / 11.0 / 7.30k		
Indoor Power Supply : Phase (Ø) / Max. Current (A) / Max. Input Power (W)			3Ø / 14.9 / 9.50k		
Power Supply 3 : Phase (Ø) / Max. Current (A) / Max. Input Power (W)			- / - / -		
Starting Current		A	3.8		
Running Current	Condition (Ambient/Water)	A35W7	A7W35	A2W35	
	A	Cooling: 3.8	Heating: 2.7	Heating: 3.6	
Maximum Current For Heatpump System		A	11.0		
Power Factor Power factor means total figure of compressor and outdoor fan motor.	Condition (Ambient/Water)	A35W7	A7W35	A2W35	
	%	Cooling: 95	Heating: 95	Heating: 95	
Power Cord	Number of core		-		
	Length	m (ft)	-		
Thermostat			Electronic Control		
Protection Device			Electronic Control		
Pressure Relief Valve Water Circuit		kPa	Open: 400, Close: 280		

Item		Unit	Outdoor Unit
Operation Range	Outdoor Ambient	°C (min. / max.)	Cooling: 10 / 43 Heating (Tank): -25 / 43 Heating (Circuit): -25 / 35
	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 25 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 25 / 75 (Above Ambient -15 °C) * <sup>4</sup>
Internal Pressure Differential		kPa	Cooling: 16.0 Heating: 16.0
Pump	Motor Type		Brushless DC Motor (Sensorless vector control system)
	No. of Speed		Variable speed
	Input Power	W	175
Flow Sensor	Type		Vortex (VVX20)
	Measuring range	l/min	5 ~ 60

Item		Unit	Indoor Unit	
Performance Test Condition			EN 14511	
			EN 14825	
Noise Level		dB (A) ***	Cooling: 22	Heating: 22
		Power Level dB ****	Cooling: 35	Heating: 35
Dimension	Depth	mm (inch)	116	
	Width	mm (inch)	520	
	Height	mm (inch)	454	
Net Weight		kg (lbs)	7 (15)	
Water Pipe Diameter	Room	mm (inch)	-	
	Shower	mm (inch)	-	
Water Drain Hose Inner Diameter		mm (inch)	-	
Pressure Release Valve		kPa	-	
Protection Device		A	Residual Current Circuit Breaker (40)	
Max. Tank Water Set Temperature		°C	75	
Tank Coil Surface		m <sup>2</sup>	-	
Maximum Working Pressure	Heat / Cool	Bar	4.0	

**Note:**

- In case it is necessary to indicate the air flow volume in (l/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the “extra-low” temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*<sup>3</sup> When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*<sup>4</sup> Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

### 3.6 WH-ADC0316M9E82 WH-WDG12ME8

Item		Unit	Outdoor Unit			
Performance Test Condition			EN 14511			
			EN 14825			
Cooling Capacity	Condition (Ambient/Water)		A35W7			
	kW		9.00			
	BTU/h		30700			
Cooling EER	W/W		3.61			
Heating Capacity	Condition (Ambient/Water)		A7W35	A2W35		
	kW		12.00	12.00		
	BTU/h		40900	40900		
Heating COP	W/W		4.88	3.46		
Heating Erp	Low Temperature Application (W35)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	12.0	12.0	11.0	
	Tbiv/TOL	°C	2 / 2	-7 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	6.20 / 245	4.65 / 183	4.35 / 171	
	Annual Consumption	kWh	2586	5335	6239	
	Class		A+++	A+++	A++	
	Medium Temperature Application (W55)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	12.0	12.0	11.0	
	Tbiv/TOL	°C	2 / 2	-6 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	4.34 / 171	3.58 / 140	3.26 / 127	
	Annual Consumption	kWh	3695	6926	8312	
	Class		A+++	A++	A++	
	DHW		Warmer	Average	Colder	
	Application	Climate				
	COP / nwh	(W/W) / %	3.35 / 134	3.00 / 120	2.20 / 88	
	AEC	kWh	765	855	1166	
	Noise Level		dB (A) ***	Cooling: -		Heating: -
			Power Level dB ****	Cooling: 61		Heating: 63
		dB *****	-		Heating: 55	
Air Flow		m <sup>3</sup> /min (ft <sup>3</sup> /min)	Cooling: 90.0 (3178) Heating: 90.0 (3178)			
Refrigeration Control Device			Expansion Valve			
Refrigeration Oil		cm <sup>3</sup>	PZ68S (1600)			
Refrigerant		kg (oz)	R290, 1.58 (55.7) (Pre-charged) (-) (Maximum)			
F-GAS	GWP		-			
	CO <sub>2</sub> eq (ton) (Precharged / Maximum)		-			
Dimension	Height	mm (inch)	1520 (59-27/32)			
	Width	mm (inch)	1200 (47-1/4)			
	Depth	mm (inch)	370 (14-9/16)			

Item		Unit	Outdoor Unit		
Net Weight		kg (lbs)	151 (333)		
Pipe Diameter (Inner)		mm	32		
Standard Length		m (ft)	5.0 (16.4)		
Maximum Pipe Length		m (ft)	30.0 (98.4)		
I/D & O/D Height Difference		m (ft)	30.0 (98.4)		
Water Pipe Connector	Indoor	inch	1-1/4		
	Outdoor		1-1/4		
Compressor	Type		Hermetic Motor Compressor (Involute Scroll)		
	Motor Type		Synchronous Electric Motor (6-poles)		
	Rated Output	kW	3.10		
Fan	Type		Propeller Fan		
	Material		PP		
	Motor Type		DC (8-poles)		
	Input Power	kW	-		
	Output Power	W	120 × 2		
	Fan Speed	rpm	Cooling: 480 Heating: 480		
Heat Exchanger	Fin material		Aluminium (Blue Coat)		
	Fin Type		Corrugated Fin		
	Row × Stage × FPI		2 × 58 × 18		
	Size (W × H × L)	mm	44 × 1473.2 × 868.2:902.7		
Hot Water Coil	Type		Brazed Plate		
	No. of Plates		30		
	Size (W × H × L)	mm	65.2 × 524 × 117		
	Water Flow Rate	l/min (m <sup>3</sup> /h)	Cooling: 25.8 (1.5) Heating: 34.4 (2.1)		
Power Source (Phase, Voltage, Cycle)		∅	Three		
		V	400		
		Hz	50		
Input Power	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	kW		Cooling: 2.49	Heating: 2.46	Heating: 3.47
Maximum Input Power For Heatpump System		kW	7.30		
Outdoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 11.0 / 7.30k		
Indoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 13.1 / 9.00k		
Power Supply 3 : Phase (∅) / Max. Current (A) / Max. Input Power (W)			- / - / -		
Starting Current		A	3.8		
Running Current	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	A		Cooling: 3.8	Heating: 3.7	Heating: 5.3
Maximum Current For Heatpump System		A	11.0		
Power Factor Power factor means total figure of compressor and outdoor fan motor.	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	%		Cooling: 95	Heating: 95	Heating: 95
Power Cord	Number of core		-		
	Length	m (ft)	-		
Thermostat			Electronic Control		
Protection Device			Electronic Control		
Pressure Relief Valve Water Circuit		kPa	Open: 400, Close: 280		

Item		Unit	Outdoor Unit
Operation Range	Outdoor Ambient	°C (min. / max.)	Cooling: 10 / 43 Heating (Tank): -25 / 43 Heating (Circuit): -25 / 35
	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 25 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 25 / 75 (Above Ambient -15 °C) * <sup>4</sup>
Internal Pressure Differential		kPa	Cooling: 25.0 Heating: 43.0
Pump	Motor Type		Brushless DC Motor (Sensorless vector control system)
	No. of Speed		Variable speed
	Input Power	W	175
Flow Sensor	Type		Vortex (VVX20)
	Measuring range	l/min	5 ~ 60

Item		Unit	Indoor Unit	
Performance Test Condition			EN 14511	
			EN 14825	
Noise Level		dB (A) ***	Cooling: 22	Heating: 22
		Power Level dB ****	Cooling: 35	Heating: 35
Dimension	Depth	mm (inch)	602 (23-45/64)	
	Width	mm (inch)	599 (23-37/64)	
	Height	mm (inch)	1642 (64-41/64)	
Net Weight		kg (lbs)	89 (196)	
Water Pipe Diameter	Room	mm (inch)	31 (1-1/4)	
	Shower	mm (inch)	19 (3/4)	
Water Drain Hose Inner Diameter		mm (inch)	17.00 (11/16)	
Pressure Release Valve		kPa	Open: 800, Close: 640	
Protection Device		A	Residual Current Circuit Breaker (40)	
Expansion Vessel	Volume	l	12	
	MWP	bar	10	
Capacity of Integrated Electric Heater / OLP TEMP		kW / °C	9.00 / 85	
Tank Volume (Spec / Nett)		L	200 / 185	
Max. Tank Water Set Temperature		°C	65	
Tank Coil Surface		m <sup>2</sup>	1.8	
Maximum Working Pressure	Heat / Cool	Bar	4.0	
	Tank Circuit	Bar	10.0	
Operating Pressure	Tank Unit	Bar	3.5	
	Expansion Relief Valve	Bar	8.0	
Expansion Vessel Pre-charge Pressure (DHW Circuit)		Bar	3.5	
Pressure Reducing Valve Set Pressure (DHW Circuit)		Bar	3.5	

Item		Unit	Indoor Unit
Pressure Vessel	Material		EN-1.4521
	Volume	L	185
	Design Pressure	Bar	10
Heat Exchanger	Material		EN-1.4521
	Diameter	mm	22
	Thickness	mm	0.8
	Surface Area	m <sup>2</sup>	1.8
	Total Length	m	25
DHW Tank	Total Corrosion ion (Chloride + Sulphate + Nitric)	mg/L	< 250
	Conductivity @ Water Tank Water Temperature < 65°C	µS/cm	< 1250 @ 25°C
	Saturation Index (LSI) @ 20°C		> -4.0 / < 0.4
	PH		6.0 - 9.5

**Note:**

- In case it is necessary to indicate the air flow volume in (l/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the “extra-low” temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*3 When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*4 Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

### 3.7 WH-ADC0316M9E83 WH-WDG12ME8

Item		Unit	Outdoor Unit			
Performance Test Condition		EN 14511				
		EN 14825				
Cooling Capacity	Condition (Ambient/Water)	A35W7				
	kW	9.00				
	BTU/h	30700				
Cooling EER	W/W	3.61				
Heating Capacity	Condition (Ambient/Water)	A7W35	A2W35			
	kW	12.00	12.00			
	BTU/h	40900	40900			
Heating COP	W/W	4.88	3.46			
Heating Erp	Low Temperature Application (W35)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	12.0	12.0	11.0	
	Tbiv/TOL	°C	2 / 2	-7 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	6.20 / 245	4.65 / 183	4.35 / 171	
	Annual Consumption	kWh	2586	5335	6239	
	Class		A+++	A+++	A++	
	Medium Temperature Application (W55)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	12.0	12.0	11.0	
	Tbiv/TOL	°C	2 / 2	-6 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	4.34 / 171	3.58 / 140	3.26 / 127	
	Annual Consumption	kWh	3695	6926	8312	
	Class		A+++	A++	A++	
	DHW		Warmer	Average	Colder	
	Application	Climate				
	COP / nwh	(W/W) / %	3.35 / 134	3.10 / 124	2.35 / 94	
	AEC	kWh	1252	1353	1785	
	Noise Level	dB (A) ***		Cooling: -	Heating: -	
		Power Level dB ****		Cooling: 61	Heating: 63	
dB *****		-	Heating: 55			
Air Flow	m <sup>3</sup> /min (ft <sup>3</sup> /min)		Cooling: 90.0 (3178) Heating: 90.0 (3178)			
Refrigeration Control Device	Expansion Valve					
Refrigeration Oil	cm <sup>3</sup>		PZ68S (1600)			
Refrigerant	kg (oz)		R290, 1.58 (55.7) (Pre-charged) (-) (Maximum)			
F-GAS	GWP		-			
	CO <sub>2</sub> eq (ton) (Precharged / Maximum)		-			
Dimension	Height	mm (inch)	1520 (59-27/32)			
	Width	mm (inch)	1200 (47-1/4)			
	Depth	mm (inch)	370 (14-9/16)			

Item		Unit	Outdoor Unit		
Net Weight		kg (lbs)	151 (333)		
Pipe Diameter (Inner)		mm	32		
Standard Length		m (ft)	5.0 (16.4)		
Maximum Pipe Length		m (ft)	30.0 (98.4)		
I/D & O/D Height Difference		m (ft)	30.0 (98.4)		
Water Pipe Connector	Indoor	inch	1-1/4		
	Outdoor		1-1/4		
Compressor	Type		Hermetic Motor Compressor (Involute Scroll)		
	Motor Type		Synchronous Electric Motor (6-poles)		
	Rated Output	kW	3.10		
Fan	Type		Propeller Fan		
	Material		PP		
	Motor Type		DC (8-poles)		
	Input Power	kW	-		
	Output Power	W	120 × 2		
	Fan Speed	rpm	Cooling: 480 Heating: 480		
Heat Exchanger	Fin material		Aluminium (Blue Coat)		
	Fin Type		Corrugated Fin		
	Row × Stage × FPI		2 × 58 × 18		
	Size (W × H × L)	mm	44 × 1473.2 × 868.2:902.7		
Hot Water Coil	Type		Brazed Plate		
	No. of Plates		30		
	Size (W × H × L)	mm	65.2 × 524 × 117		
	Water Flow Rate	l/min (m <sup>3</sup> /h)	Cooling: 25.8 (1.5) Heating: 34.4 (2.1)		
Power Source (Phase, Voltage, Cycle)		∅	Three		
		V	400		
		Hz	50		
Input Power	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	kW		Cooling: 2.49	Heating: 2.46	Heating: 3.47
Maximum Input Power For Heatpump System		kW	7.30		
Outdoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 11.0 / 7.30k		
Indoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 13.1 / 9.00k		
Power Supply 3 : Phase (∅) / Max. Current (A) / Max. Input Power (W)			- / - / -		
Starting Current		A	3.8		
Running Current	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	A		Cooling: 3.8	Heating: 3.7	Heating: 5.3
Maximum Current For Heatpump System		A	11.0		
Power Factor Power factor means total figure of compressor and outdoor fan motor.	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	%		Cooling: 95	Heating: 95	Heating: 95
Power Cord	Number of core		-		
	Length	m (ft)	-		
Thermostat			Electronic Control		
Protection Device			Electronic Control		
Pressure Relief Valve Water Circuit		kPa	Open: 400, Close: 280		

Item		Unit	Outdoor Unit
Operation Range	Outdoor Ambient	°C (min. / max.)	Cooling: 10 / 43 Heating (Tank): -25 / 43 Heating (Circuit): -25 / 35
	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 25 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 25 / 75 (Above Ambient -15 °C) * <sup>4</sup>
Internal Pressure Differential		kPa	Cooling: 25.0 Heating: 43.0
Pump	Motor Type		Brushless DC Motor (Sensorless vector control system)
	No. of Speed		Variable speed
	Input Power	W	175
Flow Sensor	Type		Vortex (VVX20)
	Measuring range	l/min	5 ~ 60

Item		Unit	Indoor Unit	
Performance Test Condition			EN 14511	
			EN 14825	
Noise Level		dB (A) ***	Cooling: 22	Heating: 22
		Power Level dB ****	Cooling: 35	Heating: 35
Dimension	Depth	mm (inch)	602 (23-45/64)	
	Width	mm (inch)	599 (23-37/64)	
	Height	mm (inch)	2036	
Net Weight		kg (lbs)	105 (231)	
Water Pipe Diameter	Room	mm (inch)	31 (1-1/4)	
	Shower	mm (inch)	19 (3/4)	
Water Drain Hose Inner Diameter		mm (inch)	17.00 (11/16)	
Pressure Release Valve		kPa	Open: 800, Close: 640	
Protection Device		A	Residual Current Circuit Breaker (40)	
Expansion Vessel	Volume	l	12	
	MWP	bar	10	
Capacity of Integrated Electric Heater / OLP TEMP		kW / °C	9.00 / 85	
Tank Volume (Spec / Nett)		L	270 / 260	
Max. Tank Water Set Temperature		°C	65	
Tank Coil Surface		m <sup>2</sup>	2.4	
Maximum Working Pressure	Heat / Cool	Bar	4.0	
	Tank Circuit	Bar	10.0	
Operating Pressure	Tank Unit	Bar	3.5	
	Expansion Relief Valve	Bar	8.0	
Expansion Vessel Pre-charge Pressure (DHW Circuit)		Bar	3.5	
Pressure Reducing Valve Set Pressure (DHW Circuit)		Bar	3.5	

Item		Unit	Indoor Unit
Pressure Vessel	Material		EN-1.4521
	Volume	L	260
	Design Pressure	Bar	10
Heat Exchanger	Material		EN-1.4521
	Diameter	mm	22
	Thickness	mm	0.8
	Surface Area	m <sup>2</sup>	2.4
	Total Length	m	25
DHW Tank	Total Corrosion ion (Chloride + Sulphate + Nitric)	mg/L	< 250
	Conductivity @ Water Tank Water Temperature < 65°C	µS/cm	< 1250 @ 25°C
	Saturation Index (LSI) @ 20°C		> -4.0 / < 0.4
	PH		6.0 - 9.5

**Note:**

- In case it is necessary to indicate the air flow volume in (l/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the “extra-low” temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*3 When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*4 Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

### 3.8 WH-ADC0316M9E81 WH-WDG12ME8

Item		Unit	Outdoor Unit			
Performance Test Condition			EN 14511			
			EN 14825			
Cooling Capacity	Condition (Ambient/Water)		A35W7			
	kW		9.00			
	BTU/h		30700			
Cooling EER	W/W		3.61			
Heating Capacity	Condition (Ambient/Water)		A7W35	A2W35		
	kW		12.00	12.00		
	BTU/h		40900	40900		
Heating COP	W/W		4.88	3.46		
Heating Erp	Low Temperature Application (W35)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	12.0	12.0	11.0	
	Tbiv/TOL	°C	2 / 2	-7 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	6.20 / 245	4.65 / 183	4.35 / 171	
	Annual Consumption	kWh	2586	5335	6239	
	Class		A+++	A+++	A++	
	Medium Temperature Application (W55)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	12.0	12.0	11.0	
	Tbiv/TOL	°C	2 / 2	-6 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	4.34 / 171	3.58 / 140	3.26 / 127	
	Annual Consumption	kWh	3695	6926	8312	
	Class		A+++	A++	A++	
	DHW		Warmer	Average	Colder	
	Application	Climate				
	COP / nwh	(W/W) / %	2.70 / 108	2.51 / 100	1.82 / 73	
	AEC	kWh	476	512	706	
	Noise Level		dB (A) ***	Cooling: -		Heating: -
			Power Level dB ****	Cooling: 61		Heating: 63
		dB *****	-		Heating: 55	
Air Flow		m <sup>3</sup> /min (ft <sup>3</sup> /min)	Cooling: 90.0 (3178) Heating: 90.0 (3178)			
Refrigeration Control Device			Expansion Valve			
Refrigeration Oil		cm <sup>3</sup>	PZ68S (1600)			
Refrigerant		kg (oz)	R290, 1.58 (55.7) (Pre-charged) (-) (Maximum)			
F-GAS	GWP		-			
	CO <sub>2</sub> eq (ton) (Precharged / Maximum)		-			
Dimension	Height	mm (inch)	1520 (59-27/32)			
	Width	mm (inch)	1200 (47-1/4)			
	Depth	mm (inch)	370 (14-9/16)			

Item		Unit	Outdoor Unit		
Net Weight		kg (lbs)	151 (333)		
Pipe Diameter (Inner)		mm	32		
Standard Length		m (ft)	5.0 (16.4)		
Maximum Pipe Length		m (ft)	30.0 (98.4)		
I/D & O/D Height Difference		m (ft)	30.0 (98.4)		
Water Pipe Connector	Indoor	inch	1-1/4		
	Outdoor		1-1/4		
Compressor	Type		Hermetic Motor Compressor (Involute Scroll)		
	Motor Type		Synchronous Electric Motor (6-poles)		
	Rated Output	kW	3.10		
Fan	Type		Propeller Fan		
	Material		PP		
	Motor Type		DC (8-poles)		
	Input Power	kW	-		
	Output Power	W	120 × 2		
	Fan Speed	rpm	Cooling: 480 Heating: 480		
Heat Exchanger	Fin material		Aluminium (Blue Coat)		
	Fin Type		Corrugated Fin		
	Row × Stage × FPI		2 × 58 × 18		
	Size (W × H × L)	mm	44 × 1473.2 × 868.2:902.7		
Hot Water Coil	Type		Brazed Plate		
	No. of Plates		30		
	Size (W × H × L)	mm	65.2 × 524 × 117		
	Water Flow Rate	l/min (m <sup>3</sup> /h)	Cooling: 25.8 (1.5) Heating: 34.4 (2.1)		
Power Source (Phase, Voltage, Cycle)		∅	Three		
		V	400		
		Hz	50		
Input Power	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	kW		Cooling: 2.49	Heating: 2.46	Heating: 3.47
Maximum Input Power For Heatpump System		kW	7.30		
Outdoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 11.0 / 7.30k		
Indoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 13.1 / 9.00k		
Power Supply 3 : Phase (∅) / Max. Current (A) / Max. Input Power (W)			- / - / -		
Starting Current		A	3.8		
Running Current	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	A		Cooling: 3.8	Heating: 3.7	Heating: 5.3
Maximum Current For Heatpump System		A	11.0		
Power Factor Power factor means total figure of compressor and outdoor fan motor.	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	%		Cooling: 95	Heating: 95	Heating: 95
Power Cord	Number of core		-		
	Length	m (ft)	-		
Thermostat			Electronic Control		
Protection Device			Electronic Control		
Pressure Relief Valve Water Circuit		kPa	Open: 400, Close: 280		

Item		Unit	Outdoor Unit
Operation Range	Outdoor Ambient	°C (min. / max.)	Cooling: 10 / 43 Heating (Tank): -25 / 43 Heating (Circuit): -25 / 35
	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 25 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 25 / 75 (Above Ambient -15 °C) * <sup>4</sup>
Internal Pressure Differential		kPa	Cooling: 25.0 Heating: 43.0
Pump	Motor Type		Brushless DC Motor (Sensorless vector control system)
	No. of Speed		Variable speed
	Input Power	W	175
Flow Sensor	Type		Vortex (VVX20)
	Measuring range	l/min	5 ~ 60

Item		Unit	Indoor Unit	
Performance Test Condition			EN 14511	
			EN 14825	
Noise Level		dB (A) ***	Cooling: 22	Heating: 22
		Power Level dB ****	Cooling: 35	Heating: 35
Dimension	Depth	mm (inch)	602 (23-45/64)	
	Width	mm (inch)	599 (23-37/64)	
	Height	mm (inch)	1293	
Net Weight		kg (lbs)	77 (170)	
Water Pipe Diameter	Room	mm (inch)	31 (1-1/4)	
	Shower	mm (inch)	19 (3/4)	
Water Drain Hose Inner Diameter		mm (inch)	17.00 (11/16)	
Pressure Release Valve		kPa	Open: 800, Close: 640	
Protection Device		A	Residual Current Circuit Breaker (40)	
Expansion Vessel	Volume	l	12	
	MWP	bar	10	
Capacity of Integrated Electric Heater / OLP TEMP		kW / °C	9.00 / 85	
Tank Volume (Spec / Nett)		L	127 / 120	
Max. Tank Water Set Temperature		°C	65	
Tank Coil Surface		m <sup>2</sup>	1.3	
Maximum Working Pressure	Heat / Cool	Bar	4.0	
	Tank Circuit	Bar	10.0	
Operating Pressure	Tank Unit	Bar	3.5	
	Expansion Relief Valve	Bar	8.0	
Expansion Vessel Pre-charge Pressure (DHW Circuit)		Bar	3.5	
Pressure Reducing Valve Set Pressure (DHW Circuit)		Bar	3.5	

Item		Unit	Indoor Unit
Pressure Vessel	Material		EN-1.4521
	Volume	L	120
	Design Pressure	Bar	10
Heat Exchanger	Material		EN-1.4521
	Diameter	mm	22
	Thickness	mm	0.8
	Surface Area	m <sup>2</sup>	1.3
	Total Length	m	25
DHW Tank	Total Corrosion ion (Chloride + Sulphate + Nitric)	mg/L	< 250
	Conductivity @ Water Tank Water Temperature < 65°C	µS/cm	< 1250 @ 25°C
	Saturation Index (LSI) @ 20°C		> -4.0 / < 0.4
	PH		6.0 - 9.5

**Note:**

- In case it is necessary to indicate the air flow volume in (l/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the “extra-low” temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*3 When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*4 Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

### 3.9 WH-SDC0316M9E8 WH-WDG12ME8

Item		Unit	Outdoor Unit			
Performance Test Condition			EN 14511			
			EN 14825			
Cooling Capacity	Condition (Ambient/Water)		A35W7			
	kW		9.00			
	BTU/h		30700			
Cooling EER	W/W		3.61			
Heating Capacity	Condition (Ambient/Water)		A7W35	A2W35		
	kW		12.00	12.00		
	BTU/h		40900	40900		
Heating COP	W/W		4.88	3.46		
Heating Erp	Low Temperature Application (W35)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	12.0	12.0	11.0	
	Tbiv/TOL	°C	2 / 2	-7 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	6.20 / 245	4.65 / 183	4.35 / 171	
	Annual Consumption	kWh	2586	5335	6239	
	Class		A+++	A+++	A++	
	Medium Temperature Application (W55)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	12.0	12.0	11.0	
	Tbiv/TOL	°C	2 / 2	-6 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	4.34 / 171	3.58 / 140	3.26 / 127	
	Annual Consumption	kWh	3695	6926	8312	
	Class		A+++	A++	A++	
	DHW		Warmer	Average	Colder	
	Application	Climate				
	COP / nwh	(W/W) / %	-	-	-	
	AEC	kWh	-	-	-	
	Noise Level		dB (A) ***	Cooling: -		Heating: -
			Power Level dB ****	Cooling: 61		Heating: 63
		dB *****	-		Heating: 55	
Air Flow		m <sup>3</sup> /min (ft <sup>3</sup> /min)	Cooling: 90.0 (3178) Heating: 90.0 (3178)			
Refrigeration Control Device			Expansion Valve			
Refrigeration Oil		cm <sup>3</sup>	PZ68S (1600)			
Refrigerant		kg (oz)	R290, 1.58 (55.7) (Pre-charged) (-) (Maximum)			
F-GAS	GWP		-			
	CO <sub>2</sub> eq (ton) (Precharged / Maximum)		-			
Dimension	Height	mm (inch)	1520 (59-27/32)			
	Width	mm (inch)	1200 (47-1/4)			
	Depth	mm (inch)	370 (14-9/16)			

Item		Unit	Outdoor Unit		
Net Weight		kg (lbs)	151 (333)		
Pipe Diameter (Inner)		mm	32		
Standard Length		m (ft)	5.0 (16.4)		
Maximum Pipe Length		m (ft)	30.0 (98.4)		
I/D & O/D Height Difference		m (ft)	30.0 (98.4)		
Water Pipe Connector	Indoor	inch	1-1/4		
	Outdoor		1-1/4		
Compressor	Type		Hermetic Motor Compressor (Involute Scroll)		
	Motor Type		Synchronous Electric Motor (6-poles)		
	Rated Output	kW	3.10		
Fan	Type		Propeller Fan		
	Material		PP		
	Motor Type		DC (8-poles)		
	Input Power	kW	-		
	Output Power	W	120 × 2		
	Fan Speed	rpm	Cooling: 480 Heating: 480		
Heat Exchanger	Fin material		Aluminium (Blue Coat)		
	Fin Type		Corrugated Fin		
	Row × Stage × FPI		2 × 58 × 18		
	Size (W × H × L)	mm	44 × 1473.2 × 868.2:902.7		
Hot Water Coil	Type		Brazed Plate		
	No. of Plates		30		
	Size (W × H × L)	mm	65.2 × 524 × 117		
	Water Flow Rate	l/min (m <sup>3</sup> /h)	Cooling: 25.8 (1.5) Heating: 34.4 (2.1)		
Power Source (Phase, Voltage, Cycle)		∅	Three		
		V	400		
		Hz	50		
Input Power	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	kW		Cooling: 2.49	Heating: 2.46	Heating: 3.47
Maximum Input Power For Heatpump System		kW	7.30		
Outdoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 11.0 / 7.30k		
Indoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 13.1 / 9.00k		
Power Supply 3 : Phase (∅) / Max. Current (A) / Max. Input Power (W)			- / - / -		
Starting Current		A	3.8		
Running Current	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	A		Cooling: 3.8	Heating: 3.7	Heating: 5.3
Maximum Current For Heatpump System		A	11.0		
Power Factor Power factor means total figure of compressor and outdoor fan motor.	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	%		Cooling: 95	Heating: 95	Heating: 95
Power Cord	Number of core		-		
	Length	m (ft)	-		
Thermostat			Electronic Control		
Protection Device			Electronic Control		
Pressure Relief Valve Water Circuit		kPa	Open: 400, Close: 280		

Item		Unit	Outdoor Unit
Operation Range	Outdoor Ambient	°C (min. / max.)	Cooling: 10 / 43 Heating (Tank): -25 / 43 Heating (Circuit): -25 / 35
	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 25 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 25 / 75 (Above Ambient -15 °C) * <sup>4</sup>
Internal Pressure Differential		kPa	Cooling: 25.0 Heating: 43.0
Pump	Motor Type		Brushless DC Motor (Sensorless vector control system)
	No. of Speed		Variable speed
	Input Power	W	175
Flow Sensor	Type		Vortex (VVX20)
	Measuring range	l/min	5 ~ 60

Item		Unit	Indoor Unit	
Performance Test Condition			EN 14511	
			EN 14825	
Noise Level		dB (A) ***	Cooling: 22	Heating: 22
		Power Level dB ****	Cooling: 35	Heating: 35
Dimension	Depth	mm (inch)	348	
	Width	mm (inch)	500	
	Height	mm (inch)	892	
Net Weight		kg (lbs)	29 (64)	
Water Pipe Diameter	Room	mm (inch)	31 (1-1/4)	
	Shower	mm (inch)	-	
Water Drain Hose Inner Diameter		mm (inch)	17.00 (11/16)	
Pressure Release Valve		kPa	-	
Protection Device		A	Residual Current Circuit Breaker (40)	
Expansion Vessel	Volume	l	12	
	MWP	bar	10	
Capacity of Integrated Electric Heater / OLP TEMP		kW / °C	9.00 / 85	
Max. Tank Water Set Temperature		°C	75	
Maximum Working Pressure	Heat / Cool	Bar	4.0	

**Note:**

- In case it is necessary to indicate the air flow volume in (l/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the “extra-low” temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and  $\Delta T=5^{\circ}\text{C}$ .
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*<sup>3</sup> When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*<sup>4</sup> Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

### 3.10 WH-CME8 WH-WDG12ME8

Item		Unit	Outdoor Unit			
Performance Test Condition		EN 14511				
		EN 14825				
Cooling Capacity	Condition (Ambient/Water)		A35W7			
	kW		9.00			
	BTU/h		30700			
Cooling EER		W/W	3.61			
Heating Capacity	Condition (Ambient/Water)		A7W35	A2W35		
	kW		12.00	12.00		
	BTU/h		40900	40900		
Heating COP		W/W	4.88	3.46		
Heating Erp	Low Temperature Application (W35)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	12.0	12.0	11.0	
	Tbiv/TOL	°C	2 / 2	-7 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	6.20 / 245	4.65 / 183	4.35 / 171	
	Annual Consumption	kWh	2586	5335	6239	
	Class		A+++	A+++	A++	
	Medium Temperature Application (W55)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	12.0	12.0	11.0	
	Tbiv/TOL	°C	2 / 2	-6 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	4.34 / 171	3.58 / 140	3.26 / 127	
	Annual Consumption	kWh	3695	6926	8312	
	Class		A+++	A++	A++	
	DHW		Warmer	Average	Colder	
	Application	Climate				
	COP / nwh	(W/W) / %	-	-	-	
	AEC	kWh	-	-	-	
	Noise Level		dB (A) ***	Cooling: -		Heating: -
			Power Level dB ****	Cooling: 61		Heating: 63
dB *****			-		Heating: 55	
Air Flow		m <sup>3</sup> /min (ft <sup>3</sup> /min)	Cooling: 90.0 (3178) Heating: 90.0 (3178)			
Refrigeration Control Device			Expansion Valve			
Refrigeration Oil		cm <sup>3</sup>	PZ68S (1600)			
Refrigerant		kg (oz)	R290, 1.58 (55.7) (Pre-charged) (-) (Maximum)			
F-GAS	GWP		-			
	CO <sub>2</sub> eq (ton) (Precharged / Maximum)		-			
Dimension	Height	mm (inch)	1520 (59-27/32)			
	Width	mm (inch)	1200 (47-1/4)			
	Depth	mm (inch)	370 (14-9/16)			

Item		Unit	Outdoor Unit		
Net Weight		kg (lbs)	151 (333)		
Pipe Diameter (Inner)		mm	32		
Standard Length		m (ft)	5.0 (16.4)		
Maximum Pipe Length		m (ft)	30.0 (98.4)		
I/D & O/D Height Difference		m (ft)	30.0 (98.4)		
Water Pipe Connector	Indoor	inch	-		
	Outdoor		1-1/4		
Compressor	Type		Hermetic Motor Compressor (Involute Scroll)		
	Motor Type		Synchronous Electric Motor (6-poles)		
	Rated Output	kW	3.10		
Fan	Type		Propeller Fan		
	Material		PP		
	Motor Type		DC (8-poles)		
	Input Power	kW	-		
	Output Power	W	120 × 2		
	Fan Speed	rpm	Cooling: 480 Heating: 480		
Heat Exchanger	Fin material		Aluminium (Blue Coat)		
	Fin Type		Corrugated Fin		
	Row × Stage × FPI		2 × 58 × 18		
	Size (W × H × L)	mm	44 × 1473.2 × 868.2:902.7		
Hot Water Coil	Type		Brazen Plate		
	No. of Plates		30		
	Size (W × H × L)	mm	65.2 × 524 × 117		
	Water Flow Rate	l/min (m <sup>3</sup> /h)	Cooling: 25.8 (1.5) Heating: 34.4 (2.1)		
Power Source (Phase, Voltage, Cycle)		∅	Three		
		V	400		
		Hz	50		
Input Power	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	kW		Cooling: 2.49	Heating: 2.46	Heating: 3.47
Maximum Input Power For Heatpump System		kW	7.30		
Outdoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 11.0 / 7.30k		
Indoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 14.9 / 9.50k		
Power Supply 3 : Phase (∅) / Max. Current (A) / Max. Input Power (W)			- / - / -		
Starting Current		A	3.8		
Running Current	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	A		Cooling: 3.8	Heating: 3.7	Heating: 5.3
Maximum Current For Heatpump System		A	11.0		
Power Factor Power factor means total figure of compressor and outdoor fan motor.	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	%		Cooling: 95	Heating: 95	Heating: 95
Power Cord	Number of core		-		
	Length	m (ft)	-		
Thermostat			Electronic Control		
Protection Device			Electronic Control		
Pressure Relief Valve Water Circuit		kPa	Open: 400, Close: 280		

Item		Unit	Outdoor Unit
Operation Range	Outdoor Ambient	°C (min. / max.)	Cooling: 10 / 43 Heating (Tank): -25 / 43 Heating (Circuit): -25 / 35
	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 25 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 25 / 75 (Above Ambient -15 °C) * <sup>4</sup>
Internal Pressure Differential		kPa	Cooling: 16.0 Heating: 28.0
Pump	Motor Type		Brushless DC Motor (Sensorless vector control system)
	No. of Speed		Variable speed
	Input Power	W	175
Flow Sensor	Type		Vortex (VVX20)
	Measuring range	l/min	5 ~ 60

Item		Unit	Indoor Unit	
Performance Test Condition			EN 14511	
			EN 14825	
Noise Level		dB (A) ***	Cooling: 22	Heating: 22
		Power Level dB ****	Cooling: 35	Heating: 35
Dimension	Depth	mm (inch)	116	
	Width	mm (inch)	520	
	Height	mm (inch)	454	
Net Weight		kg (lbs)	7 (15)	
Water Pipe Diameter	Room	mm (inch)	-	
	Shower	mm (inch)	-	
Water Drain Hose Inner Diameter		mm (inch)	-	
Pressure Release Valve		kPa	-	
Protection Device		A	Residual Current Circuit Breaker (40)	
Max. Tank Water Set Temperature		°C	75	
Tank Coil Surface		m <sup>2</sup>	-	
Maximum Working Pressure	Heat / Cool	Bar	4.0	

**Note:**

- In case it is necessary to indicate the air flow volume in (l/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the “extra-low” temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*<sup>3</sup> When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*<sup>4</sup> Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

### 3.11 WH-ADC0316M9E82 WH-WDG16ME8

Item		Unit	Outdoor Unit			
Performance Test Condition		EN 14511				
		EN 14825				
Cooling Capacity	Condition (Ambient/Water)	A35W7				
	kW	9.00				
	BTU/h	30700				
Cooling EER	W/W	3.61				
Heating Capacity	Condition (Ambient/Water)	A7W35	A2W35			
	kW	16.00	13.00			
	BTU/h	54600	44300			
Heating COP	W/W	4.65	3.30			
Heating Erp	Low Temperature Application (W35)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	13.0	14.0	12.0	
	Tbiv/TOL	°C	2 / 2	-6 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	6.20 / 245	4.58 / 180	4.30 / 169	
	Annual Consumption	kWh	2801	6317	6883	
	Class		A+++	A+++	A++	
	Medium Temperature Application (W55)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	12.0	13.0	11.0	
	Tbiv/TOL	°C	2 / 2	-6 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	4.34 / 171	3.58 / 140	3.26 / 127	
	Annual Consumption	kWh	3695	7507	8312	
	Class		A+++	A++	A++	
	DHW		Warmer	Average	Colder	
	Application	Climate				
	COP / nwh	(W/W) / %	3.35 / 134	2.87 / 115	2.10 / 84	
	AEC	kWh	765	892	1221	
	Noise Level	dB (A) ***		Cooling: -		Heating: -
		Power Level dB ****		Cooling: 61		Heating: 65
dB *****		-		Heating: 58		
Air Flow	m <sup>3</sup> /min (ft <sup>3</sup> /min)		Cooling: 90.0 (3178) Heating: 103.0 (3637)			
Refrigeration Control Device	Expansion Valve					
Refrigeration Oil	cm <sup>3</sup>		PZ68S (1600)			
Refrigerant	kg (oz)		R290, 1.58 (55.7) (Pre-charged) (-) (Maximum)			
F-GAS	GWP		-			
	CO <sub>2</sub> eq (ton) (Precharged / Maximum)		-			
Dimension	Height	mm (inch)	1520 (59-27/32)			
	Width	mm (inch)	1200 (47-1/4)			
	Depth	mm (inch)	370 (14-9/16)			

Item		Unit	Outdoor Unit		
Net Weight		kg (lbs)	151 (333)		
Pipe Diameter (Inner)		mm	32		
Standard Length		m (ft)	5.0 (16.4)		
Maximum Pipe Length		m (ft)	30.0 (98.4)		
I/D & O/D Height Difference		m (ft)	30.0 (98.4)		
Water Pipe Connector	Indoor	inch	1-1/4		
	Outdoor		1-1/4		
Compressor	Type		Hermetic Motor Compressor (Involute Scroll)		
	Motor Type		Synchronous Electric Motor (6-poles)		
	Rated Output	kW	3.10		
Fan	Type		Propeller Fan		
	Material		PP		
	Motor Type		DC (8-poles)		
	Input Power	kW	-		
	Output Power	W	120 × 2		
	Fan Speed	rpm	Cooling: 480 Heating: 540		
Heat Exchanger	Fin material		Aluminium (Blue Coat)		
	Fin Type		Corrugated Fin		
	Row × Stage × FPI		2 × 58 × 18		
	Size (W × H × L)	mm	44 × 1473.2 × 868.2:902.7		
Hot Water Coil	Type		Brazed Plate		
	No. of Plates		30		
	Size (W × H × L)	mm	65.2 × 524 × 117		
	Water Flow Rate	l/min (m <sup>3</sup> /h)	Cooling: 25.8 (1.5) Heating: 45.9 (2.8)		
Power Source (Phase, Voltage, Cycle)		∅	Three		
		V	400		
		Hz	50		
Input Power	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	kW		Cooling: 2.49	Heating: 3.44	Heating: 3.94
Maximum Input Power For Heatpump System		kW	7.30		
Outdoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 11.0 / 7.30k		
Indoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 13.1 / 9.00k		
Power Supply 3 : Phase (∅) / Max. Current (A) / Max. Input Power (W)			- / - / -		
Starting Current		A	5.2		
Running Current	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	A		Cooling: 3.8	Heating: 5.2	Heating: 6.0
Maximum Current For Heatpump System		A	11.0		
Power Factor Power factor means total figure of compressor and outdoor fan motor.	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	%		Cooling: 95	Heating: 95	Heating: 95
Power Cord	Number of core		-		
	Length	m (ft)	-		
Thermostat			Electronic Control		
Protection Device			Electronic Control		
Pressure Relief Valve Water Circuit		kPa	Open: 400, Close: 280		

Item		Unit	Outdoor Unit
Operation Range	Outdoor Ambient	°C (min. / max.)	Cooling: 10 / 43 Heating (Tank): -25 / 43 Heating (Circuit): -25 / 35
	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 25 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 25 / 75 (Above Ambient -15 °C) * <sup>4</sup>
Internal Pressure Differential		kPa	Cooling: 25.0 Heating: 65.0
Pump	Motor Type		Brushless DC Motor (Sensorless vector control system)
	No. of Speed		Variable speed
	Input Power	W	175
Flow Sensor	Type		Vortex (VVX20)
	Measuring range	l/min	5 ~ 60

Item		Unit	Indoor Unit	
Performance Test Condition			EN 14511	
			EN 14825	
Noise Level		dB (A) ***	Cooling: 22	Heating: 22
		Power Level dB ****	Cooling: 35	Heating: 35
Dimension	Depth	mm (inch)	602 (23-45/64)	
	Width	mm (inch)	599 (23-37/64)	
	Height	mm (inch)	1642 (64-41/64)	
Net Weight		kg (lbs)	89 (196)	
Water Pipe Diameter	Room	mm (inch)	31 (1-1/4)	
	Shower	mm (inch)	19 (3/4)	
Water Drain Hose Inner Diameter		mm (inch)	17.00 (11/16)	
Pressure Release Valve		kPa	Open: 800, Close: 640	
Protection Device		A	Residual Current Circuit Breaker (40)	
Expansion Vessel	Volume	l	12	
	MWP	bar	10	
Capacity of Integrated Electric Heater / OLP TEMP		kW / °C	9.00 / 85	
Tank Volume (Spec / Nett)		L	200 / 185	
Max. Tank Water Set Temperature		°C	65	
Tank Coil Surface		m <sup>2</sup>	1.8	
Maximum Working Pressure	Heat / Cool	Bar	4.0	
	Tank Circuit	Bar	10.0	
Operating Pressure	Tank Unit	Bar	3.5	
	Expansion Relief Valve	Bar	8.0	
Expansion Vessel Pre-charge Pressure (DHW Circuit)		Bar	3.5	
Pressure Reducing Valve Set Pressure (DHW Circuit)		Bar	3.5	

Item		Unit	Indoor Unit
Pressure Vessel	Material		EN-1.4521
	Volume	L	185
	Design Pressure	Bar	10
Heat Exchanger	Material		EN-1.4521
	Diameter	mm	22
	Thickness	mm	0.8
	Surface Area	m <sup>2</sup>	1.8
	Total Length	m	25
DHW Tank	Total Corrosion ion (Chloride + Sulphate + Nitric)	mg/L	< 250
	Conductivity @ Water Tank Water Temperature < 65°C	µS/cm	< 1250 @ 25°C
	Saturation Index (LSI) @ 20°C		> -4.0 / < 0.4
	PH		6.0 - 9.5

**Note:**

- In case it is necessary to indicate the air flow volume in (l/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the “extra-low” temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*3 When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*4 Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

### 3.12 WH-ADC0316M9E83 WH-WDG16ME8

Item		Unit	Outdoor Unit			
Performance Test Condition			EN 14511			
			EN 14825			
Cooling Capacity	Condition (Ambient/Water)		A35W7			
	kW		9.00			
	BTU/h		30700			
Cooling EER	W/W		3.61			
Heating Capacity	Condition (Ambient/Water)		A7W35	A2W35		
	kW		16.00	13.00		
	BTU/h		54600	44300		
Heating COP	W/W		4.65	3.30		
Heating Erp	Low Temperature Application (W35)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	13.0	14.0	12.0	
	Tbiv/TOL	°C	2 / 2	-6 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	6.20 / 245	4.58 / 180	4.30 / 169	
	Annual Consumption	kWh	2801	6317	6883	
	Class		A+++	A+++	A++	
	Medium Temperature Application (W55)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	12.0	13.0	11.0	
	Tbiv/TOL	°C	2 / 2	-6 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	4.34 / 171	3.58 / 140	3.26 / 127	
	Annual Consumption	kWh	3695	7507	8312	
	Class		A+++	A++	A++	
	DHW		Warmer	Average	Colder	
	Application	Climate				
	COP / nwh	(W/W) / %	3.35 / 134	2.85 / 114	2.10 / 84	
	AEC	kWh	1252	1472	1998	
	Noise Level		dB (A) ***	Cooling: -		Heating: -
			Power Level dB ****	Cooling: 61		Heating: 65
		dB *****	-		Heating: 58	
Air Flow		m <sup>3</sup> /min (ft <sup>3</sup> /min)	Cooling: 90.0 (3178) Heating: 103.0 (3637)			
Refrigeration Control Device			Expansion Valve			
Refrigeration Oil		cm <sup>3</sup>	PZ68S (1600)			
Refrigerant		kg (oz)	R290, 1.58 (55.7) (Pre-charged) (-) (Maximum)			
F-GAS	GWP		-			
	CO <sub>2</sub> eq (ton) (Precharged / Maximum)		-			
Dimension	Height	mm (inch)	1520 (59-27/32)			
	Width	mm (inch)	1200 (47-1/4)			
	Depth	mm (inch)	370 (14-9/16)			

Item		Unit	Outdoor Unit		
Net Weight		kg (lbs)	151 (333)		
Pipe Diameter (Inner)		mm	32		
Standard Length		m (ft)	5.0 (16.4)		
Maximum Pipe Length		m (ft)	30.0 (98.4)		
I/D & O/D Height Difference		m (ft)	30.0 (98.4)		
Water Pipe Connector	Indoor	inch	1-1/4		
	Outdoor		1-1/4		
Compressor	Type		Hermetic Motor Compressor (Involute Scroll)		
	Motor Type		Synchronous Electric Motor (6-poles)		
	Rated Output	kW	3.10		
Fan	Type		Propeller Fan		
	Material		PP		
	Motor Type		DC (8-poles)		
	Input Power	kW	-		
	Output Power	W	120 × 2		
	Fan Speed	rpm	Cooling: 480 Heating: 540		
Heat Exchanger	Fin material		Aluminium (Blue Coat)		
	Fin Type		Corrugated Fin		
	Row × Stage × FPI		2 × 58 × 18		
	Size (W × H × L)	mm	44 × 1473.2 × 868.2:902.7		
Hot Water Coil	Type		Brazed Plate		
	No. of Plates		30		
	Size (W × H × L)	mm	65.2 × 524 × 117		
	Water Flow Rate	l/min (m <sup>3</sup> /h)	Cooling: 25.8 (1.5) Heating: 45.9 (2.8)		
Power Source (Phase, Voltage, Cycle)		∅	Three		
		V	400		
		Hz	50		
Input Power	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	kW		Cooling: 2.49	Heating: 3.44	Heating: 3.94
Maximum Input Power For Heatpump System		kW	7.30		
Outdoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 11.0 / 7.30k		
Indoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 13.1 / 9.00k		
Power Supply 3 : Phase (∅) / Max. Current (A) / Max. Input Power (W)			- / - / -		
Starting Current		A	5.2		
Running Current	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	A		Cooling: 3.8	Heating: 5.2	Heating: 6.0
Maximum Current For Heatpump System		A	11.0		
Power Factor Power factor means total figure of compressor and outdoor fan motor.	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	%		Cooling: 95	Heating: 95	Heating: 95
Power Cord	Number of core		-		
	Length	m (ft)	-		
Thermostat			Electronic Control		
Protection Device			Electronic Control		
Pressure Relief Valve Water Circuit		kPa	Open: 400, Close: 280		

Item		Unit	Outdoor Unit
Operation Range	Outdoor Ambient	°C (min. / max.)	Cooling: 10 / 43 Heating (Tank): -25 / 43 Heating (Circuit): -25 / 35
	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 25 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 25 / 75 (Above Ambient -15 °C) * <sup>4</sup>
Internal Pressure Differential		kPa	Cooling: 25.0 Heating: 65.0
Pump	Motor Type		Brushless DC Motor (Sensorless vector control system)
	No. of Speed		Variable speed
	Input Power	W	175
Flow Sensor	Type		Vortex (VVX20)
	Measuring range	l/min	5 ~ 60

Item		Unit	Indoor Unit	
Performance Test Condition			EN 14511	
			EN 14825	
Noise Level		dB (A) ***	Cooling: 22	Heating: 22
		Power Level dB ****	Cooling: 35	Heating: 35
Dimension	Depth	mm (inch)	602 (23-45/64)	
	Width	mm (inch)	599 (23-37/64)	
	Height	mm (inch)	2036 (80-5/32)	
Net Weight		kg (lbs)	105 (231)	
Water Pipe Diameter	Room	mm (inch)	31 (1-1/4)	
	Shower	mm (inch)	19 (3/4)	
Water Drain Hose Inner Diameter		mm (inch)	17.00 (11/16)	
Pressure Release Valve		kPa	Open: 800, Close: 640	
Protection Device		A	Residual Current Circuit Breaker (40)	
Expansion Vessel	Volume	l	12	
	MWP	bar	10	
Capacity of Integrated Electric Heater / OLP TEMP		kW / °C	9.00 / 85	
Tank Volume (Spec / Nett)		L	270 / 260	
Max. Tank Water Set Temperature		°C	65	
Tank Coil Surface		m <sup>2</sup>	2.4	
Maximum Working Pressure	Heat / Cool	Bar	4.0	
	Tank Circuit	Bar	10.0	
Operating Pressure	Tank Unit	Bar	3.5	
	Expansion Relief Valve	Bar	8.0	
Expansion Vessel Pre-charge Pressure (DHW Circuit)		Bar	3.5	
Pressure Reducing Valve Set Pressure (DHW Circuit)		Bar	3.5	

Item		Unit	Indoor Unit
Pressure Vessel	Material		EN-1.4521
	Volume	L	260
	Design Pressure	Bar	10
Heat Exchanger	Material		EN-1.4521
	Diameter	mm	22
	Thickness	mm	0.8
	Surface Area	m <sup>2</sup>	2.4
	Total Length	m	25
DHW Tank	Total Corrosion ion (Chloride + Sulphate + Nitric)	mg/L	< 250
	Conductivity @ Water Tank Water Temperature < 65°C	µS/cm	< 1250 @ 25°C
	Saturation Index (LSI) @ 20°C		> -4.0 / < 0.4
	PH		6.0 - 9.5

**Note:**

- In case it is necessary to indicate the air flow volume in (l/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the “extra-low” temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*3 When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*4 Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

### 3.13 WH-ADC0316M9E81 WH-WDG16ME8

Item		Unit	Outdoor Unit			
Performance Test Condition		EN 14511				
		EN 14825				
Cooling Capacity	Condition (Ambient/Water)	A35W7				
	kW	9.00				
	BTU/h	30700				
Cooling EER	W/W	3.61				
Heating Capacity	Condition (Ambient/Water)	A7W35	A2W35			
	kW	16.00	13.00			
	BTU/h	54600	44300			
Heating COP	W/W	4.65	3.30			
Heating Erp	Low Temperature Application (W35)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	13.0	14.0	12.0	
	Tbiv/TOL	°C	2 / 2	-6 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	6.20 / 245	4.58 / 180	4.30 / 169	
	Annual Consumption	kWh	2801	6317	6883	
	Class		A+++	A+++	A++	
	Medium Temperature Application (W55)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	12.0	13.0	11.0	
	Tbiv/TOL	°C	2 / 2	-6 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	4.34 / 171	3.58 / 140	3.26 / 127	
	Annual Consumption	kWh	3695	7507	8312	
	Class		A+++	A++	A++	
	DHW		Warmer	Average	Colder	
	Application	Climate				
	COP / nwh	(W/W) / %	2.51 / 101	2.40 / 96	1.75 / 70	
	AEC	kWh	512	536	734	
	Noise Level	dB (A) ***		Cooling: -		Heating: -
		Power Level dB ****		Cooling: 61		Heating: 65
dB *****		-		Heating: 58		
Air Flow	m <sup>3</sup> /min (ft <sup>3</sup> /min)		Cooling: 90.0 (3178) Heating: 103.0 (3637)			
Refrigeration Control Device	Expansion Valve					
Refrigeration Oil	cm <sup>3</sup>		PZ68S (1600)			
Refrigerant	kg (oz)		R290, 1.58 (55.7) (Pre-charged) (-) (Maximum)			
F-GAS	GWP		-			
	CO <sub>2</sub> eq (ton) (Precharged / Maximum)		-			
Dimension	Height	mm (inch)	1520 (59-27/32)			
	Width	mm (inch)	1200 (47-1/4)			
	Depth	mm (inch)	370 (14-9/16)			

Item		Unit	Outdoor Unit		
Net Weight		kg (lbs)	151 (333)		
Pipe Diameter (Inner)		mm	32		
Standard Length		m (ft)	5.0 (16.4)		
Maximum Pipe Length		m (ft)	30.0 (98.4)		
I/D & O/D Height Difference		m (ft)	30.0 (98.4)		
Water Pipe Connector	Indoor	inch	1-1/4		
	Outdoor		1-1/4		
Compressor	Type		Hermetic Motor Compressor (Involute Scroll)		
	Motor Type		Synchronous Electric Motor (6-poles)		
	Rated Output	kW	3.10		
Fan	Type		Propeller Fan		
	Material		PP		
	Motor Type		DC (8-poles)		
	Input Power	kW	-		
	Output Power	W	120 × 2		
	Fan Speed	rpm	Cooling: 480 Heating: 540		
Heat Exchanger	Fin material		Aluminium (Blue Coat)		
	Fin Type		Corrugated Fin		
	Row × Stage × FPI		2 × 58 × 18		
	Size (W × H × L)	mm	44 × 1473.2 × 868.2:902.7		
Hot Water Coil	Type		Brazed Plate		
	No. of Plates		30		
	Size (W × H × L)	mm	65.2 × 524 × 117		
	Water Flow Rate	l/min (m <sup>3</sup> /h)	Cooling: 25.8 (1.5) Heating: 45.9 (2.8)		
Power Source (Phase, Voltage, Cycle)		∅	Three		
		V	400		
		Hz	50		
Input Power	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	kW		Cooling: 2.49	Heating: 3.44	Heating: 3.94
Maximum Input Power For Heatpump System		kW	7.30		
Outdoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 11.0 / 7.30k		
Indoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 13.1 / 9.00k		
Power Supply 3 : Phase (∅) / Max. Current (A) / Max. Input Power (W)			- / - / -		
Starting Current		A	5.2		
Running Current	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	A		Cooling: 3.8	Heating: 5.2	Heating: 6.0
Maximum Current For Heatpump System		A	11.0		
Power Factor Power factor means total figure of compressor and outdoor fan motor.	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	%		Cooling: 95	Heating: 95	Heating: 95
Power Cord	Number of core		-		
	Length	m (ft)	-		
Thermostat			Electronic Control		
Protection Device			Electronic Control		
Pressure Relief Valve Water Circuit		kPa	Open: 400, Close: 280		

Item		Unit	Outdoor Unit
Operation Range	Outdoor Ambient	°C (min. / max.)	Cooling: 10 / 43 Heating (Tank): -25 / 43 Heating (Circuit): -25 / 35
	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 25 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 25 / 75 (Above Ambient -15 °C) * <sup>4</sup>
Internal Pressure Differential		kPa	Cooling: 25.0 Heating: 65.0
Pump	Motor Type		Brushless DC Motor (Sensorless vector control system)
	No. of Speed		Variable speed
	Input Power	W	175
Flow Sensor	Type		Vortex (VVX20)
	Measuring range	l/min	5 ~ 60

Item		Unit	Indoor Unit	
Performance Test Condition			EN 14511	
			EN 14825	
Noise Level		dB (A) ***	Cooling: 22	Heating: 22
		Power Level dB ****	Cooling: 35	Heating: 35
Dimension	Depth	mm (inch)	602 (23-45/64)	
	Width	mm (inch)	599 (23-37/64)	
	Height	mm (inch)	1293	
Net Weight		kg (lbs)	77 (170)	
Water Pipe Diameter	Room	mm (inch)	31 (1-1/4)	
	Shower	mm (inch)	19 (3/4)	
Water Drain Hose Inner Diameter		mm (inch)	17.00 (11/16)	
Pressure Release Valve		kPa	Open: 800, Close: 640	
Protection Device		A	Residual Current Circuit Breaker (40)	
Expansion Vessel	Volume	l	12	
	MWP	bar	10	
Capacity of Integrated Electric Heater / OLP TEMP		kW / °C	9.00 / 85	
Tank Volume (Spec / Nett)		L	127 / 120	
Max. Tank Water Set Temperature		°C	65	
Tank Coil Surface		m <sup>2</sup>	1.3	
Maximum Working Pressure	Heat / Cool	Bar	4.0	
	Tank Circuit	Bar	10.0	
Operating Pressure	Tank Unit	Bar	3.5	
	Expansion Relief Valve	Bar	8.0	
Expansion Vessel Pre-charge Pressure (DHW Circuit)		Bar	3.5	
Pressure Reducing Valve Set Pressure (DHW Circuit)		Bar	3.5	

Item		Unit	Indoor Unit
Pressure Vessel	Material		EN-1.4521
	Volume	L	120
	Design Pressure	Bar	10
Heat Exchanger	Material		EN-1.4521
	Diameter	mm	22
	Thickness	mm	0.8
	Surface Area	m <sup>2</sup>	1.3
	Total Length	m	25
DHW Tank	Total Corrosion ion (Chloride + Sulphate + Nitric)	mg/L	< 250
	Conductivity @ Water Tank Water Temperature < 65°C	µS/cm	< 1250 @ 25°C
	Saturation Index (LSI) @ 20°C		> -4.0 / < 0.4
	PH		6.0 - 9.5

**Note:**

- In case it is necessary to indicate the air flow volume in (l/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the “extra-low” temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*3 When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*4 Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

### 3.14 WH-SDC0316M9E8 WH-WDG16ME8

Item		Unit	Outdoor Unit			
Performance Test Condition			EN 14511			
			EN 14825			
Cooling Capacity	Condition (Ambient/Water)		A35W7			
	kW		9.00			
	BTU/h		30700			
Cooling EER	W/W		3.61			
Heating Capacity	Condition (Ambient/Water)		A7W35	A2W35		
	kW		16.00	13.00		
	BTU/h		54600	44300		
Heating COP	W/W		4.65	3.30		
Heating Erp	Low Temperature Application (W35)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	13.0	14.0	12.0	
	Tbiv/TOL	°C	2 / 2	-6 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	6.20 / 245	4.58 / 180	4.30 / 169	
	Annual Consumption	kWh	2801	6317	6883	
	Class		A+++	A+++	A++	
	Medium Temperature Application (W55)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	12.0	13.0	11.0	
	Tbiv/TOL	°C	2 / 2	-6 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	4.34 / 171	3.58 / 140	3.26 / 127	
	Annual Consumption	kWh	3695	7507	8312	
	Class		A+++	A++	A++	
	DHW		Warmer	Average	Colder	
	Application	Climate				
	COP / nwh	(W/W) / %	-	-	-	
	AEC	kWh	-	-	-	
	Noise Level		dB (A) ***	Cooling: -		Heating: -
			Power Level dB ****	Cooling: 61		Heating: 65
		dB *****	-		Heating: 58	
Air Flow		m <sup>3</sup> /min (ft <sup>3</sup> /min)	Cooling: 90.0 (3178) Heating: 103.0 (3637)			
Refrigeration Control Device			Expansion Valve			
Refrigeration Oil		cm <sup>3</sup>	PZ68S (1600)			
Refrigerant		kg (oz)	R290, 1.58 (55.7) (Pre-charged) (-) (Maximum)			
F-GAS	GWP		-			
	CO <sub>2</sub> eq (ton) (Precharged / Maximum)		-			
Dimension	Height	mm (inch)	1520 (59-27/32)			
	Width	mm (inch)	1200 (47-1/4)			
	Depth	mm (inch)	370 (14-9/16)			

Item		Unit	Outdoor Unit		
Net Weight		kg (lbs)	151 (333)		
Pipe Diameter (Inner)		mm	32		
Standard Length		m (ft)	5.0 (16.4)		
Maximum Pipe Length		m (ft)	30.0 (98.4)		
I/D & O/D Height Difference		m (ft)	30.0 (98.4)		
Water Pipe Connector	Indoor	inch	1-1/4		
	Outdoor		1-1/4		
Compressor	Type		Hermetic Motor Compressor (Involute Scroll)		
	Motor Type		Synchronous Electric Motor (6-poles)		
	Rated Output	kW	3.10		
Fan	Type		Propeller Fan		
	Material		PP		
	Motor Type		DC (8-poles)		
	Input Power	kW	-		
	Output Power	W	120 × 2		
	Fan Speed	rpm	Cooling: 480 Heating: 540		
Heat Exchanger	Fin material		Aluminium (Blue Coat)		
	Fin Type		Corrugated Fin		
	Row × Stage × FPI		2 × 58 × 18		
	Size (W × H × L)	mm	44 × 1473.2 × 868.2:902.7		
Hot Water Coil	Type		Brazed Plate		
	No. of Plates		30		
	Size (W × H × L)	mm	65.2 × 524 × 117		
	Water Flow Rate	l/min (m <sup>3</sup> /h)	Cooling: 25.8 (1.5) Heating: 45.9 (2.8)		
Power Source (Phase, Voltage, Cycle)		∅	Three		
		V	400		
		Hz	50		
Input Power	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	kW		Cooling: 2.49	Heating: 3.44	Heating: 3.94
Maximum Input Power For Heatpump System		kW	7.30		
Outdoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 11.0 / 7.30k		
Indoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 13.1 / 9.00k		
Power Supply 3 : Phase (∅) / Max. Current (A) / Max. Input Power (W)			- / - / -		
Starting Current		A	5.2		
Running Current	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	A		Cooling: 3.8	Heating: 5.2	Heating: 6.0
Maximum Current For Heatpump System		A	11.0		
Power Factor Power factor means total figure of compressor and outdoor fan motor.	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	%		Cooling: 95	Heating: 95	Heating: 95
Power Cord	Number of core		-		
	Length	m (ft)	-		
Thermostat			Electronic Control		
Protection Device			Electronic Control		
Pressure Relief Valve Water Circuit		kPa	Open: 400, Close: 280		

Item		Unit	Outdoor Unit
Operation Range	Outdoor Ambient	°C (min. / max.)	Cooling: 10 / 43 Heating (Tank): -25 / 43 Heating (Circuit): -25 / 35
	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 25 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 25 / 75 (Above Ambient -15 °C) * <sup>4</sup>
Internal Pressure Differential		kPa	Cooling: 25.0 Heating: 65.0
Pump	Motor Type		Brushless DC Motor (Sensorless vector control system)
	No. of Speed		Variable speed
	Input Power	W	175
Flow Sensor	Type		Vortex (VVX20)
	Measuring range	l/min	5 ~ 60

Item		Unit	Indoor Unit	
Performance Test Condition			EN 14511	
			EN 14825	
Noise Level		dB (A) ***	Cooling: 22	Heating: 22
		Power Level dB ****	Cooling: 35	Heating: 35
Dimension	Depth	mm (inch)	348	
	Width	mm (inch)	500	
	Height	mm (inch)	892	
Net Weight		kg (lbs)	29 (64)	
Water Pipe Diameter	Room	mm (inch)	31 (1-1/4)	
	Shower	mm (inch)	-	
Water Drain Hose Inner Diameter		mm (inch)	17.00 (11/16)	
Pressure Release Valve		kPa	-	
Protection Device		A	Residual Current Circuit Breaker (40)	
Expansion Vessel	Volume	l	12	
	MWP	bar	10	
Capacity of Integrated Electric Heater / OLP TEMP		kW / °C	9.00 / 85	
Max. Tank Water Set Temperature		°C	75	
Maximum Working Pressure	Heat / Cool	Bar	4.0	

**Note:**

- In case it is necessary to indicate the air flow volume in (l/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the “extra-low” temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*<sup>3</sup> When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*<sup>4</sup> Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

### 3.15 WH-CME8 WH-WDG16ME8

Item		Unit	Outdoor Unit			
Performance Test Condition			EN 14511			
			EN 14825			
Cooling Capacity	Condition (Ambient/Water)		A35W7			
	kW		9.00			
	BTU/h		30700			
Cooling EER		W/W	3.61			
Heating Capacity	Condition (Ambient/Water)		A7W35	A2W35		
	kW		16.00	13.00		
	BTU/h		54600	44300		
Heating COP		W/W	4.65	3.30		
Heating Erp	Low Temperature Application (W35)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	13.0	14.0	12.0	
	Tbiv/TOL	°C	2 / 2	-6 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	6.20 / 245	4.58 / 180	4.30 / 169	
	Annual Consumption	kWh	2801	6317	6883	
	Class		A+++	A+++	A++	
	Medium Temperature Application (W55)		Warmer	Average	Colder	
	Application	Climate				
	Predesign	kW	12.0	13.0	11.0	
	Tbiv/TOL	°C	2 / 2	-6 / -10	-15 / -22	
	SCOP/ηs	(W/W) / %	4.34 / 171	3.58 / 140	3.26 / 127	
	Annual Consumption	kWh	3695	7507	8312	
	Class		A+++	A++	A++	
	DHW		Warmer	Average	Colder	
	Application	Climate				
	COP / nwh	(W/W) / %	-	-	-	
	AEC	kWh	-	-	-	
	Noise Level		dB (A) ***	Cooling: -		Heating: -
			Power Level dB ****	Cooling: 61		Heating: 65
dB *****			-		Heating: 58	
Air Flow		m <sup>3</sup> /min (ft <sup>3</sup> /min)	Cooling: 90.0 (3178) Heating: 103.0 (3637)			
Refrigeration Control Device			Expansion Valve			
Refrigeration Oil		cm <sup>3</sup>	PZ68S (1600)			
Refrigerant		kg (oz)	R290, 1.58 (55.7) (Pre-charged) (-) (Maximum)			
F-GAS	GWP		-			
	CO <sub>2</sub> eq (ton) (Precharged / Maximum)		-			
Dimension	Height	mm (inch)	1520 (59-27/32)			
	Width	mm (inch)	1200 (47-1/4)			
	Depth	mm (inch)	370 (14-9/16)			

Item		Unit	Outdoor Unit		
Net Weight		kg (lbs)	151 (333)		
Pipe Diameter (Inner)		mm	32		
Standard Length		m (ft)	5.0 (16.4)		
Maximum Pipe Length		m (ft)	30.0 (98.4)		
I/D & O/D Height Difference		m (ft)	30.0 (98.4)		
Water Pipe Connector	Indoor	inch	-		
	Outdoor		1-1/4		
Compressor	Type		Hermetic Motor Compressor (Involute Scroll)		
	Motor Type		Synchronous Electric Motor (6-poles)		
	Rated Output	kW	3.10		
Fan	Type		Propeller Fan		
	Material		PP		
	Motor Type		DC (8-poles)		
	Input Power	kW	-		
	Output Power	W	120 × 2		
	Fan Speed	rpm	Cooling: 480 Heating: 540		
Heat Exchanger	Fin material		Aluminium (Blue Coat)		
	Fin Type		Corrugated Fin		
	Row × Stage × FPI		2 × 58 × 18		
	Size (W × H × L)	mm	44 × 1473.2 × 868.2:902.7		
Hot Water Coil	Type		Brazen Plate		
	No. of Plates		30		
	Size (W × H × L)	mm	65.2 × 524 × 117		
	Water Flow Rate	l/min (m <sup>3</sup> /h)	Cooling: 25.8 (1.5) Heating: 45.9 (2.8)		
Power Source (Phase, Voltage, Cycle)		∅	Three		
		V	400		
		Hz	50		
Input Power	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	kW		Cooling: 2.49	Heating: 3.44	Heating: 3.94
Maximum Input Power For Heatpump System		kW	7.30		
Outdoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 11.0 / 7.30k		
Indoor Power Supply : Phase (∅) / Max. Current (A) / Max. Input Power (W)			3∅ / 14.9 / 9.50k		
Power Supply 3 : Phase (∅) / Max. Current (A) / Max. Input Power (W)			- / - / -		
Starting Current		A	5.2		
Running Current	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	A		Cooling: 3.8	Heating: 5.2	Heating: 6.0
Maximum Current For Heatpump System		A	11.0		
Power Factor Power factor means total figure of compressor and outdoor fan motor.	Condition (Ambient/Water)		A35W7	A7W35	A2W35
	%		Cooling: 95	Heating: 95	Heating: 95
Power Cord	Number of core		-		
	Length	m (ft)	-		
Thermostat			Electronic Control		
Protection Device			Electronic Control		
Pressure Relief Valve Water Circuit		kPa	Open: 400, Close: 280		

Item		Unit	Outdoor Unit
Operation Range	Outdoor Ambient	°C (min. / max.)	Cooling: 10 / 43 Heating (Tank): -25 / 43 Heating (Circuit): -25 / 35
	Water Outlet	°C (min. / max.)	Cooling: 5 / 20 Heating (Tank): - / 65* <sup>3</sup> , Heating (Circuit): 25 / 55 (Below Ambient -25 °C) * <sup>4</sup> Heating (Circuit): 25 / 75 (Above Ambient -15 °C) * <sup>4</sup>
Internal Pressure Differential		kPa	Cooling: 16.0 Heating: 40.0
Pump	Motor Type		Brushless DC Motor (Sensorless vector control system)
	No. of Speed		Variable speed
	Input Power	W	175
Flow Sensor	Type		Vortex (VVX20)
	Measuring range	l/min	5 ~ 60

Item		Unit	Indoor Unit	
Performance Test Condition			EN 14511	
			EN 14825	
Noise Level		dB (A) ***	Cooling: 22	Heating: 22
		Power Level dB ****	Cooling: 35	Heating: 35
Dimension	Depth	mm (inch)	116	
	Width	mm (inch)	520	
	Height	mm (inch)	454	
Net Weight		kg (lbs)	7 (15)	
Water Pipe Diameter	Room	mm (inch)	-	
	Shower	mm (inch)	-	
Water Drain Hose Inner Diameter		mm (inch)	-	
Pressure Release Valve		kPa	-	
Protection Device		A	Residual Current Circuit Breaker (40)	
Max. Tank Water Set Temperature		°C	75	
Maximum Working Pressure	Heat / Cool	Bar	4.0	

**Note:**

- In case it is necessary to indicate the air flow volume in (l/s), the value in (m<sup>3</sup>/min.) shall be multiplied by 16.7 and rounded down the decimal point.
- If the EUROVENT Certified models can be operated under the “extra-low” temperature condition, -7°C DB and -8°C WB temperature with rated voltage 230V shall be used.
- Capacity is measured at outdoor temperature 7°C DB and 6°C WB with controlled water inlet 30°C and water outlet 35°C (EN 14511-2)
- Flowrate indicated are based on nominal capacity adjustment of leaving water temperature (LWT) 35°C and ΔT=5°C.
- EER and COP classification is at 230V only in accordance with EU directive 2003/32/EC.
- \*\*\* The sound pressure level is measured with distance 1.0m from the unit and height at 1.5m. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\*\* The sound power level is measured with accordance to EN12102 under conditions of the EN14825. (Test carry out for heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*\*\*\* The sound power level is measured with accordance to EN12102 under full load conditions. (Test carry out for cooling at ambient 35°C DB and Water Out 7°C, heating at ambient 7°C DB / 6°C WB and water out 55°C)
- \*<sup>3</sup> When outdoor ambient is under -15°C, only the backup heater operate above 55°C. (Outdoor unit don't have backup heater.)
- \*<sup>4</sup> Between outdoor ambient -15°C and -25°C, the water outlet temperature gradually decreases from 75°C to 55°C.

## 4. Features

- **Inverter Technology**
  - Energy saving
- **High Efficiency**
- **Long Installation Piping**
  - Long piping up to 30 meter
- **A-class energy efficiency pump**
  - Water pump speed can be set by selection at control panel
- **Improved deice cycle**
- **Protection Feature**
  - Random auto restart after power failure for safety restart operation
  - Gas leakage protection
  - Prevent compressor reverse cycle
  - Inner protector to protect compressor
- **Serviceability Feature**
  - Breakdown Self Diagnosis function
  - System Status Check Buttons for servicing purpose
  - System Pumpdown Button for servicing purpose
  - Front maintenance design for outdoor unit

# 5. Location of Controls and Components

## 5.1 Indoor Unit

### 5.1.1 Remote Controller Buttons and Display


The LCD display as shown in this manual are for instructional purpose only, and may differ from the actual unit.

Buttons / Indicator	
①	<b>Quick Menu button</b>
②	<b>Back button</b> Returns to the previous screen
③	<b>LCD Display</b> (Actual - Dark background with white icons)
④	<b>Main Menu button</b> For function setup
⑤	<b>ON/OFF button</b> Starts/Stops operation
⑥	<b>Operation indicator</b> Illuminates during operation, blinks during alarm.

When the backlight is off, press any button to turn it on.

(Do not press button ⑤)


The time until the backlight turns off can be changed in the Menu (Personal setup)

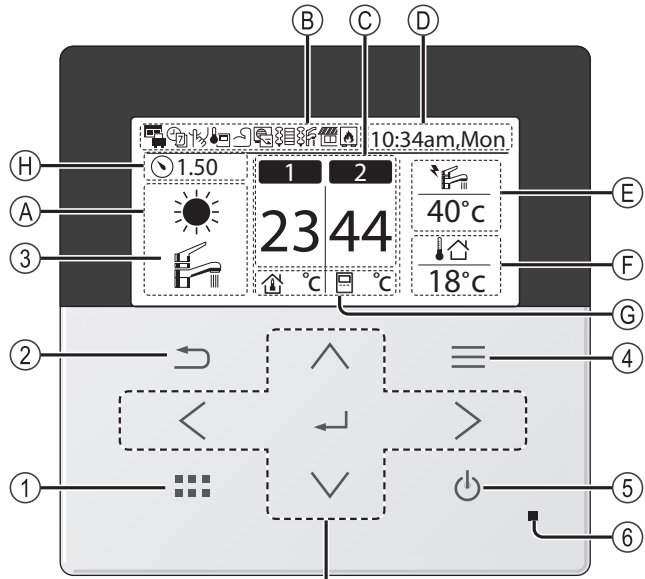

**Cross key buttons**  
Selects an item.


Up  
Left      Right  
Down

**Enter button**  
Fixes the selected content.

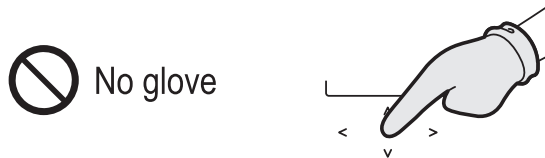

# Display

## A Mode selection

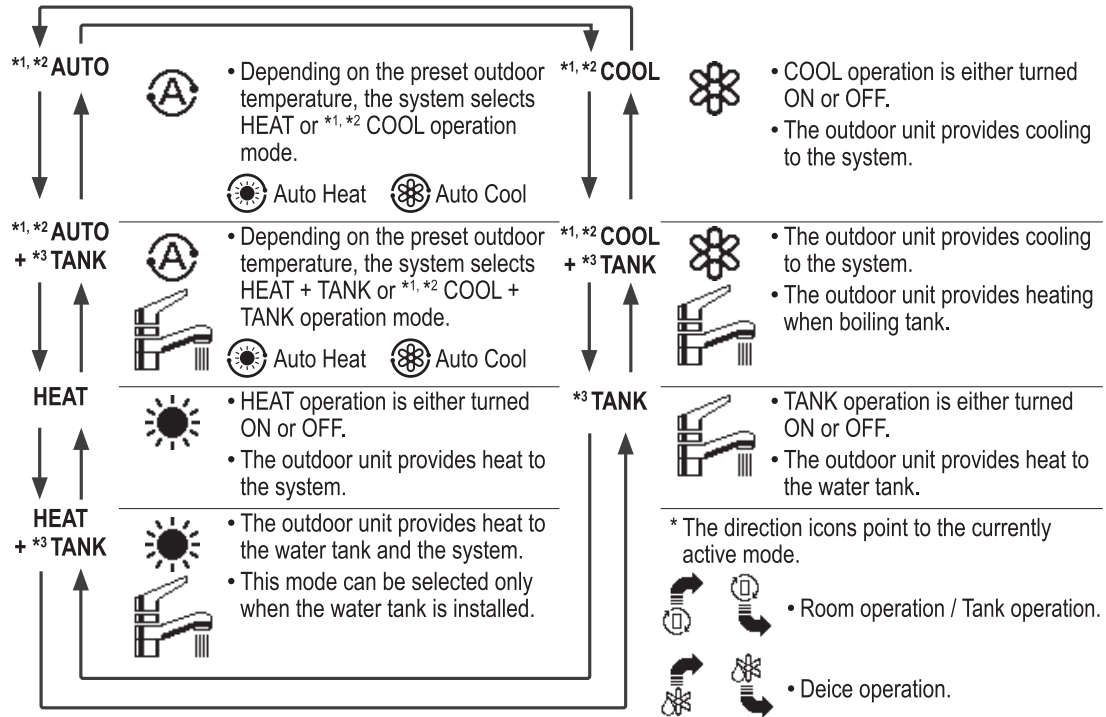

## B Operation icons

The status of operation is displayed.

Icon will not display (under operation OFF screen) whenever operation is OFF except weekly timer.

- |   |                               |  |
|---|-------------------------------|--|
| Holiday operation status                        | Weekly Timer operation status | Quiet operation status                   |
| Zone:Room Thermostat<br>→Internal sensor status | Powerful operation status     | Demand Control or SG ready or SHP status |
| Room Heater status                              | Tank Heater status            | Solar status                             |
| Bivalent status (Boiler)                        |                               |  |

## C Temperature of each zone

The zone 2 will shown in LCD display if is connected with Optional PCB.

## D Time and day

## E Water Tank temperature (with electric anode operation icon)

## F Outdoor temperature

## G Sensor type/Set temperature type icons

- |  |                              |                 |
|--|------------------------------|-----------------|
| Water Temperature<br>→Compensation curve | Water Temperature<br>→Direct | Pool only       |
| Room Thermostat<br>→External             | Room Thermostat<br>→Internal | Room Thermistor |

## H Water pressure (bar)

- \*1 The system is locked to operate without COOL mode. It can be unlocked only by authorised installers or our authorised service partners.
- \*2 Only displayed when COOL mode is unlocked (This means when COOL mode is available).
- \*3 Only displayed when Tank connection is Yes.

## 5.1.2 Initialization

Before starting to install the various menu settings, please initiate the Remote Controller by selecting the language of operation and installing the date and time correctly. When power is turned on for the first time, it becomes the setting screen automatically. It can also be set from personal setting of the menu.

### Selecting the language

Wait while the display is initializing.  
When initializing screen ends, it turns to normal screen.  
When any button is pressed, language setting screen appears.

- ① Scroll with  $\nabla$  and  $\blacktriangle$  to select the language.
- ② Press  $\leftarrow$  to confirm the selection.









### Setting the clock

- ① Select with  $\nabla$  or  $\blacktriangle$  how to display the time, either 24h or am/pm format (for example, 15:00 or 3:00pm).
- ② Press  $\leftarrow$  to confirm the selection.
- ③ Use  $\nabla$  and  $\blacktriangle$  to select year, month, day, hour and minutes. (Select and move with  $\blacktriangleright$  and press  $\leftarrow$  to confirm.)
- ④ Once the time is set, time and day will appear on the display even if the Remote Controller is turned OFF.

### Checking the front grilles

Final precaution step to check and confirm whether outdoor front grille is fixed before operating the unit for safety purpose. Select Yes if outdoor front grille is already fixed. Then it will proceed to main screen. Select No if outdoor front grille is not yet fixed. A caution message will pop up to remind on the installation.

\*The display will not appear once you set it.

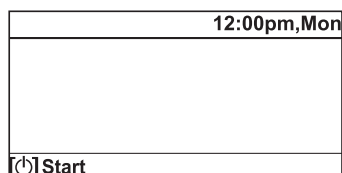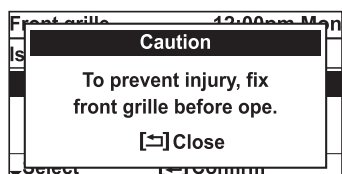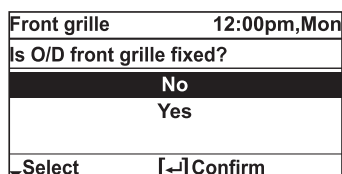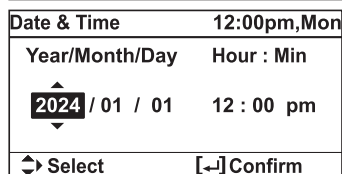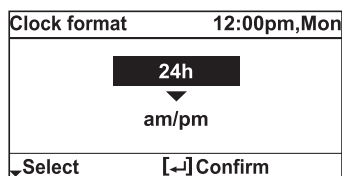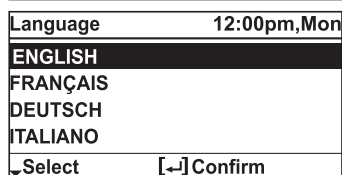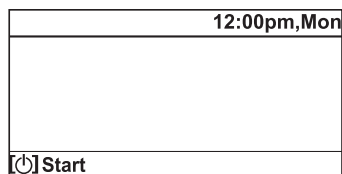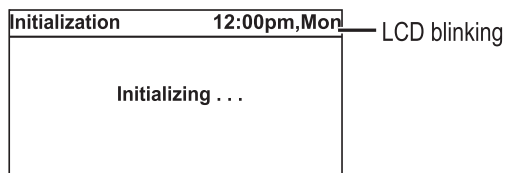


### 5.1.3 Quick Menu

After the initial settings have been completed, you can select a quick menu from the following options and edit the setting.



① Press to display the quick menu.

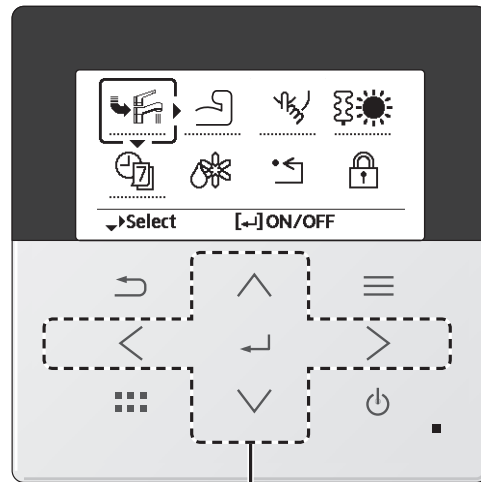

② Use to select menu.

③ Press to turn on/off the select menu.

### Quick Menu

Force DHW	Powerful	Quiet	Force Heater
Weekly Timer	Force Defrost	Error Reset	R/C Lock

Select
 ON/OFF

Select each setting and confirm the setting according to the instructions displayed at the bottom of the screen. (The icons refer to each selection key.)

**To return to the Main Screen,**

Press or .

\*1 Only displayed when Tank connection is Yes.


\*2 It is not displayed when the outdoor unit is used alone. When the indoor unit has the heater, it is displayed even if set not to operate the heater.

## 5.1.4 How to Use the Quick Menu

### Force DHW

Select this icon to turn the Tank DHW on or off.

Press  to confirm your selection.

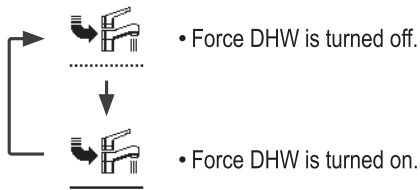

**Note:**


- Force DHW is disabled when Force Heater is turned on.
  - When Force DHW is turned off, operation & mode should change back to the previous memorized status.
- 

### Powerful

Select this icon to operate the heating system powerfully.

Press  to confirm your selection.

(The powerful operation starts approximately 1 minute after  is pressed.)

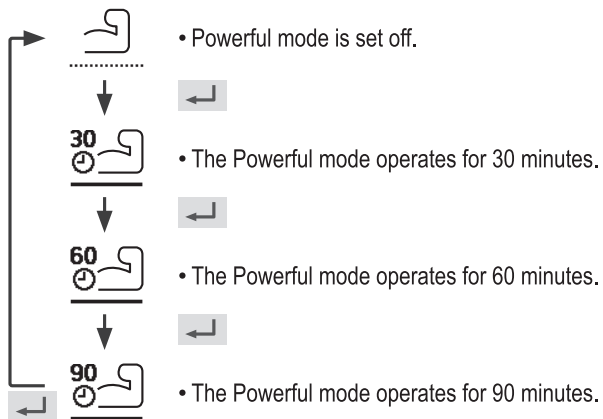

**Note:**


- Powerful is disabled when operation is turned OFF.

## Quiet

Select this icon to operate quietly.

Press  to confirm your selection.

(The quiet operation starts approximately 1 minute after  is pressed.)

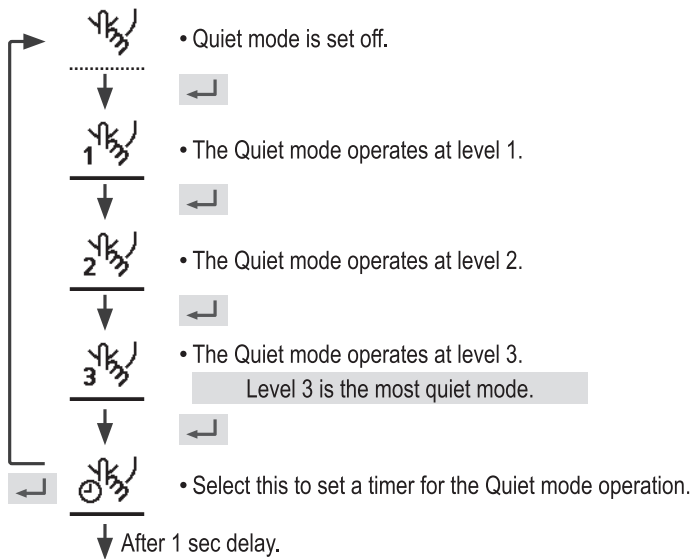


**Do you want to edit Quiet timer pattern?**

Yes

Pattern	Time	Level
1	6:00 am	2
2	8:00 pm	1
3	10:00 pm	0

**Edit**  
Delete

**12** : 00 pm



**Set time is overlapped!**

[=>]Close

**Select "Yes".**

- Select "Yes" using < > buttons.

**Select pattern "1" ~ "6".**

**Select "Edit".**

- If you select "Delete", the timer setting of the selected pattern will be deleted.

**Set the hour and minutes.**

**Select the level of Quiet.**


**Note:**


- If the time overlaps with another pattern, "Set time is overlapped!" will appear on the screen.

## Force Heater

Select to force the Heater on.

Press  to confirm your selection.

(The Force Heater mode starts approximately 1 minute after  is pressed.)

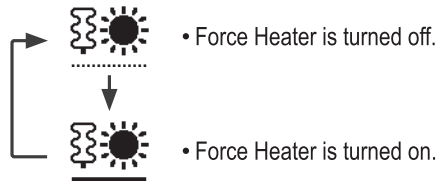

**Note:**

- Force Heater is disabled whenever operation is already on and “Disabled due to operation ON!” will be displayed.
- It is not displayed when the outdoor unit is used alone, and when the heater is set to OFF even if the indoor unit is connected.


**Disabled due to  
operation ON!**

Close

## Weekly Timer

Select this icon to delete (cancel) or change the pre-set Weekly Timer.

Press  to confirm your selection.

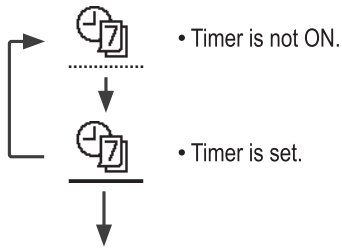

Do you want to edit Weekly timer pattern?

Yes

Select "Yes".

• If you select "No", the screen will return to the Main Screen.



Timer setup  
Timer copy

• Timer setup: Select Timer setup to edit the Weekly Timer.

• Timer copy: Select to copy a timer setting.

Sun	Mon	Tue	Wed	Thu	Fri	Sat
-	✓	✓	✓	✓	✓	-



 



[Example of a Timer setup]

Select the day(s) which you wish to edit using   buttons.

All 6 patterns are not set!  
Do you want to edit?

Yes

If all 6 patterns are not preset, this screen will be displayed.

Sun	Mon	Tue	Wed	Thu	Fri	Sat
1. 12:00am ON   25/20°C 40°C	2. 2:00am ON   25/25°C 40°C	3. 4:00am ON   30/20°C 40°C				
①	②	③	④	⑤	⑥	

① Select pattern "1" ~ "6".

② Set the hour and minutes of the Timer.

③ Select ON/OFF of the Timer.

④ Select the operation mode.



⑤ Set the temperature for both Zone 1 and 2 (if your system has the 2-Zone setting).

Saturday: Pattern 1: Set Temp

Zone1	Zone2
ON 25°C	ON 25°C
	45°C

⑥ Set the Tank temperature.

### Note:


- Timer is disabled when Force Heater is turned on or Heat-Cool SW is enabled.
- If you have preset the Weekly Timer on 2 zones, you must repeat the same procedure with Zone 2.

## Force Defrost

Select to defrost the frozen pipes.

Press  to confirm your selection.

(When the mode is accepted, below screen will be displayed.)

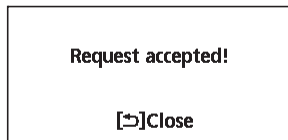


## Error Reset

Select to restore the previous settings when error has occurred.

Press  to confirm your selection.

(When the mode has been accepted, below screen will be displayed.)

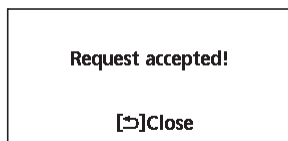


- Make sure all units are turned off before selecting this mode which restores the whole system to the previous settings.

## R/C Lock

Select to lock the Remote Controller.

Press  to confirm your selection.

(When the mode has been accepted, below screen will be displayed.)

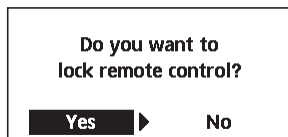

Select "Yes".

(The Main Screen will be locked.)

- If "No" is selected, the screen will return to the Main Screen.

### To unlock the Remote Controller

Press any key.

(When the mode has been accepted, below screen will be displayed.)



Enter any 4 digits of number (if the number is correct, the screen will be unlocked).

 
### To reset forgotten password (under operation OFF screen)

Press ,  and  continuously for 5 seconds.

(When the mode has been accepted, below screen will be displayed.)



Select "Reset".







(The screen will be off after 3 seconds.)

## 5.1.5 Menus (For User)


Select menus and determine settings according to the system available in the household. All initial settings must be done by an authorised dealer or a specialist. It is recommended that all alterations of the initial settings are also done by an authorised dealer or a specialist.




- After initial installation, you may manually adjust the settings.
- The initial setting remains active until the user changes it.
- The Remote Controller can be used for multiple installations.
- Ensure the operation indicator is OFF before setting.
- The system may not work properly if set wrongly. Please consult an authorised dealer/specialist.

To display <Main Menu>: 

To select menu:    

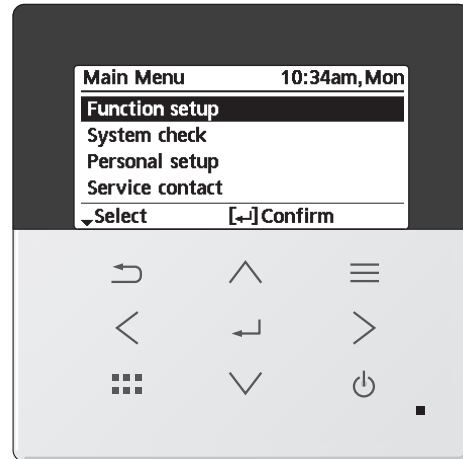To confirm the selected content: 






Menu	Default Setting	Setting Options / Display												
<b>1 Function setup</b>														
<b>1.1 &gt; Weekly timer</b>														
Once the weekly timer is set up, User can edit from Quick Menu. To set up to 6 patterns of operation on a daily basis. • Disabled if Heat-Cool SW is select "Yes" or if Force Heater is on.	<b>Timer setup</b> Select day of the week and set the patterns needed (Time / Operation ON/OFF / Mode)  <b>Timer copy</b> Select day of the week	<b>Weekly timer</b> 10:34am, Mon Sun <b>Mon</b> Tue Wed Thu Fri Sat 1. 8:00am ON  40°C 2. 12:00pm ON  24/28°C 40°C 3. 1:00pm ON  12/10°C ⏪ Day ⏩ Pattern [↵] Edit												
<b>1.2 &gt; Holiday timer</b>														
To save energy, a holiday period may be set to either turn OFF the system or lower the temperature during the period.  • Weekly timer setting may be temporarily disabled during Holiday timer setting but it will be restored once the Holiday timer is completed.	OFF <span style="float: right;">ON ↑ OFF</span>  > ON Holiday start and end. Date and time OFF or lowered temperature	<b>Holiday: End</b> 10:34am, Mon Year/Month/Day Hour : Min 2024 / 01 / 01 10 : 34 am ⏪ Select [↵] Confirm												
<b>1.3 &gt; Quiet timer</b>														
To operate quietly during the preset period. 6 patterns may be set. Level 0 means the mode is off.	Time to start Quiet : Date and time  Level of quietness: 0 ~ 3	<b>Quiet</b> 10:34am, Mon <table border="1"> <thead> <tr> <th>Pattern</th> <th>Time</th> <th>Level</th> </tr> </thead> <tbody> <tr> <td><b>1</b></td> <td>8:00am</td> <td>0</td> </tr> <tr> <td>2</td> <td>5:00pm</td> <td>1</td> </tr> <tr> <td>3</td> <td>11:00pm</td> <td>3</td> </tr> </tbody> </table> ⏪ Select [↵] Edit	Pattern	Time	Level	<b>1</b>	8:00am	0	2	5:00pm	1	3	11:00pm	3
Pattern	Time	Level												
<b>1</b>	8:00am	0												
2	5:00pm	1												
3	11:00pm	3												

Menu	Default Setting	Setting Options / Display
<b>1.4 &gt; Quiet priority</b>		
<ul style="list-style-type: none"> <li>To select priority during Quiet mode between Sound and Capacity.</li> <li>If Sound priority is selected, unit will operate in quiet condition only.</li> <li>If Capacity priority is selected, unit will operate in quiet condition but it will prioritize on providing required capacity at the same time.</li> </ul>	Sound	<div style="text-align: center;"> <div style="border: 1px solid black; background-color: black; color: white; padding: 2px; display: inline-block;">Sound</div>  ▼  <div style="border: 1px solid black; background-color: black; color: white; padding: 2px; display: inline-block;">Capacity</div> </div>
<b>1.5 &gt; *1 Room heater</b>		
To set the room heater ON or OFF.	OFF	<div style="text-align: center;"> ON  <div style="border: 1px solid black; background-color: black; color: white; padding: 2px; display: inline-block;">OFF</div> </div>
<b>1.6 &gt; *2 Tank heater</b>		
To set the tank heater ON or OFF.	OFF	<div style="text-align: center;"> ON  <div style="border: 1px solid black; background-color: black; color: white; padding: 2px; display: inline-block;">OFF</div> </div>
<b>1.7 &gt; *2 Sterilization</b>		
To set the auto sterilization ON or OFF.	ON	<div style="text-align: center;"> <div style="border: 1px solid black; background-color: black; color: white; padding: 2px; display: inline-block;">ON</div>  ▼  OFF </div>
<ul style="list-style-type: none"> <li>Do not use the system during sterilization in order to prevent scalding with hot water, or overheating of shower.</li> <li>Ask an authorised dealer/specialist to determine the level of sterilization function field settings according to the local laws and regulations.</li> </ul>		
<b>1.8 &gt; *3 DHW mode (Domestic Hot Water)</b>		
<p>To set the DHW mode to Standard or Smart.</p> <ul style="list-style-type: none"> <li>Standard mode have faster DHW Tank heat up time. Meanwhile Smart mode take longer time to heat up DHW time with lower energy consumption.</li> </ul>	Standard	<div style="text-align: center;"> <div style="border: 1px solid black; background-color: black; color: white; padding: 2px; display: inline-block;">Standard</div>  ▼  <div style="border: 1px solid black; background-color: black; color: white; padding: 2px; display: inline-block;">Smart</div> </div>
<p>To set the tank sensor to Top or Center.</p> <ul style="list-style-type: none"> <li>Selection of the tank sensor to top slow down the start of boiling up the tank and reduce power consumption. Please change this selection to "Center" when the hot water becomes insufficient.</li> </ul>	Top	<div style="text-align: center;"> <div style="border: 1px solid black; background-color: black; color: white; padding: 2px; display: inline-block;">Top</div>  ▼  <div style="border: 1px solid black; background-color: black; color: white; padding: 2px; display: inline-block;">Center</div> </div>

\*1 It is not displayed when the outdoor unit is used alone or depending on the settings.

\*2 Only displayed when Tank connection is Yes.

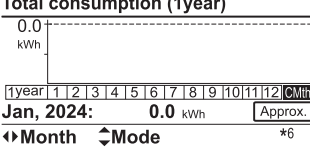\*3 Only displayed when connect Panasonic AIR-TO-WATER HYDROMODULE+TANK.

Menu	Default Setting	Setting Options / Display
<b>2 System check</b>		
<b>2.1 &gt; Energy monitor</b>		
Present or historical chart of energy consumption, generation or COP.	<b>Present</b> Select and retrieve	<b>Total consumption (1year)</b> 
	<b>Historical chart</b> Select and retrieve	
<ul style="list-style-type: none"> <li>• COP= Coefficient of Performance.</li> <li>• For historical chart, the period is selected from 1 day/1 week/1year.</li> <li>• Energy consumption (kWh) of heating, *<sup>1</sup>, *<sup>2</sup> cooling, *<sup>5</sup> tank and total may be retrieved.</li> <li>• The total power consumption is an estimated value based on AC 230 V and may differ from value measured by precise equipment.</li> </ul>		
<b>2.2 &gt; *<sup>3</sup> System information</b>		
Shows all system information in each area.	<b>Actual system information of 11 items:</b> Inlet / Outlet / Zone 1 / Zone 2 / Tank / Buffer tank / Solar / Pool / COMP frequency / Pump flowrate / Water pressure * <sup>7</sup> Select and retrieve	<b>System information 10:34am, Mon</b> 1. Inlet : 0°C 2. Outlet : 0°C 3. Zone 1 : 0°C 4. Zone 2 : 0°C ↓Page
<b>2.3 &gt; Error history</b>		
<ul style="list-style-type: none"> <li>• Refer to Troubleshooting for error codes.</li> <li>• The most recent error code is displayed at the top.</li> </ul>	Select and retrieve	<b>Error history 10:34am, Mon</b> 1. -- 2. -- 3. -- 4. -- [←] Clear history
<b>2.4 &gt; Compressor</b>		
Shows the compressor performance.	Select and retrieve	<b>Compressor 10:34am, Mon</b> 1. Current frequency : 0 Hz 2. (OFF-ON) counter : 0 3. Total ON time : 0 h [↩] Back
<b>2.5 &gt; Heater</b>		
Total hours of ON time for * <sup>4</sup> Room heater/ * <sup>5</sup> Tank heater.	Select and retrieve	<b>Heater 10:34am, Mon</b> <b>Total ON time</b>  : 0h  : 0h [↩] Back

(NOTE) : If [Approx.] is shown on Energy Monitor display, data displayed on the remote controller is obtained through heat pump's internal calculation.  
If [Approx.] is NOT shown on Energy Monitor display, data\*\* displayed on the remote controller is obtained by External Meters.  
Data stored on the Aquarea unit can be mixed between internal calculation and External Meters.  
\*\*In order to know the exact consumption or generation, please use as reference always the External Meters' data.

\*<sup>1</sup> The system is locked to operate without COOL mode. It can be unlocked only by authorised installers or our authorised service partners.

\*<sup>2</sup> Only displayed when COOL mode is unlocked (This means when COOL mode is available).

\*<sup>3</sup> The items displayed differ depending on the Appliance and connected units.

\*<sup>4</sup> It is not displayed when the outdoor unit is used alone.

\*<sup>5</sup> Only displayed when Tank connection is Yes.


\*<sup>6</sup> If [Approx.] is shown on Energy Monitor display, data displayed on the remote controller is obtained through heat pump's internal calculation.

If [Approx.] is NOT shown on Energy Monitor display, data displayed on the remote controller is obtained by External Meters.

\*<sup>7</sup> Only displayed when each connection is Yes.

Menu	Default Setting	Setting Options / Display
<b>3 Personal setup</b>		
<b>3.1 &gt; Remote control No.</b>		
<ul style="list-style-type: none"> <li>To display remote control number of a particular remote controller so that installer and end user are well informed.</li> <li>Main remote controller is displayed as RC-1. Second remote controller is displayed as RC-2.</li> </ul>	Select and retrieve	RC No. 10:34am, Mon <b>RC-1</b> [←] Confirm
<b>3.2 &gt; Touch sound</b>		
Turns the operation sound.	3	Touch sound 9:53am, Mon Level <b>3</b> ↕ Select [←] Confirm
<b>3.3 &gt; LCD contrast</b>		
Sets the screen contrast.	3	LCD contrast 10:34am, Mon Low High ◀ [Progress bar] ▶ ◀ Select [←] Confirm
<b>3.4 &gt; Backlight</b>		
Sets the duration of screen backlight.	1 min	Backlight 10:34am, Mon 15 secs 5 mins <b>1 min</b> 10 mins ↗ Select [←] Confirm
<b>3.5 &gt; Backlight intensity</b>		
Sets screen backlight brightness.	4	Backlight intensity 10:34am, Mon Dark Bright ◀ [Progress bar] ▶ ◀ Select [←] Confirm
<b>3.6 &gt; *1 Clock format</b>		
Sets the type of clock display.	am/pm	Clock format 10:34am, Mon 24h <b>am/pm</b> ↗ Select [←] Confirm
<b>3.7 &gt; Date &amp; Time</b>		
Sets the present date and time.	Year / Month / Day / Hour / Min	Date & Time 10:34am, Mon Year/Month/Day Hour : Min <b>2024</b> / 01 / 01 10 : 34 am ↕ Select [←] Confirm

\*1 The default setting is am/pm, but **24h** is displayed on the selection screen.

Menu	Default Setting	Setting Options / Display
<b>3.8 &gt; Language</b>		
Sets the display language for the top screen.	ENGLISH / FRANÇAIS / DEUTSCH / ITALIANO / ESPAÑOL / DANISH / SWEDISH / NORWEGIAN / POLISH / CZECH / NEDERLANDS / TÜRKÇE / SUOMI / MAGYAR / SLOVENŠČINA / HRVATSKI / LIETUVIŲ / PORTUGUÊS / БЪЛГАРСКИ / EESTI / LATVIEŠU / ROMÂNĂ / SHQIP / SLOVENČINA / МАКЕДОНСКИ / УКРАЇНСЬКА / ΕΛΛΗΝΙΚΑ	<p>Language 10:34am, Mon</p> <p><b>ENGLISH</b></p> <p>FRANÇAIS</p> <p>DEUTSCH</p> <p>ITALIANO</p> <hr/> <p>↕Select [←] Confirm</p>
<b>3.9 &gt; Unlock password</b>		
4 digit password for all the settings.	0000	<p>Unlock password 10:34am, Mon</p> <p><b>0000</b></p> <hr/> <p>↕Select [←] Confirm</p>
<b>4 Service contact</b>		
<b>4.1 &gt; Contact 1 / Contact 2</b>		
Preset contact number for installer.	Select and retrieve	<p>Service setup 10:34am, Mon</p> <p><b>Contact 1</b></p> <p>Name : Bryan Adams</p> <p> : 0881 2345678</p> <hr/> <p>↕Select</p>

## 5.1.6 Menus (For Installer)

Menu	Default Setting	Setting Options / Display
<b>5 Installer setup &gt; System setup</b>		
<b>5.1 &gt; *1 Optional PCB connectivity</b>		
To connect to the external PCB required for servicing.	No	Yes ▲ No
<ul style="list-style-type: none"> <li>• If the external PCB is connected (optional), the system will have following additional functions:               <ol style="list-style-type: none"> <li>① Control over 2 zones (including the swimming pool and the function to heat water in it).</li> <li>② Solar function (the solar thermal panels connected to either the DHW (Domestic Hot Water) Tank or the Buffer Tank.                   <ul style="list-style-type: none"> <li>• DHW is not applicable for WH-ADC *models.</li> </ul> </li> <li>③ External compressor switch.</li> <li>④ External error signal.</li> <li>⑤ SG ready control.</li> <li>⑥ Demand control.</li> <li>⑦ Heat-Cool SW</li> </ol> </li> </ul>		
<b>5.2 &gt; Zone &amp; Sensor</b>		
To select the sensors and to select either 1 zone or 2 zone system.	<b>Zone</b> <ul style="list-style-type: none"> <li>• After selecting 1 or 2 zone system, proceed to the selection of room or swimming pool.</li> <li>• If the swimming pool is selected, the temperature must be selected for <math>\Delta T</math> temperature between 0°C ~ 10 °C.</li> </ul>	<b>Zone &amp; Sensor</b> 10:34am, Mon <b>Zone</b> 1 Zone system 2 Zones system ▼Select [-] Confirm
	<b>Sensor</b> <ul style="list-style-type: none"> <li>* For room thermostat, there is a further selection of external or internal.</li> <li>• If select internal, there is a further selection of RC-1 or RC-2 (only available when Zone selection is 1 zone system). Select RC-1 if main remote controller's thermistor is to be used for room temperature control and vice versa.</li> </ul>	<b>Zone &amp; Sensor</b> 10:34am, Mon <b>Sensor</b> Water temperature Room thermostat Room thermistor ▼Select [-] Confirm
<b>5.3 &gt; *1 Heater capacity</b>		
To reduce the heater power if unnecessary.* 3 kW / 6 kW / 9 kW		<b>Heater capacity</b> 10:34am, Mon 3 kW [-] Confirm
* Options of kW vary depending on the model.		
<b>5.4 &gt; Anti freezing</b>		
To activate or deactivate the water freeze prevention when the system is OFF	Yes	Yes ▼ No
<b>5.5 &gt; *2 Tank connection</b>		
To connect tank to the system.	No	Yes ▲ No

\*1 It is not displayed when the outdoor unit is used alone.

\*2 It is not displayed when connect Panasonic AIR-TO-WATER HYDROMODULE+TANK.

Menu	Default Setting	Setting Options / Display
<b>5.6 &gt; *1 DHW capacity</b>		
<p>To select tank heating capacity to variable or standard. Variable capacity heat up tank with fast mode and keep the tank temperature with efficient mode. While standard capacity heat up tank with rated heating capacity. When "Efficiency" is selected the "5.25 Heating control" setting, the tank heat-up process will be delayed until a much lower tank water temperature is reached, which improves the efficiency of the heating process. To ensure sufficient hot water, select either "Standard" in this setting or "Comfort" in the "5.25 Heating control" setting.</p>	Variable	<p style="text-align: center;"><b>Variable</b></p> <p style="text-align: center;">▼</p> <p style="text-align: center;"><b>Standard</b></p>
<b>5.7 &gt; *2 Buffer tank connection</b>		
<p>To connect tank to the system and if selected YES, to set ΔT temperature.</p>	No	<p style="text-align: center;">Yes</p> <p style="text-align: center;">▲</p> <p style="text-align: center;"><b>No</b></p>
	> Yes	
	5 °C	<p>Set ΔT for Buffer Tank</p> <p>Buffer tank 10:34am, Mon</p> <p>ΔT for Buffer tank</p> <p>Range: (0°C~10°C)</p> <p>Steps: ±1°C</p> <p style="text-align: center;"><b>5</b> °C</p> <p>▲</p> <p>▼</p> <p>↕Select [-] Confirm</p>
<b>5.8 &gt; *1 Tank heater</b>		
<p>To select external or internal tank heater and if External is selected, set a timer for the heater to come on.</p> <p>* This option is available if Tank connection is selected (YES).</p>	External	<p>Tank heater 10:34am, Mon</p> <p style="text-align: center;"><b>External</b></p> <p style="text-align: center;">▼</p> <p style="text-align: center;">Internal</p> <p>↕Select [-] Confirm</p>
	> External	
	1:30	<p>Tank heater 10:34am, Mon</p> <p>Tank heater: ON time</p> <p>Range: (0:20~3:00)</p> <p>Steps: ±0:05</p> <p style="text-align: center;"><b>1:30</b></p> <p>▲</p> <p>▼</p> <p>↕Select [-] Confirm</p>

\*1 Only displayed when Tank connection is Yes.  
 \*2 It is not displayed when the outdoor unit is used alone and Panasonic AIR-TO-WATER HYDROMODULE+TANK 2 Zone model.

Menu	Default Setting	Setting Options / Display
<b>5.9 &gt; Base pan heater</b>		
To select whether or not optional base pan heater is connected. * Type A - The base pan heater activates only during deice operation. * Type B - The base pan heater activates when outdoor ambient temperature is 5 °C or lower.	No	Yes No
	<b>&gt; Yes</b>	
	A	Base pan heater type 10:34am, Mon A B Select [←] Confirm
<b>5.10 &gt; *1 Alternative outdoor sensor</b>		
To select an alternative outdoor sensor.	No	Yes No
<b>5.11 &gt; Bivalent connection</b>		
To select to enable or disable bivalent connection.	No	Yes No
<b>&gt; Yes</b>		
To select either auto control pattern or SG ready input control pattern or smart control pattern. * This selection only display to select when optional pcb connection set to Yes.	Auto	Auto SG ready Smart
To select a bivalent connection to allow an additional heat source such as a boiler to heat-up the buffer tank and domestic hot water tank when heatpump capacity is insufficient at low outdoor temperature. The bivalent feature can be set-up either in alternative mode (heatpump and boiler operate alternately), or in parallel mode (both heatpump and boiler operate simultaneously), or in advance parallel mode (heatpump operates and boiler turns on for buffer-tank and/or domestic hot water depending on the control pattern setting options).	<b>&gt; Yes &gt; Auto</b>	
	-5 °C	Set outdoor temperature for turn ON Bivalent connection. Bivalent connection 10:34am, Mon Turn ON: Outdoor temp Range: (-15°C~35°C) Steps: ±1°C -5 °C Select [←] Confirm
	<b>Yes &gt; After selecting the outdoor temperature</b>	
	Control pattern Alternative / Parallel / Advanced parallel • Select advanced parallel for bivalent use of the tanks.	Bivalent connection 10:34am, Mon Control pattern Alternative Parallel Advanced parallel Select [←] Confirm
<b>Control pattern &gt; Alternative</b>		
OFF	Option to set external pump either ON or OFF during bivalent operation. Set to ON if system is simple bivalent connection.	Bivalent connection 10:34am, Mon External pump ON OFF Select [←] Confirm

\*1 It is not displayed when the outdoor unit is used alone.

Menu	Default Setting	Setting Options / Display
<b>Control pattern &gt; Advanced parallel</b>		
Heat	Selection of the tank	Bivalent connection 10:34am, Mon Advanced parallel Heat DHW ↓Select [←] Confirm
• "Heat" implies Buffer Tank and "DHW" implies Domestic Hot Water Tank.		
<b>Control pattern &gt; Advanced parallel &gt; Heat &gt; Yes</b>		
• Buffer Tank is activated only after selecting "Yes".		Bivalent connection 10:34am, Mon Advanced parallel: Heat Yes No ↓Select [←] Confirm
-8 °C	Set the temperature threshold to start the bivalent heat source.	Bivalent connection 10:34am, Mon Heat start: Target temp. Range: (-10°C-0°C) Steps: ±1°C -8 °C ↕Select [←] Confirm
0:30	Delay timer to start the bivalent heat source (in hour and minutes).	Bivalent connection 10:34am, Mon Heat start: Delay time Range: (0:00-1:30) Steps: ±0:05 0:30 ↕Select [←] Confirm
-2 °C	Set the temperature threshold to stop the bivalent heat source.	Bivalent connection 10:34am, Mon Heat stop: Target temp. Range: (-10°C-0°C) Steps: ±1°C -2 °C ↕Select [←] Confirm
0:30	Delay timer to stop the bivalent heat source (in hour and minutes).	Bivalent connection 10:34am, Mon Heat stop: Delay time Range: (0:00-1:30) Steps: ±0:05 0:30 ↕Select [←] Confirm
<b>Control pattern &gt; Advanced parallel &gt; DHW &gt; Yes</b>		
• DHW Tank is activated only after selecting "Yes".		Bivalent connection 10:34am, Mon Advanced parallel: DHW Yes No ↓Select [←] Confirm
0:30	Delay timer to start the bivalent heat source (in hour and minutes).	Bivalent connection 10:34am, Mon DHW: Delay time Range: (0:30-1:30) Steps: ±0:05 0:30 ↕Select [←] Confirm

Menu	Default Setting	Setting Options / Display																		
<p>SG ready input control for bivalent system follow below input condition.</p> <table border="1"> <thead> <tr> <th colspan="2">SG signal</th> <th>Operation pattern</th> </tr> <tr> <th>Vcc-bit1</th> <th>Vcc-bit2</th> <th></th> </tr> </thead> <tbody> <tr> <td>Open</td> <td>Open</td> <td>Heat Pump OFF, Boiler OFF</td> </tr> <tr> <td>Short</td> <td>Open</td> <td>Heat Pump ON, Boiler OFF</td> </tr> <tr> <td>Open</td> <td>Short</td> <td>Heat Pump OFF, Boiler ON</td> </tr> <tr> <td>Short</td> <td>Short</td> <td>Heat Pump ON, Boiler ON</td> </tr> </tbody> </table>	SG signal		Operation pattern	Vcc-bit1	Vcc-bit2		Open	Open	Heat Pump OFF, Boiler OFF	Short	Open	Heat Pump ON, Boiler OFF	Open	Short	Heat Pump OFF, Boiler ON	Short	Short	Heat Pump ON, Boiler ON	<p>&gt; Yes &gt; SG ready</p> <p>OFF</p> <p>Option to set external pump either ON or OFF during bivalent operation. Set to ON if system is simple bivalent connection.</p>	<p>Bivalent connection 10:34am, Mon</p> <p>External pump</p> <p>ON</p> <p>OFF</p> <p>↖Select      [↔] Confirm</p>
SG signal		Operation pattern																		
Vcc-bit1	Vcc-bit2																			
Open	Open	Heat Pump OFF, Boiler OFF																		
Short	Open	Heat Pump ON, Boiler OFF																		
Open	Short	Heat Pump OFF, Boiler ON																		
Short	Short	Heat Pump ON, Boiler ON																		
<p>To do settings related to electricity and boiler so that unit is able to determine whether to operate heat pump or boiler at a particular period depends on operating cost of both heat sources. These settings are electricity price, boiler price, season, schedule etc.</p>	<p>&gt; Yes &gt; Smart</p> <p>OFF</p> <p>Option to set external pump either ON or OFF during bivalent operation. Set to ON if system is simple bivalent connection.</p>	<p>Bivalent connection 10:34am, Mon</p> <p>External pump</p> <p>ON</p> <p>OFF</p> <p>↖Select      [↔] Confirm</p>																		
	<p>&gt; Yes &gt; Smart &gt; After selecting for the external pump &gt; Energy price</p> <p>- Select <b>Electricity</b> to set on electricity price. - Select <b>Boiler</b> to set on boiler price and its efficiency.</p>	<p>Bivalent connection 10:34am, Mon</p> <p>Energy price</p> <p>Electricity</p> <p>Boiler</p> <p>↙Select      [↔] Confirm</p>																		
	<p>&gt; Yes &gt; Smart &gt; After selecting for the external pump &gt; Energy price &gt; Electricity</p> <p>0.0 * / kWh</p> <p>- There are total 10 different prices can be set for Electricity: Electricity price 1 ~ Electricity price 10</p> <p>- Range is 0 ~ 999.9 * / kWh</p> <p>- Press ^ or v to enter a setting screen as shown in Figure 1. Then start setting the value of electricity price.</p> <p>- After finish setting a particular electricity price (eg. Electricity price 1), press &lt; or &gt; to go and set for other electricity price.</p> <p>* Set the price according to value provided by electrical supply company.</p>	<p>Bivalent connection 10:34am, Mon</p> <p>Electricity price 1</p> <p>Range: (0~999.9 * / kWh)</p> <p>Steps: ±0.1 * / kWh</p> <p>0.0</p> <p>↔Select</p> <p>Figure 1</p> <p>Bivalent connection 10:34am, Mon</p> <p>000.0</p> <p>↔Select      [↔] Confirm</p>																		

Remark : \* Currency setting depends on where you use this product.

Menu	Default Setting	Setting Options / Display								
	<p>&gt; Yes &gt; Smart &gt; After selecting for the external pump &gt; Energy price &gt; Boiler</p> <p>0.0 * / kWh            - Refer to method of Electricity price setting above for setting of boiler price.            - After finish setting of boiler price, set the boiler efficiency (Range : 0 ~ 99%).</p> <p>0%            * Set the price according to value provided by boiler or gas supply company.</p>	<p>Bivalent connection 10:34am,Mon  <b>Boiler price</b>            Range: (0~999.9 */kWh)            Steps: ±0.1*/kWh <b>0.0</b></p> <p>↕Select [-] Confirm</p> <p>Bivalent connection 10:34am,Mon  <b>Boiler efficiency</b>            Range: (0~99%)            Steps: ±1% <b>0</b></p> <p>↕Select [-] Confirm</p>								
	<p>&gt; Yes &gt; Smart &gt; After selecting for the external pump &gt; Schedule &gt; Season setting</p> <p>Season 1 : Dec (Refers to Winter season)            Season 2 : Mar (Refers to Spring season)            Season 3 : Jun (Refers to Summer season)            Season 4 : Oct (Refers to Autumn season)            - There are total 4 seasons to be set            - Set the starting month for each season.            (Eg. when Season 1 is set to Dec and Season 2 is set to Mar, month of December to February will be treated as Season 1).</p>	<p>Bivalent connection 10:34am,Mon  <b>Schedule</b>  <b>Season setting</b>            Schedule setting</p> <p>↕Select [-] Confirm</p> <p>Bivalent connection 10:34am,Mon  <b>Season 1: Start month</b>            Range: (Jan~Dec)            Steps: ±1month <b>Dec</b></p> <p>↕Select [-] Confirm</p>								
	<p>&gt; Yes &gt; Smart &gt; After selecting for the external pump &gt; Schedule &gt; Schedule setting</p> <p>Start time (Pattern 1) : 3:00am            Start time (Pattern 2) : 9:00am            Start time (Pattern 3) : 4:00pm            Start time (Pattern 4) : 9:00pm            - For each season, there are total 4 patterns can be set.</p> <p>Price (Pattern 1/2/3/4) : 1            - Set the target start time and the appropriate electricity price for each pattern.</p> <p>- Select "1" to edit both start time and electricity price. Select "2" to edit electricity price only.</p>	<p>Bivalent connection 10:34am,Mon  <b>Schedule setting</b>  <b>Season 1</b>            Season 2            Season 3</p> <p>↕Select [-] Confirm</p> <p>Season 1 10:34am,Mon  <table border="1"> <thead> <tr> <th>Start time</th> <th>Price(*/kWh)</th> </tr> </thead> <tbody> <tr> <td>1. 3:00am</td> <td>0.0</td> </tr> <tr> <td>2. 9:00am</td> <td>0.0</td> </tr> <tr> <td>3. 4:00pm</td> <td>0.0</td> </tr> </tbody> </table> <p>↕Select [-] Edit</p> <p>Bivalent connection 10:34am,Mon  <b>Select</b>            1: To edit time &amp; price            2: To edit price only  <b>1</b> ▶ 2</p> <p>↕Select [-] Confirm</p> </p>	Start time	Price(*/kWh)	1. 3:00am	0.0	2. 9:00am	0.0	3. 4:00pm	0.0
Start time	Price(*/kWh)									
1. 3:00am	0.0									
2. 9:00am	0.0									
3. 4:00pm	0.0									

Remark : \* Currency setting depends on where you use this product.

Menu	Default Setting	Setting Options / Display	
	<p>- Range of start time displayed can be in "24h" or "am/pm" format depend on setting of "Clock format".</p> <p>- Range of electricity price is 0 ~ 10 which refers back to the 10 different electricity price set previously (under "Energy price &gt; Electricity": Electricity price 1 ~ Electricity price 10). The price displayed on the upper right corner indicates the previous set value of Electricity price 1 to Electricity price 10.</p> <p>* When the price is set to "0", the electricity price will be treated as 0.0 * / kWh. It is for the convenience of installer when 0.0 is the desired setting value for a particular time.</p>	<p>Season 1 10:34am, Mon</p> <p>Pattern 1: Start time</p> <p>Range: (0.00~23.00)</p> <p>Steps: ±1hour</p> <p>3.00</p> <p>↕Select [-] Confirm</p> <hr/> <p>Season 1 10:34am, Mon</p> <p>Pattern 1: Price</p> <p>0.0 */kWh</p> <p>Range: (0~10)</p> <p>Steps: ±1</p> <p>0</p> <p>↕Select [-] Confirm</p>	
<b>5.12 &gt; *1 External SW</b>			
	No	Yes No	
<b>5.13 &gt; *2 Solar connection</b>			
<ul style="list-style-type: none"> <li>The optional PCB connectivity must be selected YES to enable the function.</li> <li>If the optional PCB connectivity is not selected, the function will not appear on the display.</li> <li>DHW is not applicable for WH-ADC models.</li> </ul>	No	Yes No	
	<b>&gt; Yes</b>		
	Buffer tank	Selection of the tank	<p>Solar connection 10:34am, Mon</p> <p>Buffer tank</p> <p>DHW tank</p> <p>↕Select [-] Confirm</p>
	<b>&gt; Yes &gt; After selecting the tank</b>		
	10 °C	Set ΔT ON temperature	<p>Solar connection 10:34am, Mon</p> <p>ΔT Turn ON</p> <p>Range: (6°C~15°C)</p> <p>Steps: ±1°C</p> <p>10 °C</p> <p>↕Select [-] Confirm</p>
<b>&gt; Yes &gt; After selecting the tank &gt; ΔT ON temperature</b>			
5 °C	Set ΔT OFF temperature	<p>Solar connection 10:34am, Mon</p> <p>ΔT Turn OFF</p> <p>Range: (2°C~9°C)</p> <p>Steps: ±1°C</p> <p>5 °C</p> <p>↕Select [-] Confirm</p>	

\*1 It is not displayed when the outdoor unit is used alone.

\*2 It is not displayed when the outdoor unit is used alone and Panasonic AIR-TO-WATER HYDROMODULE+TANK 2 Zone model.

Menu	Default Setting	Setting Options / Display
		<p>&gt; Yes &gt; After selecting the tank &gt; ΔT ON temperature &gt; ΔT OFF temperature</p> <p>Solar connection 10:34am, Mon</p> <p>Anti freeze</p> <p>Range: (-20°C~10°C)</p> <p>Steps: ±1°C</p> <p>5 °C</p> <p>Set Antifreeze temperature</p> <p>↕Select [-] Confirm</p>
		<p>&gt; Yes &gt; After selecting the tank &gt; ΔT ON temperature &gt; ΔT OFF temperature &gt; After setting the antifreeze temperature</p> <p>Solar connection 10:34am, Mon</p> <p>Hi limit</p> <p>Range: (70°C~90°C)</p> <p>Steps: ±5°C</p> <p>80 °C</p> <p>Set Hi limit</p> <p>↕Select [-] Confirm</p>
5.14	> *1 External error signal	<p>No</p> <p>Yes</p> <p>No</p>
5.15	> *1 Demand control	<p>No</p> <p>Yes</p> <p>No</p>
5.16	> *1 SG ready	<p>No</p> <p>Yes</p> <p>No</p>
		<p>&gt; Yes &gt; After selecting Capacity</p> <p>SG ready 10:34am, Mon</p> <p>Capacity [1-0]: DHW</p> <p>Range: (50%~150%)</p> <p>Steps: ±5%</p> <p>120 %</p> <p>Capacity (1) &amp; (2) of DHW (in %), Heat (in %) and Cool (in °C)</p> <p>↕Select [-] Confirm</p>
		<p>&gt; Yes &gt; After selecting Power consumption &gt; *HPU stop consumption</p> <p>SG ready 10:34am, Mon</p> <p>HPU stop consumption</p> <p>Range: (0.5kW~10.0kW)</p> <p>Steps: ±0.1kW</p> <p>3.6</p> <p>*2, *4 3.6kW</p> <p>*HPU stop consumption</p> <p>↕Select [-] Confirm</p>
		<p>&gt; Yes &gt; After selecting *HPU stop consumption &gt; Consumption</p> <p>SG ready 10:34am, Mon</p> <p>Consumption [1-0]: DHW</p> <p>Range: (0.5kW~10.0kW)</p> <p>Steps: ±0.1kW</p> <p>3.6</p> <p>*3 3.6kW</p> <p>Consumption (1) &amp; (2) of DHW (in kW), Heat (in kW) and Cool (in kW)</p> <p>↕Select [-] Confirm</p>

Remark : \* HPU means Heat pump unit (Outdoor unit).

\*1 It is not displayed when the outdoor unit is used alone.

\*2 Depending on the model, it may be less than 3.6kW.

\*3 Depending on the model, it may be less than 3.6kW or more than 3.6kW.

\*4 Even though the setting value is lower than 3.0kW, actual power consumption can be 3.0kW caused by back-up heater operation.



 




Menu	Default Setting	Setting Options / Display
<b>5.17 &gt; *1 External compressor SW</b>		
	No	Yes ▲ No
	> Yes	
	Heat source	Ext. compressor SW 11:34am, Mon Heater ▲ Heat source
		▲Select      [↔] Confirm
<b>5.18 &gt; Circulation liquid</b>		
To select whether to circulate water or glycol in the system.	Water	Circulation liquid 10:34am, Mon Water ▼ Glycol
		▼Select      [↔] Confirm
<b>5.19 &gt; *1, *2 Heat-Cool SW</b>		
	No	Yes ▲ No
<b>5.20 &gt; *1 Force heater</b>		
To turn on Force heater either manually (by default) or automatically.	Manual	Force heater 10:34am, Mon Auto ▲ Manual
		▲Select      [↔] Confirm
<b>5.21 &gt; Force defrost</b>		
If auto selection is set, outdoor unit will start defrost operation if long heating hour operate during low outdoor temperature.	Manual	Auto ▲ Manual
<b>5.22 &gt; *1 Defrost signal</b>		
To turn on defrost signal to stop fan coil during defrost operation. (If defrost signal set to yes, bivalent function will not available to use)	No	Yes ▲ No

\*1 It is not displayed when the outdoor unit is used alone.

\*2 Only displayed when COOL mode is unlocked. (This mean when COOL mode is available)

Menu	Default Setting	Setting Options / Display
<b>5.23 &gt; Pump flowrate</b>		
To set variable flow pump control or fix pump duty control.	$\Delta T$	<div style="text-align: center;"> <span style="background-color: black; color: white; padding: 2px;"><math>\Delta T</math></span>  <span style="font-size: 10px;">▼</span>  <span style="background-color: black; color: white; padding: 2px;">Max. Duty</span> </div>
<b>5.24 &gt; DHW Defrost</b>		
Allow system to run defrost by using hot water instead of room unit for better room comfort.	Yes	<div style="text-align: center;"> <span style="background-color: black; color: white; padding: 2px;">Yes</span>  <span style="font-size: 10px;">▼</span>  <span style="background-color: black; color: white; padding: 2px;">No</span> </div>
<b>5.25 &gt; Heating control</b>		
<p>To select unit operation condition whether to achieve set temperature faster or to save energy.</p> <p>When "Efficiency" is selected, the time setting will transition to 1st, 2nd, and 3rd stage. Increasing the time will slowly increase the capacity. It is a function for Heating + Tank operation.</p> <p>When "Variable" is selected in the "5.6 DHW capacity" setting, the tank heat-up process will be delayed until a much lower tank water temperature is reached, which improves the efficiency of the heating process. To ensure sufficient hot water, select either "Comfort" in this setting or "Standard" in the "5.6 DHW capacity" setting.</p>	Comfort	<div style="text-align: center;"> <span style="background-color: black; color: white; padding: 2px;">Comfort</span>  <span style="font-size: 10px;">▼</span>  <span style="background-color: black; color: white; padding: 2px;">Efficiency</span> </div>
	> Efficiency	<div style="text-align: center;">0:20</div> <div style="text-align: right; margin-top: 10px;"> <b>Heating control</b>    10:34am, Mon  <b>Efficiency: Stage 1</b>  <b>Range: (0:00~1:00)</b>  <b>Steps: <math>\pm 0:05</math></b>    <span style="background-color: black; color: white; padding: 2px;">0:20</span>  <span style="font-size: 8px;">↕Select    [←] Confirm</span> </div> <div style="text-align: center; margin-top: 10px;"> </div>
<b>5.26 &gt; External meter</b>		
<p>To set which external meter to be used depends on meter connection.</p> <p>There are generation meters and various types of electricity meters.</p> <p>For generation meters, there are two connection systems :-</p> <p>a) One generation meter system : Heat-cool meter only</p> <p>b) Two generation meter system : Heat-cool meter and Tank meter</p>	Heat-cool meter : No * Tank meter : No Elec. meter HP : No Elec. meter 1 (PV) : No Elec. meter 2 (Building) : No Elec. meter 3 (Reserve) : No  * Only available if both Heat-cool meter and Tank connection are set to Yes.	<div style="text-align: right;"> <b>External meter</b>    10:34am, Mon  <span style="background-color: black; color: white; padding: 2px;">Heat-Cool meter</span>            Tank meter            Elec. meter HP            Elec. meter 1 (PV)  <span style="font-size: 8px;">↕Select    [←] Confirm</span> </div> <div style="text-align: right; margin-top: 10px;"> <b>External meter</b>    10:34am, Mon            Elec. meter HP            Elec. meter 1 (PV)            Elec. meter 2 (Building)  <span style="background-color: black; color: white; padding: 2px;">Elec. meter 3 (Reserve)</span>  <span style="font-size: 8px;">^Select    [←] Confirm</span> </div>
	> Heat-cool meter	<p>- Set Heat-cool meter to Yes when this generation meter is connected.</p> <p>- It is to measure energy generation of heat pump unit during heating and cooling only operation (one generation meter system) or during heating, cooling and DHW operation (two generation meter system).</p>


Remark : Elec. means "Electricity", HP means "Heat pump"

Menu	Default Setting	Setting Options / Display
<b>&gt; Tank meter</b>		
<ul style="list-style-type: none"> <li>- Set Tank meter to Yes when this generation meter is connected.</li> <li>- It is to measure energy generation of heat pump unit during DHW operation*.</li> <li>* Only available if both Heat-cool meter and Tank connection are set to Yes.</li> <li>Only set Tank meter to Yes when the connection is two generation meter system.</li> </ul>		
		Yes  No
<b>&gt; Elec. meter HP</b>		
<ul style="list-style-type: none"> <li>- Set Elec. meter HP to Yes when this electricity meter is connected.</li> <li>- It is to measure energy consumption of heat pump unit.</li> </ul>		
		Yes  No
<b>&gt; Elec. meter 1 (PV)</b>		
<ul style="list-style-type: none"> <li>- Set Elec. meter 1 (PV) to Yes when this electricity meter is connected.</li> <li>- It is to measure energy generation of solar system. This data will be displayed only on Cloud system.</li> </ul>		
		Yes  No
<b>&gt; Elec. meter 2 (Building)</b>		
<ul style="list-style-type: none"> <li>- Set Elec. meter 2 (Building) to Yes when this electricity meter is connected.</li> <li>- It is to measure energy consumption of the building. This data will be displayed only on Cloud system.</li> </ul>		
		Yes  No
<b>&gt; Elec. meter 3 (Reserve)</b>		
<ul style="list-style-type: none"> <li>- Set Elec. meter 3 (Reserve) to Yes when this electricity meter is connected.</li> <li>- It is to measure energy consumption. This data will be displayed only on Cloud system.</li> </ul>		
		Yes  No
<b>5.27 &gt; Electrical anode</b>  To enable or disable operation of electrical anode.	Yes (for -AN models) No (for non -AN models)  Yes : display No : no display error : blinking	<div style="border: 1px solid black; padding: 5px; display: inline-block;">   <div style="font-size: 24pt; font-weight: bold;">40°C</div> </div> <div style="text-align: center; margin-top: 10px;">         Yes            No       </div>

Remark : Elec. means "Electricity"  
 HP means "Heat pump"

Menu	Default Setting	Setting Options / Display	
<b>5.28</b>	<b>&gt; *1 Extra pump</b>		
<p>Selects whether the extra pump is used in the circulation circuit for heating or in the circulation circuit for DHW, or it is not used. If set to "No", the pump is not used.</p> <p>If set to "Heat", the extra pump is used as a pump for the circulation circuit (for heating/cooling).</p> <p>If set to "DHW", the extra pump circulates domestic hot water in the circuit for DHW to prevent the domestic hot water from getting cold.</p> <ul style="list-style-type: none"> <li>- If set to "Comfort", hot water is continuously circulated during DHW operation.</li> <li>- If set to "Efficiency", the extra pump turns ON and OFF alternatively following ON/OFF time setting.</li> </ul>	No	<div style="text-align: center;"> <span>No</span>  <span>Heat</span>  <span>DHW</span> </div>	
	<b>&gt; DHW</b>		
	8:00 am / 8:00	Set Pump ON time	DHW 11:34pm, Mon Pump ON time <div style="text-align: center;"> <span>8</span> : 00 am  <span>↕</span>  <span>↕</span> </div> ↕ Select    [-] Confirm
	8:00 pm / 20:00	Set Pump OFF time	DHW 11:34pm, Mon Pump OFF time <div style="text-align: center;"> <span>8</span> : 00 pm  <span>↕</span>  <span>↕</span> </div> ↕ Select    [-] Confirm
	Efficiency	Select Comfort or Efficiency	DHW 11:34pm, Mon <div style="text-align: center;"> <span>Comfort</span>  <span>▲</span>  <span>Efficiency</span>  <span>▲</span> </div> ▲ Select    [-] Confirm
	<b>&gt; DHW &gt; After selecting Efficiency</b>		
	0:15	Set ON time	DHW 11:34pm, Mon ON time Range: (0:05~1:00) Steps: ±0:05 <div style="text-align: center;"> <span>0:15</span>  <span>▲</span>  <span>▲</span> </div> ↕ Select    [-] Confirm
	0:15	Set OFF time	DHW 11:34pm, Mon OFF time Range: (0:05~1:00) Steps: ±0:05 <div style="text-align: center;"> <span>0:15</span>  <span>▲</span>  <span>▲</span> </div> ↕ Select    [-] Confirm
<b>5.29</b>	<b>&gt; External heater</b>		
Set to "YES" after an external heater is installed. (This menu is only displayed for the Control Module model (indoor unit))	No	<div style="text-align: center;"> <span>Yes</span>  <span>▲</span>  <span>No</span> </div>	
<b>5.30</b>	<b>&gt; Static pressure</b>		
If set to "No", the fans in the outdoor unit rotate at a normal speed. If set to "YES", the fans in the outdoor unit rotate at a higher speed than normal for response to high static pressure.	No	<div style="text-align: center;"> <span>Yes</span>  <span>▲</span>  <span>No</span> </div>	

\*1 It is not displayed when the outdoor unit is used alone.

Menu	Default Setting	Setting Options / Display
<b>5.31 &gt; *1 Cooling capacity</b>		
<p>Selects the cooling capacity.            If set to "Efficiency", the cooling operation is performed at rated capacity for efficient cooling.            If set to "Comfort", the cooling operation is performed at maximum capacity.</p>	<p>Efficiency</p>	


\*1 Only displayed when COOL mode is unlocked (This means when COOL mode is available).

Menu	Default Setting	Setting Options / Display
<b>6 Installer setup &gt; Operation setup</b>		
To access to the four major functions or modes.	4 main modes  Heat / *1, *2 Cool / *1, *2 Auto / *3 Tank	Operation setup 10:34am, Mon Heat Cool Auto Tank ↓Select [←] Confirm
<b>6.1 &gt; Heat</b>		
To set various water & ambient temperatures for heating.	Water temp. for heating ON / Outdoor temp. for heating OFF / ΔT for heating ON / Heater ON/OFF	Operation setup 10:34am, Mon Heat Water temp. for heating ON Outdoor temp. for heating OFF ΔT for heating ON ↓Select [←] Confirm
<b>&gt; Water temp. for heating ON</b>		
Compensation curve	Heating ON temperatures in compensation curve or direct input.	Operation setup 10:34am, Mon Heat ON: Water temp. Compensation curve Direct ↓Select [←] Confirm
<b>&gt; Water temp. for heating ON &gt; Compensation curve</b>		
X axis: -5 °C, 15 °C Y axis: 55 °C, 35 °C	Input the 4 temperature points (2 on horizontal X axis, 2 on vertical Y axis).	Heat ON: Water temp.:Zone1  ↔Select [←] Confirm
<ul style="list-style-type: none"> <li>• Temperature range: X axis: -20 °C ~ 15 °C, Y axis: See below</li> <li>• Temperature range for the Y axis input: WH-WXG model: 25 °C ~ 75 °C Regardless of the above setting, there is a limit to the water temperature. Refer to the operating condition on page 3.</li> <li>• If 2 zone system is selected, the 4 temperature points must also be input for Zone 2.</li> <li>• "Zone 1" and "Zone 2" will not appear on the display if only 1 zone system.</li> </ul>		
<b>&gt; Water temp. for heating ON &gt; Direct</b>		
35 °C	Temperature for heating ON	Operation setup 10:34am, Mon Heat ON: Water temp.:Zone2 Range: (25°C~75°C) Steps: ±1°C 35 °C ↕Select [←] Confirm
<ul style="list-style-type: none"> <li>• Min. ~ Max. range is 25 °C ~ 75 °C: WH-WXG model: 25 °C ~ 75 °C Regardless of the above setting, there is a limit to the water temperature. Refer to the operating condition on page 3.</li> <li>• If 2 zone system is selected, temperature set point must input for Zone 2.</li> <li>• "Zone 1" and "Zone 2" will not appear on the display if only 1 zone system.</li> </ul>		

\*1 The system is locked to operate without COOL mode. It can be unlocked only by authorised installers or our authorised service partners.  
\*2 Only displayed when COOL mode is unlocked (This means when COOL mode is available).  
\*3 Only displayed when Tank connection is Yes.

Menu	Default Setting	Setting Options / Display
<b>&gt; Outdoor temp. for heating OFF</b>		
<b>&gt; Outdoor temp. for heating OFF &gt; Heat OFF outdoor temp.</b>		
24 °C	Set outdoor temp to stop heating. Setting range is 6°C~35°C	Operation setup 10:34am, Mon Heat OFF: Outdoor temp. Range: (6°C~35°C) Steps: ±1°C 24 °C ↕Select    [←] Confirm
<b>&gt; Outdoor temp. for heating OFF &gt; Heat ON outdoor temp.</b>		
23 °C	Set outdoor temp to start heating. Setting range is 5°C~X°C (X is heating OFF temp. -1)	Operation setup 10:34am, Mon Heat ON: Outdoor temp. Range: (5°C~23°C) Steps: ±1°C 23 °C ↕Select    [←] Confirm
<b>&gt; Outdoor temp. for heating OFF &gt; Heat ON Delay time.</b>		
0:30 min	Set delay time from heating OFF to heating ON.	Operation setup 10:34am, Mon Heat ON: Delay time Range: (0:30~24:00) Steps: ±0:30 0:30 ↕Select    [←] Confirm
<b>&gt; ΔT for heating ON</b>		
5 °C	Set ΔT for heating ON. * This setting will not available to set when pump flowrate set to Max. duty.	Operation setup 10:34am, Mon Heat ON: ΔT Range: (1°C~15°C) Steps: ±1°C 5 °C ↕Select    [←] Confirm
<b>&gt; *1 Heater ON/OFF</b>		
<b>&gt; Heater ON/OFF &gt; Outdoor temp. for heater ON</b>		
0 °C	Temperature for heater ON	Operation setup 10:34am, Mon Heater ON: Outdoor temp. Range: (-20°C~15°C) Steps: ±1°C 0 °C ↕Select    [←] Confirm
<b>&gt; Heater ON/OFF &gt; Delay time for heater ON</b>		
0:30 min	Delay time for heater to turn on	Operation setup 10:34am, Mon Heater ON: Delay time Range: (0:10~1:00) Steps: ±0:10 0:30 ↕Select    [←] Confirm
<b>&gt; Heater ON/OFF &gt; Water temperature for heater ON</b>		
-4 °C	Setting of water temperature to turn on from water set temperature.	Operation setup 10:34am, Mon Heater ON: ΔT of target Temp. Range: (-10°C~-2°C) Steps: ±1°C -4 °C ↕Select    [←] Confirm

\*1 It is not displayed when the outdoor unit is used alone.

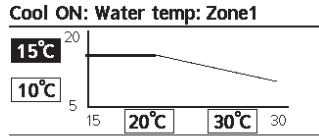Menu	Default Setting	Setting Options / Display
		<b>&gt; Heater ON/OFF &gt; Water temperature for heater OFF</b> Operation setup 10:34am, Mon Heater OFF: $\Delta T$ of target Temp. Range: (-8°C-0°C) Steps: $\pm 1^\circ\text{C}$ <b>-2</b> °C ↕Select [-] Confirm
<b>6.2</b>	<b>&gt; *1, *2 Cool</b>	
To set various water & ambient temperatures for cooling.	Water temperatures for cooling ON and $\Delta T$ for cooling ON.	Operation setup 10:34am, Mon <b>Cool</b> <b>Water temp. for cooling ON</b> <b><math>\Delta T</math> for cooling ON</b> ↕Select [-] Confirm
		<b>&gt; Water temp. for cooling ON</b> Operation setup 10:34am, Mon <b>Cool ON: Water temp.</b> <b>Compensation curve</b> <b>Direct</b> ↕Select [-] Confirm
	Compensation curve	Cooling ON temperatures in compensation curve or direct input. ↕Select [-] Confirm
		<b>&gt; Water temp. for cooling ON &gt; Compensation curve</b> Cool ON: Water temp: Zone1  ↕Select [-] Confirm
	X axis: 20 °C, 30 °C Y axis: 15 °C, 10 °C	Input the 4 temperature points (2 on horizontal X axis, 2 on vertical Y axis) • If 2 zone system is selected, the 4 temperature points must also be input for Zone 2. • "Zone 1" and "Zone 2" will not appear on the display if only 1 zone system.
		<b>&gt; Water temp. for cooling ON &gt; Direct</b> Operation setup 10:34am, Mon <b>Cool ON: Water temp.: Zone2</b> Range: (5°C-20°C) Steps: $\pm 1^\circ\text{C}$ <b>10</b> °C ↕Select [-] Confirm
	10 °C	Set temperature for Cooling ON • If 2 zone system is selected, temperature set point must input for Zone 2. • "Zone 1" and "Zone 2" will not appear on the display if only 1 zone system.
		<b>&gt; <math>\Delta T</math> for cooling ON</b> Operation setup 10:34am, Mon <b>Cool ON: <math>\Delta T</math></b> Range: (1°C-15°C) Steps: $\pm 1^\circ\text{C}$ <b>5</b> °C ↕Select [-] Confirm
	5 °C	Set $\Delta T$ for cooling ON * This setting will not available to set when pump flowrate set to Max. duty.

\*1 The system is locked to operate without COOL mode. It can be unlocked only by authorised installers or our authorised service partners.  
 \*2 Only displayed when COOL mode is unlocked (This means when COOL mode is available).

Menu	Default Setting	Setting Options / Display
<b>6.3</b>	> *1, *2 Auto	
Automatic switch from Heat to Cool or Cool to Heat.	Outdoor temperatures for switching from Heat to Cool or Cool to Heat.  Outdoor temp. for (Heat to Cool) / Outdoor temp. for (Cool to Heat)	<b>Operation setup</b> 10:34am, Mon <b>Auto</b> <b>Outdoor temp. for (Heat to Cool)</b> <b>Outdoor temp. for (Cool to Heat)</b> ↓Select      [←] Confirm
	> <b>Outdoor temp. for (Heat to Cool)</b>	
	15 °C  Set outdoor temperature for switching from Heat to Cool.	<b>Operation setup</b> 10:34am, Mon <b>Auto: Outdoor temp.(Heat to Cool)</b> <b>Range: (11°C~25°C)</b> <b>Steps: ±1°C</b> <b>15</b> °C ↕Select      [←] Confirm
	> <b>Outdoor temp. for (Cool to Heat)</b>	
	10 °C  Set outdoor temperature for switching from Cool to Heat.	<b>Operation setup</b> 10:34am, Mon <b>Auto: Outdoor temp.(Cool to Heat)</b> <b>Range: (5°C~14°C)</b> <b>Steps: ±1°C</b> <b>10</b> °C ↕Select      [←] Confirm
<b>6.4</b>	> *3 Tank	
Setting functions for the tank.	Floor operation time (max) / Tank heat up time (max) / Tank re-heat temp. / Sterilization	<b>Operation setup</b> 10:34am, Mon <b>Tank</b> <b>Floor operation time (max)</b> <b>Tank heat up time (max)</b> <b>Tank re-heat temp.</b> ↓Select      [←] Confirm
	• The display will show 3 functions at a time.	
	> <b>Floor operation time (max)</b>	
	8:00  Maximum time for floor operation (in hours and minutes)	<b>Operation setup</b> 10:34am, Mon <b>Tank: Floor op. time (max)</b> <b>Range: (0:30~10:00)</b> <b>Steps: ±0:30</b> <b>8:00</b> ↕Select      [←] Confirm
	> <b>Tank heat up time (max)</b>	
	1:00  Maximum time for heating the tank (in hours and minutes)	<b>Operation setup</b> 10:34am, Mon <b>Tank: Heat up time (max)</b> <b>Range: (0:05~4:00)</b> <b>Steps: ±0:05</b> <b>1:00</b> ↕Select      [←] Confirm
	> <b>Tank re-heat temp.</b>	
	-8 °C  Set temperature to perform reboil of tank water.	<b>Operation setup</b> 10:34am, Mon <b>Tank: Re-heat temp.</b> <b>Range: (-12°C~-2°C)</b> <b>Steps: ±1°C</b> <b>-8</b> °C ↕Select      [←] Confirm

\*1 The system is locked to operate without COOL mode. It can be unlocked only by authorised installers or our authorised service partners.

\*2 Only displayed when COOL mode is unlocked (This means when COOL mode is available).

\*3 Only displayed when Tank connection is Yes.

Menu	Default Setting	Setting Options / Display														
<b>&gt; Sterilization</b>																
Monday	Sterilization may be set for 1 or more days of the week. Sun / Mon / Tue / Wed / Thu / Fri / Sat	<b>Operation setup</b> 10:34am, Mon <b>Sterilization: Day</b> <table border="1"> <tr> <td>Sun</td> <td>Mon</td> <td>Tue</td> <td>Wed</td> <td>Thu</td> <td>Fri</td> <td>Sat</td> </tr> <tr> <td>-</td> <td>✓</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> </tr> </table> ⬅Day    ⬆☑/☐    [↔] Confirm	Sun	Mon	Tue	Wed	Thu	Fri	Sat	-	✓	-	-	-	-	-
Sun	Mon	Tue	Wed	Thu	Fri	Sat										
-	✓	-	-	-	-	-										
<b>&gt; Sterilization: Time</b>																
12:00	Time of the selected day(s) of the week to sterilize the tank 0:00 ~ 23:59	<b>Operation setup</b> 10:34am, Mon <b>Sterilization: Time</b> <div style="text-align: center; font-size: 2em; font-weight: bold;">12:00 pm</div> ⬆Select    [↔] Confirm														
<b>&gt; Sterilization: Boiling temp.</b>																
65 °C	Set boiling temperatures for sterilize the tank.	<b>Operation setup</b> 10:34am, Mon <b>Sterilization: Boiling temp.</b> *1 Range: (55°C~65°C) Steps: ±1°C <b>65</b> °C ⬇Select    [↔] Confirm														
<b>&gt; Sterilization: Ope. time (max)</b>																
0:10	Set sterilizing time (in hours and minutes)	<b>Operation setup</b> 10:34am, Mon <b>Sterilization: Ope. time (max)</b> Range: (0:05~1:00) Steps: ±0:05 <b>0:10</b> ⬆Select    [↔] Confirm														

## 7 Installer setup > Service setup

### 7.1 > Pump maximum speed

To set the maximum speed of the pump.

Setting the flow rate, max. duty and operation ON/OFF of the pump.

Flow rate: XX.X L/min  
 Max. Duty: 0x40 ~ 0xFE,  
 Pump: ON/OFF/Air Purge

**Service setup** 10:34am, Mon  
**Flow rate**    **Max. Duty**    **Operation**  
 46.0 L/min    **0xCE**    OFF  
 ⬆Select

### 7.2 > \*2 Zone2 pump speed


To set the zone2 pump speed.

Flow rate: XX.X L/min  
 Max. Duty: 0x46 ~ 0xC5,  
 Pump: ON/OFF

**Service setup** 11:34pm, Mon  
**Flow rate**    **Max. Duty**    **Operation**  
 10.0 L/min    **0x50**    OFF  
 ⬆Select

\*1 When using external heater, 55°C ~ 75°C.


\*2 Only displayed when Panasonic AIR-TO-WATER HYDROMODULE+TANK 2Zone model.

Menu	Default Setting	Setting Options / Display	
<b>7.3 &gt; Dry concrete</b>			
<p>To dry the concrete (floor, walls, etc.) during construction.</p> <p>Do not use this menu for any other purposes and in period other than during construction</p>	Edit to set the temperature of dry concrete.  ON / Edit	<b>Service setup</b> 10:34am, Mon <b>Dry concrete</b> ON Edit ↓Select [←] Confirm	
	<b>&gt; Edit</b>		
	Stages: 1 Temperature: 25 °C	Heating temperature for drying the concrete. Select the desired stages: 1 ~ 10, range: 1 ~ 99	<b>Service setup</b> 10:34am, Mon <b>Dry concrete: 1/10</b> Range: (25°C~55°C) Steps: ±1°C <span style="border: 1px solid black; padding: 2px;">25</span> °C ^Select [←] Confirm
	<b>&gt; ON</b>		
Confirm the setting temperatures of dry concrete for each stage.		<b>Service setup</b> 10:34am, Mon <b>Dry concrete: Status</b> Stage : 1/10 Water set temp. : 25°C Actual water temp. : 25°C/25°C [☺] OFF	
<b>7.4 &gt; Service contact</b>			
<p>To set up to 2 contact names and numbers for the User.</p>	Service engineer's name and contact number.  Contact 1 / Contact 2	<b>Service setup</b> 10:34am, Mon <b>Service contact:</b> Contact 1 Contact 2 ↓Select [←] Confirm	
	<b>&gt; Contact 1 / Contact 2</b>		
	Contact name or number.  Name / phone icon	<b>Service contact</b> 10:34am, Mon <b>Contact 1</b> Name : Bryan Adams  : 08812345678 ↓Select [←] Edit	
	Input name and number  Contact name: alphabet a ~ z. Contact number: 1 ~ 9	<b>Contact-1</b> <span style="border: 1px solid black; padding: 2px;">ABC/abc</span> 0-9/Other ABCDEFGHI JKLMNOPQR Space  STUVWXYZ abcdefghi BS  jklmnopqr stuvwxyz Conf  ←Select [←] Enter  <b>Number:</b> <span style="border: 1px solid black; padding: 2px;">1</span> 1 2 3 ( 4 5 6 ) 7 8 9 - BS   * 0 # _ Conf   ←Select [←] Enter	

<b>8 Installer setup &gt; Remote control setup</b>		
--	--	--


<ul style="list-style-type: none"> <li>• To select whether to use one remote controller or two remote controllers.</li> <li>• Select Single when one remote controller is connected. Select Dual when two remote controllers are connected. Second remote controller can be used for zone 2 room temperature control.</li> </ul>	Single	Selection of one or two remote controllers.	<div style="border: 1px solid black; padding: 2px; display: inline-block;">Single</div> ▼ <div style="border: 1px solid black; padding: 2px; display: inline-block;">Dual</div>
		When Dual is selected, Main remote controller (RC-1) will start to communicate with second remote controller (RC-2) and display "RC-1 & RC-2 sync. in progress". They are ready to be used after this pop up screen disappears.	<div style="border: 1px solid black; padding: 10px; width: fit-content; margin: auto;"> <b>RC-1 &amp; RC-2 sync. in progress!</b> </div>
		When both remote controllers have communication failure, it will display "Communication with RC-2 failed".	<div style="border: 1px solid black; padding: 10px; width: fit-content; margin: auto;"> <b>Communication with RC-2 failed!</b>             [↵] Close         </div>

## 5.2 Outdoor Unit

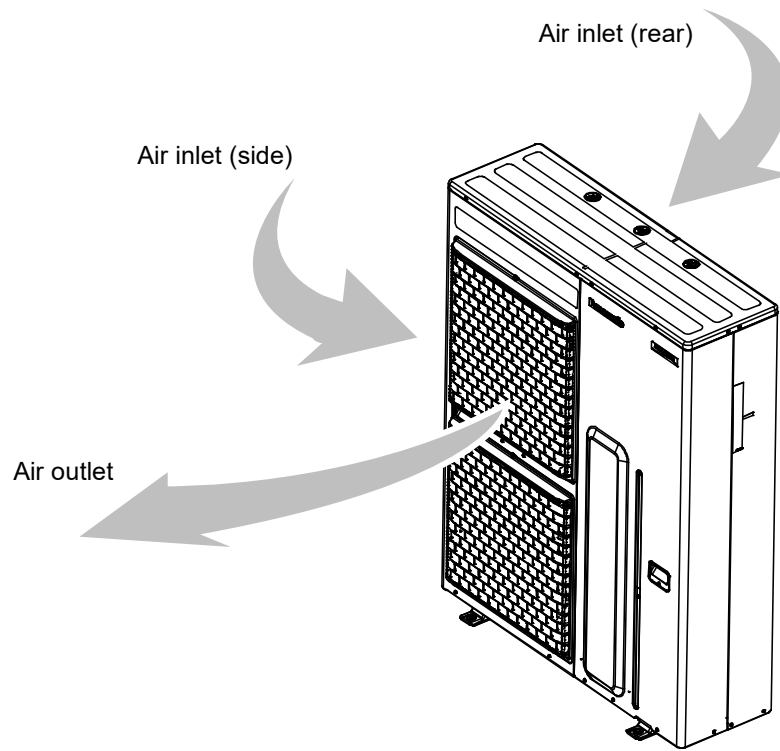

## 6. Dimensions


### 6.1 Outdoor Unit

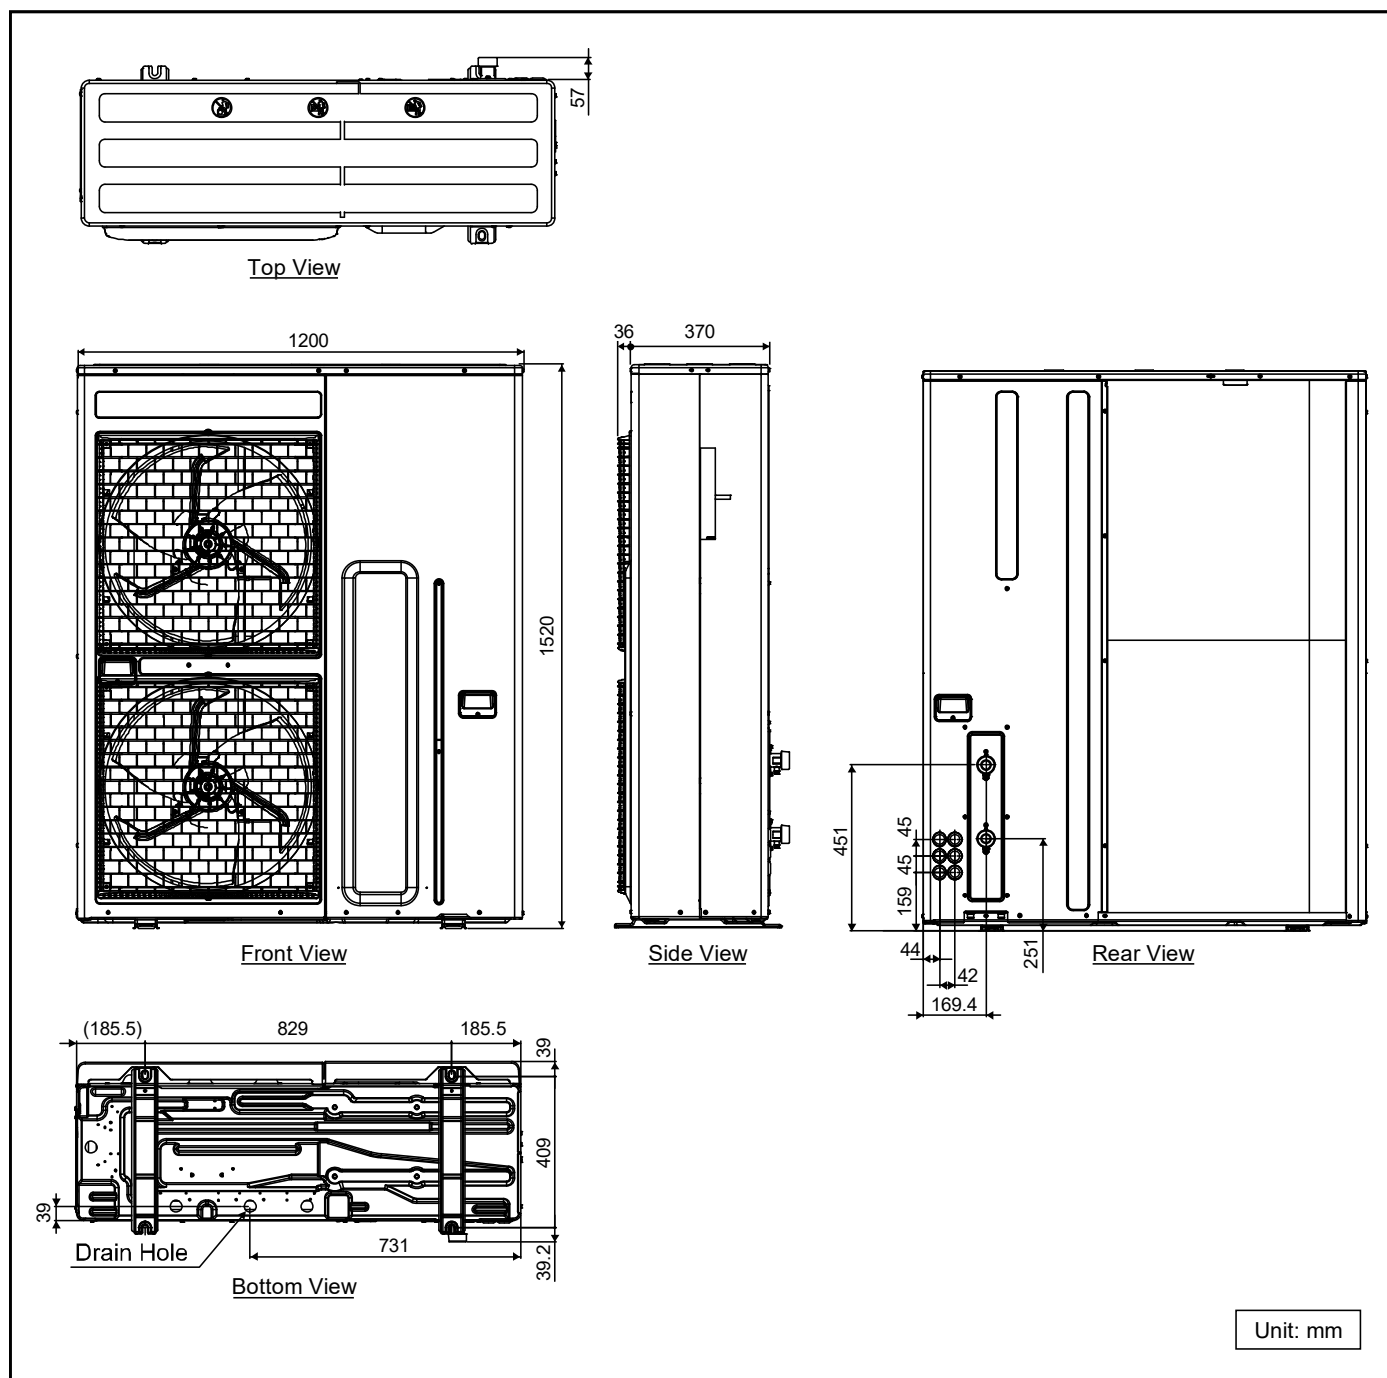

# 7. Refrigeration and Water Cycle Diagram

OUTDOOR UNIT


INDOOR UNIT (All in One)

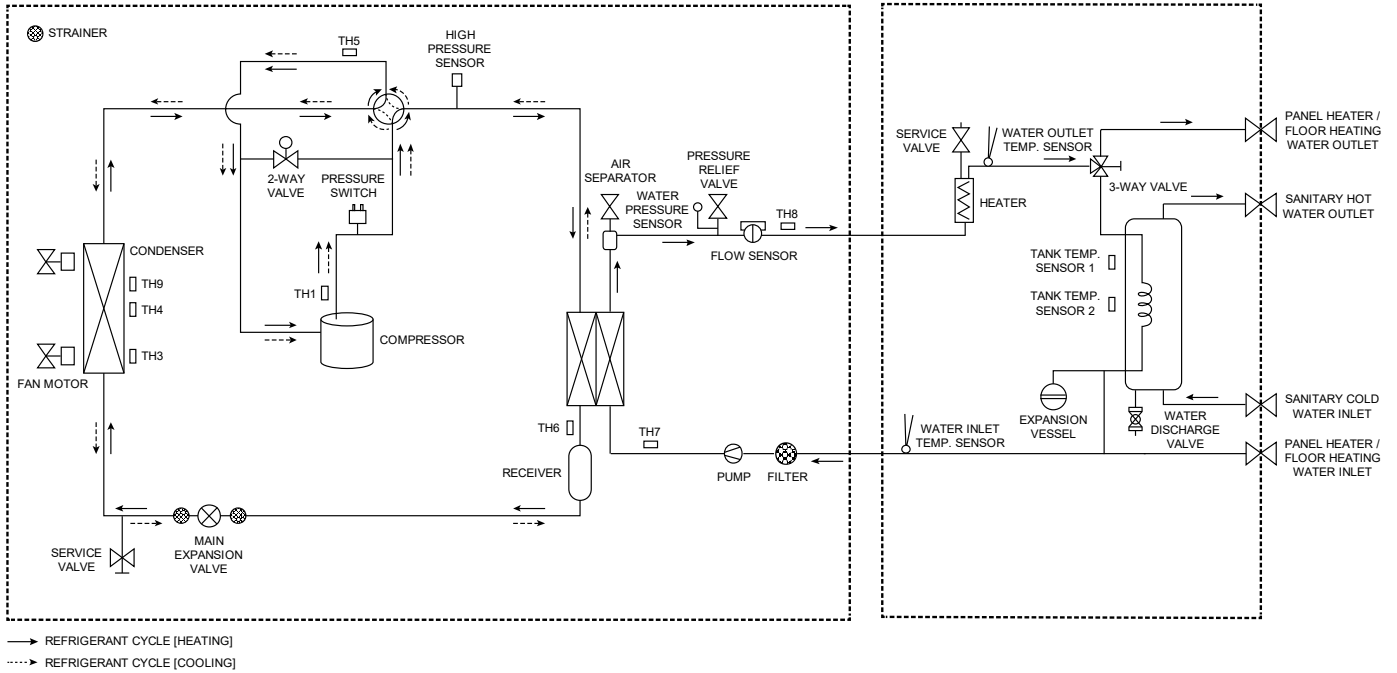

TH1	Outdoor discharge sensor
TH2	-
TH3	Outdoor heat exchanger sensor
TH4	Outdoor ambient sensor
TH5	Evaporator outlet sensor
TH6	Refrigerant sensor
TH7	Water inlet 2 sensor
TH8	Water outlet sensor 2
TH9	Outdoor heat exchanger middle sensor
TH10	-
TH11	-
TH12	-

OUTDOOR UNIT


INDOOR UNIT (Bi-bloc)

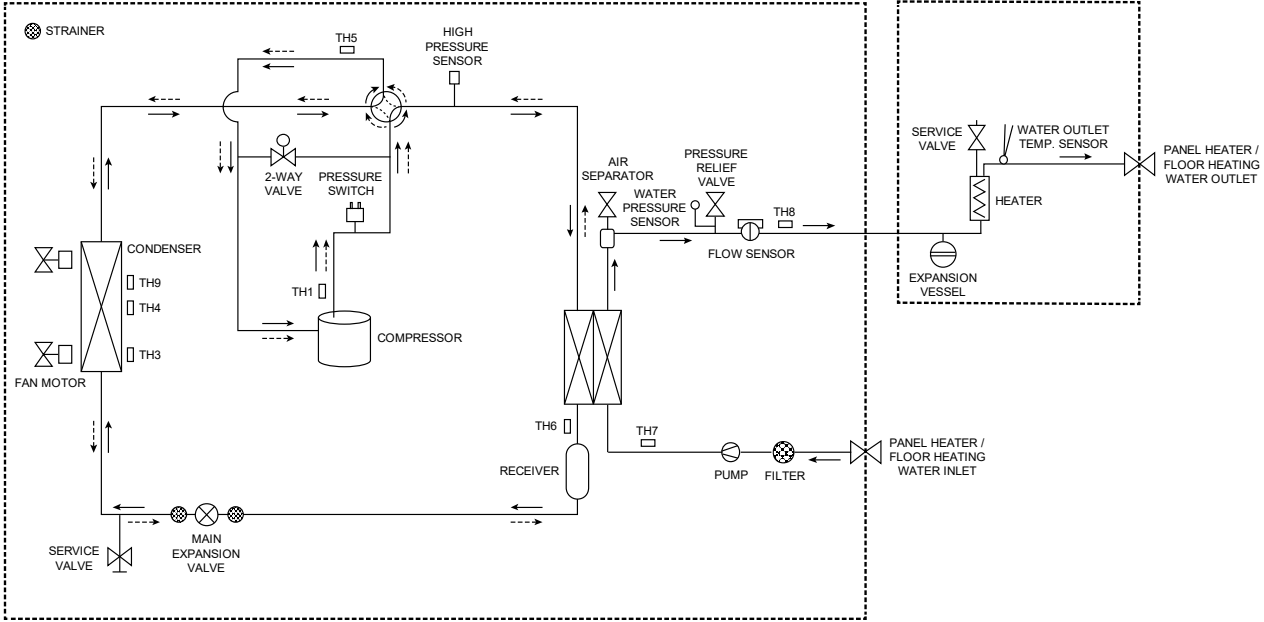

→ REFRIGERANT CYCLE [HEATING]  
 - - - - - REFRIGERANT CYCLE [COOLING]


TH1	Outdoor discharge sensor
TH2	-
TH3	Outdoor heat exchanger sensor
TH4	Outdoor ambient sensor
TH5	Evaporator outlet sensor
TH6	Refrigerant sensor
TH7	Water inlet 2 sensor
TH8	Water outlet sensor 2
TH9	Outdoor heat exchanger middle sensor
TH10	-
TH11	-
TH12	-

OUTDOOR UNIT

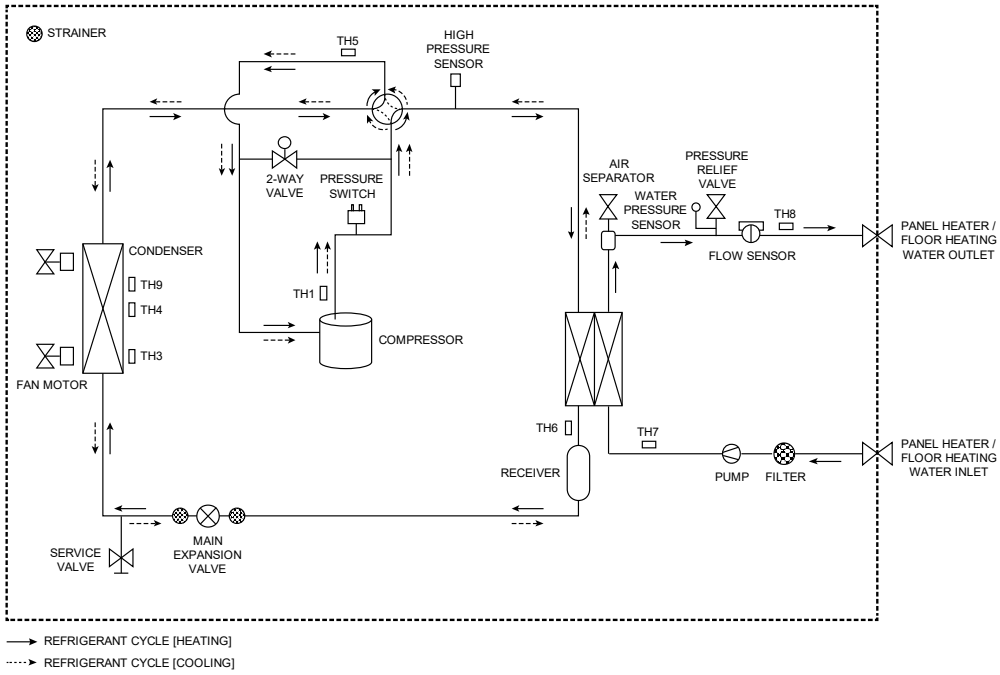


TH1	Outdoor discharge sensor
TH2	-
TH3	Outdoor heat exchanger sensor
TH4	Outdoor ambient sensor
TH5	Evaporator outlet sensor
TH6	Refrigerant sensor
TH7	Water inlet 2 sensor
TH8	Water outlet sensor 2
TH9	Outdoor heat exchanger middle sensor
TH10	-
TH11	-
TH12	-

# 8. Block Diagram

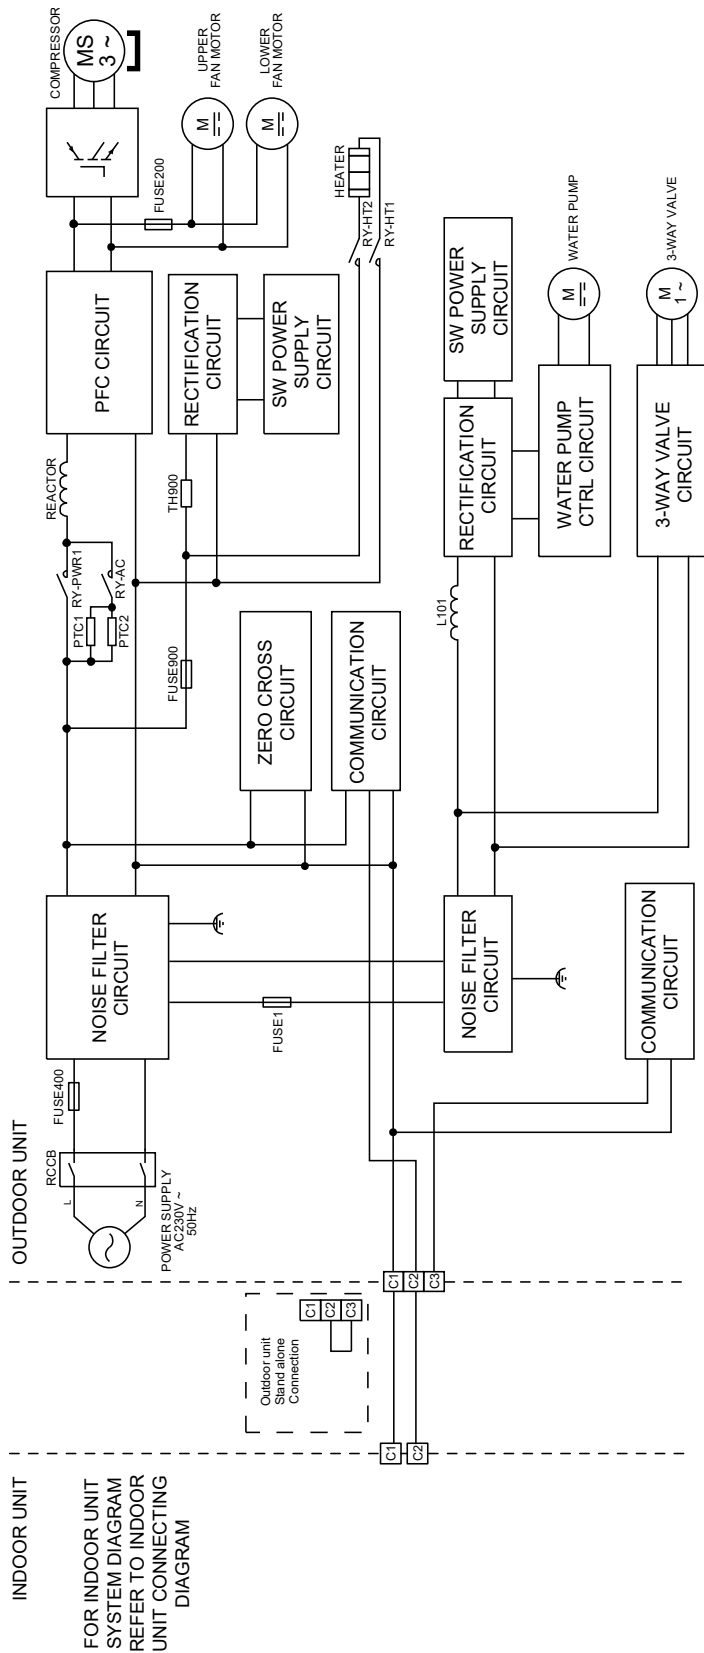

# 9. Wiring Connection Diagram

## 9.1 Outdoor Unit

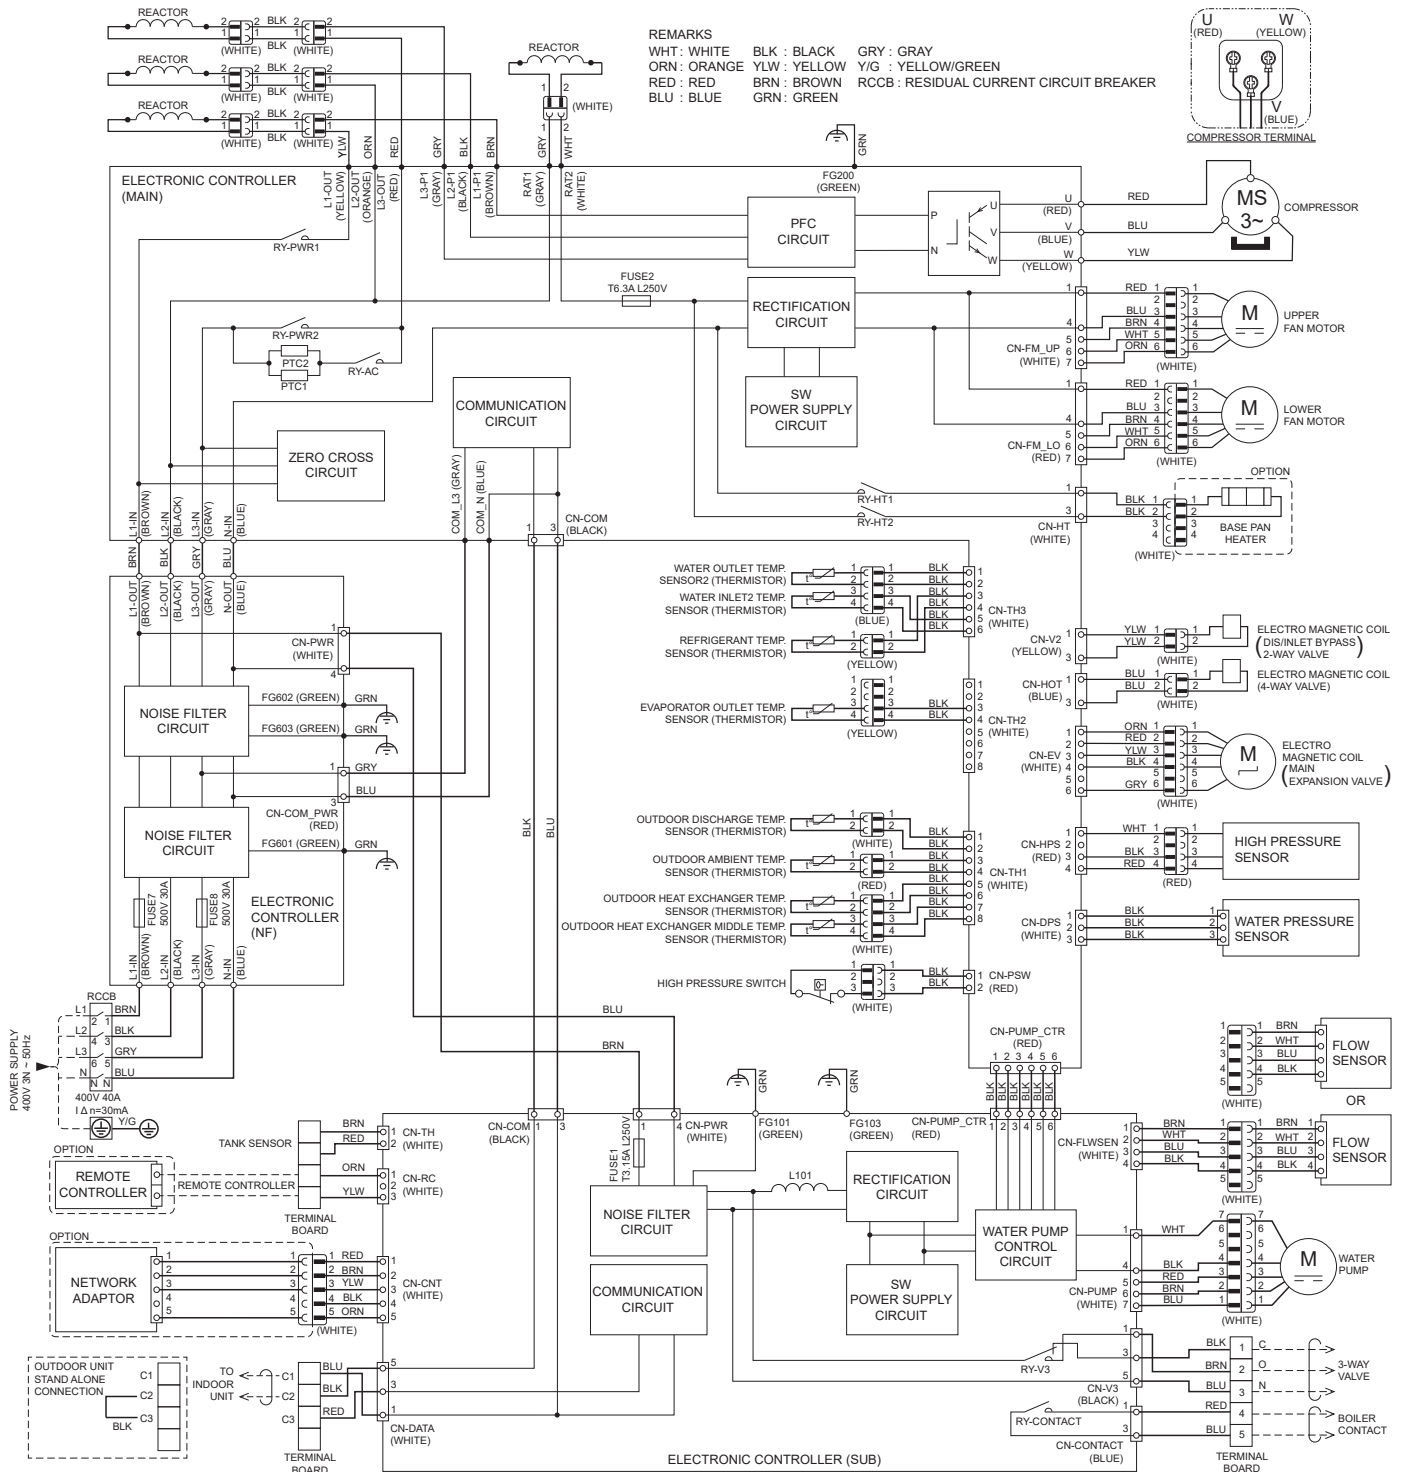


Resistance of Compressor Windings

MODEL	WH-WDG09ME8 / WH-WDG12ME8 / WH-WDG16ME8	
CONNECTION	7CD081XA01	
U - V	0.210 Ω	
V - W	0.210 Ω	
U - W	0.210 Ω	

Note: Resistance at 20°C of ambient temperature.

# 10. Electronic Circuit Diagram


## 10.1 Outdoor Unit

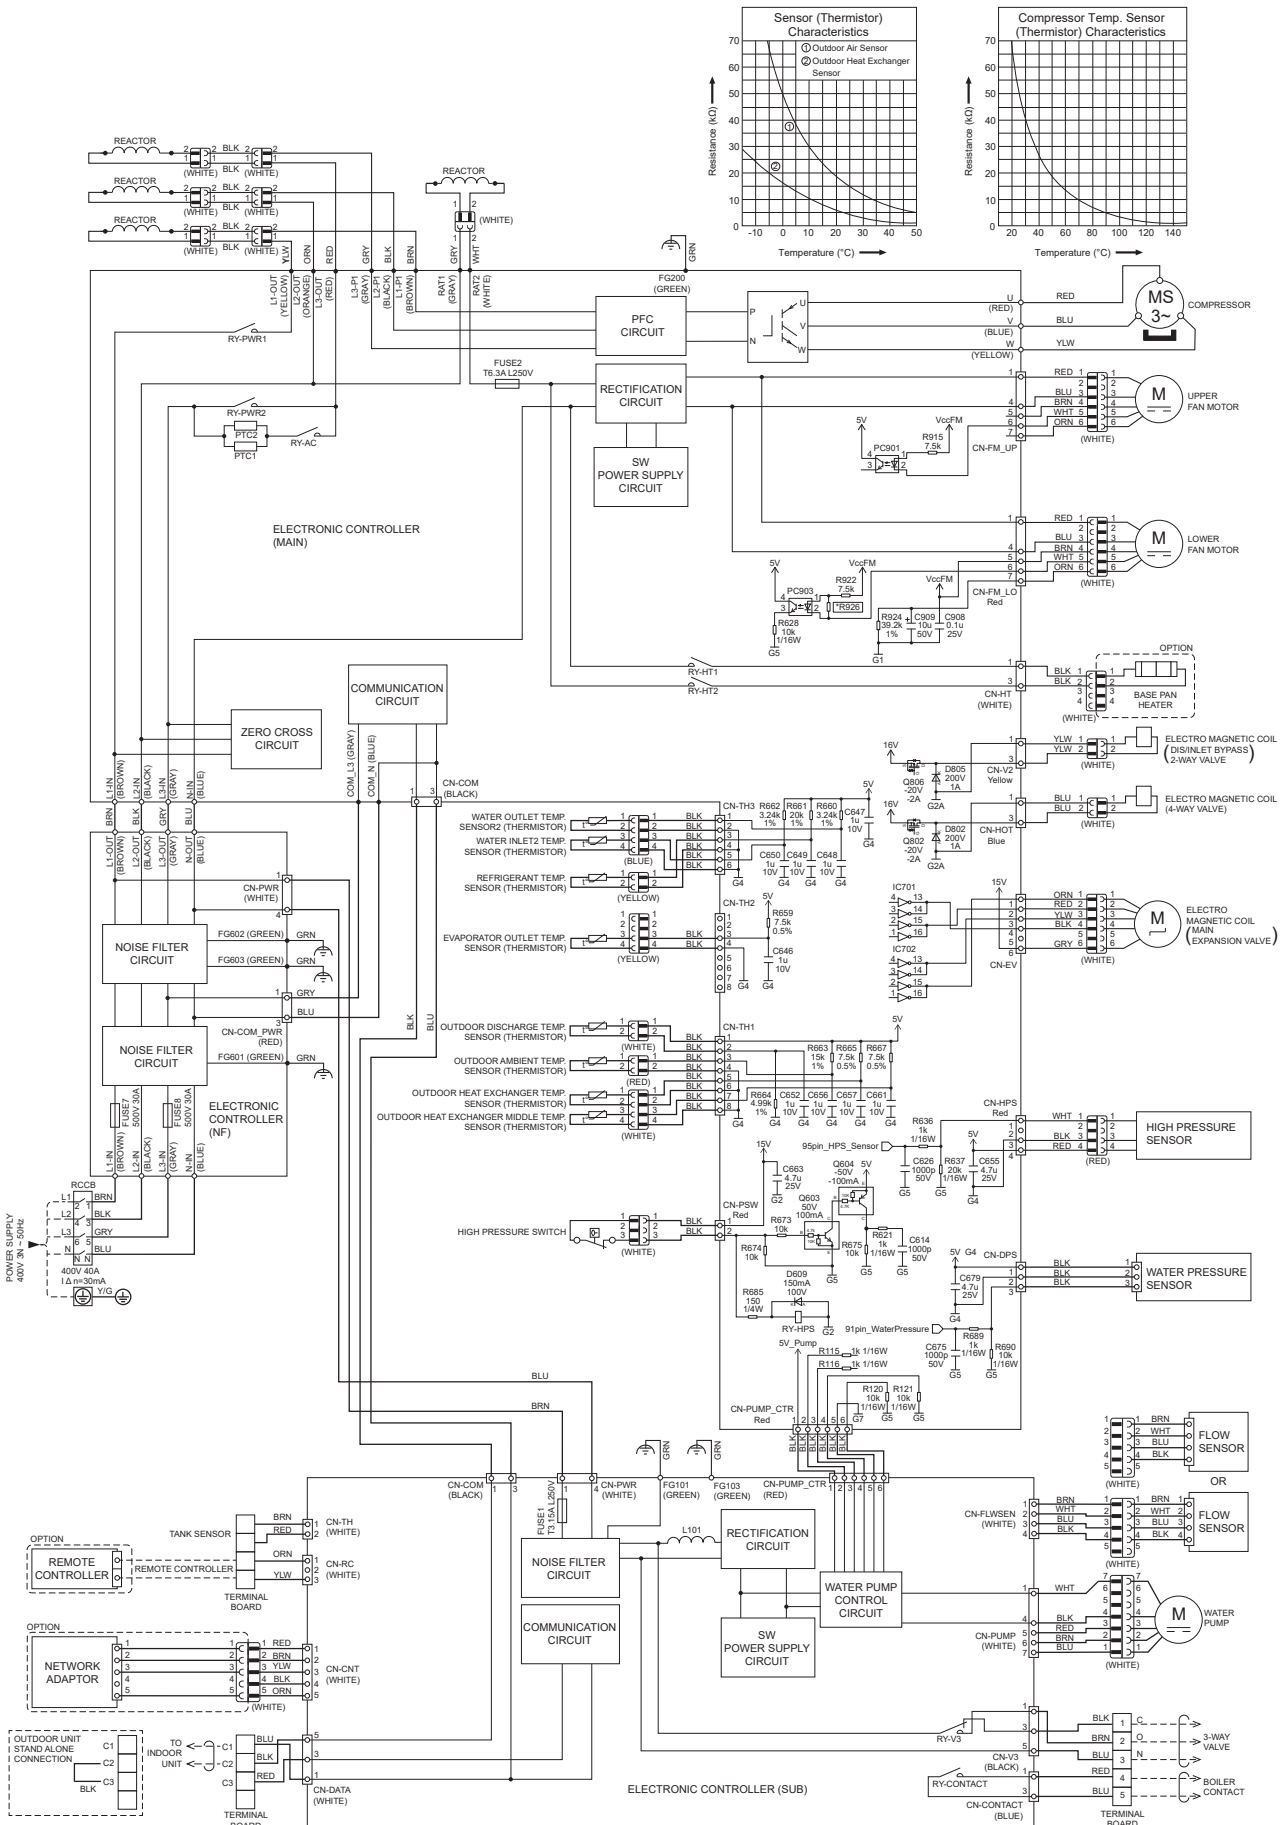


# 11. Printed Circuit Board

## 11.1 Outdoor Unit


### 11.1.1 Main Printed Circuit Board

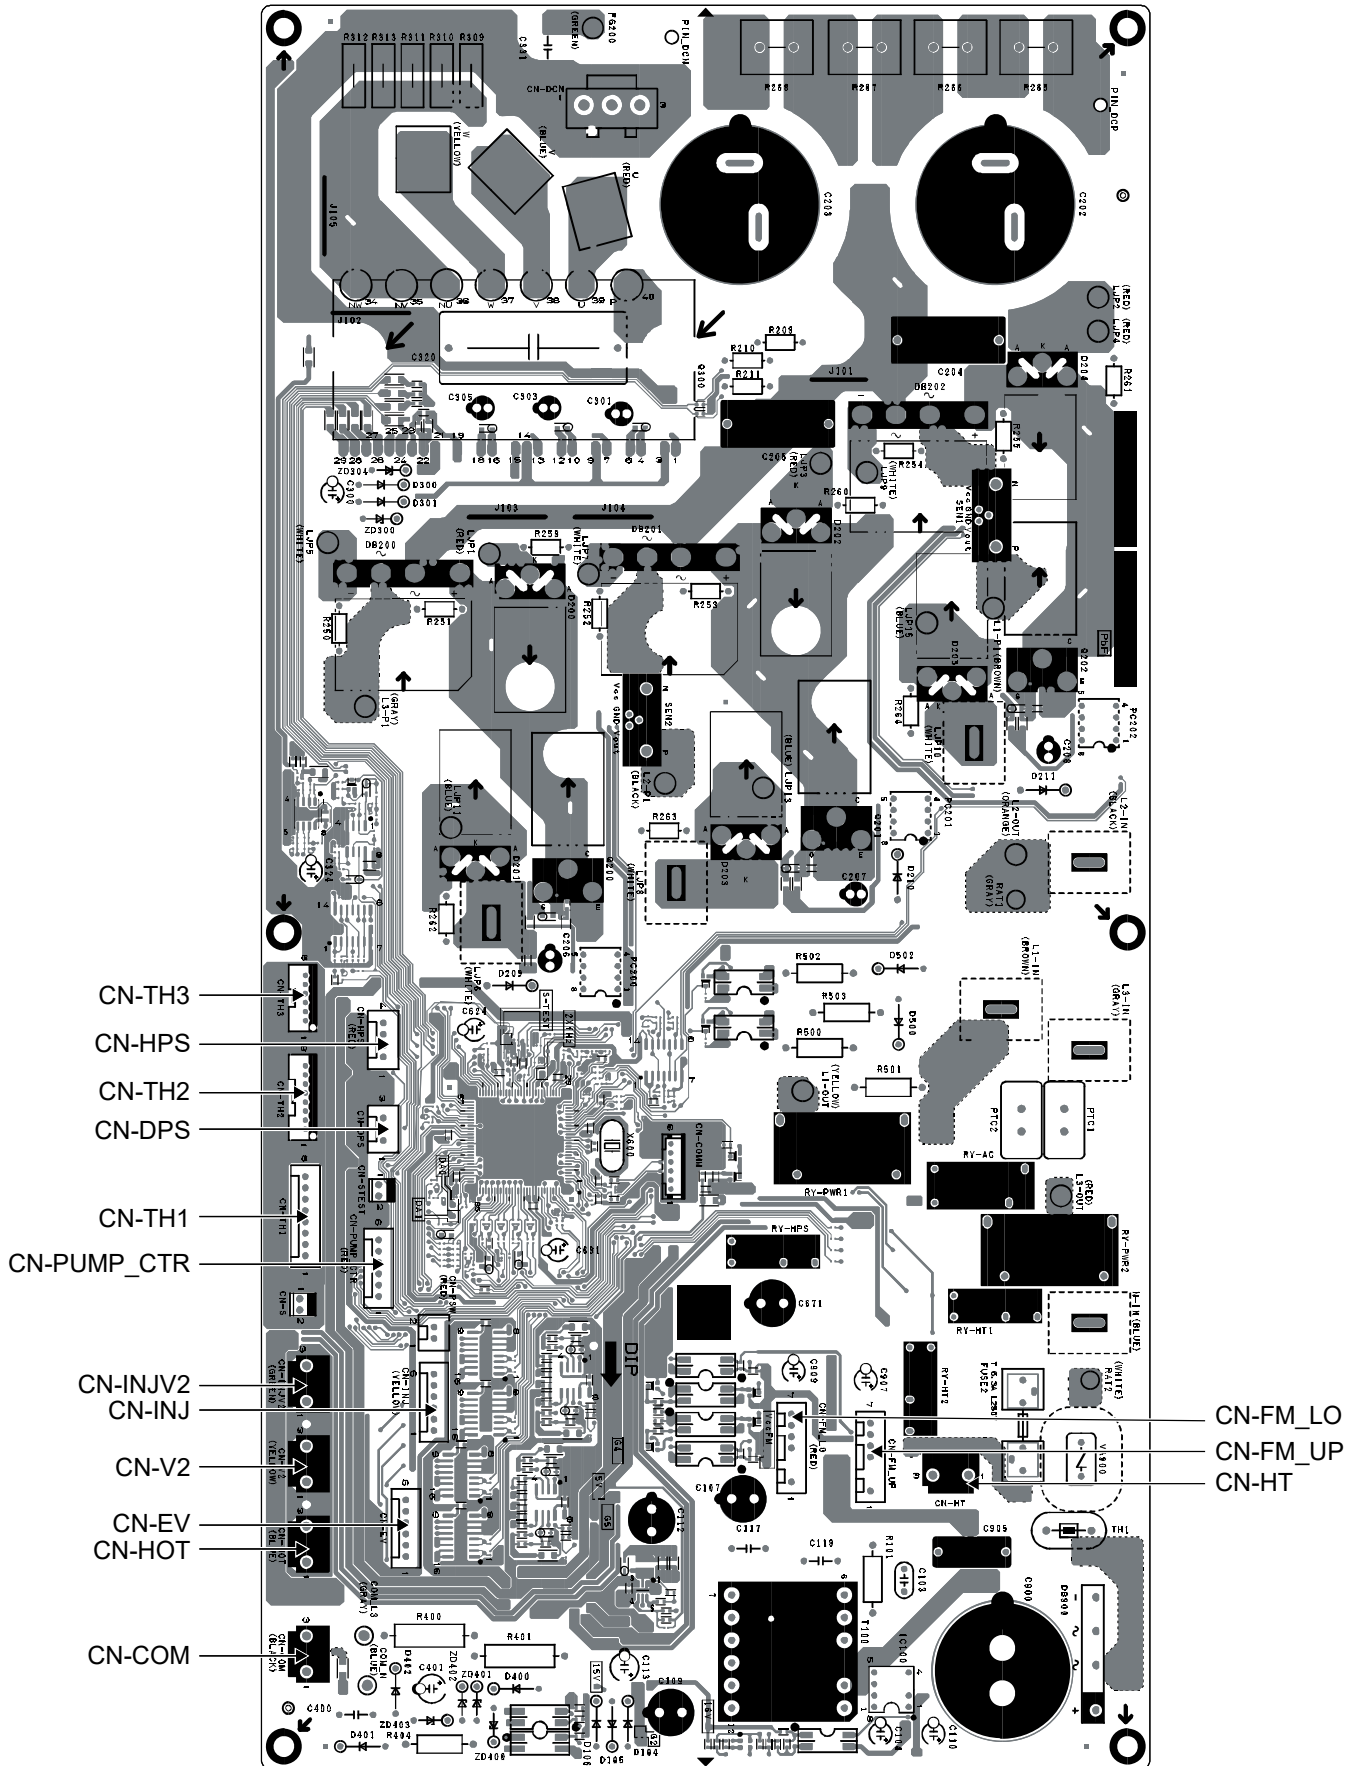

## 11.1.2 Noise Filter Printed Circuit Board

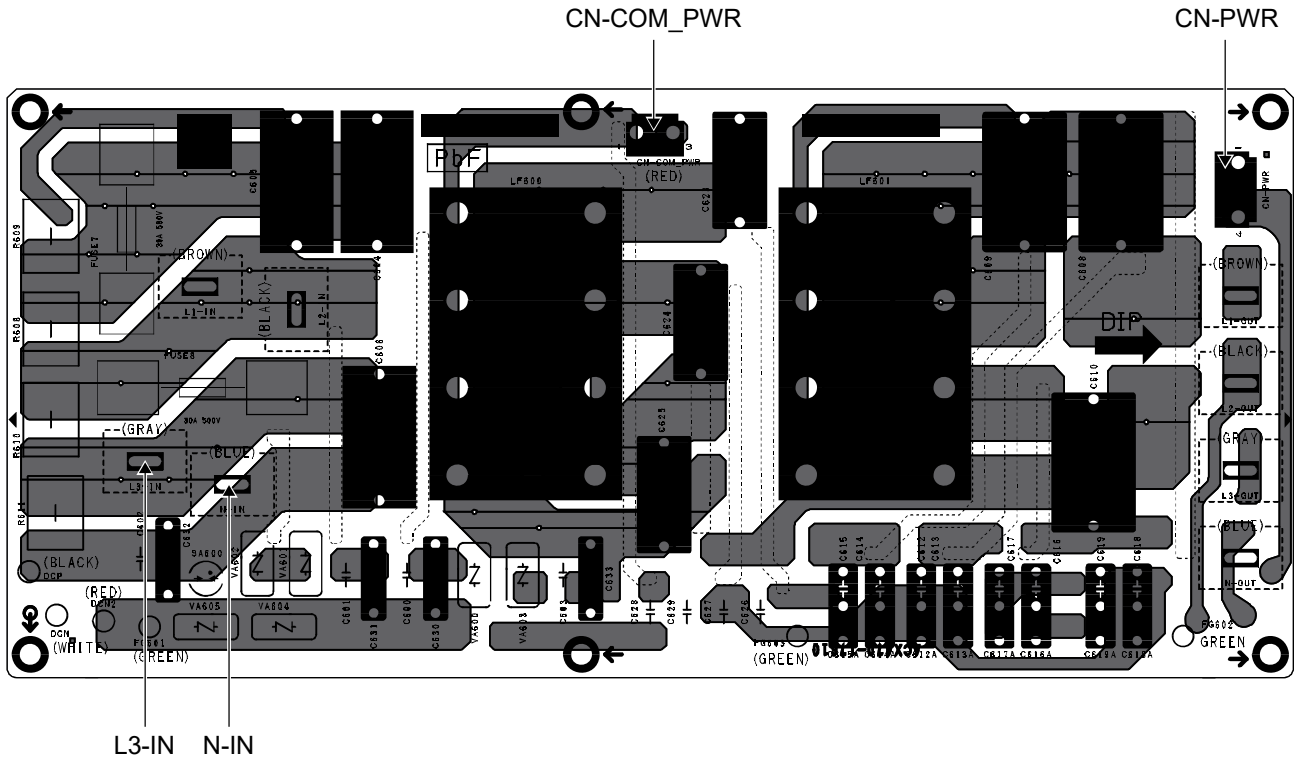

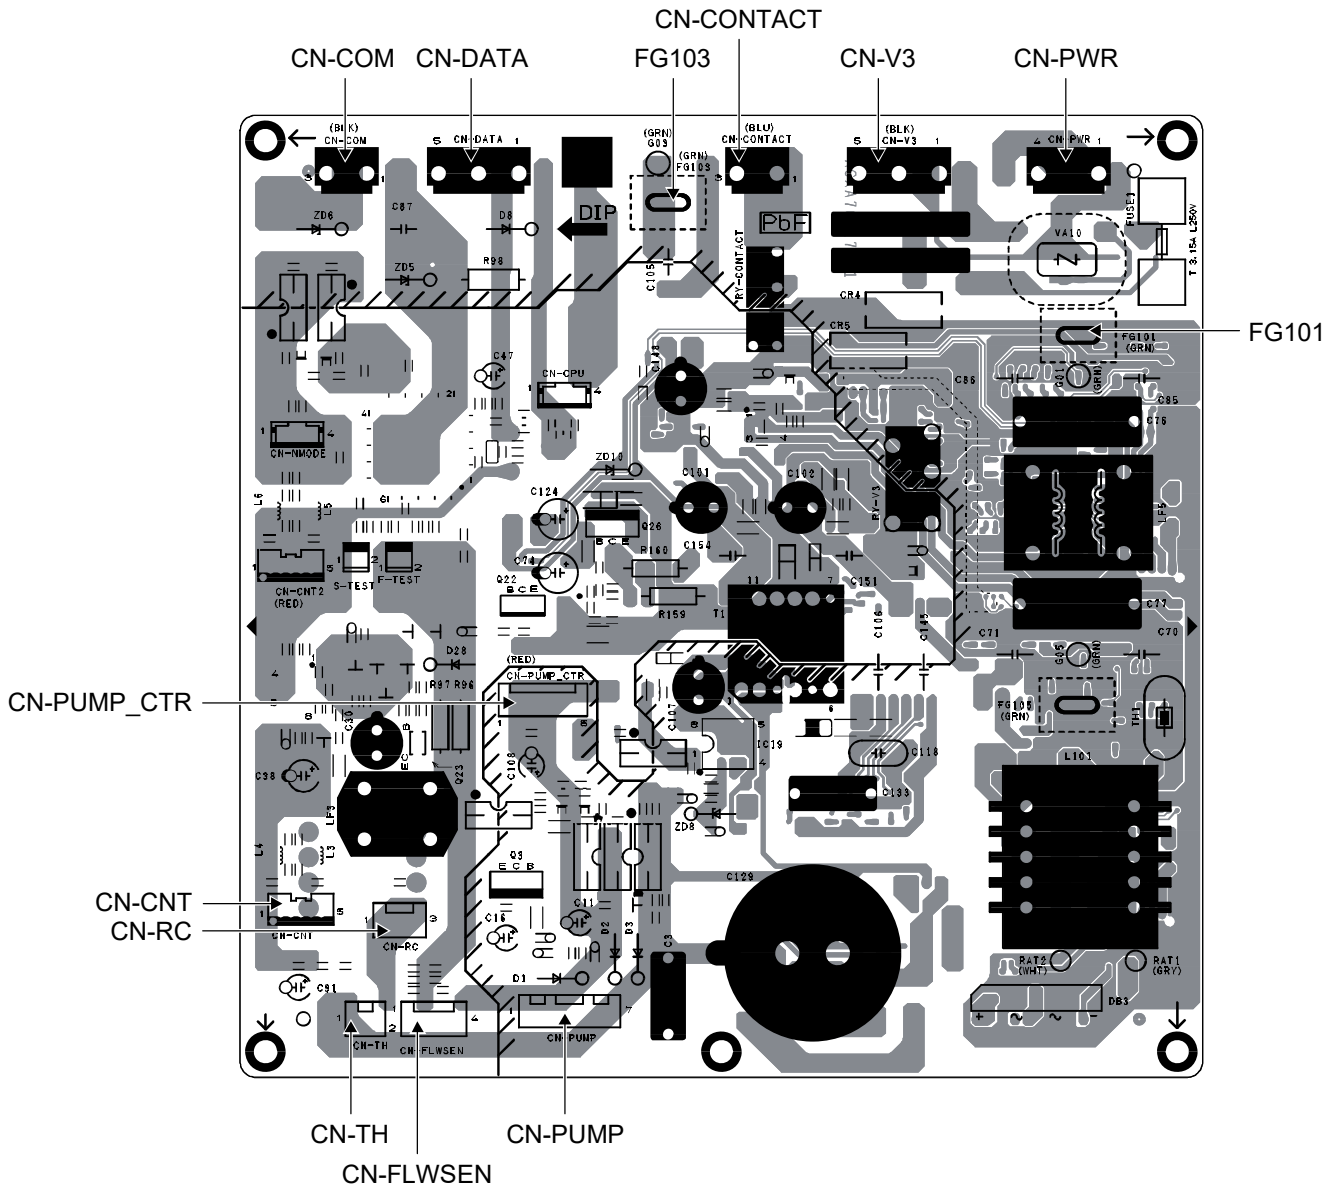


### 11.1.3 Sub Printed Circuit Board



## 12. Installation Instruction

### 12.1 Outdoor Unit

#### Attached accessories

No.	Accessories part	Qty.
1	Drain Elbow 	1
2	Rubber Cap 	3
3	Rubber Cap 	15

#### Optional Accessories

No.	Accessories part	Qty.
4	Remote Controller set (CZ-RTW2TAW1C or CZ-RTW2TAW2) *Include Remote Controller + Network adaptor with 10m cable	1
5	Remote Controller (CZ-RTW2 or CZ-RTW2-1)	1
6	Base Pan Heater CZ-NE4P	1

- When you purchase an indoor unit, the remote controller and network adaptor are included.
- When the outdoor unit is used alone, either 4 or 5 is always required.
- If you need the 2nd remote controller, purchase 5 and set it up as the 2nd remote controller.
- When installing the outdoor units in cold climates, it is strongly recommended to install a base pan heater (optional). For installation details, refer to the installation manual of the base pan heater (optional).

#### Field Supply Accessories (Optional)

Part	3-way valve kit	
	Electromtoric Actuator	3-port Valve
Model	SFA 21/18	VXI 46/25
Specification	AC230V, 12VA	-
Supplier	Siemens	

#### 12.1.1 Select the Best Location (Outdoor Unit)

- If an awning is placed over the unit to avoid direct sunlight or rain, be careful not to disturb the heat dissipation from the capacitor.
- Avoid installation where the ambient temperature may fall below -25°C.
- A protective zone is defined in the area close to the perimeter of the product. Refer to 12.1.2 Protective Zone section.
- Do not place obstacles that could short-circuit the discharge air.
- The lifespan of Outdoor Unit may be shorter if it is installed near the sea, in areas with high sulphur content or high oil content (e.g. machine oil).
- For maximum length and elevation between outdoor unit and indoor unit, refer to “Cooling/Heating Pipework” in 12.1.5 Piping Installation.

## 12.1.2 Protective Zone

This outdoor unit is filled with R290 (Extremely flammable gas, safety A3 group per ISO 817). Note that this refrigerant has a higher density than air. In case of a refrigerant leak, the leaked refrigerant may accumulate near the ground.

Prevent accumulation of refrigerant in any way that is potentially dangerous, explosive or risk suffocation. Prevent refrigerant from entering the building through building openings. Prevent accumulation of refrigerant in the drain grooves.


A protective zone is defined around this outdoor unit. There must be no building openings, windows, doors, light shafts, cellar entrances, escape hatches, flat-roof windows or ventilation openings in the protective zone.

There must be no ignition sources, such as heat above 360°C, sparks, open flame, plug sockets, light switches, lamps, electrical switches or other permanent ignitions sources, in the protective zone.


The protective zone must not extend to adjacent buildings or public traffic areas (boundaries of neighbors, the public road, neighbor's private roads, subsidence area, depressions, pump shafts, sewers intakes, waste water shafts and so on.).

In the protective zone, you are not permitted to make any subsequent structural alterations which infringe the stated rules for the protective zone.


- 1) Protective zone for ground installation (or flat-roof installation) at the open areas

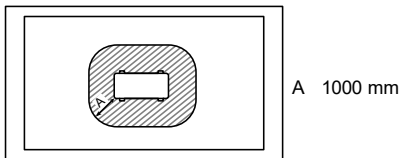


- 2) Protective zone for ground installation in front of a building wall

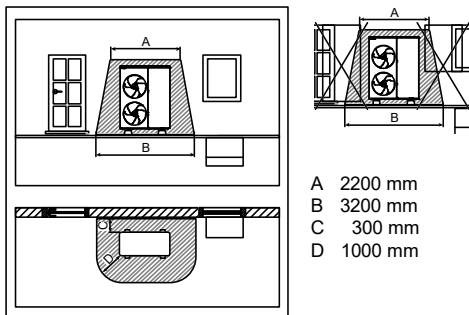

- 3) Protective zone for ground installation in a building corner

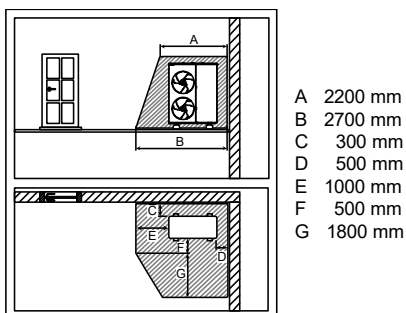


- 4) Protective zone for wall installation in front of a building wall

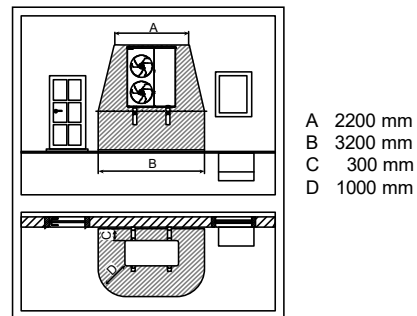

The protective zone under the product extends to the floor.

- 5) Protective zone for wall installation in a building corner

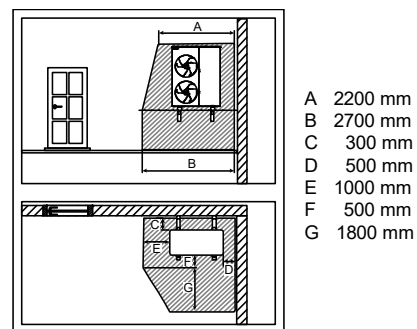


The protective zone under the product extends to the floor.


## 12.1.3 Install Outdoor Unit

### 12.1.3.1 Dimension Diagram


Unit: mm

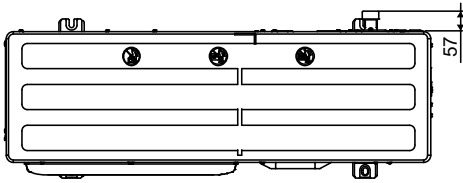


Top view

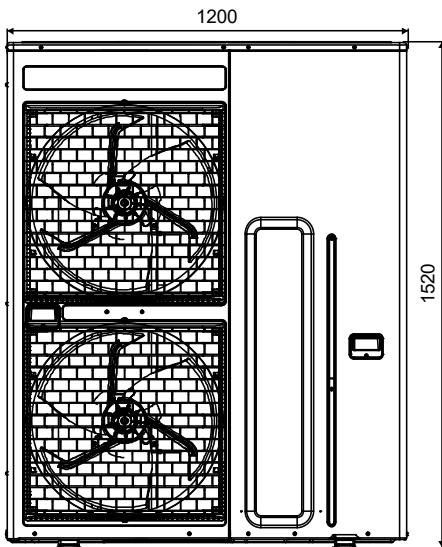


Front view

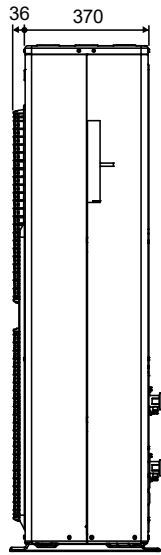


Side view

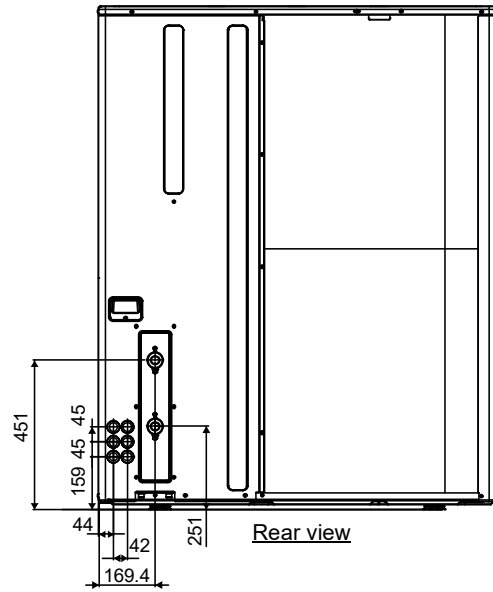

Rear view

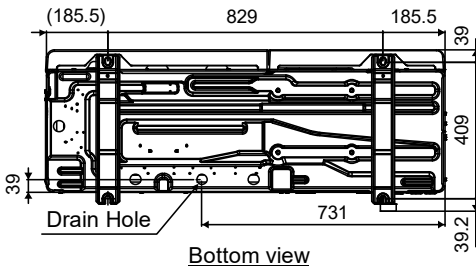


Bottom view

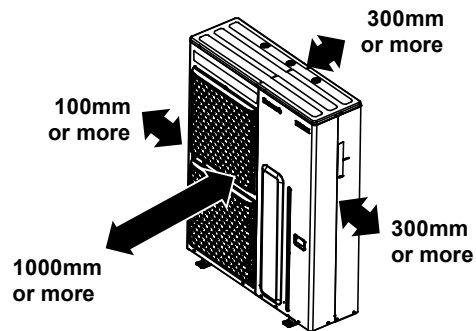


It is advisable to avoid more than 2 blockage directions. For better ventilation and multiple outdoor installations, consult an authorized dealer/expert.

### 12.1.3.2 Main Components Diagram

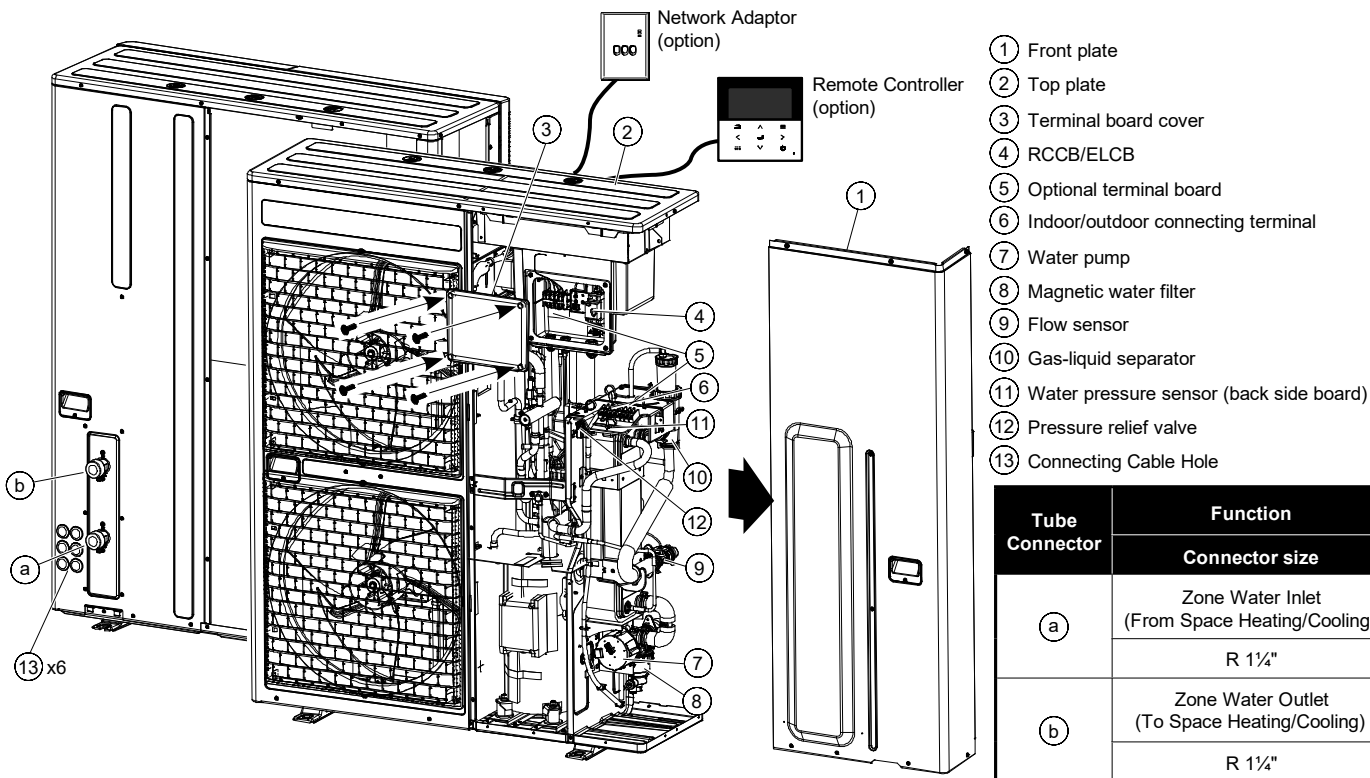


### 12.1.3.3 Install the Outdoor Unit

- After selecting the best location, start installation according to the Installation Diagram.
1. When installing at roof, please consider strong wind and earthquake. Please fasten the installation stand firmly with bolt or nails.
  2. For mounting on concrete or solid surfaces, fix the unit using M10 or W 3/8 bolts and nuts. Make sure that the unit is installed vertically against the horizontal plane. (Install the unit using anchor bolt as shown below.)

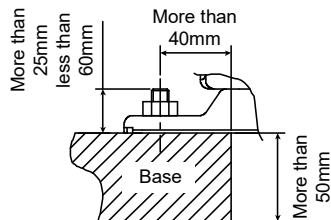


### 12.1.3.4 Disposal of Outdoor Unit Drain Water

- When the Drain elbow [1] is used, please ensure to:
  - The unit must be mounted on a stand at least 50 mm high.
  - Seal the  $\varnothing 32$  mm holes with Rubber caps [2]. (Refer to the diagram below and install from the outside)
  - If drain water leaks, attach rubber caps [3] when necessary. (Refer to the diagram below and install from the outside)
  - When disposing drain water from the outdoor unit, use a tray (field supply) if necessary.
- If the unit is used in an area where temperature falls below  $0^{\circ}\text{C}$  for 2 or 3 consecutive days, it is recommended not to use the Drain elbow [1] Rubber caps [2] and Rubber caps [3] since drain water will freeze up and obstruct fan rotation.

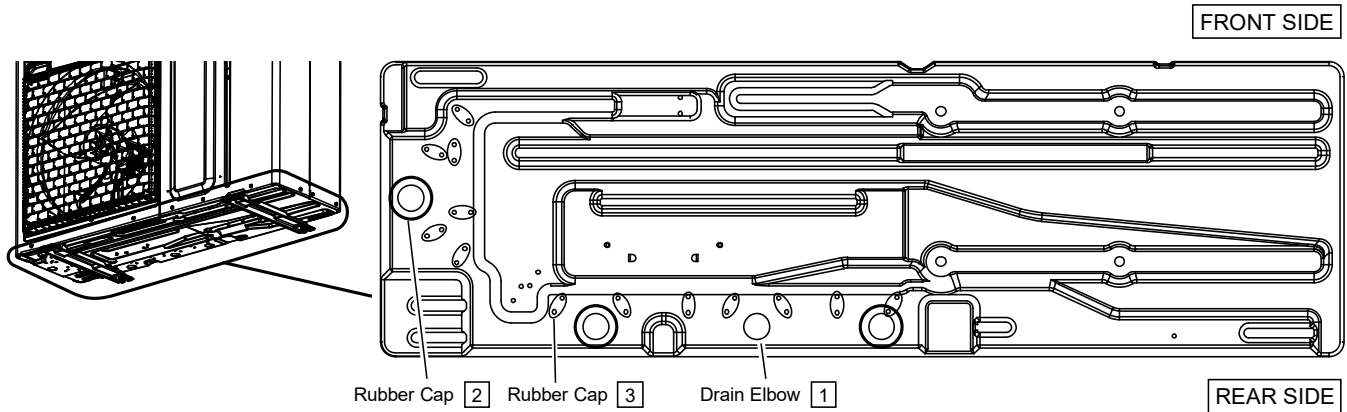

### 12.1.4 Install a Sleeve of Piping (Drill a Hole in the Wall)

1. Make a through hole. (Check pipe diameter and insulation thickness)
2. Insert the piping sleeve into the hole.
3. Fix the bushing to the sleeve.
4. Cut the sleeve until it extrudes about 15 mm from the wall.

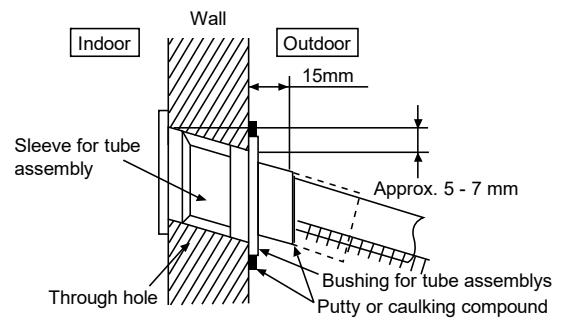

#### CAUTION


- ⚠ When the wall is hollow, please be sure to use the sleeve for tube assembly to prevent dangers caused by mice biting the connection cable.

5. Finish by sealing the sleeve with putty or caulking compound at the final stage.


## 12.1.5 Piping Installation

### 12.1.5.1 Typical Piping Installation


When outdoor unit is used alone

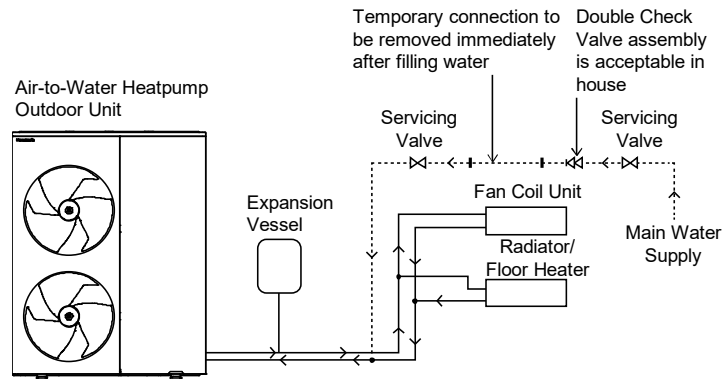

When indoor unit (hydromodule + tank) is connected

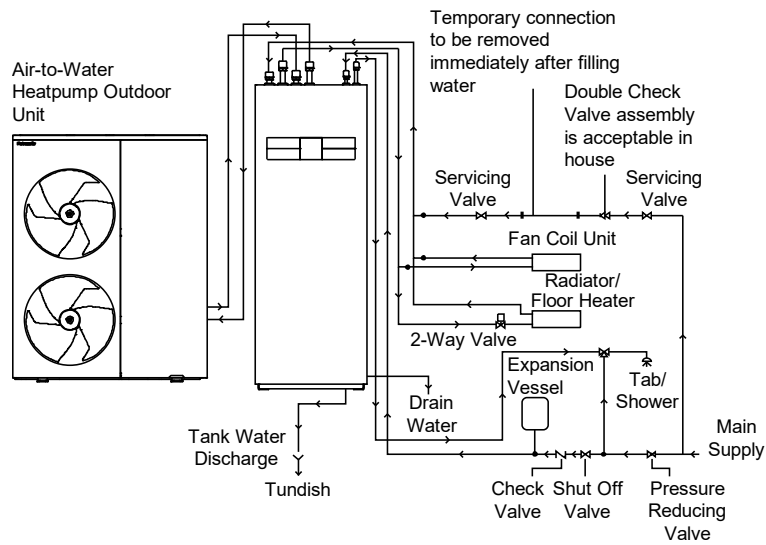


When indoor unit (Bi-bloc) is connected

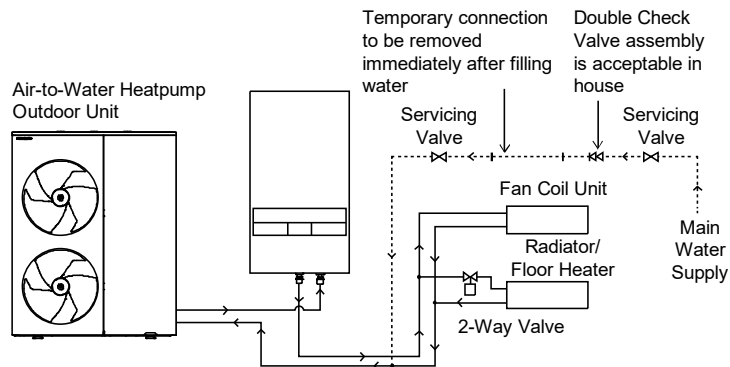

### 12.1.5.2 Water Piping Installation

- Please engage a licensed water circuit installer to install this water circuit.
- This water circuit must comply with relevant European and national regulations (including EN61770), and local building regulation codes.
- Ensure the components installed in the water circuit could withstand water pressure during operation.
- Do not use worn out tube or detachable hose set.
- Do not apply excessive force to the pipe. There is a risk of damage.
- Choose proper sealer which can withstand the pressures and temperatures of the system.
- Make sure to use two spanners to tighten the connection. Further tighten the nuts with torque wrench to the specified torque as stated in the table.
- Cover the pipe end to prevent dirt and dust when inserting it through a wall.
- If non-brass metallic piping is used for installation, make sure to insulate the pipes to prevent galvanic corrosion.
- Do not connect galvanised pipes. This may cause galvanic corrosion.
- Use correct nut for all Outdoor Unit tube connections and clean all tubes with tap water before installation.

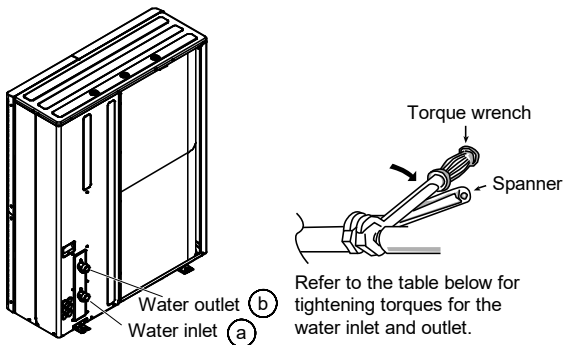

	Size	Torque
Water Inlet Port (a)	R 1¼"	117.6 N•m
Water Outlet Port (b)		

#### CAUTION

Do not overtighten, overtightening may cause water leakage.

- Make sure to insulate the water circuit pipes to prevent reduction of heating capacity.
- After installation, check the water leakage condition in connection area during test run.
- Failure to connect the tube appropriately might cause the Outdoor Unit malfunction.
- Protection from frost:  
When water is left inside the system, freezing up is very likely to happen, which could damage the system.  
Make sure the power supply is turned off before draining.

### When outdoor unit is used alone

Install an expansion tank (set pressure: 1 bar) to the circulation circuit.

For capacity, refer to 12.1.11 Reconfirmation.

### 12.1.5.3 Space Cooling/Heating Pipework


- Failure to connect the tube appropriately might cause the Outdoor Unit malfunction.
- Refer to the table below for the rated flow rate of each particular Outdoor Unit.

Model	Rated flow rate (L/min)	
	Cooling	Heat
WH-WDG09ME8	25.8	25.8
WH-WDG12ME5 WH-WDG12ME8	25.8	34.4
WH-WDG16ME5 WH-WDG16ME8	25.8	45.9

#### CAUTION

Do not install automatic air purge valves on indoor water pipes. In the unlikely event that R290 refrigerant leaks into the water circuit, there is a risk of refrigerant leaking into the room.

- When a buffer tank is connected to the water circuit, be sure to close the automatic air purge valve if it is installed on the top of the buffer tank. If it is not possible to keep it closed, make sure that the automatic air purge valve outlet can be vented to the outdoors through a tube. Or, the room in which the buffer tank is placed must be well ventilated. In the unlikely event that R290 refrigerant leaks into the water circuit, there is a risk of refrigerant leaking into the room.

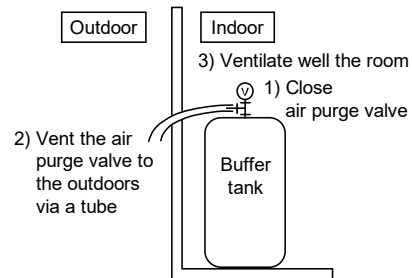

### When outdoor unit is used alone

- Connect Outdoor unit Zone Water inlet (a) to outlet connector of Zone 1 Panel/Floor heater.
- Connect Outdoor unit Zone Water outlet (b) to inlet connector of Zone 1 Panel/Floor heater.

### When connected to indoor unit

Refer to the Indoor Unit Installation Manual.

\* In the case of Control Module model, it is the same as outdoor unit alone case.

\* **Do not connect a 1-phase indoor unit to a 3-phase outdoor unit.**

## Pipe diameter and length

Model	Water piping between outdoor unit and indoor unit			
	Inner diameter	Maximum length	Insulator thickness	Maximum Elevation
WH-WDG09ME8	ø 25 mm	30m	30 mm or more	30m
WH-WDG12ME5 WH-WDG12ME8	ø 32 mm	30m	30 mm or more	30m
WH-WDG16ME5 WH-WDG16ME8				

\* If the indoor unit is located more than 10 m below the outdoor unit, the water pressure in the circulation circuit (outdoor unit section) shall be 0.5 to 1 bar.

If the outdoor unit is located below the indoor unit, install an extra pump on the outdoor side.

Refer to Special Installation Patterns in next page.


\* WH-WDG16ME5, WH-WDG16ME8 may require installation of an extra pump depending on piping length.

Model	Water piping (When outdoor unit is used alone)		
	Inner diameter	Insulation thickness	Maximum elevation between outdoor unit and Panel/Floor heater
WH-WDG09ME8	ø 25 mm	30 mm or more	10m
WH-WDG12ME5 WH-WDG12ME8	ø 32 mm	30 mm or more	10m
WH-WDG16ME5 WH-WDG16ME8			

### 12.1.5.4 Special Installation Patterns


Special construction patterns mentioned here refer to the case where there is a substantial difference in elevation (e.g. more than 10 m) between the outdoor unit installation and the Panel/Floor heater (or indoor unit). In this case, attention must be paid since incorrect water filling during installation may prevent the system from operating correctly and may cause water leak.

#### ① When the outdoor unit is located 30 m below the indoor unit

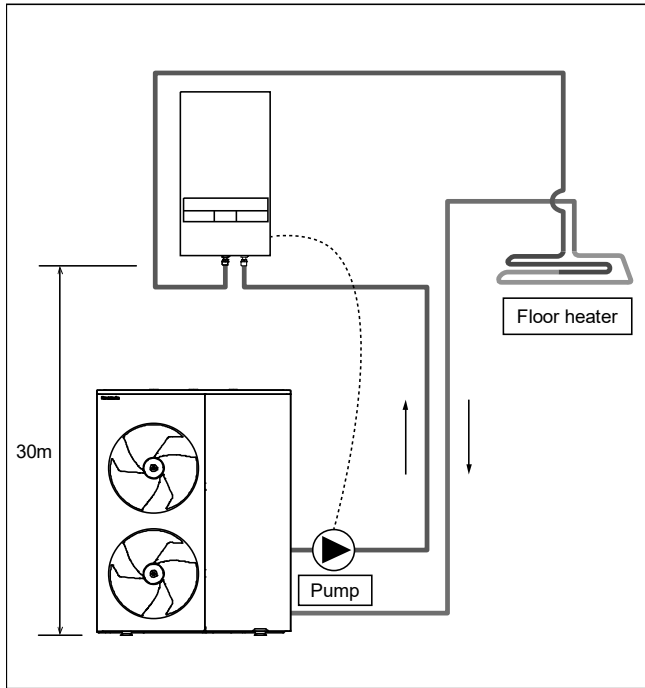

- Pressure checked by remote controller: 3.5 ~ 4 bar. (at an elevation difference of 30 m)
- When installing an extra pump, connect it to the water outlet of the outdoor unit. (If installed to the water inlet, the safety valve is activated and the water is drained)
- Indoor unit is required to install an extra pump.

#### ② When outdoor unit is located above the indoor unit and Floor heater is 30 m below it

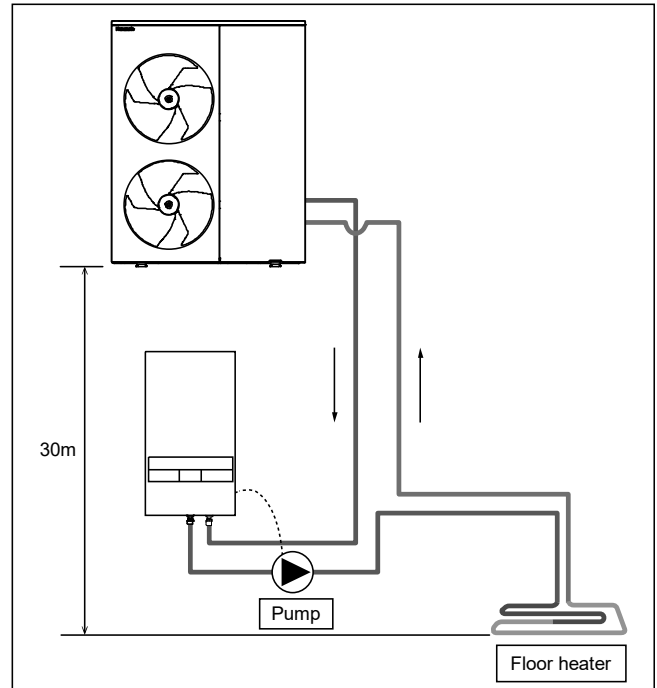

- Pressure checked by remote controller: 0.5 ~ 1 bar. (at an elevation difference of 30 m)
- When installing an extra pump, connect it to the water outlet of the indoor unit.
- Indoor unit is required to install an extra pump.

## 12.1.6 Connect the Cable to the Outdoor Unit

**⚠ WARNING**

This section is intended for licensed electricians. Work inside terminal board cover ③ fixed with work screws must be carried out by an installer or service personnel under the supervision of qualified personnel.

### 12.1.6.1 Fixing of Power Supply Cable and Connecting Cable

- An isolating device must be connected to the power supply cable.
  - Isolating device (disconnecting means) should have minimum 3.0 mm contact gap.
  - Use approved polychloroprene sheathed flexible cable of type designation 60245 IEC 57 or heavier. Connect the other end of the cable to isolating device (Disconnecting means). See table below for cable size requirements.

#### Power Supply Cable

Model	WH-WDG09ME8 WH-WDG12ME8 WH-WDG16ME8	WH-WDG12ME5 WH-WDG16ME5
Cable specification	5 × min 1.5 mm <sup>2</sup>	3 × min 4.0 mm <sup>2</sup>
Cable Diameter	ø 8.5 ~ 10.0 mm	ø 12.0 ~ 14.0 mm
Cable gland (see diagram in 2)	A	
Isolating Devices	20A	32A
Recommended RCD	30mA, 4P, typeA	30mA, 2P, typeA

- The earth wire shall be longer than the other wires to ensure electrical safety in case the cord slips out of the holder (clammer).
- Connecting cable must be an approved polychloroprene sheathed flexible cable (see table below), type designation 60245 IEC 57 or heavier. The sheath diameter of some connecting cables must be within specifications compatible with the cable gland.
- \* Do not connect a 1-phase indoor unit to a 3-phase outdoor unit.**

	Connection between Indoor unit and outdoor unit	Tank temperature sensor	Remote controller
Cable Specifications	2 × min 0.75 mm <sup>2</sup>	2 × min 0.3 mm <sup>2</sup>	2 × min 0.3 mm <sup>2</sup>

	3-Way Valve	Boiler
Cable Specifications	3 × min 1.5 mm <sup>2</sup>	2 × min 0.5 mm <sup>2</sup>
Cable Diameter	ø 8.5 ~ 10.0 mm	ø 4.0 ~ 7.0 mm
Cable gland to be used (see diagram in 2)	B	C



- Route the cables as follows.
  - Do not damage the cables by sharp edges.

- Remove the front plate ① and pull the power cable (cabyre cable \*1) and connection cable through into the rear bushing. Be sure to use the bushing and do not lose it.
- Remove the terminal board cover ③ and cable gland cap and insert the cables into the cable gland on the bottom of the electrical control unit box.
- Connect to RCCB/ELCB ④ and optional terminal board ⑤.
- Fix the cable gland by referring to [Figure 2]\*2
- Set the terminal board cover ③ by referring to [Figure 2]\*2

\*1 Locally procure the specified cabyre cable.



\*2 Screws of cable gland and terminal board cover ③ must be tightened to the specified tightening torque to prevent ingress of gas.

1

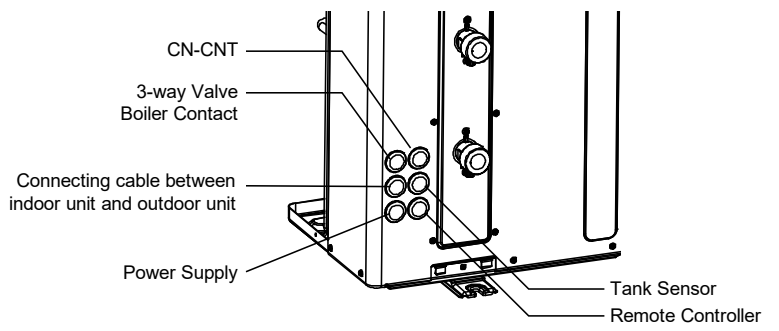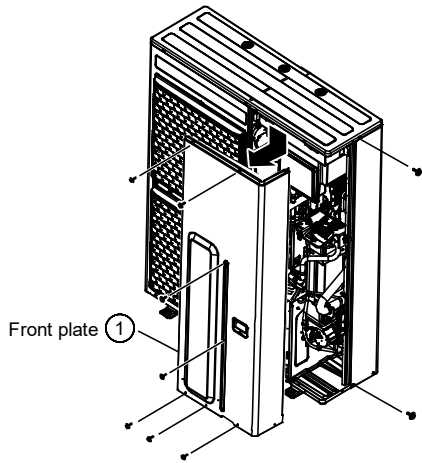



Pull the power supply cable and connecting cable through the Connecting Cable Hole (13) as shown in the figure.

2

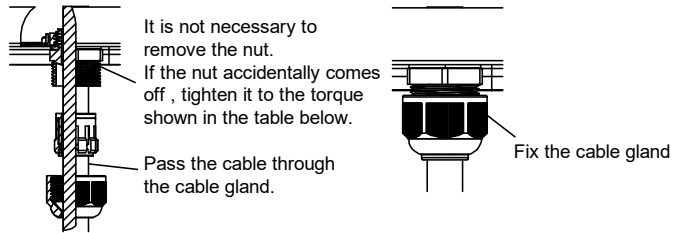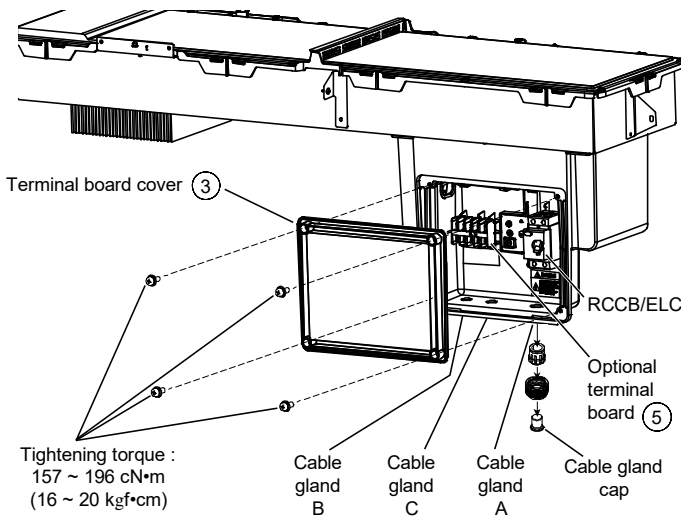

	Cable gland	Nut
Cable gland A	1.8 ~ 2.5 N·m (18.4 ~ 25.5 kgf·cm)	2.2 ~ 3.0 N·m (22.4 ~ 30.6 kgf·cm)
Cable gland B, C	1.2 ~ 1.8 N·m (12.2 ~ 18.4 kgf·cm)	1.5 ~ 2.2 N·m (15.3 ~ 22.4 kgf·cm)


Overall view

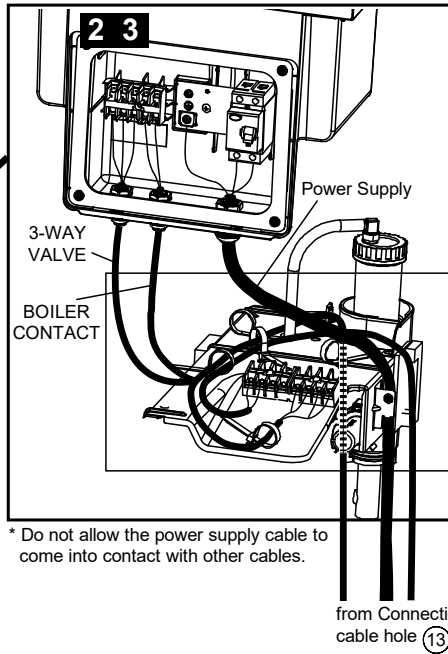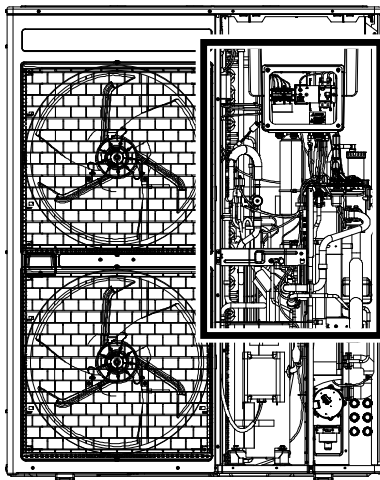

\* Do not allow the power supply cable to come into contact with other cables.

★ next page

Top view

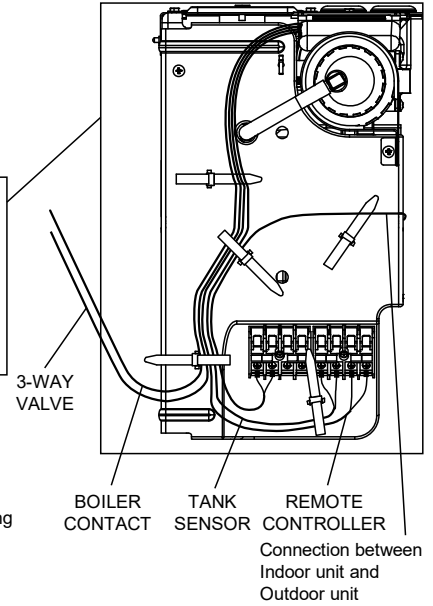

Route the cables as shown in the diagram above.


3

⚠ WARNING


⚡ This equipment must be properly earthed.

3-phase RCCB/ELCB ④

1-phase RCCB/ELCB ④



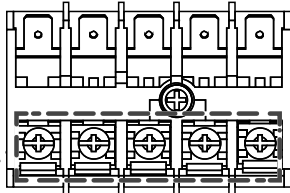


Optional Terminal Block ⑤

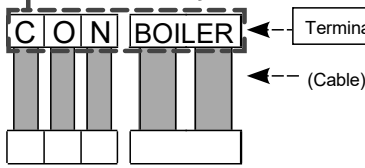

Need to connect when using an optional DHW tank

Need to connect when connecting and using a boiler.

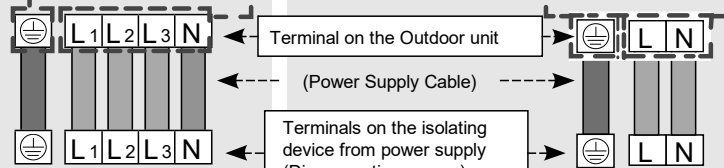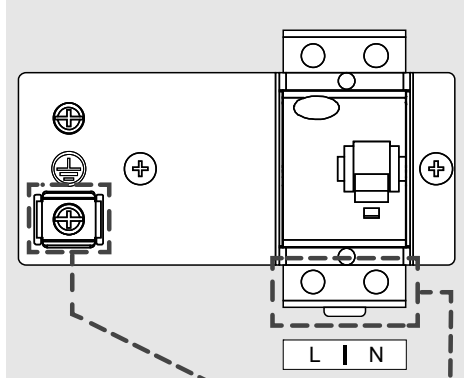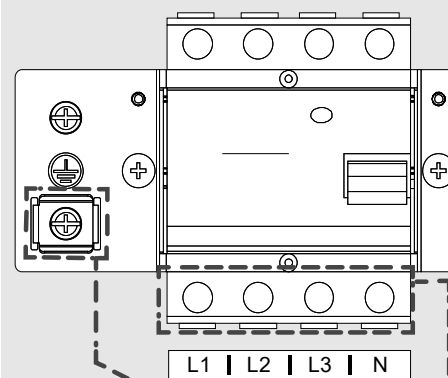

Earth wire must be longer than other cables for safety reasons.

• OUTPUT


3-way valve	AC230V C : Close O : Open N : Neutral
Boiler contact	Dry contact (System setup necessary)

• CONNECTING REQUIREMENTS

For **Optional Terminal Block** ⑤,

refer to **WIRE STRIPPING AND CONNECTING REQUIREMENT** on the next page.

For **RCCB/ELCB** ④, see the figures below.

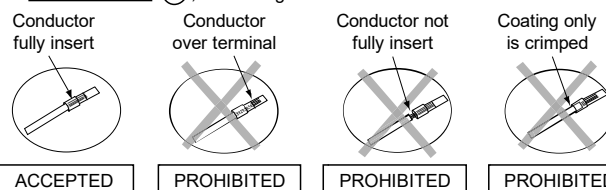


(Refer to the overall diagram on previous page)




### 12.1.6.2 Connection Between Indoor Unit and Outdoor Unit

When outdoor unit is used alone, leave the short-circuit wires "C2" and "C3" attached as shown in the diagram below.

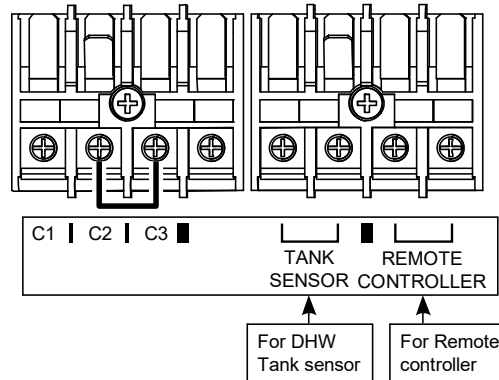


When connecting to an indoor unit, remove the short-circuit wires "C2" and "C3" and connect as shown in the diagram below.

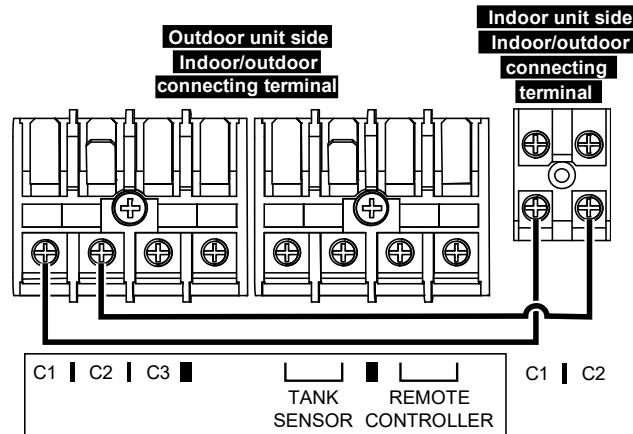



### 12.1.6.3 Wire Stripping and Connecting Requirement

Terminal size	Ø d [mm]	A [mm]
M4	4.2 or more	10.0 or less
M5	5.2 or more	12.5 or less

Wire stripping and Crimping a ring terminal onto wire

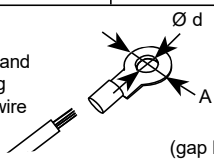

Connecting terminal

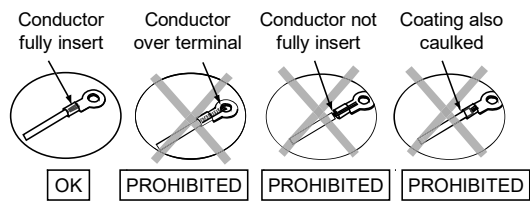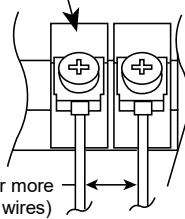

Terminal screw	Tightening torque cN•m {kgf•cm}
M4	157 ~ 196 {16 ~ 20}
M5	196 ~ 245 {20 ~ 25}

### 12.1.6.4 Connection Requirement

#### For model WH-WDG09ME8, WH-WDG12ME8, WH-WDG16ME8

- The equipment's Power Supply complies with IEC/EN 61000-3-2.
- The equipment's Power Supply complies with IEC/EN 61000-3-3 and can be connected to current supply network.

#### For model WH-WDG12ME5, WH-WDG16ME5

- The equipment's Power Supply complies with IEC/EN 61000-3-12.
- The equipment's Power Supply complies with IEC/EN 61000-3-3 and can be connected to current supply network.

### 12.1.7 Install Remote Controller

- **Remote controller is an optional item.**

Be sure to purchase it if the outdoor unit is used alone.


If you have purchased an indoor unit, it is included.

When relocating the remote controller, install in accordance with its Installation Manual.

#### 12.1.7.1 Installation Location

- When using as Room Thermostat, install at the height of 1 to 1.5 m from the floor (Location where average room temperature can be detected).
- Install vertically against the wall.
- Avoid the following locations for installation.
  1. By the window, etc. where is exposed to direct sunlight or direct air
  2. In the shadow or backside of objects deviated from the room airflow
  3. Location where condensation occurs (Remote Controller is not moisture proof or drip proof)
  4. Location near heat source
  5. Uneven surface
  6. Outdoors
- Keep distance of 1 m or more from the TV, radio and PC.  
(Cause of fuzzy image or noise)


#### 12.1.7.2 Remote Controller Wiring (If the Outdoor Unit is Used Alone)

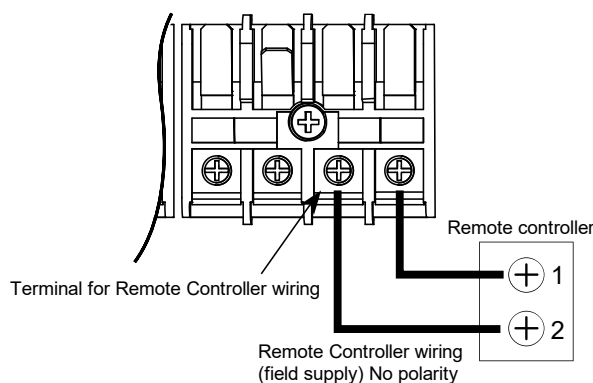


- Remote Controller cable shall be  $(2 \times \text{min } 0.3 \text{ mm}^2)$  of double insulation PVC-sheathed or rubber sheathed cable. Total cable length shall be 50 m or less.  
(UV protection should be provided for the portion exposed to the outdoors)
- Be careful not to connect cables to other terminals of Outdoor Unit (e.g. power source wiring terminal). Malfunction may occur.
- Do not bundle together with the power source wiring or store in the same metal tube. Operation error may occur.
- When using the 2nd Remote Controller (optional), connect it to the terminal by tightening it together.

### 12.1.8 Network Adaptor Installation


1. Insert a flat head screwdriver into the slot on the top of the adaptor and remove the cover. Connect the CN-CNT cable to the connector inside the adaptor.

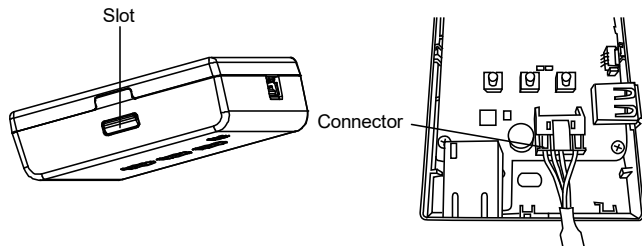

2. Pull the CN-CNT cable through the hole at the bottom of the adaptor and reattach the cover.

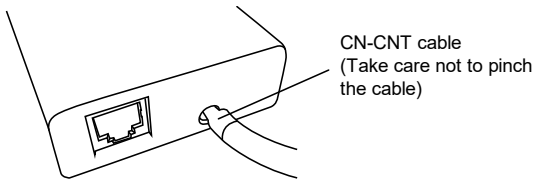

3. Connect the CN-CNT cable to the CN-CNT connector on the outdoor unit.

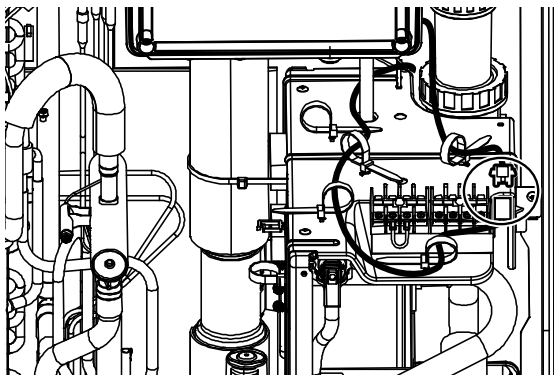


For details, refer to the instructions supplied with the network adaptor. For installation location, refer to "Installation location" in 12.1.7 Install Remote Controller.

### 12.1.9 Piping Insulation

- Carry out insulation of pipe connections according to "Space Cooling/Heating Pipework" in 12.1.5 Piping Installation. Wrap the pipes end-to-end with insulation to prevent condensation.

### 12.1.10 Charging the Water

- Make sure all the piping installations are properly done before carrying out the steps below.
1. Start filling water to the Space Heating/Cooling circuit via Zone Water inlet <sup>(a)</sup> (with pressure more than 1 bar (0.1MPa))
  2. Stop filling water if the free water flow through Drain pipe of Pressure Relief Valve <sup>(12)</sup>. (Check the Outdoor Unit)
  3. Turn ON the Outdoor Unit.
  4. Remote control menu → Installer setup → Service setup → Pump maximum speed → Turn on the pump.
  5. Make sure Water Pump <sup>(7)</sup> is running.
  6. Check and make sure no water leaking at the tube connecting points.

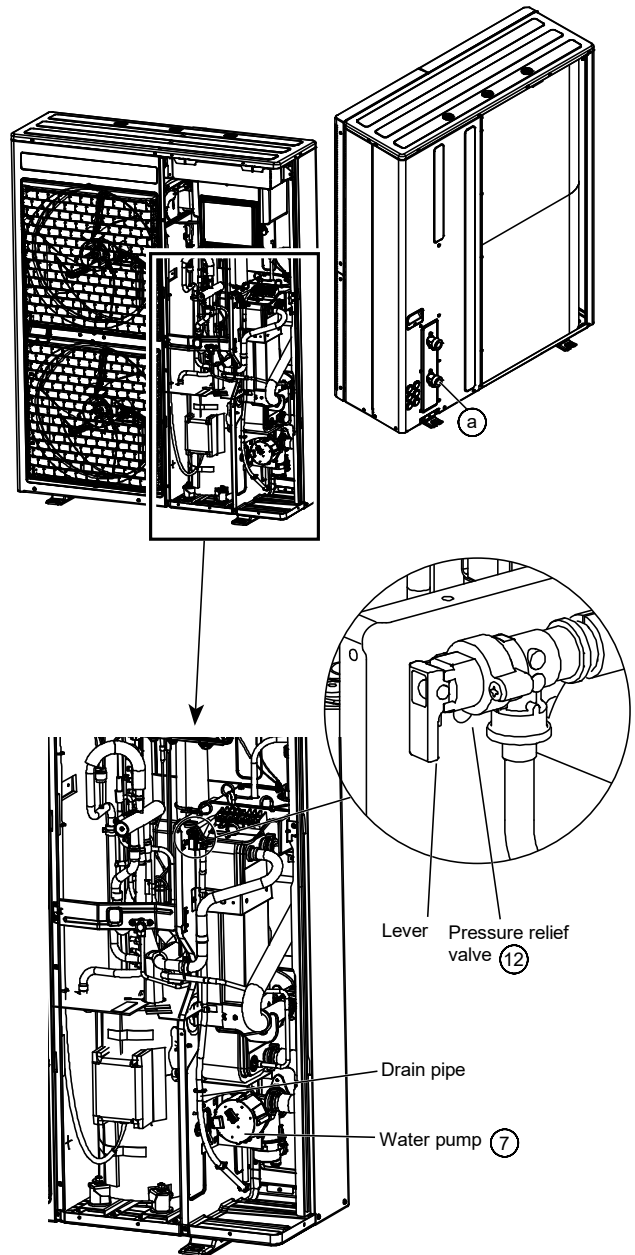


## 12.1.11 Reconfirmation

### 12.1.11.1 Check Water Pressure

\* (0.50 bar = 0.05 MPa)

Water pressure should not be lower than 0.5 bar. (Check the water pressure by the remote controller) If necessary, add water into Space Heating/Cooling pipes (through the Zone water inlet <sup>(a)</sup>).

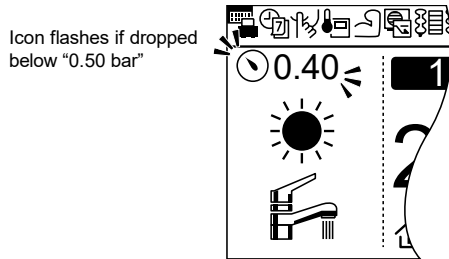

### 12.1.11.2 Check Pressure Relief Valve

1. Pull the lever in the horizontal direction and confirm that the pressure relief valve works properly.
2. Release the lever when water comes out of the drain pipe of the pressure relief valve. (While the air continues to come out of the drain pipe, keep raising the lever to completely discharge the air)
3. Confirm that the water from the drain pipe stops.
4. If water is leaking, pull the lever several times and return it to make sure the water stops.
5. If water keeps coming out of the drain, drain water. Turn off the system and contact your local authorized dealer.

### 12.1.11.3 Check Air Accumulation

- Open the air vent plugs on the heating panel, fan convactor, etc., and remove the air accumulated in the equipment and piping.
- If the outdoor unit and the indoor unit are installed on different floors, open the air vent plug on the water plug of the outdoor unit and the air vent plug on the heater bottle inside the indoor unit to remove the air.  
(Be careful, water will come out)

### 12.1.11.4 Expansion Vessel Volume and Set Pressure

- This outdoor unit does not have a built-in expansion vessel.
- Capacity of expansion vessel should be calculated using the formula below:
- Install an expansion vessel (set pressure: 1 bar) to the circulation circuit.

See formula below for capacity:

$$V = \frac{\epsilon \times V_o}{1 - \frac{98 + P_1}{98 + P_2}}$$

V : Required gas amount <expansion vessel volume: L>

Vo : System total water volume <L>

ε : Water expansion rate  $5 \times 80^\circ\text{C} = 0.0219$

P1 : Expansion vessel charging pressure  $P1 = 100 \text{ kPa}$

P2 : Maximum system pressure  $P2 = 400 \text{ kPa}$

- It is recommended to calculate the required volume of vessel with a margin of approximately 10%.
- Be sure to check the precharge pressure of the expansion vessel when installing. (Air will gradually escape even during storage.)

Water expansion rate table

Water temperature (°C)	Water expansion rate ε
10	0.0003
20	0.0019
30	0.0044
40	0.0078
50	0.0121
60	0.0171
70	0.0228
80	0.0291
90	0.0360

**[ When an indoor unit is introduced and it is installed more than 7m lower than the outdoor unit ]**

Increase the initial pressure in the expansion tank as per the calculations below.

$$P_g = (H \times 10 + 30) \text{ kPa}$$

Pg : Initial pressure of expansion tank (kPa)

H : Difference in elevation (m)

### 12.1.11.5 Check RCCB/ELCB

- Ensure the RCCB/ELCB is set to "ON" condition before checking RCCB/ELCB.
- Turn on the power supply to the outdoor unit. This testing can only be done when power is supplied to the outdoor unit.

#### WARNING

Be careful not to touch parts other than the TEST button of RCCB/ELCB when the power is supplied to Outdoor Unit. Else, electrical shock may happen. Before obtaining access to terminals, all supply circuits must be disconnected.

- Press the "TEST" button on the RCCB/ELCB. The lever would turn down if it functions normal.
- Contact authorized dealer if the RCCB/ELCB malfunction.
- If the RCCB/ELCB operates correctly, set the lever to 'ON' again after the test.

### 12.1.12 Close Front Plate

Gently close the front plate and fix with 9 screws.

Tightening torque cN•m {kgf•cm}	147 ~ 245 {15 ~ 25}
---------------------------------	---------------------

### 12.1.13 Test Run

- Before test run, make sure below items have been checked: -
  - Pipework are properly done.
  - Electric cable connecting work are properly done.
  - The Space Heating/Cooling circuit is filled up with water and trapped air is released.
- Switch ON the power supply of the Outdoor Unit. Set the Outdoor Unit RCCB/ELCB to "ON" condition. Then, please refer to the Operation Instruction for operation of Remote Controller.

Note:  
During winter, turn on the power supply and standby the unit for at least 15 minutes before test run. Allow sufficient time to warm up refrigerant and prevent wrong error code judgement.

- For normal operation, the water pressure reading should be in between 0.5 bar and 4 bar (0.05 MPa and 0.4 MPa). If necessary, adjust the speed of the water pump ⑦ accordingly to obtain normal water pressure operating range. If adjusting the speed of the water pump ⑦ does not solve the problem, contact a local authorized dealer.
- After test run, please clean the magnetic water filter ⑧. Reinstall it after the cleaning is finished. (Refer to 12.1.14 Maintenance)

#### 12.1.13.1 Check Water Flow of Water Circuit

Select Installer setup → Service setup → Pump maximum speed → Air purge.  
Confirm the rated flow rate has been reached. If don't reach, change max duty or install the extra pump.

\* Water flow can be check in Service setup (Pump maximum speed)

[Heating operation at low water temperature with lower water flow may trigger "H75" during defrost process.]

\* If there is no flow or H62 is displayed, stop operating the pump and release the air. (See "CHECK AIR ACCUMULATION" in 12.1.11 Reconfirmation)

\* If air purging during initial commissioning is insufficient, lead to pump dry running.

\* It is highly recommended to use this function before actual A2W startup & commissioning.

### 12.1.14 Maintenance


- In order to ensure safety and optimal performance of the Outdoor Unit, seasonal inspections, functional check of RCCB/ELCB, field wiring and piping have to be carried out at regular intervals. This maintenance and scheduled inspection should be carried out by authorized dealer.

#### 12.1.14.1 Maintenance for Magnetic Water Filter ⑧

The Magnetic Water Filter installed in the unit depends on the model. After confirming which filter is installed, please implement one of the instructions below.


Case A: The Magnetic Water Filter is like the figures shown below.

- Turn OFF the power supply.
  - Place a container below the Magnetic Water Filter.
  - Dismount magnet holder at side of Magnetic Water Filter.
  - Remove the Cap of Discharge Port with hexagonal wrench (6mm).
  - Open the Service Valve with hexagonal wrench (6mm) to release the dirty water from the Discharge Port into the container. Open the Service Valve gradually; otherwise, water from the water circuit may gush out forcefully.
  - Close the Service Valve when the container is full to avoid spillage in the outdoor unit.
  - Remove the container and dispose the dirty water.
  - Reinstall the Cap of Discharge Port and Magnet holder.
- The tightening torque of the cap should be 1.0 to 1.5 N•m. Before the outdoor unit runs, the magnet holder must be in the mounted state shown below.
- Re-charge the water to Space Heating / Cooling circuit if necessary. (For details, refer to 12.1.10 Charging the Water)
  - Turn ON the power supply.

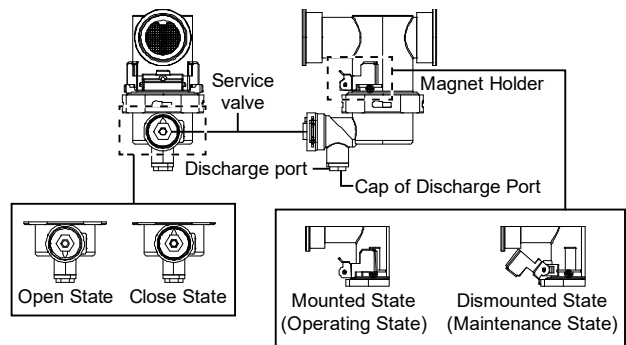

Case B: The Magnetic Water Filter is like the figures shown below.

1. Turn OFF the power supply.
2. Place a container below the Magnetic Water Filter.
3. Turn to remove the Magnet Bar at the bottom of Magnetic Water Filter.
4. Remove the Cap of Discharge Port with hexagonal wrench (6mm).
5. Open the Service Valve with hexagonal wrench (4mm) to release the dirty water from the Discharge Port into the container.
6. Close the service valve when the container is full to avoid spillage in the outdoor unit.
7. Remove the container and dispose the dirty water.
8. Reinstall the Cap of Discharge Port and Magnet Bar.  
The tightening torque of the cap should be 2.0 N•m.
9. Re-charge the water to Space Heating / Cooling circuit if necessary. (For details, refer to 12.1.10 Charging the Water)
10. Turn ON the power supply.

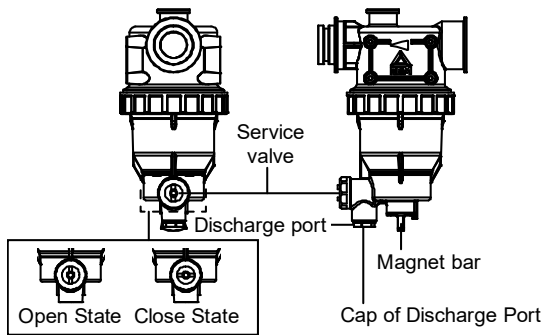

### 12.1.14.2 Maintenance for Expansion Vessel

- Regular maintenance of the expansion vessel (at least once a year) is recommended and should be performed by an authorized dealer. First, make sure that the expansion or pressure tank is completely drained of water, that the system is switched off, and that there are no live electrical components. If you need to reset the preload pressure, set it to 1 bar.  
(If the static pressure in the expansion vessel falls below 0.5 bar, cavitation may occur and the pump may lock.)

**CAUTION**

Do not clean the outdoor unit with hydrocarbon solvents when Outdoor Unit needs to be cleaned during installation or servicing.

## 12.2 Appendix

### 12.2.1 Variation of System



This section introduces variation of various systems using Air-To-Water Heatpump and actual setting method.

(NOTE) : This model does not have a built-in expansion vessel to prevent the pressure in the water circuit from rising in the event of temperature rise. Be sure to purchase in the market and install it.

#### 12.2.1.1 Introduce Applications Related to Temperature Setting



##### 12.2.1.1.1 Temperature Setting Variation for Heating

###### 1. Remote controller

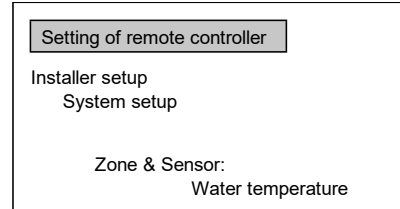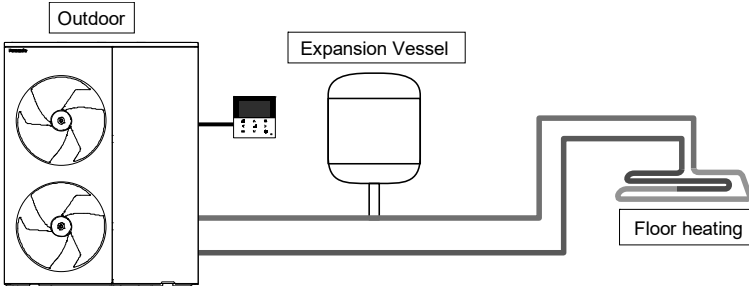

Connect floor heating or radiator directly to the Outdoor Unit.  
Install remote controller on the wall of the room.  
This is the basic form of the simplest system.



###### 2. Room Thermostat

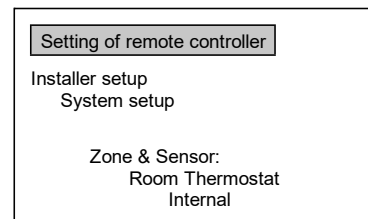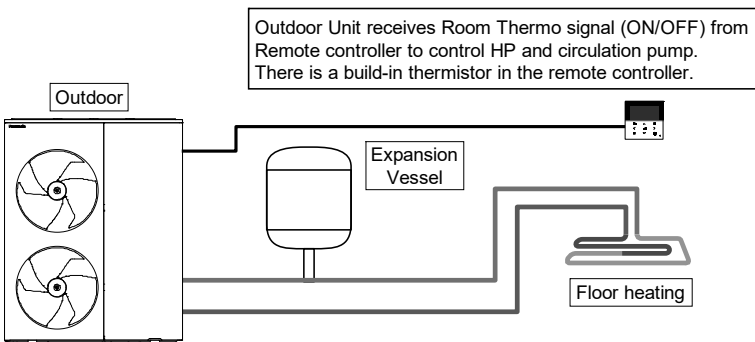


Connect floor heating or radiator directly to the Outdoor Unit.  
Install the remote controller in the room where floor heating is installed.  
This is an application that uses remote controller as Room Thermostat.

##### 12.2.1.1.2 Examples of Installations

###### 1. DHW (Domestic Hot Water) Tank connection

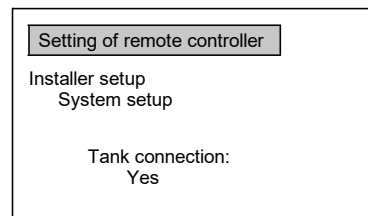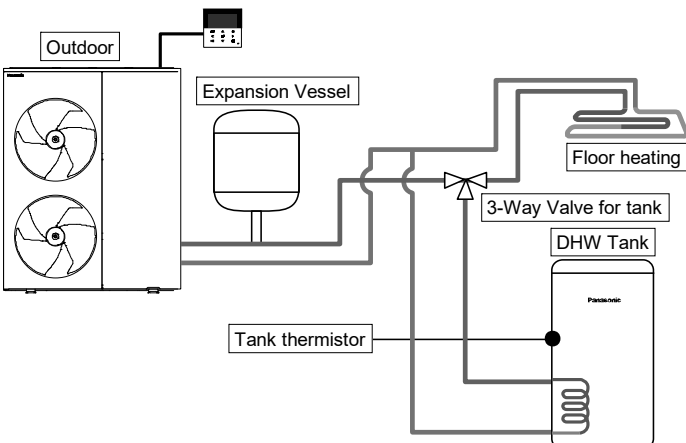

## 2. Boiler connection

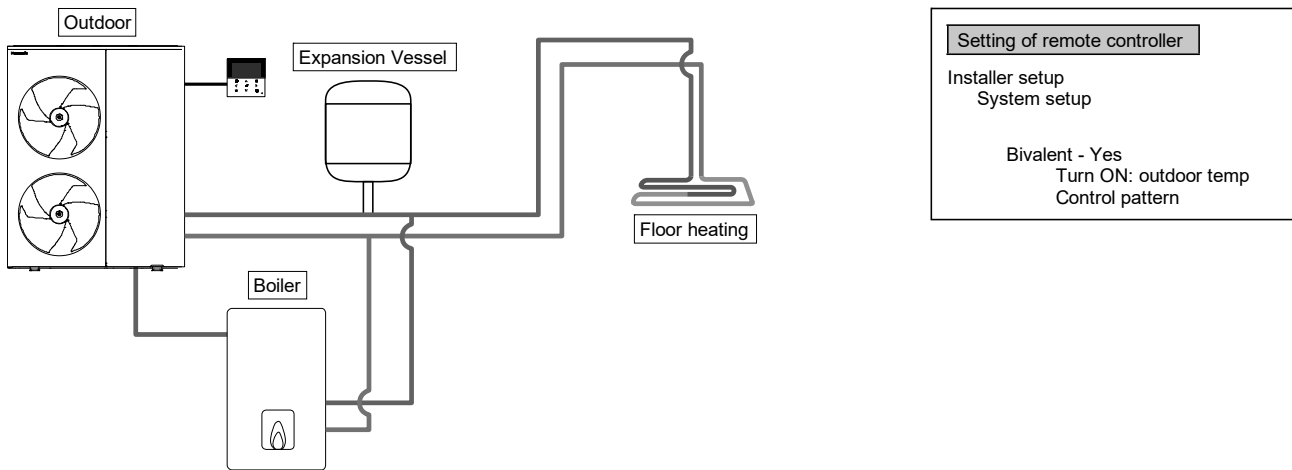

This is an application that connects the boiler to the Outdoor Unit, to compensate for insufficient capacity by operate boiler when outdoor temperature drops & heat pump capacity is insufficient.

Boiler is connected parallel with heat pump and used as heating circuit.

Besides that, an application that connects to the DHW tank's circuit to heat up tank 's hot water is also possible.

Boiler output can be control by either SG ready input from Control Module unit or Auto control by 3 modes selection pattern.

(Operation setting of boiler shall be responsible by installer.)

Depending on the settings of the boiler, it is recommended to install buffer tank as temperature of circulating water may get higher. (It must connect to buffer tank especially when select Advanced Parallel setting) However, buffer tank connection requires Control Module unit.

Note: Buffer tank thermistor must be connected to Control Module unit PCB.

### **⚠ WARNING**

Panasonic is NOT responsible for incorrect or unsafe situation of the boiler system.

### **⚠ CAUTION**

Make sure the boiler and its integration in the system complies with applicable legislation.  
 Make sure the return water temperature from the heating circuit to the Outdoor Unit does NOT exceed 70°C.  
 Boiler is turned off by safety control when the water temperature of the heating circuit exceed 85°C.

If you wish to use optional features other than connecting DHW tank or boiler, purchase an optional indoor unit or Control Module unit.


Functions that become available by purchasing an indoor unit, etc. include:

- Buffer tank connection
  - 2-zone control
  - Solar connection
  - SG Ready
  - Demand control
  - and others
- } Optional PCB is required

## 12.2.2 System Installation


### 12.2.2.1 Remote Controller Outline

The LCD display as shown in this manual are for instructional purpose only, and may differ from the actual unit.

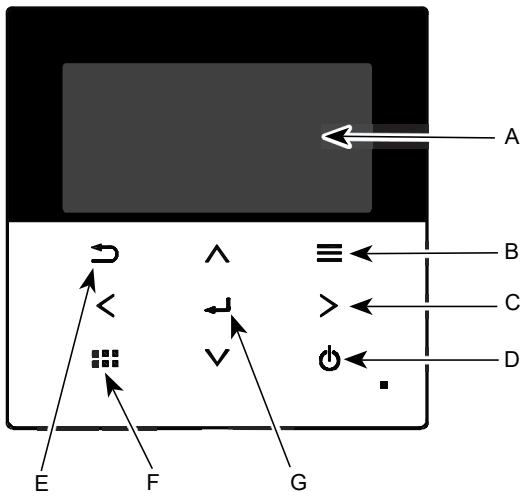

- A: Main screen ———— Display information
- B: Menu ———— Open/Close main menu
- C: Triangle (Move) ———— Select or change item
- D: Operate ———— Start/Stop operation
- E: Back ———— Back to previous item
- F: Quick Menu ———— Open/Close Quick menu
- G: Enter ———— Confirm

LCD Display (Actual - Dark background with white icons)

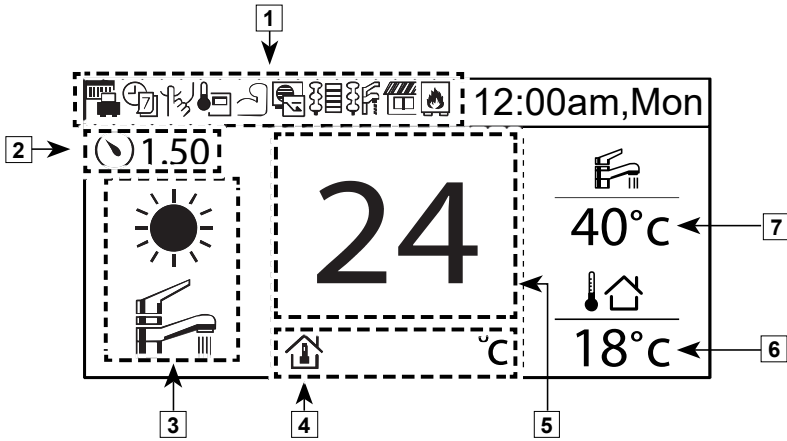

- 1 Function icon ———— Displays the set functions/status.

- |                                   |                |
|-----------------------------------|----------------|
| Holiday mode                      | Demand control |
| Weekly timer                      | Room heater    |
| Quiet mode                        | Tank heater    |
| Remote controller room thermostat | Solar          |
| Powerful mode                     | Boiler         |

- 2 Water pressure ———— (1.50) Displays water pressure in bar (blinks when less than 0.5)

- 3 Mode ———— Display set mode / current status of mode.

- |                     |                  |              |              |
|---------------------|------------------|--------------|--------------|
| Heating             | Cooling          |              |              |
| Auto                | Hot water supply | Auto heating | Auto cooling |
| Heat pump operating |                  |              |              |

- 4 Temp setting ———— Set room temp Compensation curve Set direct water temp Set pool temp

- 5 Display Heat temp ———— Displays current heating temperature (it is set temperature when enclosed by line)

- 6 Outdoor temp ———— Displays outdoor temperature

- 7 Display tank temp ———— Displays current tank temperature (it is set temperature when enclosed by line)

## First time of power ON (Start of installation)

Initialization	12:00 pm, Mon
Initializing	

When the power is ON, firstly the initialization screen appears (approx. 10 sec)



	12:00 pm, Mon
[⏻] Start	

When the initialization screen ends, it turns to normal screen.



Language	12:00 pm, Mon
ENGLISH	
FRANÇAIS	
DEUTSCH	
ITALIANO	
▼ Select	[↵] Confirm

When any button is pressed, language setting screen appears.  
(NOTE) If initial setting is not performed, it does not go into menu.

When there are two remote controllers installed from the beginning, the first remote controller which set language will be recognised as the main remote controller.



Set language & confirm

Clock format	12:00 pm, Mon
24h	
▼	
am/pm	
▼ Select	[↵] Confirm

When language is set, setting screen of time display appears (24h/am/pm)



Set time display & confirm

Date & time	12:00 pm, Mon
Year/Month/Day	Hour : Min
▲	
2024 / 01 / 01	12 : 00 pm
▼	
↔ Select	[↵] Confirm

YYYY/MM/DD/Time setup screen appears



Set YYYY/MM/DD/Time & confirm

Front grille	12:00 pm, Mon
Is O/D front grille fixed?	
No	
Yes	
▼ Select	[↵] Confirm

If set to No & confirm, a caution message will be displayed to ensure outdoor front grille is installed before proceeding to operate the unit.



<b>Caution</b>
To prevent injury, fix front grille before ope.
[↵] Close

(Note) Regarding the models described in this manual, the front grilles have already been fixed at the factory. Therefore, set to "Yes" and proceed to the next setting if the front grilles are not being removed during installation.



Set Yes & confirm if outdoor front grille has been installed

	12:00 pm, Mon
[⏻] Start	

Back to initial screen




Press Menu and select Installer setup

Main Menu	12:00 pm, Mon
System check	
Personal setup	
Service contact	
Installer setup	
▲ Select	[↵] Confirm


↓ Confirm to go into Installer setup

## 12.2.3 Setup

### 12.2.3.1 Installer Setup

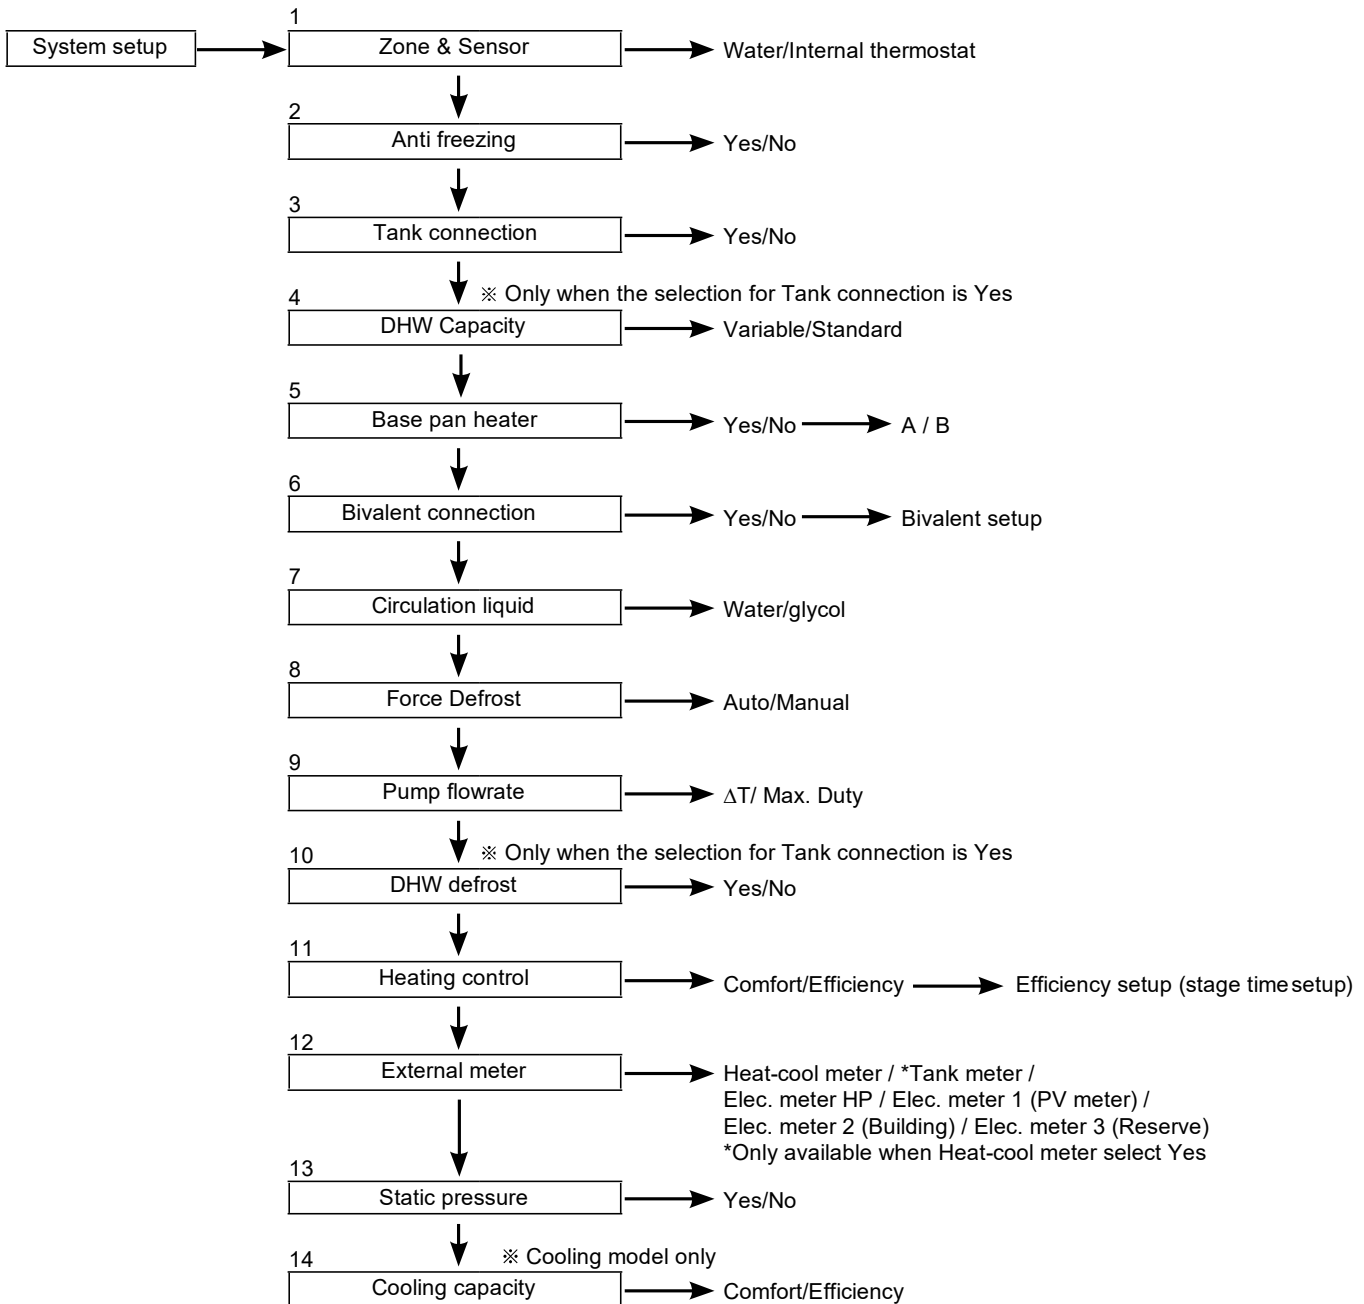

※ The above description is for outdoor unit alone case.  
For indoor units, please refer to the installation manual supplied with the indoor unit.

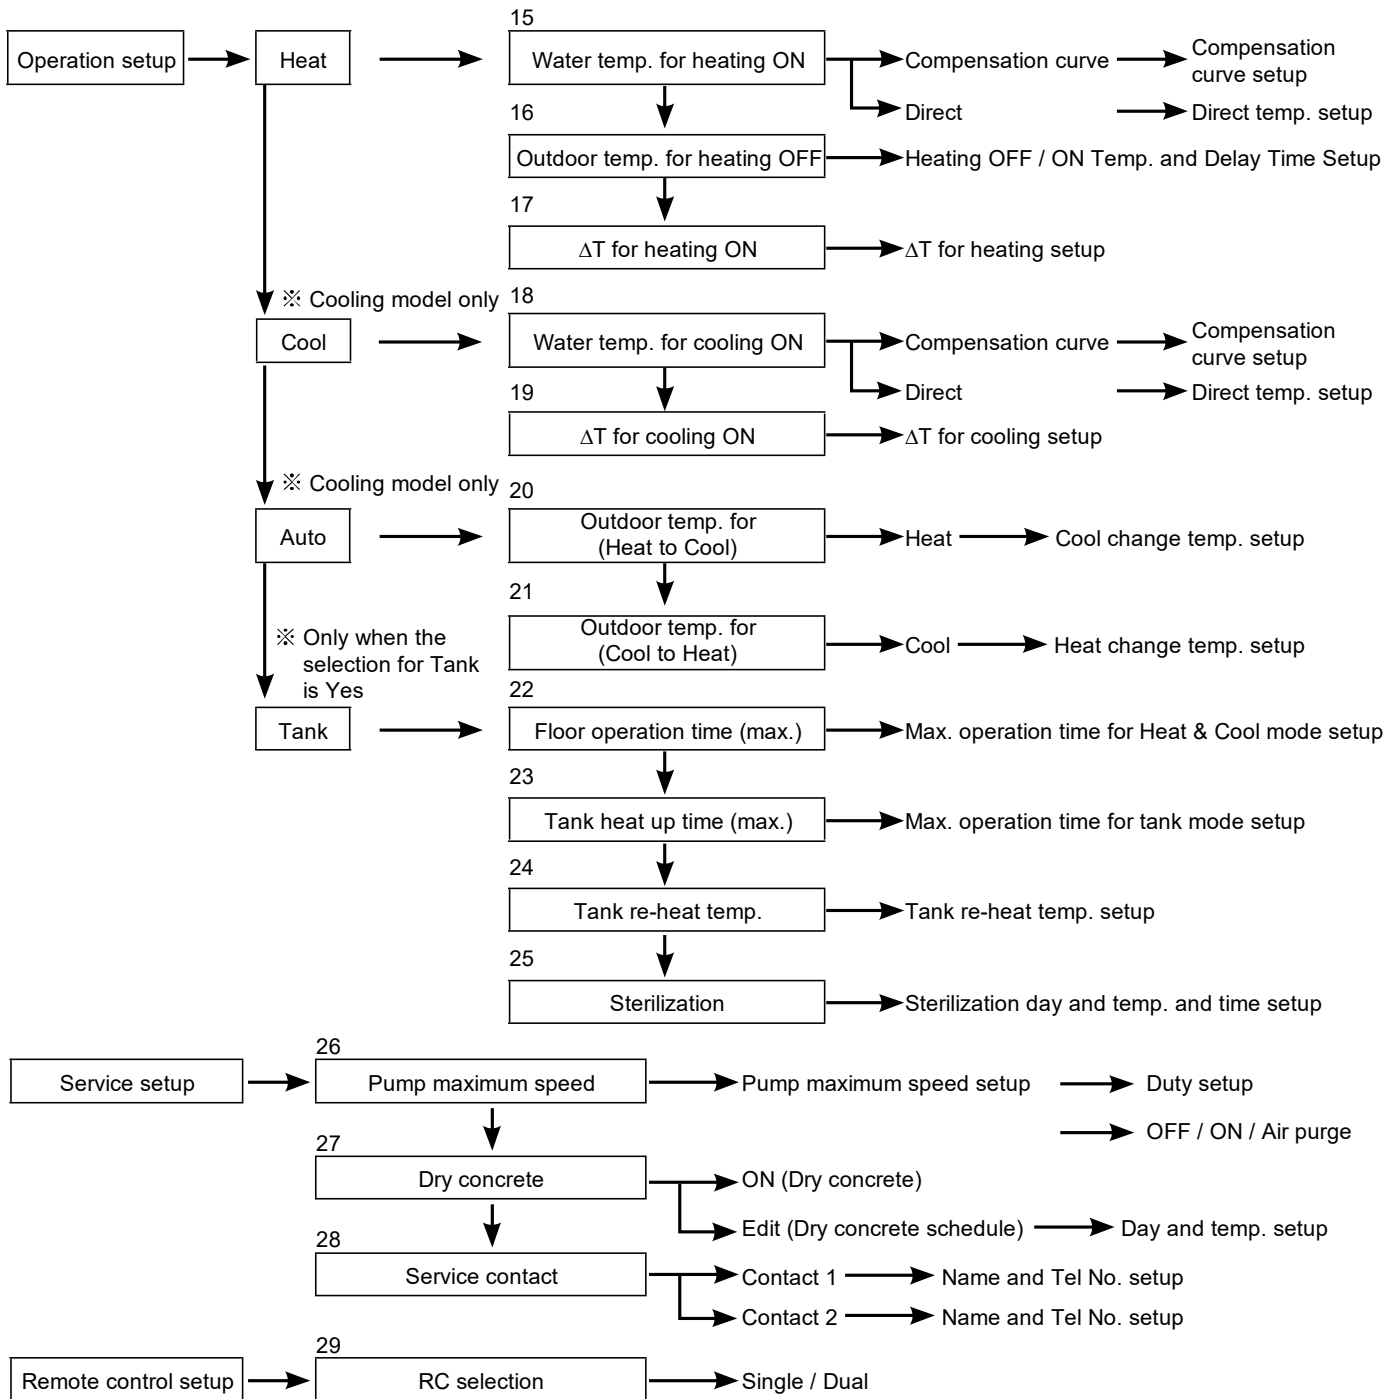

※ The above description is for outdoor unit alone case.  
 For indoor units, please refer to the installation manual supplied with the indoor unit.

## 12.2.3.2 System Setup

<div style="border: 1px solid black; display: inline-block; padding: 2px 5px;"><b>1. Zone &amp; Sensor</b></div>	<div style="border: 1px solid black; display: inline-block; padding: 2px 5px;">Initial setting: Water temp.</div>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: right;">System setup</td> <td style="text-align: right;">12:00am, Mon</td> </tr> <tr> <td colspan="2" style="background-color: #f0f0f0;">Zone &amp; Sensor</td> </tr> <tr> <td colspan="2">Anti freezing</td> </tr> <tr> <td colspan="2">Tank connection</td> </tr> <tr> <td colspan="2">DHW capacity</td> </tr> <tr> <td style="text-align: right;">▼ Select</td> <td style="text-align: right;">[↔] Confirm</td> </tr> </table>	System setup	12:00am, Mon	Zone & Sensor		Anti freezing		Tank connection		DHW capacity		▼ Select	[↔] Confirm
System setup	12:00am, Mon													
Zone & Sensor														
Anti freezing														
Tank connection														
DHW capacity														
▼ Select	[↔] Confirm													

Select sensor of room temperature control from the following 2 items:

- ① Water temperature (circulation water temperature)
- ② Room thermostat (Internal)

<div style="border: 1px solid black; display: inline-block; padding: 2px 5px;"><b>2. Anti freezing</b></div>	<div style="border: 1px solid black; display: inline-block; padding: 2px 5px;">Initial setting: Yes</div>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: right;">System setup</td> <td style="text-align: right;">12:00am, Mon</td> </tr> <tr> <td colspan="2" style="background-color: #f0f0f0;">Zone &amp; Sensor</td> </tr> <tr> <td colspan="2" style="background-color: #f0f0f0;">Anti freezing</td> </tr> <tr> <td colspan="2">Tank connection</td> </tr> <tr> <td colspan="2">DHW capacity</td> </tr> <tr> <td style="text-align: right;">⬆ Select</td> <td style="text-align: right;">[↔] Confirm</td> </tr> </table> <p>Operate anti-freezing of water circulation circuit. If select "Yes", when the water temperature is reaching its freezing temperature, the circulation pump will start up. If the water temperature does not reach the pump stop temperature, heat pump will be activated.</p> <p>(NOTE) If set to "No", when the water temperature is reaching its freezing temperature or below 0°C, the water circulation circuit may freeze and cause malfunction.</p>	System setup	12:00am, Mon	Zone & Sensor		Anti freezing		Tank connection		DHW capacity		⬆ Select	[↔] Confirm
System setup	12:00am, Mon													
Zone & Sensor														
Anti freezing														
Tank connection														
DHW capacity														
⬆ Select	[↔] Confirm													

<div style="border: 1px solid black; display: inline-block; padding: 2px 5px;"><b>3. Tank connection</b></div>	<div style="border: 1px solid black; display: inline-block; padding: 2px 5px;">Initial setting: No</div>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: right;">System setup</td> <td style="text-align: right;">12:00am, Mon</td> </tr> <tr> <td colspan="2" style="background-color: #f0f0f0;">Zone &amp; Sensor</td> </tr> <tr> <td colspan="2" style="background-color: #f0f0f0;">Anti freezing</td> </tr> <tr> <td colspan="2" style="background-color: #f0f0f0;">Tank connection</td> </tr> <tr> <td colspan="2">DHW capacity</td> </tr> <tr> <td style="text-align: right;">⬆ Select</td> <td style="text-align: right;">[↔] Confirm</td> </tr> </table> <p>Select whether a hot water storage tank is connected or not. If set to "Yes", the water heating function is set to be used. The tank water temperature can be set from the main screen.</p>	System setup	12:00am, Mon	Zone & Sensor		Anti freezing		Tank connection		DHW capacity		⬆ Select	[↔] Confirm
System setup	12:00am, Mon													
Zone & Sensor														
Anti freezing														
Tank connection														
DHW capacity														
⬆ Select	[↔] Confirm													

<div style="border: 1px solid black; display: inline-block; padding: 2px 5px;"><b>4. DHW capacity</b></div>	<div style="border: 1px solid black; display: inline-block; padding: 2px 5px;">Initial setting: Variable</div>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: right;">System setup</td> <td style="text-align: right;">12:00am, Mon</td> </tr> <tr> <td colspan="2" style="background-color: #f0f0f0;">Zone &amp; Sensor</td> </tr> <tr> <td colspan="2" style="background-color: #f0f0f0;">Anti freezing</td> </tr> <tr> <td colspan="2" style="background-color: #f0f0f0;">Tank connection</td> </tr> <tr> <td colspan="2" style="background-color: #f0f0f0;">DHW capacity</td> </tr> <tr> <td style="text-align: right;">⬆ Select</td> <td style="text-align: right;">[↔] Confirm</td> </tr> </table> <p>Variable DHW capacity setting normally runs with efficient boiling which is energy saving heating. But while hot water usage is high and tank water temperature is low, variable DHW mode will run with fast heat up which heat up the tank with high heating capacity. If standard DHW capacity setting is selected, heat pump runs with heating rated capacity at tank heat up operation.</p> <p>※ Only when "Yes" is selected for tank connection</p>	System setup	12:00am, Mon	Zone & Sensor		Anti freezing		Tank connection		DHW capacity		⬆ Select	[↔] Confirm
System setup	12:00am, Mon													
Zone & Sensor														
Anti freezing														
Tank connection														
DHW capacity														
⬆ Select	[↔] Confirm													

<div style="border: 1px solid black; display: inline-block; padding: 2px 5px;"><b>5. Base pan heater</b></div>	<div style="border: 1px solid black; display: inline-block; padding: 2px 5px;">Initial setting: No</div>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: right;">System setup</td> <td style="text-align: right;">12:00am, Mon</td> </tr> <tr> <td colspan="2" style="background-color: #f0f0f0;">Anti freezing</td> </tr> <tr> <td colspan="2" style="background-color: #f0f0f0;">Tank connection</td> </tr> <tr> <td colspan="2" style="background-color: #f0f0f0;">DHW capacity</td> </tr> <tr> <td colspan="2" style="background-color: #f0f0f0;">Base pan heater</td> </tr> <tr> <td style="text-align: right;">⬆ Select</td> <td style="text-align: right;">[↔] Confirm</td> </tr> </table> <p>Select whether Base pan heater is installed or not. If set to "Yes", select to use either heater A or B.</p> <p>A: Turn on Heater when heating with defrost operation only B: Turn on Heater during heating operation when outside temperature is below 5 °C.</p>	System setup	12:00am, Mon	Anti freezing		Tank connection		DHW capacity		Base pan heater		⬆ Select	[↔] Confirm
System setup	12:00am, Mon													
Anti freezing														
Tank connection														
DHW capacity														
Base pan heater														
⬆ Select	[↔] Confirm													

※ The above description is for outdoor unit alone case.  
For indoor units, please refer to the installation manual supplied with the indoor unit.

**6. Bivalent connection**

Initial setting: No

System setup	12:00am, Mon
Tank connection	
DHW capacity	
Base pan heater	
<b>Bivalent connection</b>	
◀ Select	[↵] Confirm

Set if heat pump is linked with boiler operation.  
 Connect the start signal of the boiler to the boiler contact terminal (main PCB).  
 Set Bivalent connection to "Yes".  
 Then, begin setting according to remote controller instruction.  
 Boiler icon will be displayed on remote controller top screen.

• Auto

There are 3 different modes in the boiler auto pattern operation. Movement of each mode is as shown below:

 
- ① Alternative (switch to boiler operation when drops below setting temperature)
- ② Parallel (allow boiler operation when drops below setting temperature)
- ③ Advanced Parallel (able to slightly delay boiler operation time of parallel operation)

When the boiler operation is "ON", "boiler contact" is "ON", " \_ "(underscore) will be displayed below the boiler icon.


Please set target temperature of boiler to be the same as heat pump temperature.

When boiler temperature is higher than heat pump temperature, zone temperature cannot be achieved if mixing valve is not installed.  
 This product only allows one signal to control the boiler operation. Operation setting of boiler shall be responsible by installer.

**Alternative mode**




**Parallel mode**

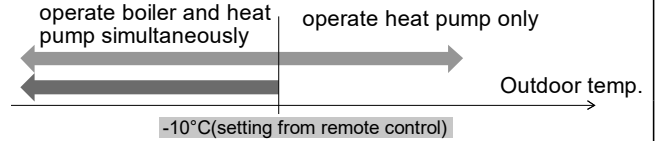


**Advanced Parallel mode**


**For heating**

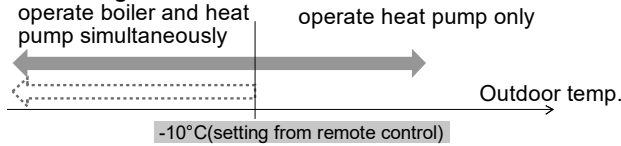


**For DHW tank**

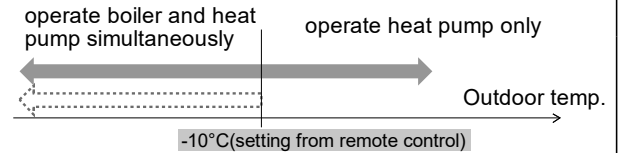

Heat pump operates but water temperature does not reach this temperature for more than 30 minutes (setting from remote control) AND

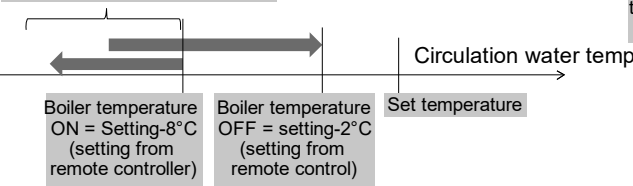

AND

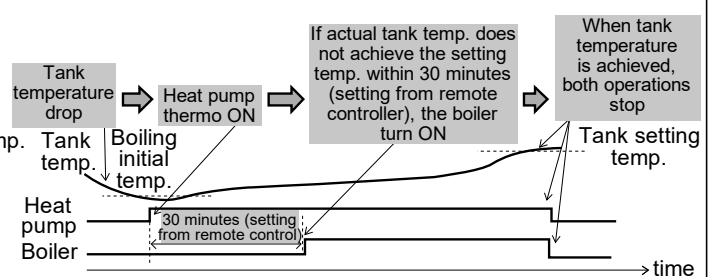

In Advanced Parallel mode, setting for both Heat and Tank can be made simultaneously. During operation of "Heat/Tank" mode, when each time the mode is switched, the boiler output will be reset to OFF. Please have good understanding on the boiler control characteristic in order to select the optimal setting for the system.

• Smart


There are Energy price (both electricity and boiler) and Schedule to be set on remote controller.

Operation setting of Energy price and Schedule shall be responsible by installer.

Based on these settings, system will calculate the final price for both electricity and boiler.

When final price of Electricity is lower than Boiler's, heat pump will operate.

When final price of Electricity is higher than Boiler's, boiler will operate.

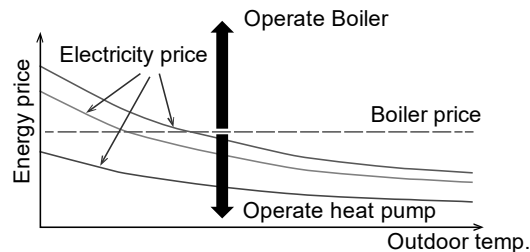

※ The above description is for outdoor unit alone case.

For indoor units, please refer to the installation manual supplied with the indoor unit.

<b>7. Circulation Liquid</b>	Initial setting: Water	<div style="border: 1px solid black; padding: 2px;">System setup <span style="float: right;">12:00am, Mon</span></div> <div style="border: 1px solid black; padding: 2px;">DHW capacity</div> <div style="border: 1px solid black; padding: 2px;">Base pan heater</div> <div style="border: 1px solid black; padding: 2px;">Bivalent connection</div> <div style="background-color: #333; color: white; padding: 2px;">Circulation Liquid</div> <div style="border: 1px solid black; padding: 2px;"> <span style="float: left;">⬆ Select</span> <span style="float: right;">[↵] Confirm</span> </div>
------------------------------	------------------------	---

Set circulation of heating water.

There are 2 types of settings: water and glycol.

(NOTE) Please set glycol when using anti-freeze liquid.  
It may cause error if setting is wrong.

<b>8. Force Defrost</b>	Initial setting: Manual	<div style="border: 1px solid black; padding: 2px;">System setup <span style="float: right;">12:00am, Mon</span></div> <div style="border: 1px solid black; padding: 2px;">Base pan heater</div> <div style="border: 1px solid black; padding: 2px;">Bivalent connection</div> <div style="border: 1px solid black; padding: 2px;">Circulation Liquid</div> <div style="background-color: #333; color: white; padding: 2px;">Force Defrost</div> <div style="border: 1px solid black; padding: 2px;"> <span style="float: left;">⬆ Select</span> <span style="float: right;">[↵] Confirm</span> </div>
-------------------------	-------------------------	--

Under manual mode, user can turn on force defrost through quick menu.

If 'Auto' is selected, the outdoor unit will run defrost operation once if heat pump have long hour of heating without any defrost operation at low ambient condition. (Even when Auto is selected, user still can turn on force defrost through quick menu)

<b>9. Pump flowrate</b>	Initial setting: ΔT	<div style="border: 1px solid black; padding: 2px;">System setup <span style="float: right;">12:00am, Mon</span></div> <div style="border: 1px solid black; padding: 2px;">Bivalent connection</div> <div style="border: 1px solid black; padding: 2px;">Circulation Liquid</div> <div style="border: 1px solid black; padding: 2px;">Force Defrost</div> <div style="background-color: #333; color: white; padding: 2px;">Pump flowrate</div> <div style="border: 1px solid black; padding: 2px;"> <span style="float: left;">⬆ Select</span> <span style="float: right;">[↵] Confirm</span> </div>
-------------------------	---------------------	--

If pump flowrate setting is ΔT, the unit adjusts pump duty to use different water inlet and outlet based on the setting of ΔT for heating ON and ΔT for cooling ON in operation setup menu during indoor operation.

If pump flowrate setting is set to Max. duty, the unit will set the pump duty at Pump maximum speed in the service setup menu during room side operation.

\*1

<b>10. DHW Defrost</b>	Initial setting: Yes	<div style="border: 1px solid black; padding: 2px;">System setup <span style="float: right;">12:00am, Mon</span></div> <div style="border: 1px solid black; padding: 2px;">Circulation Liquid</div> <div style="border: 1px solid black; padding: 2px;">Force Defrost</div> <div style="border: 1px solid black; padding: 2px;">Pump flowrate</div> <div style="background-color: #333; color: white; padding: 2px;">DHW Defrost</div> <div style="border: 1px solid black; padding: 2px;"> <span style="float: left;">⬆ Select</span> <span style="float: right;">[↵] Confirm</span> </div>
------------------------	----------------------	--

When DHW defrost set to "YES", hot water of domestic hot water tank will be used during defrost cycle.  
When DHW defrost set to "NO", hot water of floor heating circuit will be used during defrost cycle.

<b>11. Heating control</b>	Initial setting: Comfort	<div style="border: 1px solid black; padding: 2px;">System setup <span style="float: right;">12:00am, Mon</span></div> <div style="border: 1px solid black; padding: 2px;">Force Defrost</div> <div style="border: 1px solid black; padding: 2px;">Pump flowrate</div> <div style="border: 1px solid black; padding: 2px;">DHW Defrost</div> <div style="background-color: #333; color: white; padding: 2px;">Heating control</div> <div style="border: 1px solid black; padding: 2px;"> <span style="float: left;">⬆ Select</span> <span style="float: right;">[↵] Confirm</span> </div>
----------------------------	--------------------------	---

Compressor frequency control can be selected from two modes: Comfort and Efficiency.

Select "Comfort"

- The compressor operates at maximum frequency at the upper zone limit and reaches the set temperature faster.

Select "Efficiency"

- The compressor frequency is gradually increased to reduce power consumption. The system has 3 steps to achieve maximum compressor frequency. You can set the duration of each stage on the remote control (R/C).

(compressor frequency for each stage)

- 1st stage : 50% of the maximum frequency
- 2nd stage : 66% of the maximum frequency
- 3rd stage : 83% of the maximum frequency

Select Efficiency.

\*1 Only when the selection for Tank connection is Yes

※ The above description is for outdoor unit alone case.

For indoor units, please refer to the installation manual supplied with the indoor unit.

<b>12. External meter</b>	Initial setting: [ Heat-cool meter : No ] [ Tank meter : No ] *only available when Heat-cool meter select Yes [ Elec. meter HP : No ] [ Elec. meter 1 (PV meter) : No ] [ Elec. meter 2 (Building) : No ] [ Elec. meter 3 (Reserve) : No ]	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">System setup</td> <td style="text-align: right; padding: 2px;">12:00am, Mon</td> </tr> <tr> <td style="padding: 2px;">Pump flowrate</td> <td></td> </tr> <tr> <td style="padding: 2px;">DHW Defrost</td> <td></td> </tr> <tr> <td style="padding: 2px;">Heating control</td> <td></td> </tr> <tr style="background-color: #f0f0f0;"> <td style="padding: 2px;">External meter</td> <td></td> </tr> <tr> <td style="padding: 2px;">⬆ Select</td> <td style="text-align: right; padding: 2px;">[↵] Confirm</td> </tr> </table>	System setup	12:00am, Mon	Pump flowrate		DHW Defrost		Heating control		External meter		⬆ Select	[↵] Confirm
System setup	12:00am, Mon													
Pump flowrate														
DHW Defrost														
Heating control														
External meter														
⬆ Select	[↵] Confirm													

There are two systems for generation meter connection: single generation meter system (Heat-cool meter) or two generation meter system (Heat-cool meter and Tank meter)

Both systems can provide all generation data of heating, cooling and DHW directly from external meter.

If Heat-cool meter is set to "Yes", it will read from external meter for heat pump's energy generation data during heating, cooling and DHW operation<sup>\*1</sup>.

If Heat-cool meter is set to "No", it will base on unit's calculation for heat pump's energy generation data during heating, cooling and DHW operation.

If Heat-cool meter is set to "Yes", it will read from external meter for heat pump's energy generation data during heating, cooling and DHW operation<sup>\*1</sup>.

If Elec. meter HP is set to "Yes", it will read from external meter for heat pump's energy consumption data.

If Elec. meter HP is set to "No", it will base on unit's calculation for heat pump's energy consumption data.

If Elec. meter 1 (PV meter) is set to "Yes", it will read from external meter for energy generation data of solar system and display it on Cloud system.

If Elec. meter 2 (Building) is set to "Yes", it will read from external meter for energy consumption data of the building and display it on Cloud system.

If Elec. meter 3 (Reserve) is set to "Yes", it will read from external meter for energy consumption data obtained from reserved electricity meter and display it on Cloud system.

<sup>\*1</sup> Set Heat-cool meter to Yes and set Tank meter to No when the 1 generation meter system is installed.  
Set Heat-cool meter to Yes and set Tank meter to Yes when the 2 generation meter system is installed.

Remarks: Elec. meter HP refers to the electricity meter that measures Heat Pump unit's consumption.  
Elec. meter 1 / 2 / 3 refers to the Electricity meter No. 1 / No. 2 / No. 3.

<b>13. Static pressure</b>	Initial setting: No	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">System setup</td> <td style="text-align: right; padding: 2px;">12:00am, Mon</td> </tr> <tr> <td style="padding: 2px;">DHW Defrost</td> <td></td> </tr> <tr> <td style="padding: 2px;">Heating control</td> <td></td> </tr> <tr> <td style="padding: 2px;">External meter</td> <td></td> </tr> <tr style="background-color: #f0f0f0;"> <td style="padding: 2px;">Static pressure</td> <td></td> </tr> <tr> <td style="padding: 2px;">⬆ Select</td> <td style="text-align: right; padding: 2px;">[↵] Confirm</td> </tr> </table>	System setup	12:00am, Mon	DHW Defrost		Heating control		External meter		Static pressure		⬆ Select	[↵] Confirm
System setup	12:00am, Mon													
DHW Defrost														
Heating control														
External meter														
Static pressure														
⬆ Select	[↵] Confirm													

If set to "No", the outdoor fan motor operates at a normal speed.

If set to "YES", the outdoor fan motor operates at a higher speed in response to high static pressure.

<b>14. Cooling Capacity</b>	Initial setting: Efficiency	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 2px;">System setup</td> <td style="text-align: right; padding: 2px;">12:00am, Mon</td> </tr> <tr> <td style="padding: 2px;">Heating control</td> <td></td> </tr> <tr> <td style="padding: 2px;">External meter</td> <td></td> </tr> <tr> <td style="padding: 2px;">Static pressure</td> <td></td> </tr> <tr style="background-color: #f0f0f0;"> <td style="padding: 2px;">Cooling capacity</td> <td></td> </tr> <tr> <td style="padding: 2px;">⬆ Select</td> <td style="text-align: right; padding: 2px;">[↵] Confirm</td> </tr> </table>	System setup	12:00am, Mon	Heating control		External meter		Static pressure		Cooling capacity		⬆ Select	[↵] Confirm
System setup	12:00am, Mon													
Heating control														
External meter														
Static pressure														
Cooling capacity														
⬆ Select	[↵] Confirm													

Select the cooling capacity.

If set to "Efficiency", the unit performs cooling operation efficiently at rated capacity.

If set to "Comfort", the cooling operation is performed at maximum capacity.

※ The above description is for outdoor unit alone case.  
For indoor units, please refer to the installation manual supplied with the indoor unit.

### 12.2.3.3 Operation Setup

#### Heat

**15. Water temp. for heating ON**      Initial setting: compensation curve

Set the target water temperature to perform heating operation.  
 Compensation curve: Target water temperature change in conjunction with outdoor temperature change.  
 Direct: Set the circulation water temperature directly.

Hot water temperature: 55°C, 35°C

Outdoor temperature: -5°C, 15°C

compensation curve

Decide temperature of 4 points as shown in diagram

**16. Outdoor temp. for heating OFF**

If the operation of the outdoor unit is frequently switched on and off depending on the outdoor air temperature, the following settings can be used to reduce the frequency.

**a. Outdoor temp. for heating OFF**      Initial setting: 24°C

Set outdoor temp. to stop heating  
 Setting range is 6°C~35°C

**b. Outdoor temp. for heating ON**      Initial setting: 23°C

Set outdoor temp. to start heating.  
 Setting range is 5°C~X°C (X is heating OFF temp. -1)

**c. Heating ON delay time**      Initial setting: 0:30min

Set delay time from heating OFF to heating ON.

ON

OFF

Temp.

23

24

ON

OFF

Time

0:30

**17. ΔT for heating ON**      Initial setting: 5°C

Set temp difference between out temperature and return temperature of circulating water during Heating operation.  
 When the temperature gap is enlarged, it is energy saving but less comfort.  
 When the gap gets smaller, energy saving effect gets worse but it is more comfortable.  
 Setting range is 1°C ~ 15°C


Out


Return

Out — Return = 1°C ~ 15°C


※ The above description is for outdoor unit alone case.  
 For indoor units, please refer to the installation manual supplied with the indoor unit.


**Cool** ※ Cooling model only
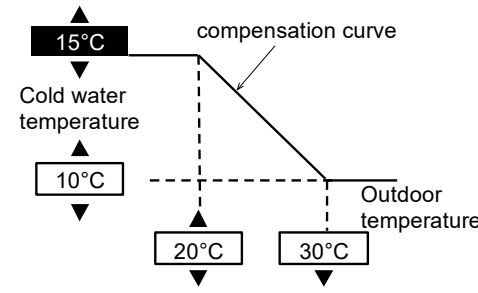
<div style="border: 1px solid black; padding: 2px; display: inline-block; margin-bottom: 5px;"><b>18. Water temp. for cooling ON</b></div> <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-left: 10px;">Initial setting: compensation curve</div>	 <p>The diagram shows a compensation curve. On the left, a vertical line represents 'Cold water temperature' with a box labeled '15°C'. A horizontal dashed line extends from this point to the right. Below this line, two boxes represent 'Outdoor temperature' at '20°C' and '30°C'. A solid line labeled 'compensation curve' starts at the 15°C cold water temperature and slopes downwards to the right, passing through the 20°C outdoor temperature point. A vertical dashed line connects the 30°C outdoor temperature point to the compensation curve. The vertical distance between the 15°C cold water temperature and the 30°C outdoor temperature point is marked as '10°C'.</p>
<p>Set target water temperature to perform cooling operation.                  Compensation curve: Target water temperature change in conjunction with outdoor ambient temperature change.                  Direct: Set the circulation water temperature directly.</p>	
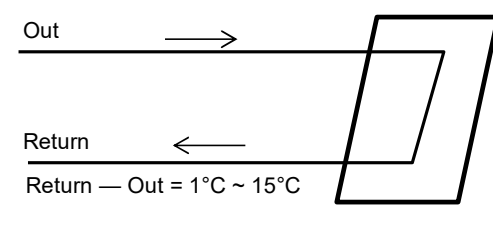
<div style="border: 1px solid black; padding: 2px; display: inline-block; margin-bottom: 5px;"><b>19. ΔT for cooling ON</b></div> <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-left: 10px;">Initial setting: 5°C</div>	 <p>The diagram shows a rectangular coil with two horizontal lines. The top line is labeled 'Out' with an arrow pointing right. The bottom line is labeled 'Return' with an arrow pointing left. Below the coil, the text 'Return — Out = 1°C ~ 15°C' is written.</p>
<p>Set temp difference between out temperature and return temperature of circulating water during Cooling operation.                  When the temperature gap is enlarged, it is energy saving but less comfort.                  When the gap gets smaller, energy saving effect gets worse but it is more comfortable.                  Setting range is 1°C ~ 15°C</p>	

**Auto** ※ Cooling model only
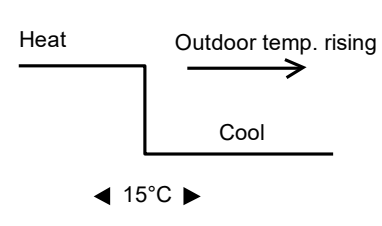
<div style="border: 1px solid black; padding: 2px; display: inline-block; margin-bottom: 5px;"><b>20. Outdoor temp. for (Heat to Cool)</b></div> <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-left: 10px;">Initial setting: 15°C</div>	 <p>The diagram shows a horizontal line starting at 'Heat'. An arrow labeled 'Outdoor temp. rising' points to the right. The line then drops vertically to 'Cool'. Below the drop, a double-headed arrow indicates a threshold of '15°C'.</p>
<p>Set outdoor temp that switches from Heating to Cooling by Auto setting.                  Setting range is 11°C ~ 25°C                  Timing of judgement is every 1 hour</p>	
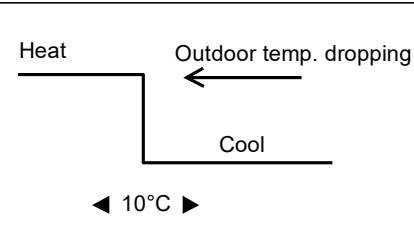
<div style="border: 1px solid black; padding: 2px; display: inline-block; margin-bottom: 5px;"><b>21. Outdoor temp. for (Cool to Heat)</b></div> <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-left: 10px;">Initial setting: 10°C</div>	 <p>The diagram shows a horizontal line starting at 'Cool'. An arrow labeled 'Outdoor temp. dropping' points to the left. The line then rises vertically to 'Heat'. Below the rise, a double-headed arrow indicates a threshold of '10°C'.</p>
<p>Set outdoor temp that switches from Cooling to Heating by Auto setting.                  Setting range is 5°C ~ 14°C                  Timing of judgement is every 1 hour</p>	

※ The above description is for outdoor unit alone case.  
 For indoor units, please refer to the installation manual supplied with the indoor unit.

**Tank** ※ Only when the selection for Tank connection is Yes

**22. Floor operation time (max.)**

Initial setting: 8h

Set the max. operating hours of heating.  
When max. operation time is shortened, it can boil the tank more frequently.

It is a function for Heating + Tank operation.

The diagram shows two horizontal lines. The top line is labeled 'Heat' and the bottom line is labeled 'Tank'. A double-headed arrow between the lines indicates a duration of '30min ~ 10h'. The 'Heat' line is high during this period, and the 'Tank' line is high during a portion of this period.

**23. Tank heat up time (max.)**

Initial setting: 1h

Set the max. boiling hours of tank.  
When the max. boiling hours are shortened, it immediately returns to Heating operation, but it may not fully boil the tank.

The diagram shows two horizontal lines. The top line is labeled 'Heat' and the bottom line is labeled 'Tank'. A double-headed arrow between the lines indicates a duration of '5min ~ 4h'. The 'Heat' line is high during this period, and the 'Tank' line is high during a portion of this period.

**24. Tank re-heat temp.**

Initial setting: -8°C

Set the temperature to re-boil the tank water.  
Setting range is -12°C ~ -2°C

The graph shows a temperature curve that rises and then levels off. A horizontal line indicates the re-heat temperature range, with a double-headed arrow between two points labeled '-12°C ~ -2°C'. A downward arrow points to the upper part of the curve, and an upward arrow points to the lower part of the curve.

**25. Sterilization**

Initial setting: 65°C 10min.

Set timer to perform sterilization.

- ① Set operating day & time. (Weekly timer format)
- ② Sterilization temperature (\* 55-65°C)
- ③ Operation time (Time to run sterilization when it reached setting temperature. (5 ~ 60 minutes))

\* When the outdoor air temperature is below -15°C  
The Tank temperature may only rise to about 55°C.  
(Turn on the external heater to perform sterilization. Need Indoor unit).  
Sterilization temperature varies depending on the model.

The use/non-use of the sterilization mode must be set.

The graph shows a temperature curve that rises and then levels off. A horizontal line indicates the sterilization temperature. A double-headed arrow below the line indicates the sterilization operation time. The points on the curve are labeled ①, ②, and ③.

※ The above description is for outdoor unit alone case.  
For indoor units, please refer to the installation manual supplied with the indoor unit.

### 12.2.3.4 Service Setup

<b>26. Pump maximum speed</b>	Initial setting: Depend on model	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2">Service setup</td> <td style="text-align: right;">12:00am,Mon</td> </tr> <tr> <td style="width: 33%;">Flow rate</td> <td style="width: 33%;">Max. Duty</td> <td style="width: 34%;">Operation</td> </tr> <tr> <td>34.4 L/min</td> <td>0xCE</td> <td style="text-align: center;">▲ <b>Air Purge</b></td> </tr> <tr> <td colspan="3" style="padding-top: 5px;">◀ Select</td> </tr> </table>	Service setup		12:00am,Mon	Flow rate	Max. Duty	Operation	34.4 L/min	0xCE	▲ <b>Air Purge</b>	◀ Select		
Service setup		12:00am,Mon												
Flow rate	Max. Duty	Operation												
34.4 L/min	0xCE	▲ <b>Air Purge</b>												
◀ Select														

Normally setting is not necessary.  
Please adjust when needed to reduce the pump sound, etc.  
Besides that, the unit has Air Purge function.

When the Pump flow setting is Max. Duty, this duty setting is the duty of fixed pump that runs during room-side operation.

<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 5px;"><b>27. Dry concrete</b></td> </tr> </table> <p style="margin-top: 10px;">Operate concrete curing operation. Select Edit and set the temperature for every stage (1~99 1 is for 1 day). Setting range is 25~55°C</p> <p>When it is turned ON, dry concrete starts.</p>	<b>27. Dry concrete</b>	
<b>27. Dry concrete</b>		

<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 5px;"><b>28. Service contact</b></td> </tr> </table> <p style="margin-top: 10px;">Able to set the name &amp; tel. no. of contact person when there is breakdown etc. or client has trouble. (2 items)</p>	<b>28. Service contact</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2">Service setup</td> <td style="text-align: right;">12:00am,Mon</td> </tr> <tr> <td colspan="3">Service contact:</td> </tr> <tr> <td colspan="3" style="text-align: center;">Contact 1</td> </tr> <tr> <td colspan="3" style="text-align: center;">Contact 2</td> </tr> <tr> <td colspan="2" style="padding-top: 5px;">▲ Select</td> <td style="padding-top: 5px;">[↵] Confirm</td> </tr> </table>	Service setup		12:00am,Mon	Service contact:			Contact 1			Contact 2			▲ Select		[↵] Confirm	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="3">Contact-1: Bryan Adams</td> </tr> <tr> <td style="width: 33%; text-align: center;">ABC/ abc</td> <td style="width: 33%; text-align: center;">0-9/ Other</td> <td style="width: 34%;"></td> </tr> <tr> <td colspan="3">A B C D E F G H I J K L M N O P Q R</td> </tr> <tr> <td colspan="3">S T U V W X Y Z    a b c d e f g h i</td> </tr> <tr> <td colspan="3">j k l m n o p q r s t u v w x y z</td> </tr> <tr> <td colspan="2" style="padding-top: 5px;">▼ Select</td> <td style="padding-top: 5px;">[↵] Enter</td> </tr> </table>	Contact-1: Bryan Adams			ABC/ abc	0-9/ Other		A B C D E F G H I J K L M N O P Q R			S T U V W X Y Z    a b c d e f g h i			j k l m n o p q r s t u v w x y z			▼ Select		[↵] Enter
<b>28. Service contact</b>																																				
Service setup		12:00am,Mon																																		
Service contact:																																				
Contact 1																																				
Contact 2																																				
▲ Select		[↵] Confirm																																		
Contact-1: Bryan Adams																																				
ABC/ abc	0-9/ Other																																			
A B C D E F G H I J K L M N O P Q R																																				
S T U V W X Y Z    a b c d e f g h i																																				
j k l m n o p q r s t u v w x y z																																				
▼ Select		[↵] Enter																																		

### 12.2.3.5 Remote Control Setup

<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 5px;"><b>29. RC selection</b></td> </tr> </table> <p style="margin-top: 10px;">Set to "Single" when only one remote controller is installed. Set to "Dual" when two remote controllers are installed.</p> <p>For details on the Dual setting, refer to the instruction manual of the optional remote controller.</p>	<b>29. RC selection</b>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2">Initial setting : Single</td> </tr> </table>	Initial setting : Single		<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td colspan="2">RC selection</td> <td style="text-align: right;">12:00am,Mon</td> </tr> <tr> <td colspan="3" style="text-align: center;">Single</td> </tr> <tr> <td colspan="3" style="text-align: center;">▼</td> </tr> <tr> <td colspan="3" style="text-align: center;">Dual</td> </tr> <tr> <td colspan="2" style="padding-top: 5px;">▼ Select</td> <td style="padding-top: 5px;">[↵] Confirm</td> </tr> </table>	RC selection		12:00am,Mon	Single			▼			Dual			▼ Select		[↵] Confirm
<b>29. RC selection</b>																				
Initial setting : Single																				
RC selection		12:00am,Mon																		
Single																				
▼																				
Dual																				
▼ Select		[↵] Confirm																		

※ The above description is for outdoor unit alone case.  
For indoor units, please refer to the installation manual supplied with the indoor unit.

## 12.3 Service and Maintenance

## 12.3.2 Custom Menu

### If forget Password and cannot operate remote controller

↶ + ↵ + ↷ Press for 5 seconds.

Password unlock screen appears, press Confirm and it shall reset.

Password will become 0000. Please reset it again.

(NOTE) This is displayed only when the remote controller is password-locked.

### 12.3.1 Maintenance Menu

#### Setting method of Maintenance menu

Maintenance menu	12:00am, Mon
<b>Actuator check</b>	
Test mode	
Sensor setup	
Reset password	
▼ Select	[↵] Confirm

↶ + ↵ + ↷ Press for 5 seconds.

Items that can be set

- ① Actuator check (Manual ON/OFF all functional parts)  
(NOTE) As there is no protection action, please be careful not to cause any error when operating each part (do not turn on pump when there is no water etc.)
- ② Test mode (Test run)  
Normally it is not used.
- ③ Sensor setup (offset gap of detected temp of each sensor can be set within -3~3°C range)  
(NOTE) Please use only when sensor is deviated.  
It affects temperature control.
- ④ Reset password (password reset)

#### Setting method of Custom menu

Custom menu	12:00am, Mon
<b>Cool mode</b>	
Reset energy monitor	
Reset operation history	
Anti-stick mode	
▼ Select	[↵] Confirm


≡ + ∨ + < Press for 5 seconds.

Items that can be set

- ① Cool mode (Select Cooling function: Enable/Disable)  
Default setting is Disable.  
(NOTE) Enabling or disabling Cool Mode may affect electricity application, please be careful and do not simply change it.  
In Cool mode, please be careful if piping is not insulated properly, dew may form on pipe and water may drip on the floor and damage the floor.
- ② Reset energy monitor (delete memory of Energy monitor)  
Please use this when moving house and handover the unit.
- ③ Reset operation history (delete memory of operation history)  
Please use this when moving house and handover the unit.
- ④ Anti-stick mode (select Anti-stick mode: Enable/Disable)  
Default setting is Enable.  
The actuator is regularly activated every Monday at 3:00 am to prevent the actuating parts from sticking together.  
Select Disable if you wish to stop the part being activated periodically.  
Parts and other components that may not operate if Disable is selected may stick if not operated for a long period of time.

※ The above description is for outdoor unit alone case.  
For indoor units, please refer to the installation manual supplied with the indoor unit.

# 13. Installation and Servicing Air-to-Water using R290

 <b>WARNING</b>	This symbol shows that this equipment uses a flammable refrigerant with safety A3 group per ISO 817. If the refrigerant is leaked, together with an external ignition source, there is a possibility of fire / explosion.
--	---

## 13.1 About R290 Refrigerant

Hydrocarbon is a class of organic chemical made up only with the element Carbon (C) and Hydrogen (H). R290 is the type of Hydrocarbon refrigerant which is environmentally good-natured and odorless refrigerant. Under Kigali Amendment to the Montreal Protocol, 80% reduction of greenhouse gas emission by next 30 years is required, and due to this requirement, further reduction in the emission of high greenhouse effect gas is required. Therefore, the conversion of air-conditioning refrigerant into one which has no greenhouse effect, even if it is dissipated into the atmosphere became our responsibility.

Nevertheless, in case of air-conditioning refrigerant, it would be the best if there is a refrigerant which has no impact on global warming but ensures good energy efficiency and performance, and is safe; however, there is no such refrigerant which satisfies all these conditions. As a result, we have been considering the practical usage, within the safety frame-work, of R290 refrigerant which has no effect of global warming but highly flammable.

## 13.2 Characteristics of R290 Refrigerant

### 1. Chemical Characteristics

R290 (Propane) is refrigerant grade propane, which is natural, non toxic, and chemically stable compound formed by hydrogen.

R290 is one of natural refrigerant, therefore it has almost zero greenhouse gas effect. R-290 is a single-component hydrocarbon substance and the most hydrocarbon properties as it is highly flammable.

Chemical Characteristic Table of R290 and R32

	R290	R32
Chemical Formula	C3H8	CH2F2
Composition	Single Composition	Single Composition
Boiling point (°C)	-42.1	-51.7
50°C vapor pressure (MPa)	1.71	3.14
Ozone Depletion Potential	0	0
Global Warming Potential (GWP)	3	675
Inflammability	Highly Inflammable (A3)	Slightly Inflammable (A2L)
Toxicity	None	None

### 2. Characteristic of Pressure

As shown in Table 2, R290 has half the vapor pressure of R32 at the same refrigerant temperature.

As such, it can be installed and maintained with the same high-pressure tools and components as the R32.

Table 2. Saturated vapor pressure comparison table

(Unit: MPaG)

Temperature (°C)	Refrigerant	
	R290	R32
-20	0.14	0.30
0	0.37	0.71
20	0.74	1.37
40	1.27	2.38
60	2.03	3.84
65	2.23	4.29

Reference : Thermal properties table of Japan Society of Refrigerating and Air Conditioning Engineers (60, 65°C)  
NIST REFPROP V8.0 (-20 ~ 40°C)

### 3. Flammable characteristic

As shown in below table, R290 is highly flammable and explosive when heated. The installation must be equipped with ATEX (Atmospheres Explosible) certified equipment and must always turn on the combustible gas detector during servicing and when entering the service area. Service must also be performed in a well-ventilated area, especially if the refrigerant system is being accessed.

#### 3.1 Safety class

SAFETY GROUP			
Increasing Flammability ↑	Higher Flammability	A3	B3
	Lower Flammability	A2	B2
		A2L	B2L
	No Flame Propagation	A1	B1
		Lower Toxicity	Higher Toxicity
		Increasing Toxicity →	


Refrigerant	Burning Speed cm/s
R32	6.7
<b>R290</b>	<b>38.7</b>

#### 3.2 Concentration control for R290

Because R290 is highly flammable, it can burn or explode if there is enough product concentrated in one space and the refrigerant comes in contact with an ignition source.

Control measurement;

Descriptions	Specifications
Lower flammability limit (LFL) [kg/m <sup>3</sup> ]	0.038
Lower flammability limit (LFL) [%]	2.1
Practical limit (PL) [kg/m <sup>3</sup> ]	0.008
Density of vapour [kg/m <sup>3</sup> ]	1.83

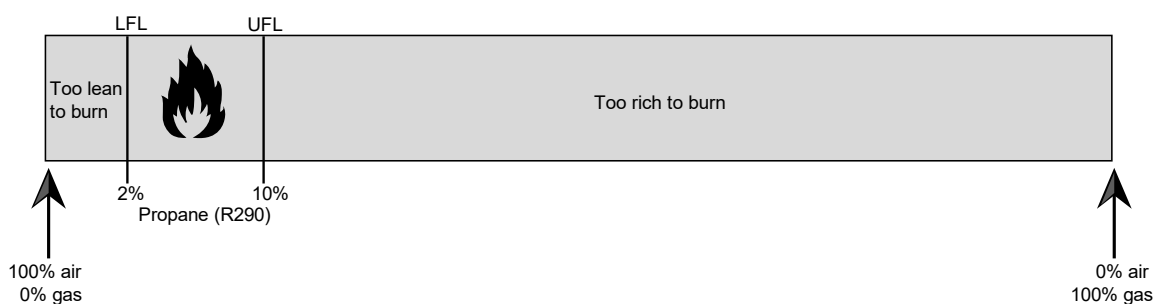

The concentration of R290 between the lower flammable limit (2%) and upper flammable limits (10%) is enough to ignite fire.

Note:

LFL – Lower flammable limit whereby the concentration of flammable gas, vapour or mist in the air below which an explosive gas atmosphere will not be formed.

UFL – Upper flammable limit whereby the concentration of flammable gas, vapour or mist in the air below which an explosive gas atmosphere will not be formed.

PL – Defined as concentration used for simplified calculation to determine the maximum acceptable amount of refrigerant in an occupied space (20% of LFL)

#### 3.3 Material classification and Hazard statement

<b>H280</b>	<b>Contain gas under pressure; may explode if heated</b>
<b>CGA-HG01</b>	<b>May cause frostbite</b>

## 13.3 Refrigerant piping installation • Tools used in services

### 13.3.1 Required Tools

R290 refrigerant air conditioners must use ATEX (Atmosphere Explosible) certified equipment. The common parts as R32 air conditioners for two-way valves and three-way valves (diameters of service ports); thus, they maintain commonality in the maintenance of the compressive strength, the size of pipe flaring, and the size of flare nuts as R32. However refrigerant pipe installation and services must use tools certified for highly flammable gas.

However, mixing of refrigerants is not allowed, so that you have to separate the cylinders for the recovery of refrigerants.

Tools used for installation • relocation • replacement of air conditioning units

Works	R290	R32
Connecting of refrigerant pipes	Not applicable for Monobloc	
	Not applicable for Monobloc	
Manifold gauge charging hose	HC Manifold gauge to avoid refrigerant contamination	R32 & R410A Common
Air purging	Vacuum pump complied with ATEX (Atmosphere Explosible)	Vacuum pump + Reducer / expander
Gas leakage test	Combustible gas detector	Detection liquid or soup water, HFC detector

For other installation, you can use general tools such as screw drivers (+, -), metal saws, long-nose pliers, hole core drills, linen tape, levels, temperature gauges, clamp meters, electric knives, nippers, pipe cutters, reamers or scrapers, spring benders, monkey wrenches, fixing wrenches, feeler gauges, hexagon wrenches (4 mm), testers, megohm testers, etc.

Tools used for services.

Works	R290	R32
Insertion of refrigerant	Digital scale for refrigerant charging, refrigerant cylinders, cylinder adopters and packing *a	
Recovery of refrigerant	Refrigerant recovery devices, refrigerant cylinders, manifold gauges, charging hoses *b	

\*a. Use cylinder for each refrigerant, cylinder adopter and packing.

\*b. Use refrigerant recovery cylinder separately for each refrigerant (**no mixture of refrigerant allowed**).

### 13.3.2 Tools for R290

#### 1. Manifold gauges

R32 gauge can be used for R290 pressure.

Each port of manifold has different shapes in order to prevent inserting wrong refrigerant.

\*However, the port shape for R290 and R32 is the same; therefore, attention need to be paid not to insert wrong refrigerant.

Differences in high/low pressure gauges

	R290 (common R32)
High pressure gauges (red)	-0.1 ~ 5.3 MPa -76 cmHg ~ 53 kgf / cm <sup>2</sup>
Low pressure gauges (blue)	-0.1 ~ 3.8 MPa -76 cmHg ~ 38 kgf / cm <sup>2</sup>

Difference in manifold port sizes


	R290 (common R32)
Port sizes	1/2 UNF20

#### 2. Charging hoses

The material is changed to HC resistant, and the size of each manifold adopter is common, as the R32 port size of manifold gauge.

Further, some hoses are with anti-gas pressure backflow valves placed near the adopters. (hoses with the valves recommended)

Manifold gauges / Charging hoses

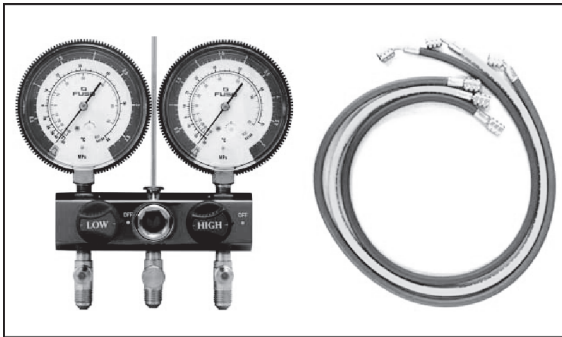

Differences in charging hoses

		R290 (common R32)
Pressure Resistance	Normal operation pressure	5.1 MPa (52 kgf / cm <sup>2</sup> )
	Burst pressure	27.4 MPa (280 kgf / cm <sup>2</sup> )
Material		HNBR rubber Internal nylon coating

#### 3. Vacuum pump and isolator.

When using a vacuum pump, it is compulsory to use an ATEX certified vacuum pump.


When connecting service equipment (such as vacuum pumps) to a power source, the connection should be made in outside the Temporary Danger Zone.

It is recommended to use an ATEX Isolator switch to facilitate a safe shutdown in the danger zone.

It is necessary to set a solenoid valve in order to prevent backflow of vacuum pump oil into the charge hoses and use a vacuum pump with oil backflow prevention function.

If vacuum pump oil (mineral oil-based) mixes with R290, it may cause damage to the machine.

Vacuum pump

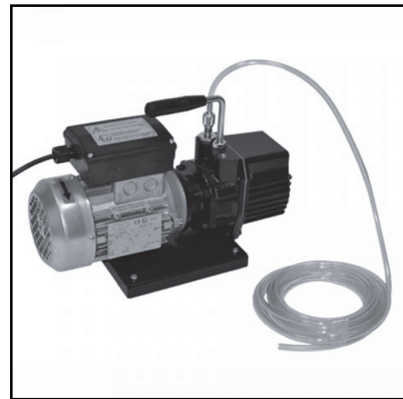

Isolator



#### 4. Leak Detector

HC refrigerant Electric gas leakage tester is used for R290. The usage of existing HFC detectors cannot be used as they can produce spark. We recommend to use detectors specifically designed for combustible gas.


Combustible gas leak detector



#### 5. Digital scale for refrigerant charging

R290 has lower pressure level and the evaporates speed is slow. Thus, the digital scale for refrigerant charging can be used in common with R32. The charging port for R32 is (1/2 UNF20), common with R290

Digital scale for refrigerant charging

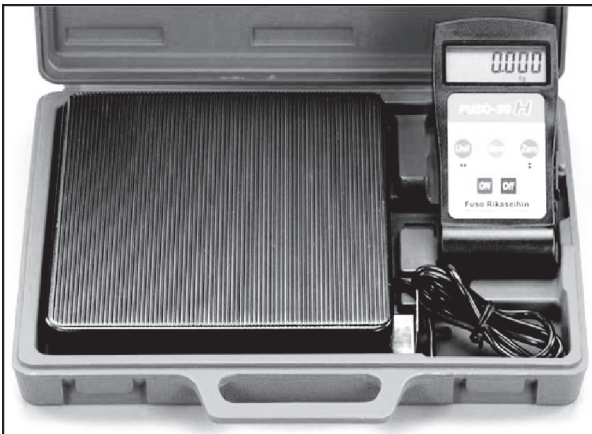

#### 6. Refrigerant cylinders

Refrigerant cylinders for R290 are painted in other colors that might subject to change according to the international standards. R290 is a single refrigerant, so that both liquid and gas insertion are possible. Additional charging is also possible.


Refrigerant cylinders



#### 7. Connection ports of refrigerant cylinders and packing

Charging ports which fit to the charging hose connection port size (1/2 UNF20) is needed. At the same time, the packing has to be of HC resistant materials.

Connection ports and packing

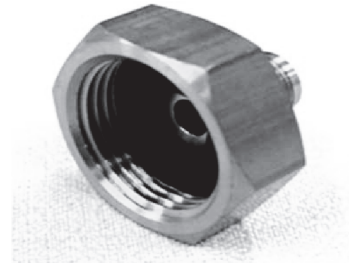

## 8. Tools used for refrigerant piping installations and services

	Common tools	R290	R32
1.	Pipe cutters, reamers or scrapers	Not applicable for Monobloc	Not applicable for Monobloc
2.	Flare tools (clutch type)	Not applicable for Monobloc	Not applicable for Monobloc
3.	Torque wrench (1/4, 3/8)	Not applicable for Monobloc	Not applicable for Monobloc
4.	Torque wrench (1/2, 5/8)	Not applicable for Monobloc	Not applicable for Monobloc
5.	Manifold gauges, charging hose	○	○
6.	Vacuum pump, vacuum pump isolator *2	Connection 5/16 [ATEX certified] *1	
7.	Electric gas leakage detectors	Combustible gas detector	HFC detector
8.	Digital scale for refrigerant charging	○	○
9.	Recovery devices (connection port 5/16) *2	ATEX certified	HFC recovery devices
10.	Refrigerant cylinder color	Other (colors that might subject to change according to the international standards)	Other (colors that might subject to change according to the international standards)
11.	Refrigerant cylinder connection port and packing	x	○
12.	Allen wrench (4mm) Electric knives	x	○
*1	Those testers only for HC only cannot be for common use with HFC		
*2	Recovery devices which are certified by Atmosphere Explosible (ATEX)		
	<p>[Knowledge for the common usage of tools for R290 &amp; R32]  R290 and R32 machines use different compressor oils.</p> <ul style="list-style-type: none"> <li>• If unregulated compressor oil gets mixed into, it may cause damage to the machine function.</li> </ul>		
	<p>[Inserting wrong refrigerant]</p> <ul style="list-style-type: none"> <li>• It may cause "not cooling" and "not heating" customer claims because each component (expansion valve, compressor, PCB) of the refrigerant cycle is specially adjusted for R290.</li> <li>• At the same time, it is not subject to product warranty, if wrong refrigerant was inserted into system.</li> </ul>		


### Reference:-

- ASHRAE Standard 34-2016
- ISO Standard ISO 5149
- ISO 817:2014

### 13.4 New installation, and Repairing of Refrigerant Cycle System Procedures

Personnels working on A3 systems may be subject to applicable occupational hazard or regulations required by local or national law.

For safe servicing and disposal, technicians must have detailed knowledge and skills in handling of flammable refrigerants, prevention of refrigerant leaks, leak detection, personal protective equipment, cylinder handling and loading. A dry powder or CO<sub>2</sub> fire extinguisher must be available at the place of service.

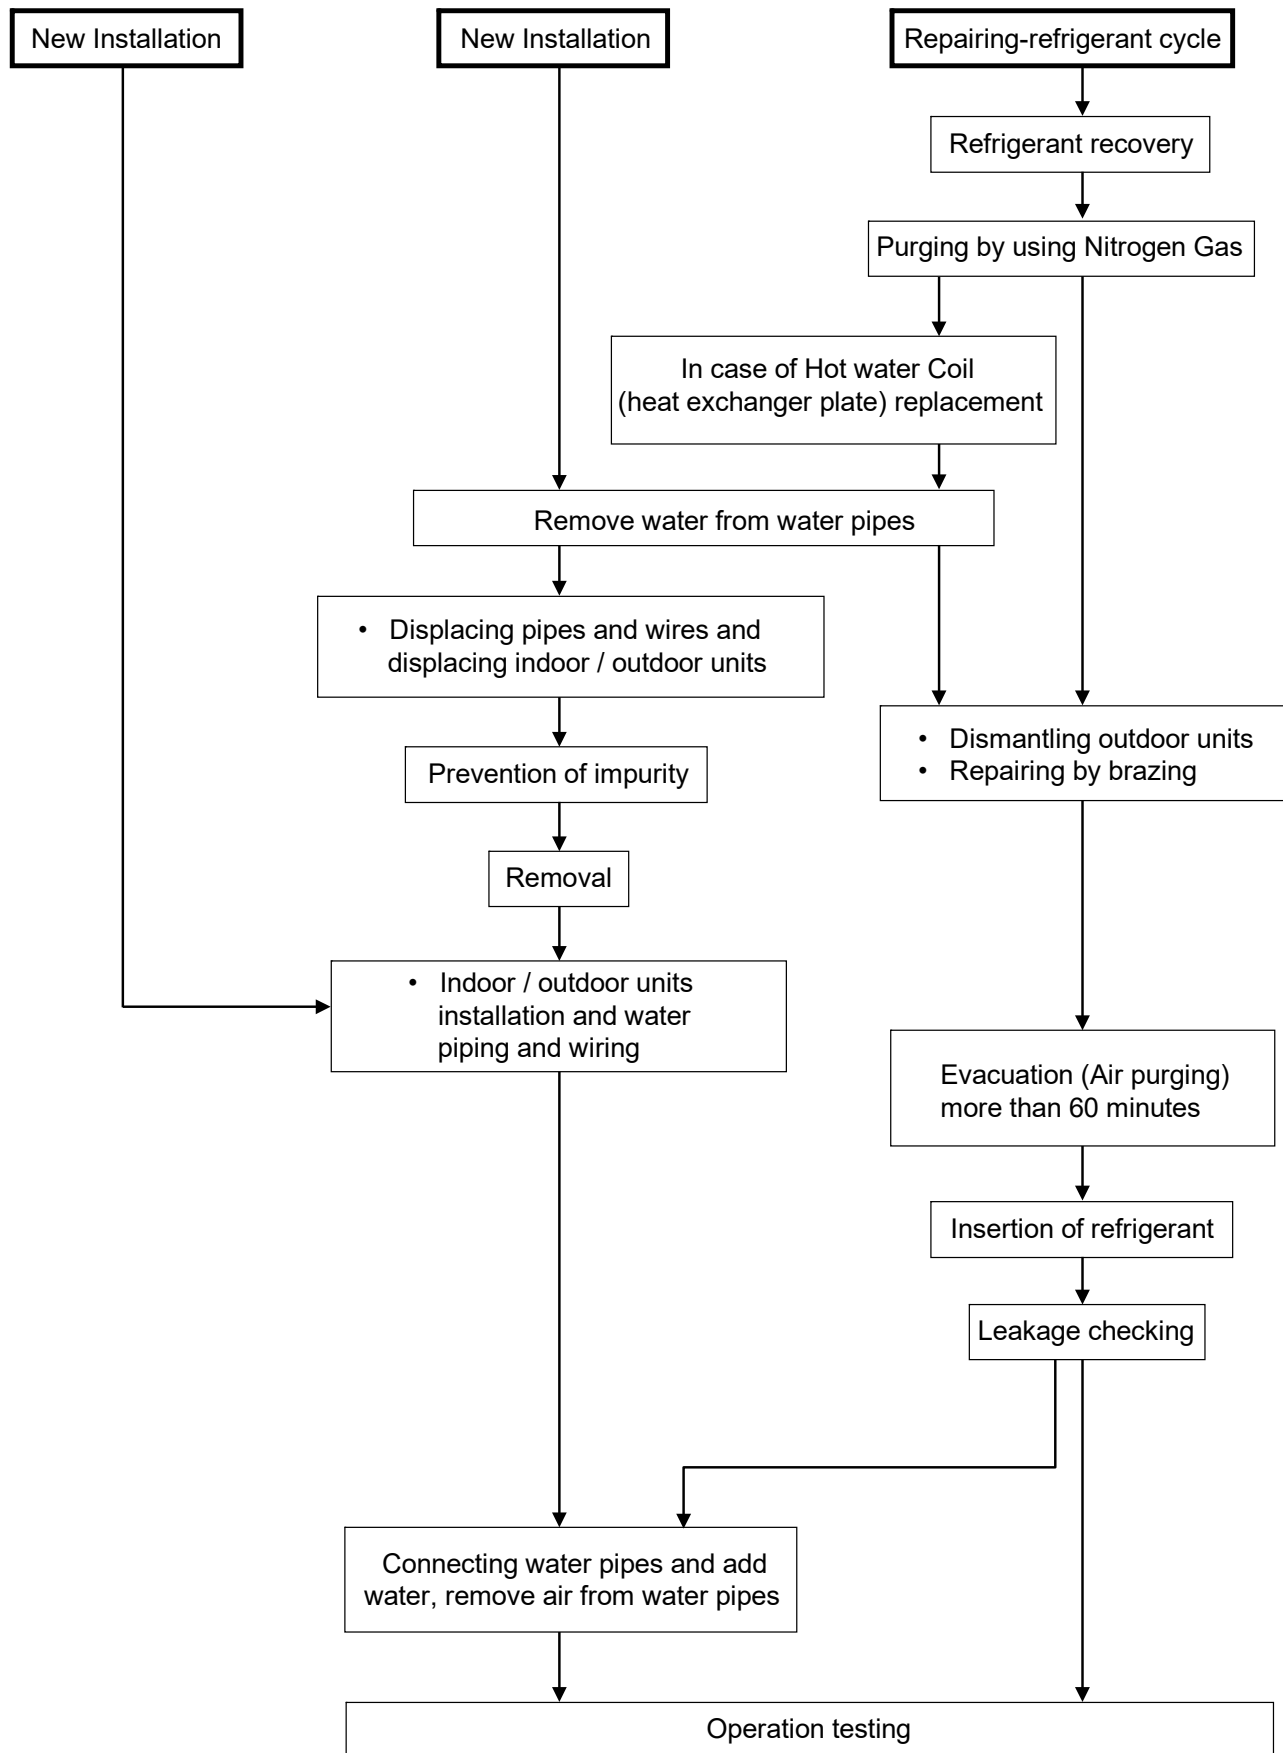


## 13.5 Servicing

### 13.5.1 Recover R290 refrigerant with refrigerant recovery machine


#### CAUTION!

- Always turn ON the combustible leak detector.
- Keep all ignition sources, hot surface, and open flames 3 meter away from the product.
- Ensure the servicing area is well ventilated.
- Ensure the product is service by certified serviceman.
- Ensure to always have the approved fire extinguisher.

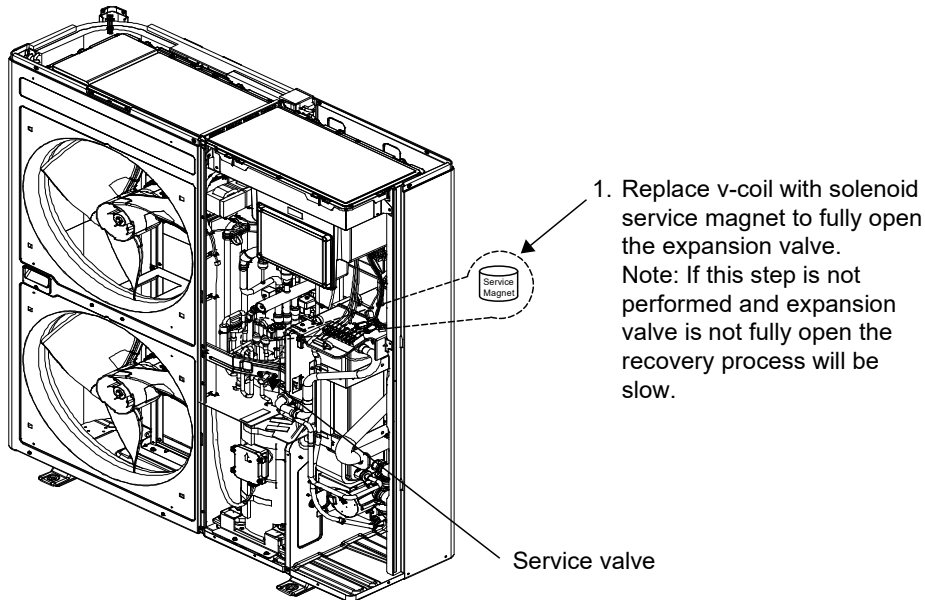

#### CAUTION!

All equipment and material must be ATEX certified to be allowed to operate within Atmosphere Explosible zone.

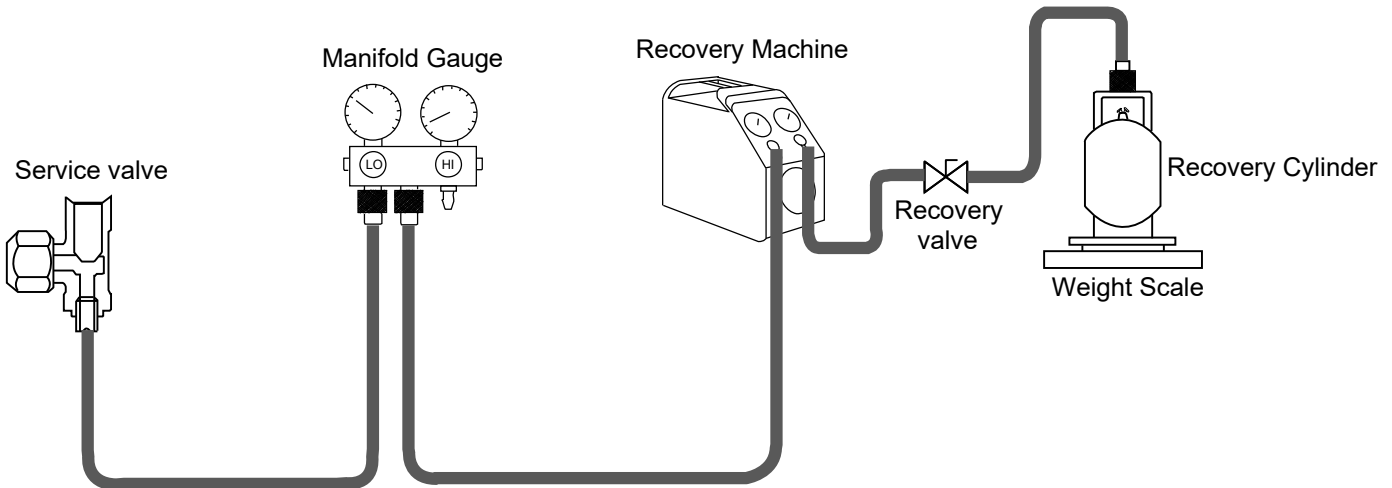


#### CAUTION!

Do not refill R290 refrigerant more that 50% of recovery cylinder capacity to avoid overpressure. (Safety risk)

Refrigerant Type	Recovery Cylinder Capacity
R32	80% of the weight
R290	50% of the weight

2. Connect the Low side charging hose of the manifold gauge to the service valve (2-way valve) in the outdoor unit.
3. Connect the center hose of the manifold gauge to the recovery machine.
4. Attached the manifold gauge correctly and tightly. Ensure both valve (Low side and High side) is in close position.
5. Connect the hose from recovery machine to the recovery cylinder.
6. Turn ON the recovery machine, turn the low side valve, service valve and recovery valve to open position.

### 13.5.2 Purging by using Nitrogen Gas Before Servicing and Disposal

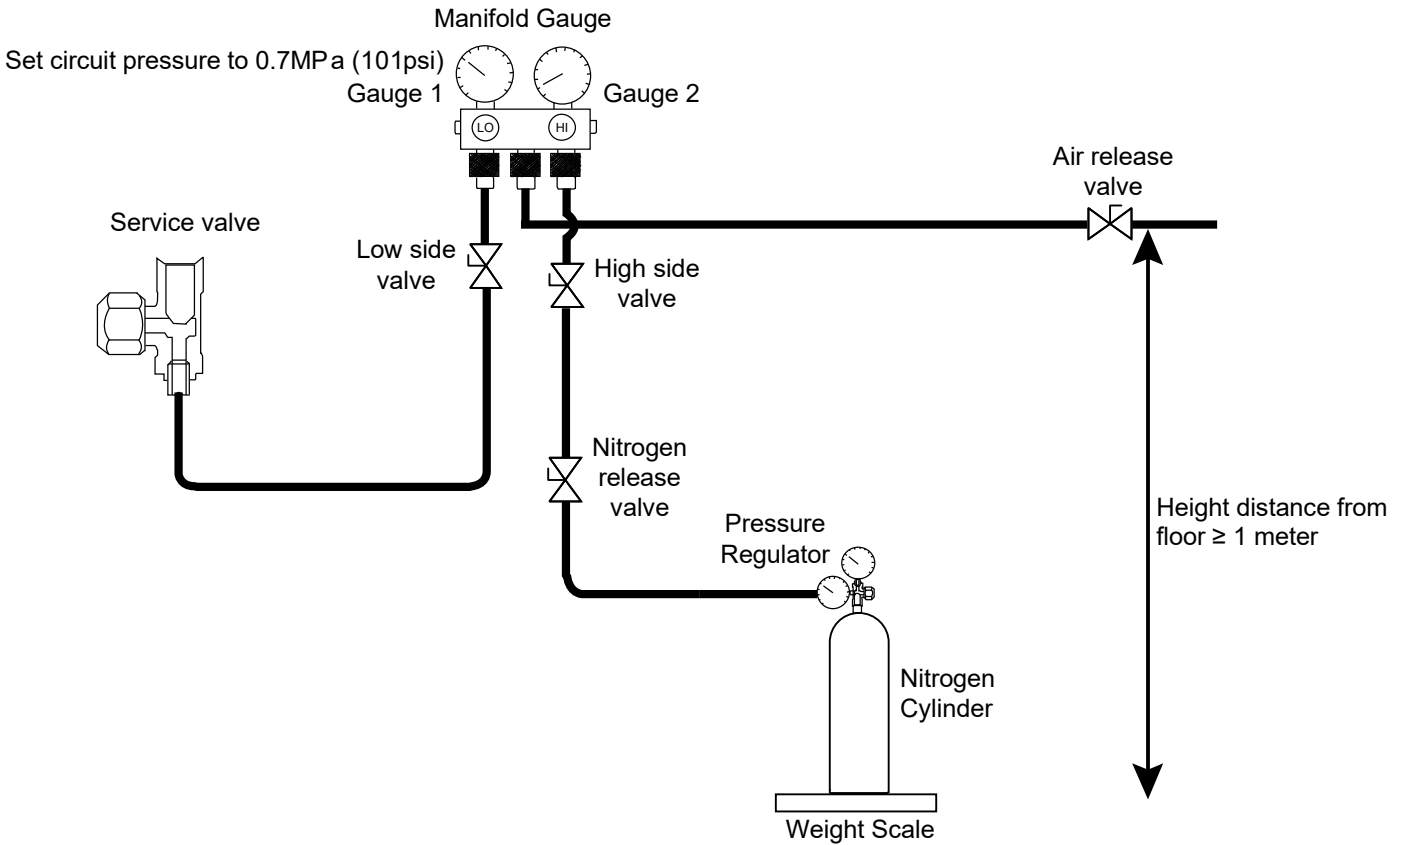

1. Connect nitrogen cylinder to the high side at the manifold gauge. Ensure nitrogen cylinder is connected to pressure regulator.
2. Close air release valve and open service valve.
3. Open High side valve and nitrogen release valve. (Set the pressure regulator to 200psi).
4. Charge nitrogen gas up to 0.7MPa (101psi) or charge 400 grams of nitrogen into the unit.
5. Close high side valve and open air release valve (half open) to release remaining propane to the atmosphere. Air release valve must be directed 1 meter from the floor to enable the propane gas to spread properly in the atmosphere. [Beware not to fully open the air release valve to avoid high pressure and compressor oil discharge].
6. When gauge 1 pressure reach near atmospheric (15psi) point the combustible leak detector to air release valve to detect the presence of propane. If presence of propane can still be detected, repeat procedure 2 to 5 until presence of propane cannot be detected.  
[Then refrigerant circuit repairment or unit decommissioning should be done].
7. Before charging new refrigerant, vacuum the system until it reaches to 500micron (67Pa) to remove foreign gas in the system and hold for 15 minutes.

## 14. Operation and Control

### 14.1 Basic Function

Inverter control, which equipped with a microcomputer in determining the most suitable operating mode as time passes, automatically adjusts output power for maximum comfort always. In order to achieve the suitable operating mode, the microcomputer maintains the set temperature by measuring the temperature of the environment and performing temperature shifting. The compressor at outdoor unit is operating following the frequency instructed by the microcomputer at indoor unit that judging the condition according to internal water setting temperature and water outlet temperature.

#### 14.1.1 Internal Water Setting Temperature

Once the operation starts, control panel setting temperature will be taken as base value for temperature shifting processes. These shifting processes are depending on the Air-to-Water Heat pump settings and the operation environment. The final shifted value will be used as internal water setting temperature and it is updated continuously whenever the electrical power is supplied to the unit.

#### 14.1.2 Heating Operation

##### 14.1.2.1 Thermostat Control

- Compressor is OFF when Water Outlet Temperature – Internal Water Setting Temperature  $> 3^{\circ}\text{C}$  for continuously 3 minutes.
- Compressor is ON after waiting for 3 minutes, if the Water Outlet Temperature – Water Inlet Temperature (temperature at thermostat OFF is triggered)  $< -3^{\circ}\text{C}$ .

##### 14.1.2.2 Thermostat Control (Outdoor Ambient Temperature)

Stops provide heating to room side during high outdoor ambient condition.

Control content:

- Heating operation and water pump will turn OFF when outdoor ambient temperature  $>$  outdoor thermo off temperature  $+ 3^{\circ}\text{C}$ .  
(Outdoor thermo off set temperature is set by control panel. Thermo off set temperature is between  $5^{\circ}\text{C} \sim 35^{\circ}\text{C}$ )
- Heating operation will resume when Outdoor ambient temperature  $<$  Outdoor thermo OFF set temperature  $+ 1^{\circ}\text{C}$ .

##### 14.1.2.3 Heat Mode Operation

Operation of heat pump provide heating capacity to room side by hot water through heating panel, floor heating or fan coil unit.

- 1 3 ways valve control:
  - 3 ways valve switch and fix to heating side.
- 2 Heat pump operates follow normal heating operation.
- 3 Back up heater operate follow normal operation.
- 4 2 ways valve control:
  - 2 ways valve opens.

#### 14.1.3 Cooling Operation

##### 14.1.3.1 Thermostat Control

- Compressor is OFF when Water Outlet Temperature – Internal Water Setting Temperature  $< -1.5^{\circ}\text{C}$  for continuously 3 minutes.
- Compressor is ON after waiting for 3 minutes, if the Water Outlet Temperature – Water Inlet Temperature (temperature at thermostat OFF is triggered)  $> 3^{\circ}\text{C}$ .

##### 14.1.3.2 Cool Mode Operation

- 1 3 ways valve control:
  - 3 ways valve switch and fix to cooling side.
- 2 Heat pump operates follow normal cooling operation.
- 3 Room heater DOES NOT operate during cool mode.
- 4 2 ways valve control:
  - 2 ways valve is closed.

### 14.1.3.3 Cooling Capacity Control

The cooling capacity can be set to either Efficiency or Comfort priority. (However, this is only available for WH-WDG12ME5.)

**Remocon setting : Cooling capacity = Efficiency (default)**

Prioritize efficiency and operate the cooling with reduced capacity

**Remocon setting : Cooling capacity = Comfort**

Prioritize comfort and operate the cooling at maximum capacity.

### 14.1.4 Target Water Temperature Setting

#### 14.1.4.1 Target Water Temperature Control of Standard System (Optional PCB not Connected)

There are 2 types of temperature control selection which are Compensation and Direct.

- Temperature control type selection by installer:
  - 1 Compensation : WLo, WHi, ODLo, ODHi can be set at installer menu.
  - 2 Direct : Direct Water Temperature Set
- Remote control setting by user:
  - 1 Compensation : Shift value  $\pm 5^{\circ}\text{C}$  from the compensation curve
  - 2 Direct : Direct water temperature set change

\*This setting only able to set when room sensor select as Water Temperature.

\*Instead of water temperature, user will set target room temperature when room sensor select as Room Thermistor OR Internal Room Thermostat.

- Target water temperature is calculated as below condition.
  - Target water temperature = A (Base temperature) + B (shift temperature)

A (Base Temperature)	Compensation	Direct
		Value from the curve + User shift value set

- B (shift temperature) value is depend on the room sensor selection at remote controller as below table:

B (Shift Temp.)	B shift value depend on the room sensor selection at remocon as table below
<b>Sensor selection</b>	
Water temperature	B = 0
External Room thermostat	B = 0
Internal Room thermostat & Room Thermistor	<b>Cool Mode:</b> B = 0 ; when Zone OFF or Zone Room Thermo OFF B = B = 1* (room set temp (R/C) – actual room temp) Max/Min Regulation of B: (Max = 5 ; Min = -5)
	<b>Heat Mode:</b> B = 0 ; when Zone OFF or Zone Room Thermo OFF B = follow Heating Room Temperature PI control logic


- Maximum/minimum regulation of Target Water Temperature

	Heating	Cooling
MAX	55°C (Below Ambient -25°C) * 75°C (Above Ambient -15°C) *	20°C
MIN	25°C	5°C

\* Between outdoor ambient -15°C and -25°C, max target decreases gradually from 75°C to 55°C.

Compensation Type: (Operation under Heat Mode and Cool Mode)

- The set temperature defines the parameters for the ambient (Outdoor temperature) dependent operation of the unit. The water temperature is determined automatically depending on the outdoor temperature. Default setting is the colder outdoor temperature will result in warmer water and vice versa. The user has the possibility to shift up and shift down the target water by remote control setting.

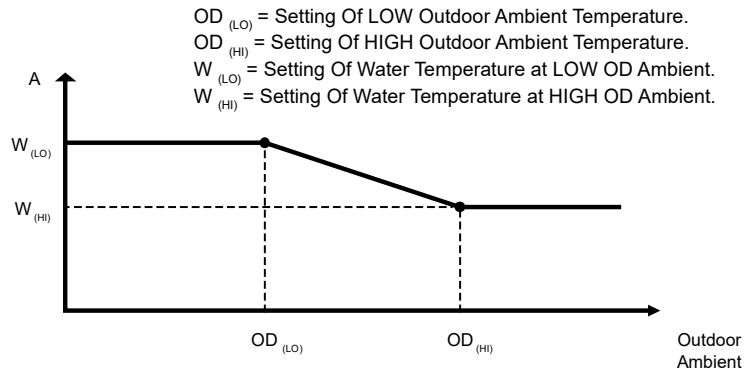


- Outdoor ambient is updated every 30 minutes when operation ON.
- Setting water outlet temperature always follow  $W_{(L.O)}$  or  $W_{(H.I)}$  whenever is higher if outdoor ambient sensor or indoor communication error happen.

However, when powerful mode is requested by remote control during heating mode, the higher value of HLo or Whi will be used for A calculation.

\* There are 2 compensation curves (for heating and cooling). During heating mode, the heating curve is used and during cooling mode, the cooling curve is use.

- Compensation curve set shift value:

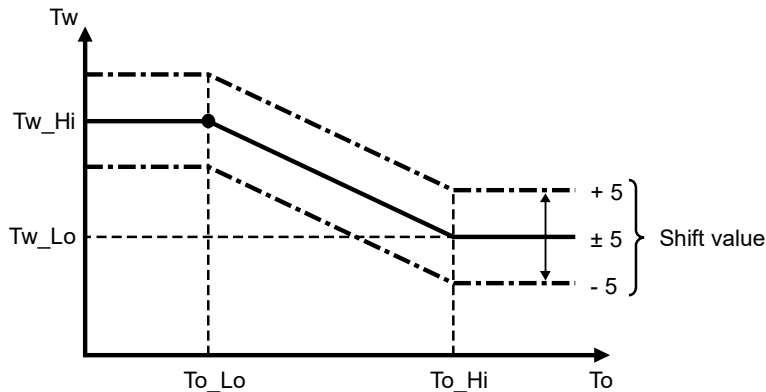

**14.1.5 Target Water Temperature at Extension System (Optional PCB is Connected, Excluding when Operating in Standalone)**

Target water temperature is calculated as below.

- Heat Mode:
  - When buffer tank selection is "YES:"  
Target water temperature = Target buffer tank temperature + [2°C]
  - When buffer tank selection is "NO"
    - If both zone 1 and zone 2 is active  
Target Water Temperature = Higher zone target water temperature of Zone 1 and Zone 2.
    - If only one zone is active  
Target Water Temperature = Zone target water temperature of active zone.

- Cool mode:
- When buffer tank selection is “YES”
  - If both zone 1 and zone 2 active  
Target Water Temperature = Lower Zone Target Water Temperature of Zone 1 and Zone 2
  - If only one zone is active  
Target Water Temperature = Zone Target Water Temperature of active zone
- When buffer tank selection is “NO”
  - If both zone 1 and zone 2 active  
Target Water Temperature = Lower Zone Target Water Temperature of Zone 1 and Zone 2
  - If only one zone is active  
Target Water Temperature = Zone Target Water Temperature of active zone

### 14.1.6 Target Zone Water Temperature Control

Purpose:- To control zone mixing and zone pump according to the zone sensor temperature

#### 14.1.6.1 Target Zone 1 Water Temperature Setting Control

- Start condition
  - Heating zone 1 is ON by remote control or Timer or Auto Mode **OR**
  - Cooling zone 1 is ON by remote control or Timer or Auto Mode.
- Cancel condition
  - Heating zone 1 is OFF by remote control or Timer or Auto mode **AND**
  - Cooling zone 1 is OFF by remote control or Timer or Auto mode.
- Target Zone 1 water temperature is calculated as below condition.
  - Target Zone 1 water temperature = A (Base temperature) + B (shift temperature)

A (Base Temperature)	Compensation	Direct
	Value from the curve + User shift value set	Direct value from user setting

\* During heat mode and compensation select, if powerful mode is activated, higher value of WLo or WHi will be use as curve value.

- B (shift temperature) value is depend on the room sensor selection at remote controller as below table:

B (Shift Temp.)	B shift value depend on the room sensor selection at remocon as table below
<b>Sensor selection</b>	
Water temperature	B = 0
External Room thermostat	B = 0
Internal Room thermostat & Room Thermistor	<b>Cool Mode:</b> B = 0 ; when Zone OFF or Zone Room Thermo OFF B = B = 1* (room set temp (R/C) – actual room temp) Max/Min Regulation of B: (Max = 5 ; Min = -5)
	<b>Heat Mode:</b> B = 0 ; when Zone OFF or Zone Room Thermo OFF B = follow Heating Room Temperature PI control logic
Pool Function Selected	B = Delta value setting from remocon

\* B = 0 regardless of which sensor selection, if SHP control bit is enable except Pool function select (maintain Pool “B” value)

\*\* Pool function also can be select at Zone 1 when optional PCB is connected and Zone 1 system is select.

- Maximum/minimum regulation of Target Water Temperature.

	Heating	Cooling
MAX	55°C (Below Ambient -25°C) * 75°C (Above Ambient -15°C) *	20°C
MIN	25°C	5°C

\* Between outdoor ambient -15°C and -25°C, max target decreases gradually from 75°C to 55°C.

- Target Zone 1 Water Temperature (Heat mode only) during SG ready control
  - If buffer tank selection is “NO” then following shift is carried out.
    - While digital input is “10” or “11” then,  
Final Target Zone 1 water temperature  
= Target Zone 1 water temperature\* (SG ready % setting (remote control menu))%
  - If buffer tank selection is “YES”
    - No shift of Target Zone 1 Water Temperature. Target Buffer Tank Temperature will change accordingly.  
\* Refer to “Buffer tank temperature control”

#### 14.1.6.2 Target Zone 2 Water Temperature Setting Control (Excluding when Operating in Standalone)

- Start condition
  - Heating zone 2 is ON by remote control or Timer or Auto Mode **OR**
  - Cooling zone 2 is ON by remote control or Timer or Auto Mode.
- Cancel condition
  - Heating zone 2 is OFF by remote control or Timer or Auto mode **AND**
  - Cooling zone 2 is OFF by remote control or Timer or Auto mode.
- Target Zone 2 water temperature is calculated as below condition.
  - Target Zone 2 water temperature = A (Base temperature) + B (shift temperature)

A (Base Temperature)	Compensation	Direct
	Value from the curve + User shift value set	Direct value from user setting

\* During heat mode and compensation select, if powerful mode is activated, higher value of WLo or WHi will be use as curve value.

- B (shift temperature) value is depend on the room sensor selection at remote controller as below table:

B (Shift Temp.)	B shift value depend on the room sensor selection at remocon as table below
Sensor selection	
Water temperature	B = 0
External Room thermostat	B = 0
Internal Room thermostat & Room Thermistor	<b>Cool Mode:</b> B = 0 ; when Zone OFF or Zone Room Thermo OFF B = B = 1* (room set temp (R/C) – actual room temp) Max/Min Regulation of B: (Max = 5 ; Min = -5)
	<b>Heat Mode:</b> B = 0 ; when Zone OFF or Zone Room Thermo OFF B = follow Heating Room Temperature PI control logic
Pool Function Selected	B = Delta value setting from remocon

\* B = 0 regardless of which sensor selection, if SHP control bit is enable except Pool function select (maintain Pool “B” value)

\*\* Pool function also can be select at Zone 2 when optional PCB is connected and Zone 2 system is select.

- Maximum/minimum regulation of Target Water Temperature.

	Heating	Cooling
MAX	55°C (Below Ambient -25°C) * 75°C (Above Ambient -15°C) *	20°C
MIN	25°C	5°C

\* Between outdoor ambient -15°C and -25°C, max target decreases gradually from 75°C to 55°C.

- Target Zone 2 Water Temperature (Heat mode only) during SG ready control
  - If buffer tank selection is "NO" then following shift is carried out.
    - While digital input is "10" or "11" then,  
Final Target Zone 2 water temperature  
= Target Zone 1 water temperature\* (SG ready % setting (remote control menu))%
  - If buffer tank selection is "YES"
    - No shift of Target Zone 2 Water Temperature. Target Buffer Tank Temperature will change accordingly.  
\* Refer to "Buffer tank temperature control"

### 14.1.6.3 Zone Temperature Control Contents

- During Standard System (Optional PCB not connected)
  - Only 1 zone temperature control is available
  - This zone room temperature is control by either one of the 4 room sensor (Room Th, Int/Ext Room Thermostat, Water temperature)
  - Target Zone Water Temperature is calculated based on selected temperature control type (Compensation or Direct) and selected room sensor. Target Water Temperature will set same as Target Zone Water Temperature
  - Target Water Temperature is the temperature for heat pump to operate refer to indoor water outlet sensor.
  - Heat pump and water pump OFF when ROOM Thermo OFF (Zone thermo OFF by Room Th or Room Thermostat).

\* There will be no zone sensor connected to zone 1 (No zone sensor error), mixing valve and zone pump will not operate.

- During Extension System (Optional PCB connected)

\* There will be no zone sensor connected to zone 1 (No zone sensor error), mixing valve and zone pump will not operate.


- During Extension System (Optional PCB connected)
  - Buffer Tank connection select "NO" &
    - One zone system is select
      - This zone room temperature control by either one of the 4 room sensor (Room Th, Int/Ext Room Thermostat, Water temp.)
      - Target Zone Water Temperature calculate base on selected temperature control type (Compensation or Direct) and selected room sensor.
      - Target Water Temperature will set same as Target Zone Water Temperature
      - Target Water Temperature is a temperature for heat pump to operate refer to indoor water outlet sensor.
      - Heat pump and water pump OFF when ROOM Thermo OFF (Zone thermo OFF by Room Th or Room Thermostat).

\* There will be no zone sensor connected to zone 1 (No zone sensor error), mixing valve and zone pump will not operate.

- 2 zone system select
  - Each zone room temperature is control by each sensor which select from either one of the 4 room sensor
  - Target Zone 1 & 2 Water Temperature is calculated based on selected temperature control type (Compensation or Direct) and selected room sensor.  
\* Zone Mixing Valve & Zone pump will operate to achieve Target Zone Water Temperature which refer to zone sensor.  
\* Zone Sensor will detect if zone sensor is open or short.
  - Target Water Temperature will set same as the active & higher zone water temperature setting. (When cooling mode, lower zone water temp setting)
  - Target Water Temperature is the temperature for heat pump to operate refer to indoor water outlet sensor.


- Heat pump and water pump OFF when ROOM Thermo OFF (Both Zone thermo OFF by Room Th or Room Thermostat).
- Buffer Tank Connection select "YES" &
  - 1 zone system or 2 zone system select
    - Each zone control by each sensor which select from either one of the 4 room sensor
    - Target Zone 1 & 2 Water Temperature calculate base on selected temperature control type (Compensation or Direct) and selected room sensor. Each zone have their own Target Zone Water Temperature.
      - \* Zone Mixing Valve & Zone pump will operate to achieve each Target Zone Water Temperature which refer to zone sensor
      - \* Zone Sensor will detect if zone sensor is open or short.
    - Target Buffer Tank Temperature will be set as active & higher zone water temperature setting + Buffer Delta T. (Heating) Target Buffer Tank Temperature will be set as active & lower zone water temperature setting (Cooling).
    - Target Water Temperature will set as Target Buffer Tank Temperature + [2°C] (Heating) Target Water Temperature will set as Lower or Active Target Zone Water Temp. + [-3°C] (Cooling)
    - Target Water Temperature is a temperature for heat pump to operate refer to indoor water outlet sensor.
    - Heat pump and water pump OFF when ROOM thermo OFF
      - Heat mode: ROOM thermo OFF (Buffer Tank Temperature > Target Buffer Tank + [0°C]
      - Cool mode: ROOM Thermo OFF (Both Zone thermo OFF by Room Th or Room Thermostat)

### 14.1.7 Auto Mode Operation

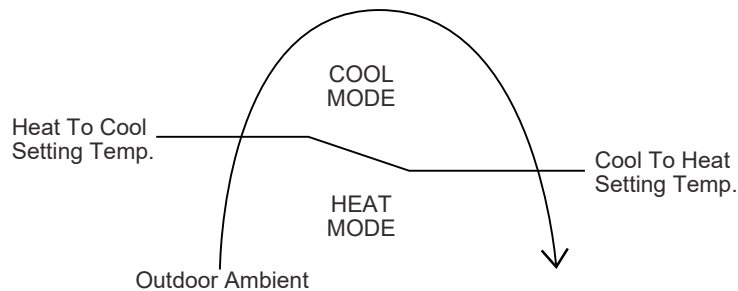

- Control details:
  - To enable the unit to operate either heat or cool mode automatically, heat to cool set temperature and cool to heat set temperature can be set by control panel.
  - Automatic operation is judged based on control panel setting temperature and outdoor ambient temperature.
  - \* Minimum setting of heat to cool set temperature is 1°C higher than cool to heat set temperature.
- Judgement control:
  - If outdoor ambient temperature < Heat to Cool Set Temperature, unit will operate in Heat Mode or else the unit will operate in Cool Mode.
  - If current operation is Cool mode, outdoor ambient temperature > Cool to Heat Temperature, unit will maintain Cool mode operation or else the unit will operate Heat mode.
  - If current operation is Heat mode, outdoor ambient temperature >Heat to Cool Temperature, unit will maintain Heat mode operation or else the unit will operate Cool mode.
  - Every 60 minutes the outdoor ambient temperature is judged.
  - When Auto + Tank mode is selected, operation mode switching is judged by both outdoor ambient temperature and indoor air temperature.

### 14.1.8 Auto Cooling Mode Operation Limit

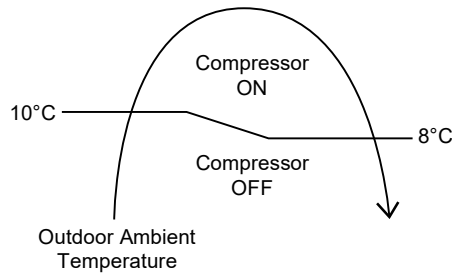

- Auto Mode Cooling Only operation will start once the outdoor ambient temperature reaches 19°C and compressor will continue to run until the outdoor ambient temperature drops to 16°C.
- Due to this limitation, If Heat to Cool temperature is set lower than 19°C, the compressor will not operate until the outdoor ambient temperature reaches 19°C or higher.

### 14.1.9 Tank Mode Operation

- 3 ways valve direction
  - 3 ways valve switch to tank side during Tank Thermo ON condition. Switch 3 ways valve to room side when tank achieve Tank Thermo OFF temperature.
- Tank Thermo ON/OFF Characteristic
  - Tank Thermo OFF

Case 1: Internal Tank Heater is select and Tank Heater ON

- Tank temperature > Tank Set Temperature continuously for 15 seconds.
- Water outlet >75°C

- Case 2: Tank Heater OFF OR External Heater is select

- When heat pump OFF due to water thermos & Tank temperature > Tank water set temperature for continuously 20 seconds. **OR**
- Tank temperature > Tank set temperature + 1°C for continuously 20 seconds.

- Tank Thermo ON

Case 1: Tank Heater ON (Internal Tank Heater)

- Tank temperature < Tank set temperature + R/C (Tank re-heat temperature)

Case 2: Tank Heater OFF (Internal Tank Heater)

- Tank temperature < Tank water set temperature + R/C (Tank re-heat temperature)

\* When tank thermo ON, water pump will ON for 3 minutes then only heat pump turn ON.

\* Tank water set temperature = tank set temperature or 65°C whichever lower.

- 2 ways valve close
- Heat pump Thermostat Characteristic
  - Heat pump Water Outlet set temperature is set to below table:

Outdoor ambient temperature	Heat pump water outlet temperature
< -20°C	55°C
> -20°C	65°C
> -15°C	75°C

Characteristic of heat pump thermos ON/OFF under tank mode condition:

Water Outlet Thermo Condition

- Heat pump thermos OFF temperature:
  - 1 Heat pump thermo OFF temperature = Target Water outlet temperature + (3°C)
  - 2 Water outlet temperature > heat pump thermo OFF temperature for continuously 3 minutes, heat pump OFF but water pump continue ON.

- Heat pump thermo ON temperature
  - Heat pump thermo ON temperature = water inlet during thermo OFF time + [-3°C]
  - When water outlet temperature < heat pump thermo ON temperature, heat pump ON.

Water inlet thermo protection condition

- Heat pump thermo OFF temperature:
  - Water inlet temperature > [75°C/55°C] for continuously 30 seconds, heat pump OFF, water pump continue ON.
- Heat pump thermo ON temperature:
  - Heat pump thermos ON temp = water inlet temperature < [75°C/55°C].

Outdoor ambient temperature	Water inlet temperature
< -25°C	55°C
> -25°C	75°C

Thermo ON/OFF for Heat Pump in Tank Operation:

When tank temperature achieve heat pump OFF condition, refer below condition:

Conditon 1 : Tank Heater ON (Internal Tank Heater)

- Heat pump will turn OFF, water pump continue ON and room heater will continue ON if tank temperature below tank heater thermo ON condition. 3 ways valve will only switch to room side after tank temperature reach tank heater thermo OFF condition.

Conditon 2 : Tank Heater OFF (Internal Tank Heater)

- If tank temperature achieve tank thermo OFF, heat pump turn OFF, water pump turn OFF, room heater OFF and 3 ways valve switch to room side.

When tank temperature achieve heat pump ON condition, water pump ON, heat pump ON and room heater turn OFF.

Heat pump OFF condition at Tank Mode

- Tank temperature > tank water set temperature continuously for 20 seconds after heat pump thermos OFF due to water thermo. (Heat pump turn OFF but water pump continue ON and room heater turn ON to achieve tank set temperature) **OR**
- Tank temperature > tank set temperature + [1°C] for continuously 20 seconds. (Heat pump OFF, water pump OFF, room heater OFF and 3 ways valve switch to room side)

Heat pump ON condition at Tank Mode

- Tank temperature < tank water set temperature + R/C setting (Tank re-heat temp) (Water pump turn ON OR continue ON, heat pump ON and 3 ways valve switch to tank side or maintain at tank side)

Tank heater control

- Internal heater only operates to tank side if Tank heater ON and backup heater is enable.

Internal heater turn ON condition:

- Tank temperature < tank set temperature **AND**
- Heat pump thermos OFF **AND**
- 20 minutes from previous heater off **AND**
- Internal tank heater selects USE from control panel.

Internal heater turn OFF condition:

- Tank temperature > tank set temperature for continuously 15 seconds **OR**
- Heat pump thermo ON **OR**
- Mode change or operation is off by control panel.

### 14.1.10 Heat + Tank Mode Operation

- 1 3 ways valve control:
  - 3 ways valve switch to room side during room heat-up interval and switch to tank side during tank heat-up interval. Both modes will switch alternately. Tank mode is the initial running mode of Heat + Tank mode.
  
- 2 Heat pump operation control:
  - During room heat-up interval
    - Follow normal heating operation.  
Switching to tank side depends to below cases:  
Case 1:  
[Previous switch from tank interval to room interval due to thermo OFF]
    - Switch to tank heat-up interval when Tank temp < Tank thermostats ON temp (Room heat-up interval ends)  
Case 2:  
[If heating operation at room side is less than 30 minutes and switch to tank side 3 times consecutively]
    - Maintain at room heat-up interval regardless of the tank temperature. Switch to tank heat-up interval only when (Room Interval Timer is complete **OR** Room heat pump thermo OFF) **AND** Tank temperature < Tank thermo ON temperature.  
Case 3:  
[Previous switch from tank interval to room interval due to tank interval timer is complete]
    - Maintain at room heat-up interval regardless of the tank temperature. Switch to tank heat-up interval only when (Room Interval Timer is complete **OR** Room heat pump thermo OFF) **AND** tank temperature < Tank thermo ON temperature.
  - During Tank heat-up interval
    - Tank interval is the first mode running when heat + tank mode is select.
    - Switch to room interval only when tank achieve tank thermo OFF **OR** tank heat-up interval timer is complete.
    - Heat pump operates according to normal tank mode operation.
  
- 3 Room heater control:
  - During heating heat-up interval
    - Follow normal room heater control operation.
  
- 4 Tank heater control:
  - During heating heat-up interval
    - Internal tank heater will not function under heating heat-up interval.
  - During tank heat-up interval
    - Internal tank heater will turn ON after heat pump thermo off to boil tank temperature to tank set temperature.
  - 2 ways valve control is open
  - Water pump control:
    - Water pump always turn ON if room heat pump thermo ON **OR** Tank thermo ON.

### 14.1.11 Cool + Tank Mode Operation

- 1 3 ways valve control:
  - 3 ways valve switch to room side during room cooling interval and switch to tank side during tank heat-up interval. Both mode will switch alternately. Tank mode is the initial mode of cool + tank mode.
  
- 2 Heat pump operation control:
  - During room heat-up interval
    - Follow normal cooling operation.  
Switching to tank side depends to below cases:  
Case 1:  
[Previous switch from tank interval to room interval due to thermo OFF]
    - Switch to tank heat-up interval when Tank temperature < Tank Thermo ON temperature (Room interval will ends)  
Case 2:  
[If cooling operation at room side is less than 30 minutes and switch to tank side for 3 times consecutively]

- Maintain at room cooling interval regardless of the tank temperature. Switch to tank heat-up interval only when (Room Interval Timer is complete **OR** Room heat pump thermo OFF) **AND** Tank temperature < Tank thermo ON temperature.

Case 3:

[Previous switch from tank interval to room interval is due to tank interval timer is complete]

- Maintain at room cooling interval regardless of the tank temperature. Switch to tank heat-up interval only when (Room Interval Timer is complete **OR** Room heat pump thermo OFF) **AND** tank temperature < Tank thermo ON temperature.


\*Tank Thermo ON temperature:

Internal Tank Heater select USE	<Tank set temperature + R/C setting (Tank re-heat temperature)
Others	<Tank water set temperature + R/C setting (Tank re-heat temperature)

- During Tank heat-up interval
    - Tank interval is the first mode running when the cool + tank mode is select.
    - Switch to room interval only when tank achieve tank thermo OFF **OR** tank heat-up interval timer is complete.
    - Heat pump operates according to normal tank mode operation.
- 3 Room heater control:
- During room cooling interval
    - Room heater is OFF and not operates.
- 4 Tank heater control:
- During room cooling interval
    - Internal tank heater will not function under room cooling interval.
  - During tank heat-up interval
    - Internal tank heater will turn ON after heat pump thermos off to boil tank temperature to tank set temperature.
- 5 2 ways valve is close.
- 6 Water pump control:
- Water pump always turn ON if room heat pump thermo ON **OR** Tank thermo ON.

### 14.1.12 Outdoor Fan Motor Operation

Outdoor fan motor is adjusted according to operation condition. It starts 30 seconds before compressor starts operation and it stops 60 seconds after compressor stops operation.

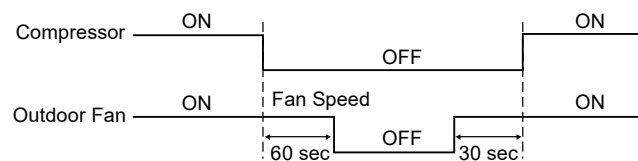


The reason the outdoor fan stops 60 seconds after the compressor stops is to exhaust heat. The reason why the compressor starts operating 30 seconds before it starts is to accurately detect the outside temperature.

## 14.2 Water Pump

The system will start checking on the water flow level after operation start for 30 seconds. If water pressure level is detected low or high continuously 300 seconds, the water pump and the compressor will be OFF permanently and OFF/ON control panel LED will blink (H21 error occurs).

### 14.2.1 Water Pump Control

- Once the indoor unit is ON, the water pump will be ON immediately and no error judgment for 30 seconds. However, during this 30 seconds operation, if there is any abnormality cause at outdoor or malfunction, the compressor should be OFF immediately and restart delay after 3 minutes.
- The system will start checking on the water flow level after operation start for 30 seconds. If water flow level is detected low continuously 140 seconds, the water pump and the compressor will be OFF permanently and OFF/ON control panel LED will blink (H62 error occurs).
- When error happens, the power has to be reset to clear the error.
- If there is no error indication, the water pump shall be continuously running.
- The water pump will remain ON when compressor OFF due to thermostat OFF setting is reached.
- Water pump will OFF when room thermo **OR** tank thermo **OR** buffer tank thermo OFF.
- Water pump will delay 30 seconds to turn OFF when request to OFF except during anti-freeze deice activate or air purge mode.

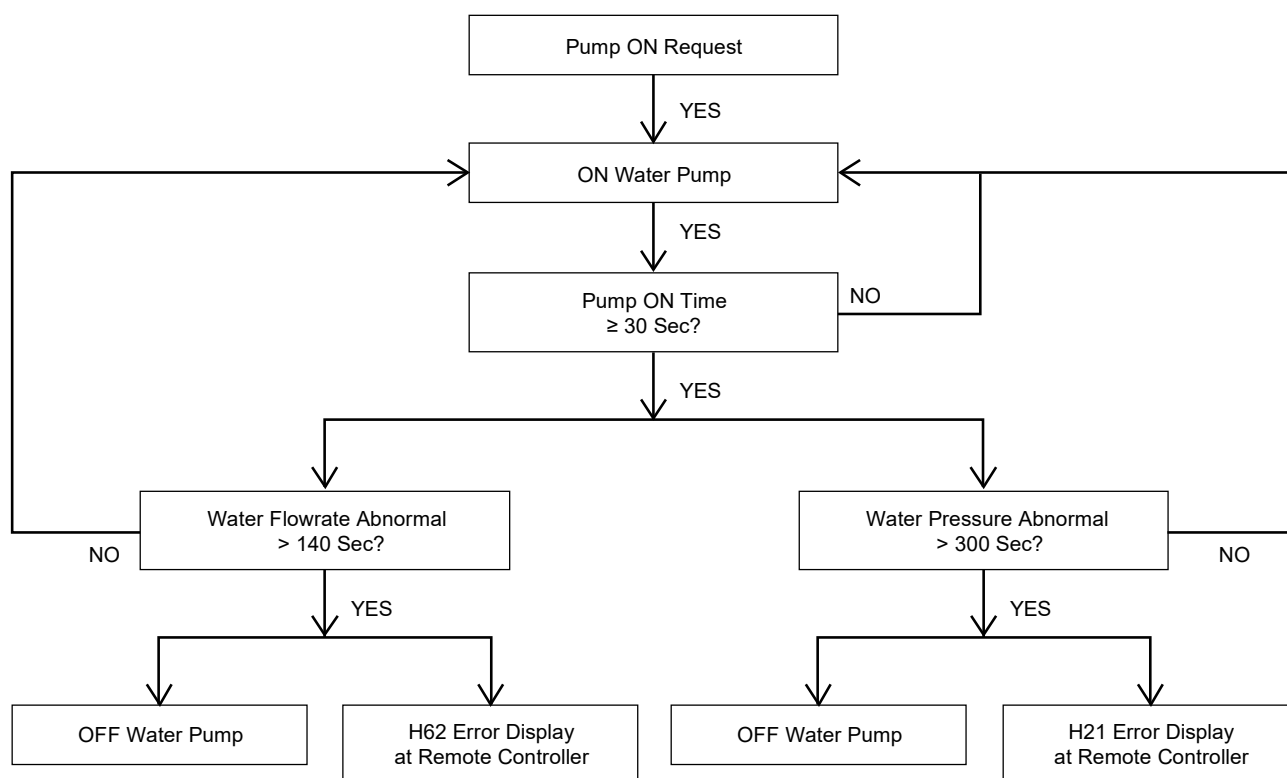

#### Maximum pump speed setting on remote control


- Standard pump speed is automatically controlled to get the designed water temperature different between water inlet and outlet ( $\Delta T$ ). Instead of setting the standard pump speed, maximum pump speed is manually adjusted by the installer according to water circuit pressure drop.

However, the following sequences do not follow maximum pump duty setting by remote control.


- Pump down mode
- Air purge mode
- Normal deice

1) P-Q graph for different pump HEX duty

- Standalone (WH-WDG09ME8, WH-WDG12ME8, WH-WDG16ME8)

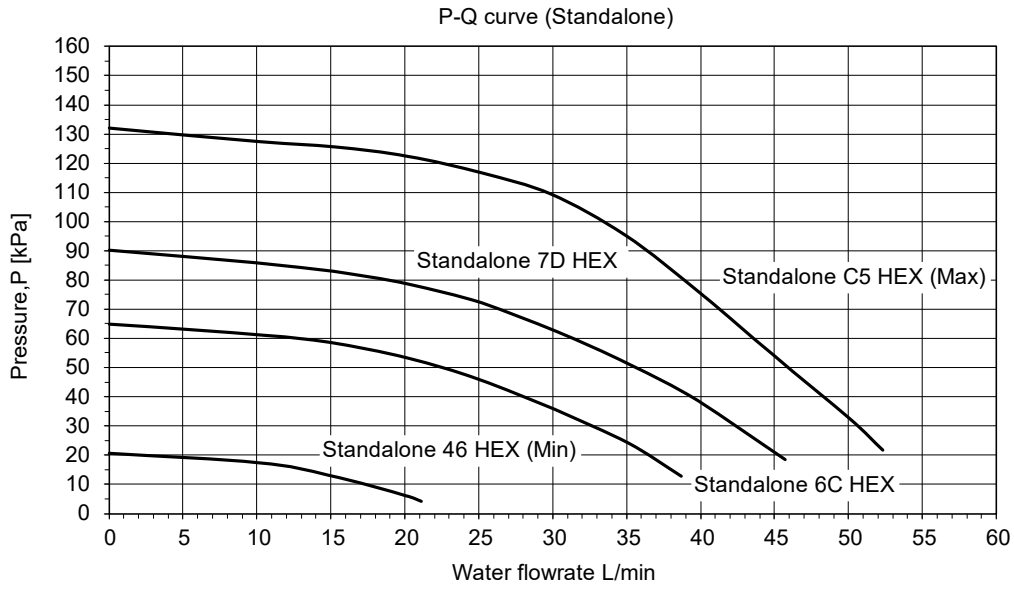

- Connection AiO (WH-WDG09ME8, WH-WDG12ME8, WH-WDG16ME8)

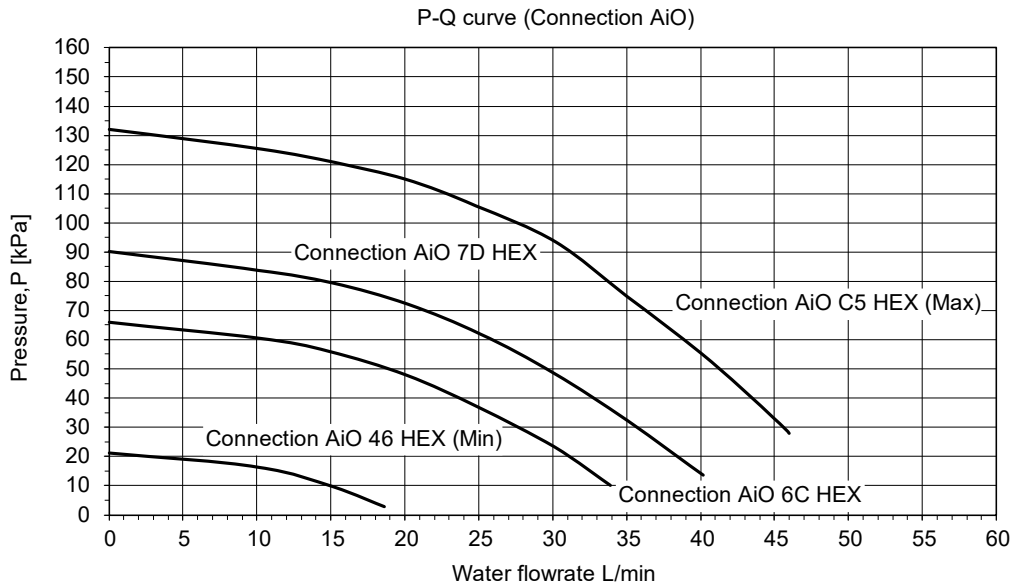


※ This condition is under connecting ODU and connecting 5m piping (inner diameter  $\Phi 25$ ) between ODU and IDU (AiO).

## 14.2.2 Zone Water Pump Control

Purpose:

- Water pump install at each zone to circulate the water inside each zone during buffer tank connection selected "YES" or 2 zone systems.

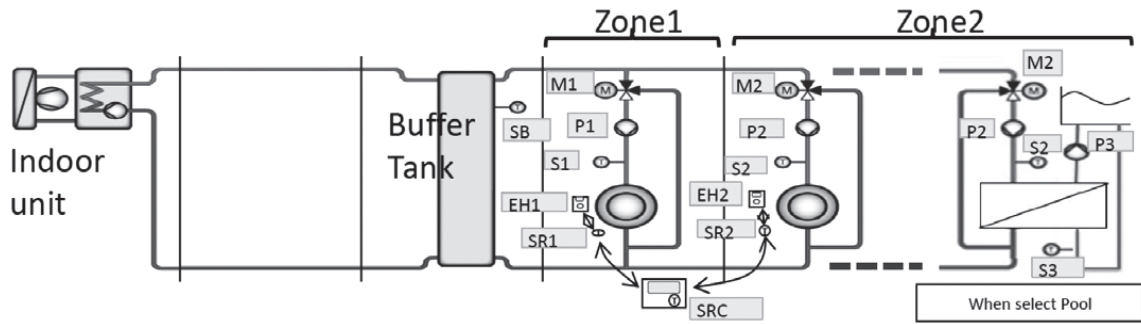

Content:

- AC type water pump install for this zone water pump control. When optional PCB connected, 230V output will drive this zone pump.
- There are three pump can be connected through Optional PCB. (Zone 1 Pump, Zone 2 Pump, & Pool Pump)
  - \* Zone 1 pump [P1] use to circulate zone 1 water circuit & Zone 1 mixing valve [M1] adjust to control the Zone 1 target water temperature.
  - \* Zone 2 pump [P2] use to circulate zone 2 water circuit & Zone 2 mixing valve [M2] adjust to control the Zone 2 target water temperature.
  - \* When Pool Function select as Zone 2 circuit, [P2] use to circulate water to heat exchanger which use to transfer heat to pool water.
  - \* Pool pump [P3] circulates the pool water through the heat exchanger to get warm water.
- Zone 1 and Zone 2 water pump start condition:
  - Zone room request ON  
(eg. Zone 1 thermo ON, only zone 1 pump will turn ON)
- Zone 1 and Zone 2 water pump stop condition:
  - Zone room request OFF
- Pool water pump start condition:
  - Pool Zone request ON **AND**
  - Pool function is selected
- Pool water pump stop condition
  - Pool zone: Zone room request OFF **OR**
  - Pool function is cancel
- \* Zone 1 & Zone 2 water pump need to turn OFF when antifreeze deice pump stop control activate and turn ON back after the antifreeze deice pump stop control end under setting of "NO" buffer tank connection.

### Zone Pump Prohibit ON control:

- Start condition:
  - Zone 1 water temperature  $\geq 85^{\circ}\text{C}$  continuously for 5 minutes
  - \*stop zone water pump operates if the zone water fulfilled.
- Cancel condition:
  - After 30 minutes from start condition fulfilled.
  - \*zone water pump operates according to normal condition.

### Zone Pump Control during Anti-Freeze

Zone pump control during Zone Anti-Freeze Control:

- When Zone Anti-Freeze Flag=1, Zone Pump Turn ON.
- When Zone Anti-Freeze Flag=0, Zone Pump Turn OFF.

Zone pump control during Indoor Anti-Freeze Control:

- Zone pump only ON/OFF if the Extension PCB connected and Buffer Tank select "NO" condition


When Indoor Anti-Freeze flag=1, Zone Pump Turn ON

When Indoor Anti-Freeze flag=0, Zone Pump Turn OFF

\* Pool Water Pump will not affected by both Indoor anti-freeze control or zone anti-freeze control.

### 14.2.3 Water Pump Speed Feedback Error

- Basically pump speed feedback is control by micon.
- When pump speed is below low limit or over high limit for a few seconds, micon detect pump error and system is stopped.
- Error detection conditions:
  - Detect abnormal water pump speed for continuous 10 secs.
  - Current pump speed < 300 rpm or
  - Current pump speed > 6000 rpm for 10 seconds.
- Control contents:
  - When error occurs, water pump, heating and heater is stopped for 30 seconds then restart again (Retry control).
  - When micon detect error again, system is stopped and error code [H20] is displayed at control panel.

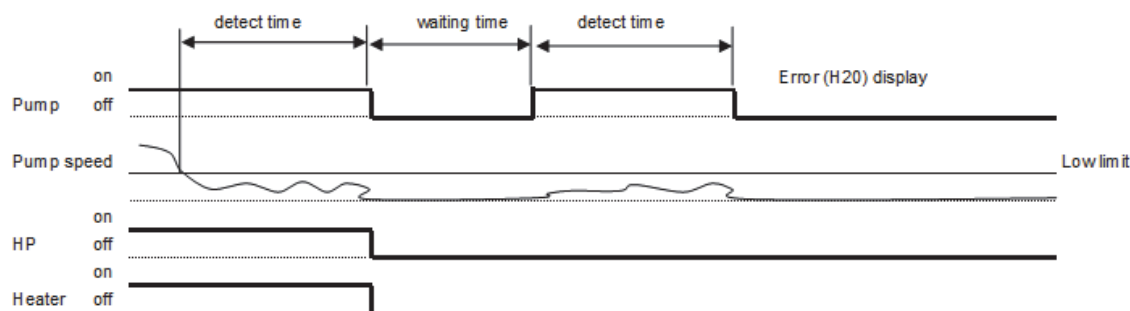

### 14.3 Extra Pump Function (Optional)

There are three different controls for the external pump, Heat (default), DHW or NO.

#### Remocon setting : Extra pump = Heat (default)

This is the conventional setting for adding an external water pump when the flow rate is insufficient due to water pressure loss, etc.

#### Start conditions:

- 1) Outdoor Water Pump Turn ON
- 2) 3 ways valve switch at room side
- 3) External Pump control for Bivalent ON. (Alternative or SG ready mode or Smart mode)
- 4) Heat Pump OFF AND Boiler turn ON under Bivalent control
- 5) When Optional PCB Connectivity select No AND Buffer Tank Connection select Yes
- 6) Not Tank only mode AND Zone room thermo ON

When [ (1) AND (2) ] OR [ (3) AND (4) ] OR [ (5) AND (6) ] fulfill, turn ON extra pump.

\*Output 230V to the external pump when fulfill start condition.

#### Cancel conditions:

- 1) Outdoor water pump turn OFF
- 2) 3 ways valve switch to tank side
- 3) Heat pump OFF and Boiler OFF under Bivalent Control
- 4) When Optional PCB Connectivity select No AND Buffer Tank Connection select Yes
- 5) Tank Only mode
- 6) Zone room thermo OFF

When { [ (1) OR (2) ] AND (3) } OR { (4) AND [ (5) AND (6) ] } fulfill, turn OFF extra pump.

\*Stop output 230V to external pump when either one stop condition fulfill.

### Remocon setting : Extra pump = DHW

This is the setting when using DHW circulation operation.

#### DHW circulation start conditions

All of the following holds

- 1) Extra pump = "DHW"
- 2) DHW circulation is effective time.
- 3) Tank mode is "ON"

#### DHW circulation start conditions

Which of the following holds

- 1) Extra pump = "No" or "Heat"
- 2) DHW circulation isn't effective time.
- 3) Tank mode is "OFF"

#### DHW circulation operation

Operation is 2 type, Comfort or Efficiency

#### DHW circulation operation (Comfort)


Prioritize comfort over power consumption

- 1) When DHW circulation request is received, pump port is supply 230V
- 2) During this operation, 230V is always supply
- 3) When operation is "OFF", 230V is stopped

#### DHW circulation operation (Efficiency)

Pump operate intermittent (ON/OFF)

- 1) When DHW circulation request is received, pump port is supply 230V.
- 2) Pump operate intermittent (ON/OFF)  
ON time and OFF time is decided by Remocon.
- 3) When operation is "OFF", 230V is stopped

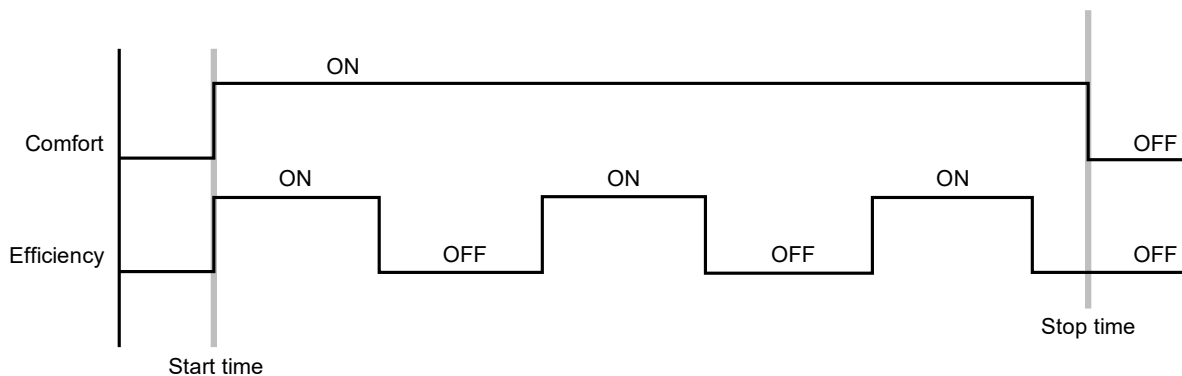


### Remocon setting : Extra pump = No

The extra pump does not work.

## 14.4 Water Circuit Part Safety

### 14.4.1 Water Circuit Part Safety Control

- 1 When water pump is ON, the system will start checking flow switch status (ON/OFF).
- 2 If the flow switch ON for 10 seconds, the system will check on the water inlet temperature for 10 seconds. If the water inlet temperature not exceeds 80°C, the water pump shall be continuously running with normal mode.  
If the water inlet temperature exceeds 80°C for continuously 10 seconds, the water pump will be OFF immediately.
- 3 After water pump OFF for more than 10 minutes, it will be ON back and the indoor unit safety control checking is restarted.

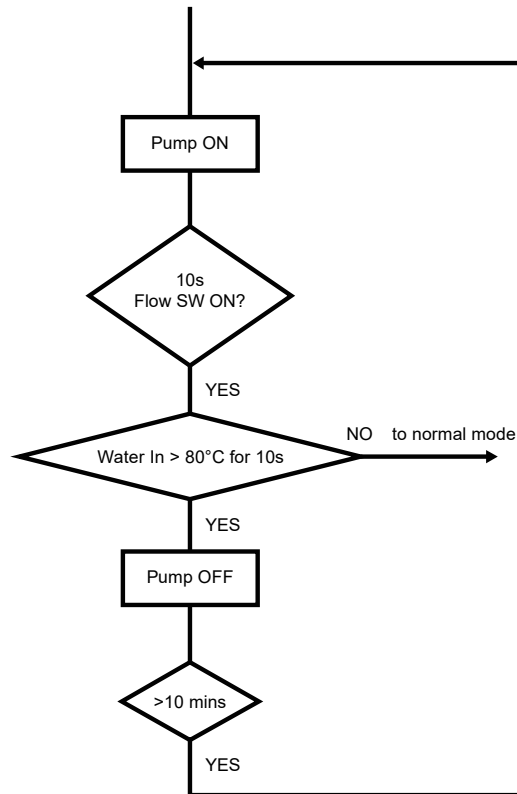

### 14.5 Auto Restart Control

- 1 When the power supply is cut off during the operation of Air-to-Water Heatpump, the compressor will reoperate after power supply resumes.

### 14.6 Indication Panel

LED	Operation
Color	Green
Light ON	Operation ON
Light OFF	Operation OFF

Note:

- If Operation LED is blinking, there is an abnormality operation occurs.

## 14.7 Indoor Back-Up Heater Control (Excluding when Operating in Standalone)

### 14.7.1 Indoor Electric Heater Control

- 1 Normal Heating Mode
    - Heater On condition:
      - a. Heater switch is ON
      - b. After Heatpump thermo ON for [30] mins
      - c. After water pump operate [9] mins
      - d. Outdoor air temperature < Outdoor set temperature for heater
      - e. When water outlet temperature < Water set temperature + [-4°C]
      - f. [20] minutes since previous Backup heater Off
        - \* When heatpump cannot operate due to error happens during normal operation, heater will go into force mode automatic
        - \* Heater need to operate during deice operation
      - g. Current water flowrate is higher than min. flowrate
    - Heater Stop Condition:
      - a. When outdoor set temperature > outdoor set temperature + [+2°C] for continuous 15 secs OR
      - b. When water out temp > water set temperature + [-2°C] for continuous 15 secs OR
      - c. Heater switch is Off OR
      - d. Heatpump thermo-off or OFF condition
  - 2 Force Heater Mode
    - Heater On condition:
      - a. After water pump operate [9] mins
      - b. When water outlet temperature < water set temperature + [-4°C]
      - c. [20] minutes since previous Backup heater Off
      - d. Current water flowrate is higher than min. flowrate
    - Heater Stop condition
      - a. Force mode off **OR**
      - b. When water outlet temperature > water set temperature + [-2°C] for continuous 15 secs
- \* Do not operate heater at the following situation
- 1 Water outlet temperature sensor, and water inlet sensor abnormal
  - 2 Flow switch abnormal
  - 3 Circulation pump stop condition

### 14.7.2 Room Heater Operation during Deice

#### Purpose:

- To protect the indoor Heat Exchanger from ice forming and prevent heat exchanger plate breakage.

#### Control content:

- This Heater protection control will activate only if the backup heater is enable at custom setup by remote controller. Once fulfil the start condition, room heater will turn ON together (base on max heater capacity selection) and stop together if stop condition is fulfilled.
  - \* If the heater is request to turn ON OLP feedback will be detected.

#### Starting conditions:

- During normal deice operation
- Water outlet temperature < 7°C or  
Water inlet temperature < 7°C


Heater operates when 1~2 fulfilled.

#### Stop condition:

- When normal deice end or
- Water outlet temperature > 45°C

However, room heater keeps ON if indoor electric heater control activate.

< Deice operation time chart >

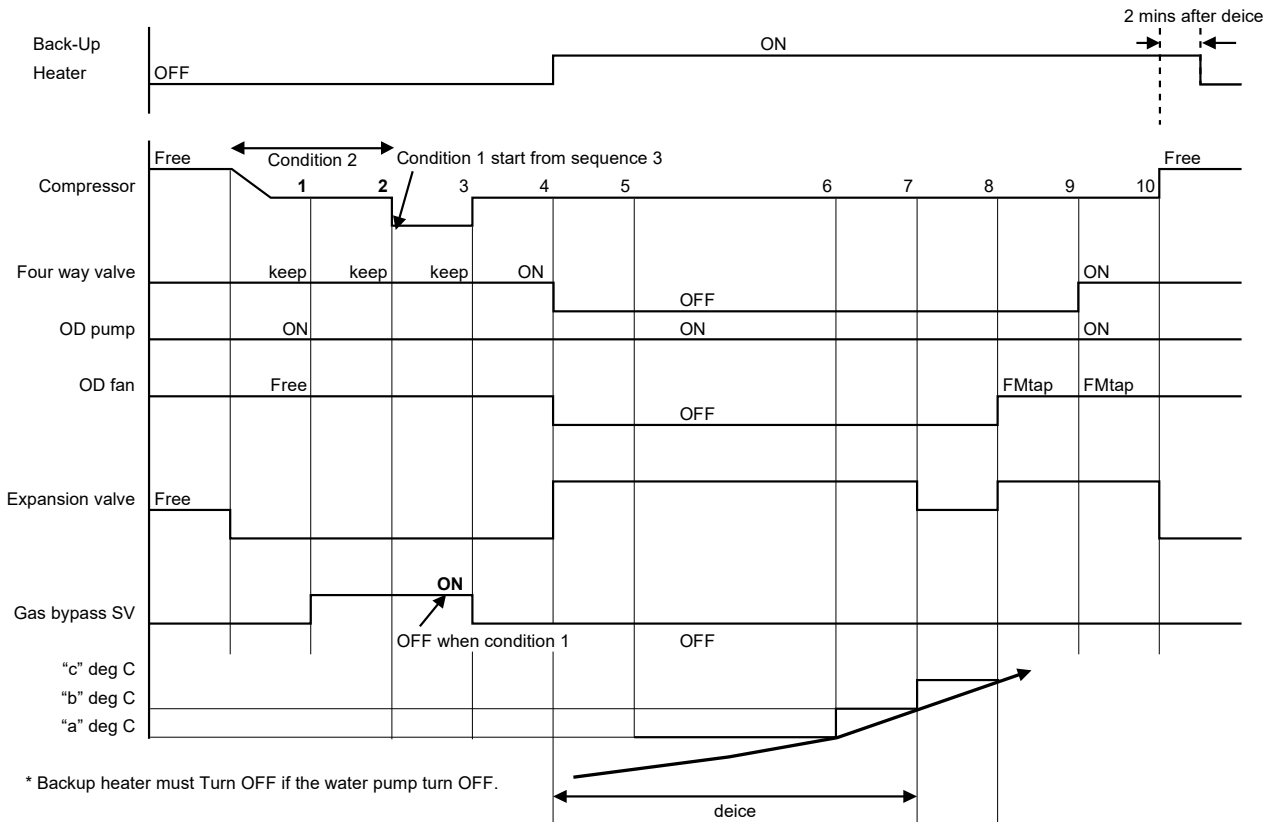


## 14.8 Tank Heater Control (Excluding when Operating in Standalone)

### 14.8.1 Internal Heater Control at Tank Mode

- Internal heater turn ON condition:
  - 1 Internal Heater select for Tank heater by remote controller
  - 2 Tank Heater select ON by user.
  - 3 Backup Heater Enable
  - 4 Tank Temperature < Tank Set Temperature
  - 5 Heat Pump Thermo OFF
  - 6 20 minutes from previous heater off.
- Room heater turn OFF condition:
  - 1 Tank Temperature > Tank Set Temperature + [0°C] for continuous 15 seconds. **OR**
  - 2 Heat Pump Thermo ON **OR**
  - 3 Mode Change or Operation OFF by remote controller **OR**

\* Backup Heater Turn ON/OFF all together according to the selected heater capacity.

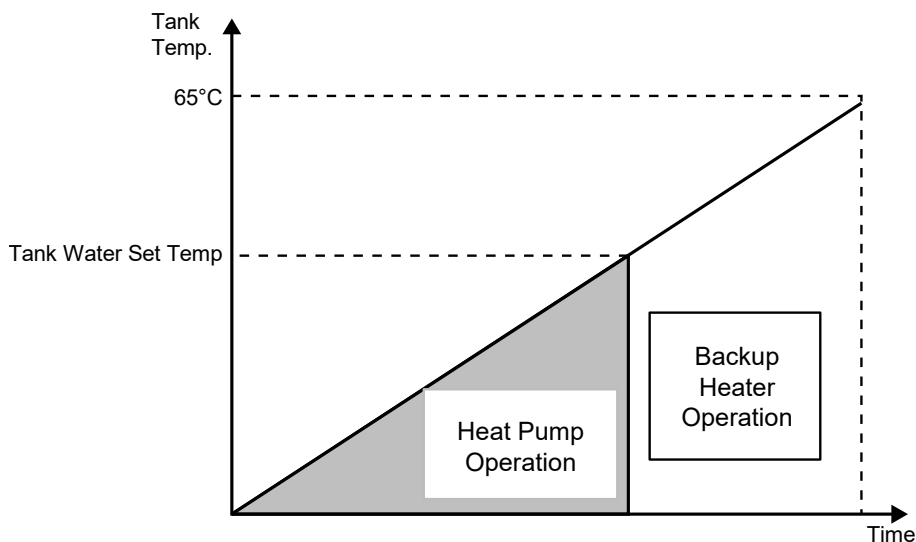

## 14.9 Base Pan Heater Control (Optional)

- To enable the base pan heater function, control panel initial setting has to be manually adjusted by activating Base Pan Heater menu.
- There are 2 optional start condition can be selected, Type A or Type B.
- Control details:

### 1 Type A: (Default Auto Mode)

#### Start conditions:

- When outdoor air temperature  $\leq 3^{\circ}\text{C}$  during heating and deice operation is ON.

#### Control contents:

- Base pan heater is ON during deice operation and continues ON for 10 minutes after deice operation ends.

#### Cancel condition:

- When outdoor temperature  $> 6^{\circ}\text{C}$  after deice end or
- When operation is not at heating mode or
- Base pan heater ON timer count is completed.

### 2 Type B: (ON Mode)

#### Start conditions:

- When outdoor air temperature is  $\leq 5^{\circ}\text{C}$  and operates in heating mode, base pan heater is ON.

#### Cancel conditions:

- When outdoor air temperature is  $> 7^{\circ}\text{C}$  or
- When operation is not at heating mode.

## 14.10 Force Heater Mode

Purpose of Force Heater Mode:

- As a backup heat source when heat pump error. Force heater Mode only control backup heater to heat up the room circuit, and turn ON back up heater or booster heater to boil up tank water base on the tank heater selection (internal or external).

Force Heater Control start condition:

- Force heater request ON by user during error OR auto turn ON by remote controller during error **AND** (Force Heater mode can be operate regardless of mode selection, remocon will send the latest mode selection force bit by bit to indoor. Indoor will judge to turn ON heater to room side if it is heat mode selected, and turn ON heater to heat tank water base on tank heater selection)
- During Error Happen (exclude the error list below)

Error List which not allow Force Heater operation

H12	Capacity Mismatch	H90	Abnormal ID/OD communication
H20	Abnormal Water Pump	H95	Abnormal Voltage Connection
H21	Abnormal Water Pressure	F30	Abnormal water outlet 2 sensor
H62	Abnormal Water Flow	F37	Abnormal Water Inlet sensor
H70	Abnormal Back-up Heater OLP	F45	Abnormal Water Outlet sensor
H74	PCB Communication Error	F50	Abnormal Water Inlet 2 sensor
H76	Indoor-Remote Controller Communication Error		
[ When tank mode operate with external heater selected & tank heater select ON ]			
H22	Abnormal tank 2 sensor	H91	Abnormal tank heater OLP
H72	Abnormal tank 1 sensor		

Force Heater Control Stop Condition:

- Force Heater request OFF **OR**
- Operation OFF request **OR**
- Power reset **OR**
- Error of above list happens during force heater operation.

Control contents:

- After fulfill start condition, indoor will operate the force heater operation according to below mode condition  
Heat mode Only: Turn ON backup heater to achieve room heat pump target water temperature.  
Heat + Tank mode: Turn ON backup heater to heat up room **OR** Turn ON Heater to Boil up tank water.  
Cool mode Only: Water pump and backup heater will OFF in force heater mode.  
Cool + Tank mode: Operate pump and internal Heater **OR** External heater to Boil up tank water.  
Tank mode Only: Operate pump and internal Heater **OR** External heater to Boil up tank water.  
\* For heat mode condition, backup heater will only turn ON if the backup heater is enable regardless of Room Heater Selection.  
\* For tank mode condition, If internal heater selected backup heater will turn ON to boil up tank water.  
If external heater selected , booster heater will turn ON to boil up tank water regardless of tank heater selection.

Room Side: (Heat Mode):

- When force heater mode start condition fulfilled, turn ON water pump and turn ON backup heater follow below control.
- Operate the 3 ways valve at room side only and turn ON 2 ways valve as heat mode operation.
- Turn ON the zone pump and mixing valve if system select 2 zone system or Buffer tank connect YES, control according to normal zone pump and mixing valve control.
- When Force heater mode stop condition fulfilled, turn OFF heater as below condition and turn OFF water pump after pump delay time.

Backup Heater On Condition:

- When Force Heater Control start condition fulfill **AND**
- After water pump operate 2 minutes **AND**
- When water outlet temperature < water set temperature + [-4°C] **AND**
- 20 minutes since previous Backup heater Off **AND**
- Backup Heater Enable

Backup Heater Stop condition:

- Force mode off **OR**
- Operation off **OR**
- When water outlet temperature > water set temperature + [-2°C] for continuous 15 secs **OR**  
\* ON/OFF follow normal heater sequence.

Tank side (Tank mode):

- When tank mode select and force heater bit received, turn ON backup heater (INTERNAL) or Booster Heater (External) depend on the tank heater selection.
- If tank heater selection is INTERNAL, follow normal thermo judgement to switch 3 ways valve to tank side and room side.
- If tank heater selection is EXTERNAL, only turn ON booster heater according to tank thermo.

Tank Heater selection is INTERNAL:

Backup Heater ON Condition:

- After water pump operate 2 mins **AND**
- When tank temperature < Tank set temperature - [Remocon Set Tank Re-heat Temp] **AND**
- 20 minutes since previous Backup heater OFF **AND**
- Backup Heater Enable

Backup Heater OFF condition:

- Force mode off **OR**
- When tank temperature > Tank set temperature for continuous 15 secs **OR**
- Tank Operation OFF

Tank Heater selection is EXTERNAL:

Booster Heater ON condition:

- Force Heater mode ON **AND**
- Tank temperature < tank set temperature + [Remocon Set Tank Re-heat Temp] - 1°C, **AND**
- 20 minutes since previous heater off.

Booster Heater OFF condition:

- Tank temperature > tank set temperature for continuous 15 secs.
- Force mode OFF
- Tank Mode Operation OFF  
(During tank interval or tank mode condition, water pump and 3 ways valve will OFF)

## 14.11 Powerful Operation

Powerful mode is use to increase the capacity of heat pump to achieve higher target temperature. Powerful mode is applicable when heat mode is operating.

### Remote control setting:

On quick menu of remote control, there is 4 options of powerful mode can be select.

- OFF : Cancel powerful mode
- 30 minutes : Set powerful for 30 minutes
- 60 minutes : Set powerful for 60 minutes
- 90 minutes : Set powerful for 90 minutes

### Control contents:

During the time set by remote control, powerful will activate according to 2 shift up controls. However, this function is applicable only for heating. Remote control will transmit the signal to indoor unit once this function is select then transmit OFF signal to indoor when the timer is complete. Indoor will transmit signal to outdoor for frequency control.

Indoor setting temperature shift

- If system is standard system (Optional PCB is not connected)
  - Target water temperature will shift up to Wlo or Whi whichever higher.
- If system is extension system (Optional PCB is connected)
  - Target water Zone 1 and Zone 2 temperature will shift up to Wlo or Whi whichever higher.

\* If "Direct Type" temperature control is select, this powerful shift up setting is not effective.

- **Start condition**
  - Powerful function is select by remote control.
- **End Condition**
  - OFF/ON button is pressed.
  - Powerful function is OFF by remote control.

## 14.12 Quiet Operation

Quiet mode is use to reduce the noise of outdoor unit by reducing the frequency or fan speed.

### Quiet level

There are 3 level (Level 1, Level 2, Level 3) to set by quick menu function on remote control.

### Control content

Once the quiet function is select, the remote control will transmit the signal to indoor and outdoor unit.

### Quiet priority

Set whether to prioritize "Sound" or "Capacity"

### In case of "Sound" is set for "Quiet priority" in the function setup of the remote control

#### Start condition

- Quiet mode is set on remote control.
- Quiet mode is request ON by weekly timer.

### Stop condition

- OFF/ON button is pressed.
- Quiet mode is OFF by remote control.
- Quiet mode is request OFF by weekly timer.

### In case of “Capacity” is set for “Quiet priority” in the function setup of the remote control

#### Start condition

- 1) Quiet mode is set on remote control.
- 2) Quiet mode is request ON by weekly timer.
- 3) During heating : Water outlet temperature > Target Water Temperature - 3°C
- 4) During Cooling : Water outlet temperature < Target Water Temperature + 3°C
- 5) During operation mode when 3 way valve is at tank direction : Tank temperature > Tank set Temperature - 3°C

When condition {(1) or (2)} and {(3) or (4) or (5)} is fulfilled, after the quiet mode start by user or timer.

#### Stop condition

- 1) Quiet mode is OFF by remote control.
- 2) OFF/ON button is pressed.
- 3) Quiet mode is request OFF by weekly timer.
- 4) During heating : Water outlet temperature ≤ Target Water Temperature - 5°C for continues 30 minutes
- 5) During Cooling : Water outlet temperature ≥ Target Water Temperature + 5°C for continues 30 minutes
- 6) During operation mode when 3 way valve is at tank direction : Tank temperature ≤ Tank set temperature - 5°C for continues 30 minutes

When any of above mentioned condition is achieved, this control is cancelled.

## 14.13 Sterilization Mode

- Purpose:
  - To sterilize water tank by setting the required boiling temperature.
- Remote control setting
  - Days for sterilization function to start can be select.
  - Time of selected day to start sterilization function.
  - Boiling temperature (Internal heater is 55°C ~ 65°C)
  - Maximum operation time is 5 minutes to 1 hour.
- Start condition
  - Tank connection set to “YES” by remote control
  - Sterilization function selects “YES”.
  - Sterilization signal received from remote controller by timer.
  - Tank mode request ON.
- Stop condition
  - When boiling timer is completed. Boiling timer (Remote control set maximum operation time) start counting once tank achieve boiling set temperature **OR**
  - After 8 hours of operation since sterilization start.
  - Tank mode request OFF.
- Control content:
  - During sterilization function activation time, target tank set temperature will internally change to boiling set temperature.
  - During sterilization activates, heat pump and heater (external or internal) will operate as normal tank mode to achieve the boiling set temperature.
  - Sterilization operation will end when stop condition is fulfill.
  - After sterilization is complete, tank set temperature will resume to normal operation.

\* Tank temperature may not achieve boiling set temperature if tank heater is select OFF **OR** external compressor switch.

## 14.14 DHW Circulation Pipe Sterilization Operation

### Purpose:

This control is designed to prevent legionella for DHW circulation pipe.

### DHW circulation pipe sterilization mode start conditions

All of the following holds

- 1) Remocon setting : Extra pump = DHW
- 2) Tank sterilization operation is finished.
- 3) Tank sterilization is completed within 490 minutes since sterilization function start

### DHW circulation pipe sterilization mode stop conditions

Which of the following holds

- 1) After 490 minutes of operation since DHW circulation pipe sterilization start
- 2) Circulation pump operated 30 minutes
- 3) Tank mode Request OFF
- 4) Remocon setting : Extra pump = Heat or NO

### DHW circulation pipe sterilization mode control contents


It works in the following order.

- 1) Tank sterilization mode is ON
- 2) Tank boiling start Target temp. is RC setting
- 3) Tank sterilization mode finish or stop.
- 4) DHW circulation pump operate during 30 minutes
- 5) Back to normal operation

## 14.15 Outdoor Ambient Thermo OFF Control

### Purpose:

Stop provides heating to room side during high outdoor ambient condition.

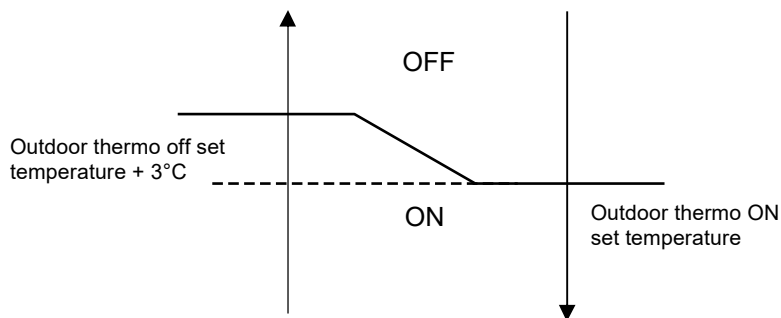

### Control content:

- Heating outdoor ambient thermo OFF control only applicable when heat pump operate in heat mode. (This control will not activate when running in tank side)
- Heat pump and water pump will turn OFF when outdoor ambient is higher than outdoor thermo OFF set temperature.
- Heat pump will thermo ON back when outdoor ambient < Outdoor thermo ON set temperature and RC delay time has passed after Heating thermo-ON temperature is reached.

## 14.16 Alternative Outdoor Ambient Sensor Control

### Purpose of the Alternative Outdoor Ambient Sensor:

- It is some possibility that the air to water heat pump unit will install at a location where the original ambient sensor is expose to direct sunlight. Therefore, another optional ambient sensor can be connect to indoor PCB and locate at new and better reading location to improve the heat pump performance.

### Control Detail:

- Remocon can select either the extra outdoor ambient sensor is connected or not. (YES/NO)
- The alternative outdoor ambient sensor will connect to indoor unit main PCB terminal.

- when alternative sensor select NO
  - Original Outdoor temperature sensor will use for Indoor & Outdoor heat pump operation reference sensor.
  - Data communication direction : OUTDOOR send outdoor temperature reading to INDOOR.
  - Error judge : OUTDOOR will judge the original outdoor sensor error (F36 display if error detect). No judge error on alternative outdoor sensor
- when alternative sensor select YES
  - Alternative Outdoor temperature sensor will use for Indoor & Outdoor heat pump operation reference sensor.
  - Data communication direction : INDOOR send outdoor temperature reading to OUTDOOR.
  - Error judge : INDOOR will judge the Extra outdoor sensor error only after operation ON request received from remocon.  
(F36 display if error detect). No judge error on original outdoor sensor.

## 14.17 Force DHW mode

Purpose:

When user want to use hot water now, user can press this force DWH mode under the quick menu to operate tank only mode to boil up the tank temperature.

Remocon setting:

Force DHW function can be activate under quick menu.

Control Content:

- when press the Force DHW function during operation OFF condition:
    - When receive this Force DHW bit from remocon, indoor will run tank only mode regardless of the mode selection.
    - After tank temperature achieve tank thermo off temperature, turn OFF force DHW bit and return to operation OFF with previous mode selection.
  - When press the Force DHW function during operation ON condition:
    - When receive this Force DHW bit from remocon, indoor will memories the running mode and run tank only mode regardless of the mode selection.
    - After tank temperature achieve tank thermo off temperature, turn OFF force DHW bit and return to previous memories running mode.
- \* when operation OFF or mode change request from remocon during force DHW mode operation, End force DHW mode and follow the new request operation.
- \* Once receive force DHW mode from remocon, indoor direct start tank mode and consider tank thermo ON. Thermo OFF only when achieve tank thermo OFF depend on the Tank System Setting.

## 14.18 SMART DHW mode

Panasonic All In One model provide the option to choose STANDARD DHW Mode or SMART DHW Mode for Tank Heat Up according to requirement. SMART DHW mode comparatively consume lower tank heat up power but longer re-heat time than STANDARD DHW Mode.

SMART DHW control

- During SMART DHW start time 20:00 (Default Setting) to SMART DHW stop time 05:00 (Default setting)  
Heat pump re-heat the tank water only when tank temperature drop below 20°C (Default setting)
- Time between 05:00 to 20:00  
Heat pump reheat the tank water when tank temperature as below condition

Condition 1: Tank Heater ON

Reheat when tank temperature below tank set temperature + R/C (Tank re-heat Temperature) - 3°C

Condition 2: Tank Heater OFF

Reheat when tank temperature below Tank set temperature or 51°C (Whichever lower) + R/C (Tank re-heat Temperature) -3°C

\* SMART DHW start time, stop time and SMART ON Temperature can change in CUSTOM menu.

## 14.19 Efficiency Tank Mode Operation

Tank mode operation follows NEW control as below when conditions below are fulfilled:

### Start conditions

- 1) All-in-One model selection : YES AND
- 2) DHW capacity = Variable AND
- 3) Heating control = Efficiency

### Control Contents:

3-way valve direction change to tank side. When Thermo off, 3WV switch to room side.

Check TS1 (Tank top sensor) - TS2 (Tank centre sensor) always

When  $[TS1 - TS2] < 2.5^{\circ}\text{C}$  for 40 hours, use TS2 as thermo ON and OFF judgement.

### Cancel conditions:

Tank mode operation follows CURRENT (default  $-8^{\circ}\text{C}$ )

control when ANY of the following is fulfilled:

- 1) All-in-One model selection : NO OR
- 2) DHW capacity = Standard OR
- 3) Heating control = Comfort

### Tank Thermo ON conditions:

- 1) Internal Tank Heater Select AND Tank Heater ON:  
Tank Temp  $<$  Tank Set Temp + R/C (Tank reheat Temp)
- 2a) Tank Heater Select OFF OR External Heater Select AND  $3^{\circ}\text{C} < [TS1 - TS2] < 12^{\circ}\text{C}$ :  
Tank Temp  $< 30^{\circ}\text{C}$
- 2b) Tank Heater Select OFF OR External Heater Select AND  $[TS1 - TS2] < 3^{\circ}\text{C}$ :  
Tank Temp  $<$  Tank Water Set Temp. + R/C (Tank reheat Temp)
- 2c) Tank Heater Select OFF OR External Heater Select AND  $[TS1 - TS2] > 12^{\circ}\text{C}$ :  
Tank Temp  $< 36^{\circ}\text{C}$

### Tank Thermo OFF conditions:


- 1) Internal Tank Heater Select AND Tank Heater ON:
  - a) Tank temperature  $>$  Tank set temperature +  $0^{\circ}\text{C}$  for continuous 20 seconds after heat pump OFF due to water thermo OFF OR
  - b) Tank temperature  $>$  Tank set temperature +  $1^{\circ}\text{C}$  for continuous 20 seconds OR
  - c) Water outlet temperature  $> 75^{\circ}\text{C}$
- 2) Tank Heater Select OFF OR External Heater Select:
  - a) Tank temperature  $>$  Tank Water set temperature +  $0^{\circ}\text{C}$  for continuous 20 seconds after heat pump OFF due to water thermo OFF OR
  - b) Tank temperature  $>$  Tank set temperature +  $1^{\circ}\text{C}$  for continuous 20 seconds

## 14.20 Anti Freeze Control

- Anti freeze protection control menu can be set YES or NO by control panel.
- Heatpump system there are 2 types of anti freeze control:

### 1. Models with Back up heater (Excluding in Standalone and connection control module):

Outdoor air temp zone is defined as below :

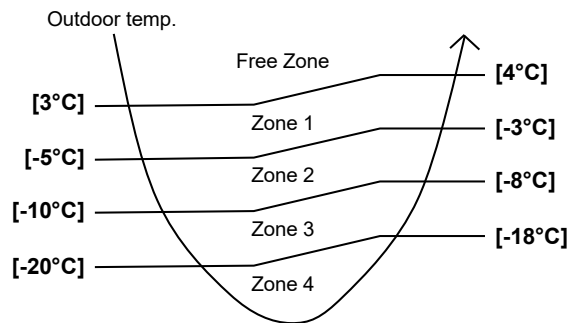


- Water pump circulation anti freeze control
  - Water pump turns ON when **ALL** below conditions are fulfilled:
    - Heat pump OFF (Stand by) OR error occurs.
    - Water flowing flag is ON.
    - Water flow sensor is not abnormal.
    - Outdoor air temp zone is any of Zones 1 to 4 OR outdoor ambient temp. sensor is abnormal.
    - Water inlet/outlet temp. < [A°C]
    - After 5 minutes from previous water pump OFF.
  - Water pump turns OFF when **ANY** below conditions is fulfilled:
    - Outdoor air temp zone is Free Zone
    - Outdoor air temp zone is any of Zones 1 to 4.
      - After water pump ON for 4 minutes, and water inlet temp. ≥ [B°C]
      - Else, shift to back up heater anti freeze control.
  - However, if flow sensor is abnormal (H62), then water pump circulation anti freeze control will not activate.
- Back up heater anti freeze control
  - Back up heater turns ON when **ALL** below conditions are fulfilled:
    - Water inlet/outlet temp. < [B°C]
    - Water pump circulation anti freeze control activated and water pump ON for 4 minutes.
  - Back up heater turns OFF when **ANY** below conditions is fulfilled:
    - Outdoor air temp zone is Free Zone
    - Outdoor air temp zone is any of Zones 1 to 4.
      - Water inlet/outlet temp. ≥ [C°C]
  - However, if back up heater is abnormal (H70), then back up heater anti freeze control will not activate.

	A°C	B°C	C°C
Zone 1	6°C	8°C	13°C
Zone 2	10°C	15°C	20°C
Zone 3	16°C	21°C	28°C
Zone 4	25°C	33°C	33°C

Table : Threshold condition for Water temp when Models with Back up heater

2. Models without Back up heater (Standalone and connection control module):

Outdoor air temp zone is defined as below :

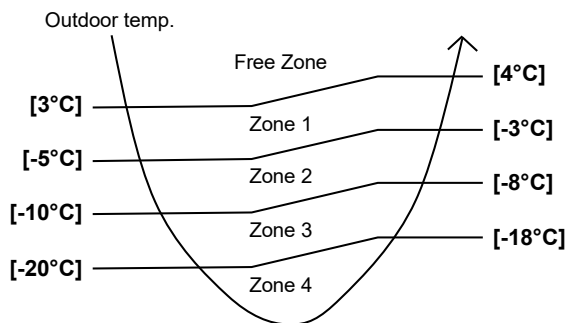

- Water pump circulation anti freeze control
  - Water pump turns ON when **ALL** below conditions are fulfilled:
    - Heat pump OFF (Stand by) OR error occurs.
    - Water flowing flag is ON.
    - Water flow sensor is not abnormal.
    - Outdoor air temp zone is any of Zones 1 to 4 OR outdoor ambient temp. sensor is abnormal.
    - Water inlet 2 / outlet 2 temp. < [A°C]
    - After 5 minutes from previous water pump OFF.
  - Water pump turns OFF when **ANY** below conditions is fulfilled:
    - Outdoor air temp zone is Free Zone
    - Outdoor air temp zone is any of Zones 1 to 4.
      - After water pump ON for 4 minutes, and water inlet temp. ≥ [B°C]
      - Else, shift to Heat pump unit operation anti freeze control.
  - However, if flow sensor is abnormal (H62), then water pump circulation anti freeze control will not activate.
- Heat pump unit operation anti freeze control
  - Heat pump unit operation turns ON when **ALL** below conditions are fulfilled:
    - Water pump circulation anti freeze control activated and water pump ON for 4 minutes.
  - Heat pump unit operation turns OFF when **ANY** below conditions is fulfilled:
    - Water inlet / Water inlet 2 temp. > [C°C] for 3 minutes.


	A°C	B°C	C°C
Zone 1	20°C	19°C	24°C
Zone 2	20°C	19°C	24°C
Zone 3	20°C	23°C	28°C
Zone 4	20°C	27°C	33°C

Table : Threshold condition for Water temp when Models without Back up heater

## 14.20.1 Zone Anti-Freeze Control

- If buffer tank selection is “NO” and Anti- Freeze function select “NO” from remote control, this control cannot activate.

Outdoor air temp zone is defined as below :

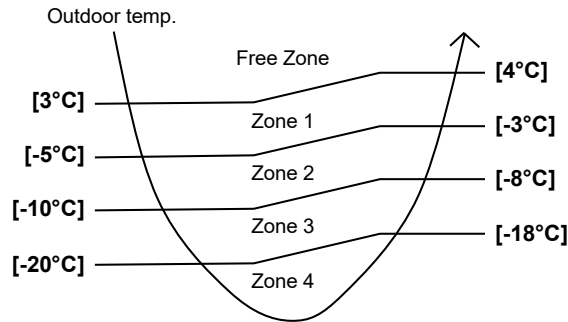

Start condition:

- After [5] min from previous Zone pump off. **AND**
- Outdoor air temp zone is any of Zones 1 to 4 **OR** outdoor ambient temp. sensor is abnormal. **AND**
- Zone water temperature < [A°C] **OR** Zone Sensor Short or Open

Cancel condition:

- After water Zone pump ON [4] min **AND**
  - Outdoor air temp zone is Free Zone **OR**
  - Outdoor air temp zone is any of Zones 1 to 4.  
Zone water temperature sensor  $\geq$  [B°C]
- \*However, Zone water temperature sensor is Open or Short, cancel zone water temperature condition is ignored.

	A°C	B°C
Zone 1	6°C	8°C
Zone 2	10°C	15°C
Zone 3	16°C	21°C
Zone 4	25°C	33°C

Table : Threshold condition for Water temp when Models with Back up heater

	A°C	B°C
Zone 1	20°C	19°C
Zone 2	20°C	19°C
Zone 3	20°C	23°C
Zone 4	20°C	27°C

Table : Threshold condition for Water temp when Models without Back up heater


## 14.21 Solar Operation (Optional)

### 14.21.1 Solar Operation:

Solar function:

- This function allow user to control the solar pump to operate depend on the solar sensor reading compare to the tank installed. Solar pump will circulate the hot water energy store at solar panel to heat up the DHW Tank or Buffer Tank.

Solar Connection Diagram:

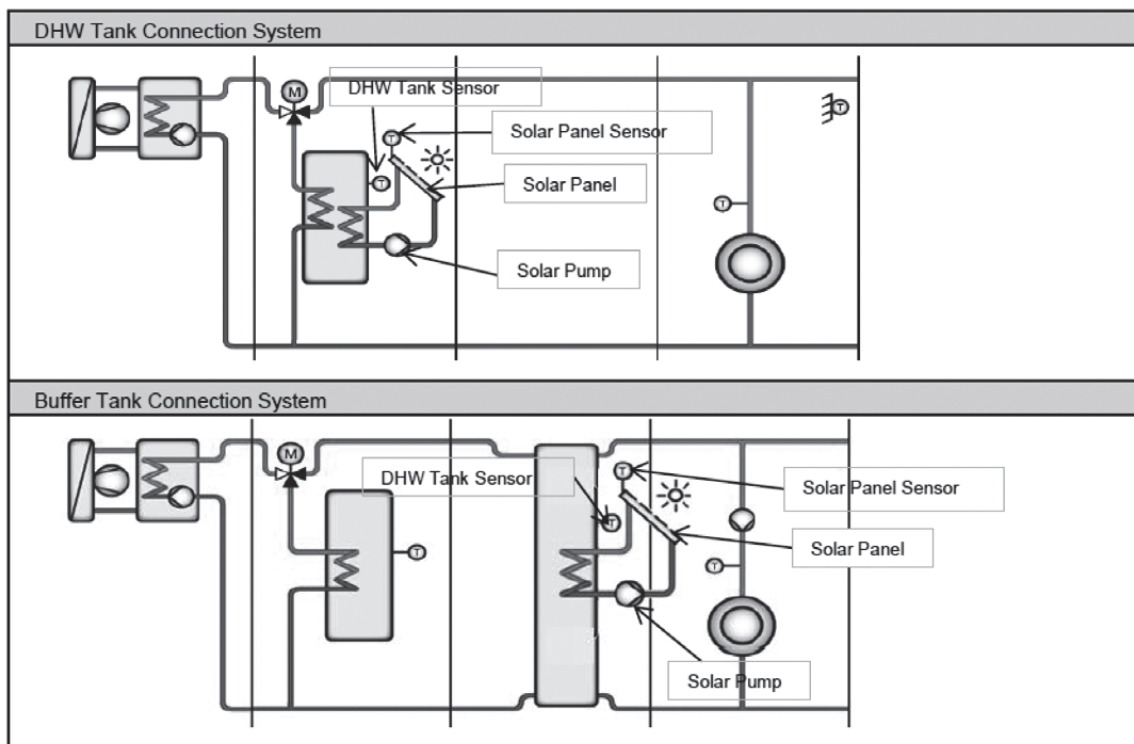

- Solar function can only enable when the Optional PCB is connected.
- Few part as below need to install to control the solar operation:
  - Solar Panel
  - Solar Pump
  - Solar Panel Sensor
  - Tank Sensor (Buffer tank sensor OR DHW Tank sensor depend on the connection direction)
- \* During Solar Connection to the system, installer need to alert on the high water temperature may flow to the zone circuit or DHW piping circuit. Therefore pipe which withstand higher water temperature need to be installed.
- Solar remote control setting
  - 1 Solar Setting can only be set when the optional PCB connection is select "YES"
  - 2 By remote controller, Setting as below list can be set for solar function operation (Installer Menu)
    - Solar Function ("YES" or "NO")
    - Tank Connection Direction ("DHW TANK" or "BUFFER TANK")
    - Delta T turns ON: Difference temperature setting between solar panel sensor and Tank to turn on solar pump. (Range :5 ~ 15°C)
    - Delta T turns OFF: Difference temperature setting between solar panel thermistor and Tank to turn off solar pump. (Range :2 ~ 10°C)
    - Outdoor temp for Anti-Freeze : Outdoor temp to start Anti-Freeze control for solar circuit. (Range : -20 ~ 10°C)
    - Tank Temperature HI Limit Set (Range : 70 ~ 90°C)

## 14.21.2 Solar Operation Control

- Solar function can only be activate if the solar function selection “YES” from remote control. To achieve hot water from solar panel, indoor need to control the solar pump and circulate hot water from solar panel.

### Under normal case:

- Solar pump start condition:
  - Solar panel temperature > Delta T turn on setting temp (R/C) + Tank temperature (depend on selection, DHW or Buffer) **AND**
  - Tank temperature (DHW or Buffer) < Solar HI Limit Temp (R/C) **AND**
  - Operation ON with heat mode (apply to solar connect to "Buffer Tank" case)
- \* Condition c) ignore if the solar system is connect to DHW tank (control active under operation OFF time for Tank connection case)
- Solar pump stop condition:
  - Solar panel temperature < Delta T turn OFF setting temp (R/C) + Tank temperature (depend on selection, DHW or Buffer) **OR**
  - Tank hot water temp >= Solar HI Limit Temp (R/C) + [2]°C

### Under solar Anti-freeze protection control:

- Solar pump start condition:
  - Outdoor temp < Outdoor temp setting for Anti-Freeze (R/C)
- Solar pump stop condition:
  - Outdoor temp > Outdoor temp setting for Anti-Freeze + [2]°C

\*\*However, During Cool mode this function cannot activate if Tank selection is “Buffer Tank”.

\*\*Solar pump can operate even if Heat pump is under error stop.

- Solar operation during error:
  - During Tank sensor (DHW or Buffer depend on selection) abnormal, Solar operation will not able to function.
  - During Solar Panel sensor detect OPEN (not include SHORT), Solar operation will not able to function too.

## 14.22 Boiler Bivalent Control

- Boiler is an additional or alternative heat source to heat up the room when necessary.
- Purpose of this control is to turn ON and turn OFF the Boiler output signal when boiler heating capacity needed in the system.
- Boiler is possible to connect to DHW Tank and Buffer Tank depends on the installer.
- Boiler operation parameter need to be set on Boiler itself, indoor do not control the boiler operation direction and operation.
- There are Alternative mode, Parallel mode, & Advance Parallel mode available to select by installer to fit to the total system.

### Bivalent control selection by remote controller

#### Remote control setting value:

1 Outdoor Ambient Set = (Range: -15°C ~ 15°C)

- **Alternative Mode**
  - Only one heat source operates at one time, either heat pump or boiler depends on condition.

#### Control detail:

During Operation ON at Heat mode or Tank mode or Heat + Tank Mode

- Boiler signal turn ON and heat pump and water pump turn OFF when:
  - Outdoor ambient < Outdoor Ambient Set **AND**
  - Boiler prohibit flag = 0

\*\* However water pump can operate when Anti-freeze control condition fulfilled.

- Boiler signal turn OFF and heat pump and water pump turn ON when:
  - Outdoor ambient > Outdoor Ambient Set + [2°C] **OR**
  - Boiler prohibit flag = 1

- **Parallel Mode**

- Parallel mode allows heat pump and boiler ON at the same time. Boiler operates as an additional heating capacity when low heat pump capacity at low ambient condition.

Control detail:

During operation ON at Heat mode or Tank mode or Heat + Tank mode

- Boiler signal turns ON when:
  - Outdoor ambient < Outdoor Ambient Set **AND**
  - Boiler prohibit flag = 0
- Boiler signal turns OFF when:
  - Outdoor ambient > Outdoor Ambient Set + [2°C] **OR**
  - Boiler prohibit flag = 1

- **Advance Parallel Mode**

- Advance parallel mode allow heat pump to operate and turn ON boiler only when ambient and temperature condition is fulfilled.

Remote control setting value:

- 1 Outdoor Ambient Set = (Range : -15°C ~ 15°C)
- 2 Selection of boiler connection direction. (Heat only, DHW only, Heat & DHW)
- 3 Setting data under Heat Direction
  - Start Temperature | START\_TEMP |
  - Start Delay Timer | START\_TIMER |
  - Stop Temperature | STOP\_TEMP |
  - Stop Delay Timer | STOP\_TIMER |
- 4 Setting data under DHW Direction
  - Delay Timer | DELAY\_TIMER |

Control detail:

During operation ON at Heat Mode

- Boiler signal turns ON when
  - Outdoor ambient < Outdoor Ambient Set **AND**
  - Buffer tank temperature < Target Buffer Tank Temperature + [START\_TEMP] for [START\_TIMER] **AND**
  - Heat pump operate at room side **AND**
  - Connection of Boiler to Heating Select "YES" From installer menu **AND**
  - Buffer Tank connection select "YES" **AND**
  - Boiler prohibit flag = 0
- Boiler signal turns OFF when
  - Outdoor ambient > Outdoor Ambient Set + [-2°C] **OR**
  - Buffer Tank temperature > Target Buffer Tank temperature + [STOP\_TEMP] for [STOP\_TIMER] **OR**
  - Heat pump not at room side. **OR]**
  - Boiler prohibit flag = 1

During operation ON at Tank Mode

- Boiler signal turns ON when
  - Outdoor ambient < Outdoor Ambient Set **AND**
  - Heat pump operate at tank side for continuous | DELAY\_TIMER | **AND**
  - Connection of Boiler to DWH Tank select "YES" from installer menu. **AND**
  - Boiler prohibit flag = 0
- Boiler signal turns OFF when
  - Outdoor ambient > Outdoor Ambient Set + [2°C] **OR**
  - Heat pump not operates at tank side. **OR**
  - Boiler prohibit flag = 1

**Boiler prohibit flag control**

Purpose:

- For product safety. Boiler signal is OFF when water temperature is too high.

Start condition:

- Water outlet ≥ 85°C continues for 5 minutes.
- Water inlet ≥ 85°C continues for 5 minutes.
- Zone1 water temp ≥ 75°C continues for 5 minutes.
- Zone2 water temp ≥ 75°C continues for 5 minutes.

Contents:

- After start condition fulfilled, set boiler prohibit flag = 1

Cancel condition:

- After 30 minutes from start condition fulfilled.

Contents:

- Set boiler prohibit flag = 0

### 14.23 External Room Thermostat Control (Optional)

Purpose:

- 1 Better room temperature control to fulfill different temperature request by external room thermostat.


Recommended external room thermostat:

Maker	Characteristic
Siemen (REV200)	Touch panel
Siemen (RAA20)	Analog

Connection of external room thermostat:


Wire Connection and thermo characteristic of Siemen REV200:

Setting	L/L1 (H)	Heat Thermo	L/L2 (C)	Cool Thermo
Set Temp < Actual Temp	Open Circuit	OFF	Short Circuit	ON
Set Temp > Actual Temp	Short Circuit	ON	Open Circuit	OFF

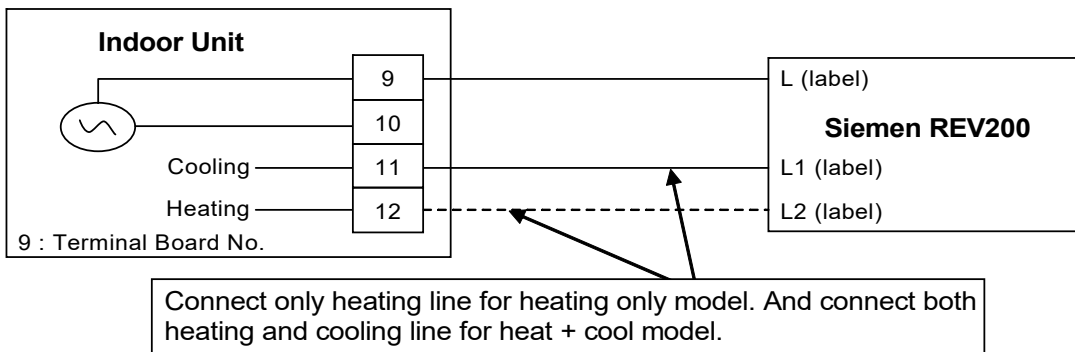

Wire Connection and thermo characteristic of Siemen RAA20:

Setting	L/Y1 (H)	Heat Thermo	L/Y2 (C)	Cool Thermo
Set Temp < Actual Temp	Open Circuit	OFF	Short Circuit	ON
Set Temp > Actual Temp	Short Circuit	ON	Open Circuit	OFF

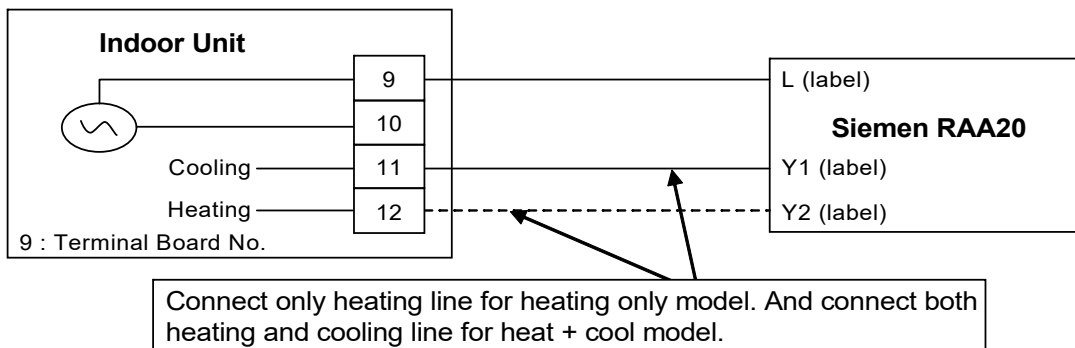

Control Content:

- External room thermostat control activate only when remote thermostat connection select YES by Indoor control panel.
- When indoor running heat mode, refer thermo On/Off from heating line feedback. And when indoor running cool mode, refer thermo On/Off from cooling line feedback.
- Heat pump Off immediately when receive thermo off feedback.


## 14.24 Three Ways Valve Control

### Purpose:

- 3 ways valve is used to change flow direction of hot water from heat pump between heating side and tank side.

### Control contents:

- 1 3 ways valve switch Off:
  - During 3 ways valve switch Off time, the hot water will provide heat capacity to heating side.
- 2 3 ways valve switch On:
  - During 3 ways valve switch On time, the hot water will provide heat capacity to tank side.
- 3 Stop condition:
  - During stop mode, 3 ways valve will be in switch off position.

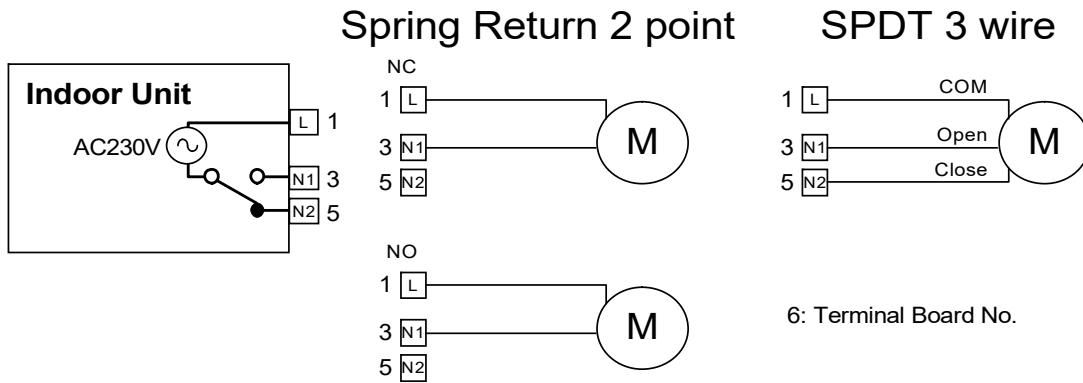

\* During pump down and force mode, fix 3 ways valve in close condition.

\* Recommended Parts : SFA 21/18 (Siemens)


## 14.25 Two Ways Valve Control

### Functionality of 2 ways valve:

- Use to allow hot water to floor heating panel or block cold water to floor heating panel.

### Control contents:

- 1 When indoor running in heat mode, OPEN the 2 ways valve.
- 2 When indoor running in cool mode, CLOSE the 2 ways valve.
- 3 Stop condition:
  - a. During stop mode, fix 2 ways valve in close condition.

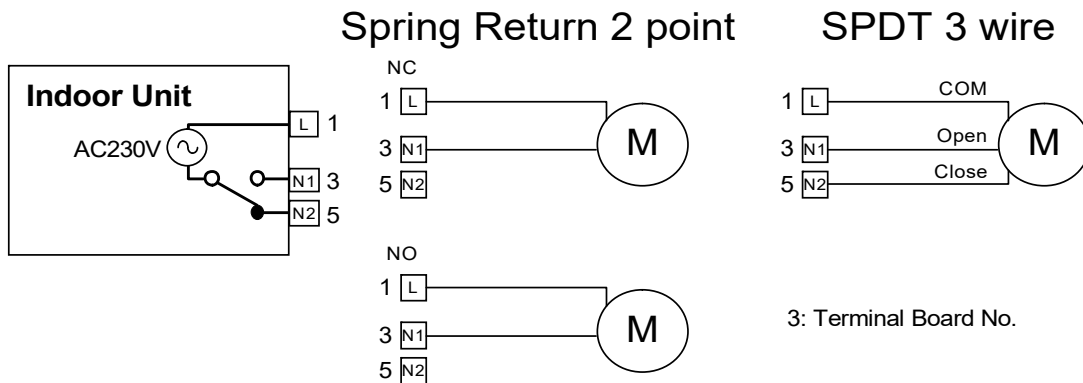

\* During pump down mode, fix 2 ways valve in close condition.

\* During force mode, open 2 ways valve.

\* Recommended Parts : SFA 21/18 (Siemens)

## 14.26 Anti-Stick Mode Operation

This mode is a control to prevent the water circuit actuator from locking up if not used for an extended period of time.

### Start conditions

- 1) A.M 3:00 o'clock every Monday.
- 2) Anti-stick mode = Enable. (Anti-stick mode is selected in custom menu)

### Control Contents:

It works in the following order.

- 1) If any mode operated, all operation is stopped.
- 2) Anti-stick mode operates
- 3) If Anti-stick mode finished, back to the last operation.


### Cancel conditions:

Which of the following holds

- 1) Anti-stick mode is finished.
- 2) When the customer manually starts any mode operation. (include weekly timer, sterilization mode)


### Anti-stick mode

If zone 2 or pool or solar are not connected, they are skipped

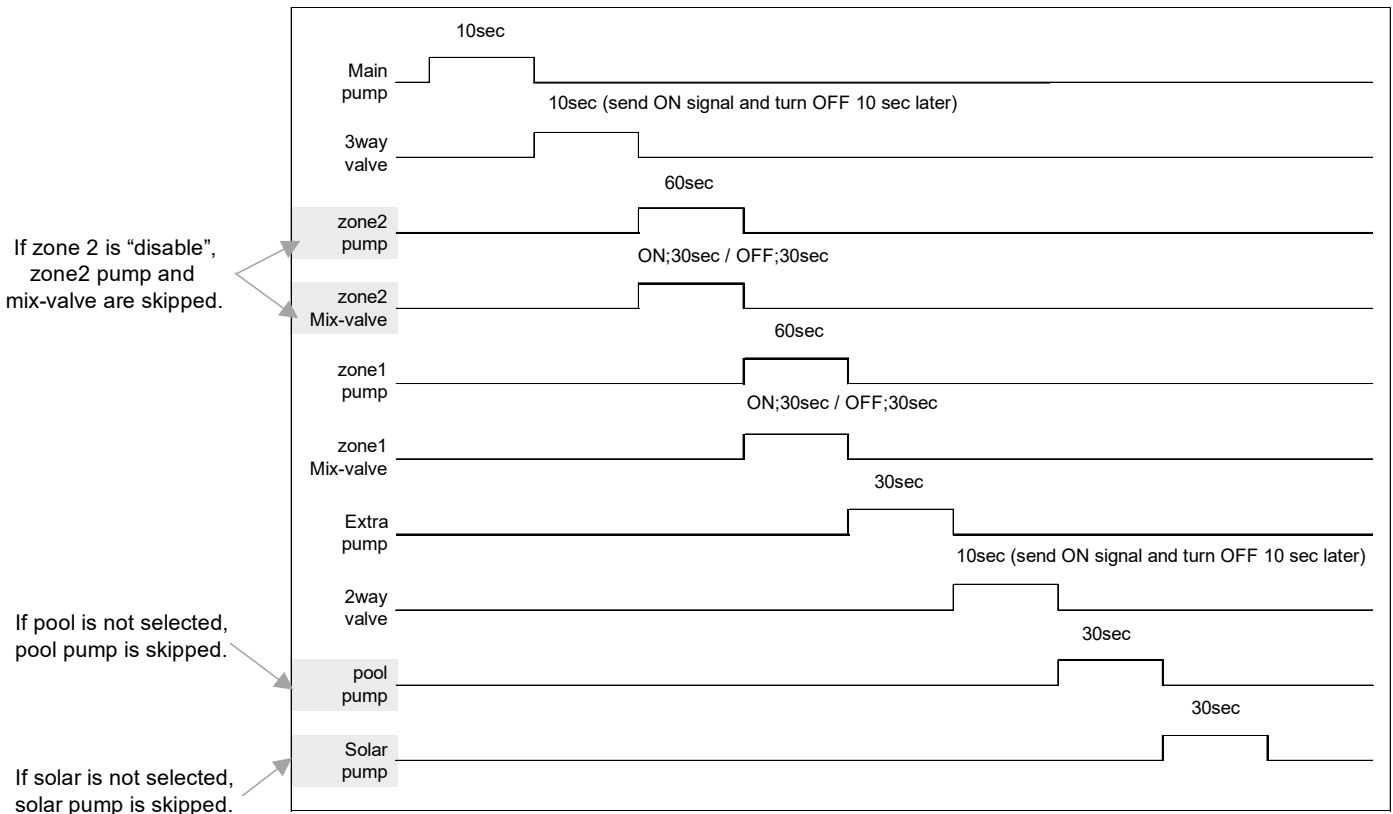

## 14.27 External OFF/ON Control


- Communication circuit between indoor unit and external controller is as per below.

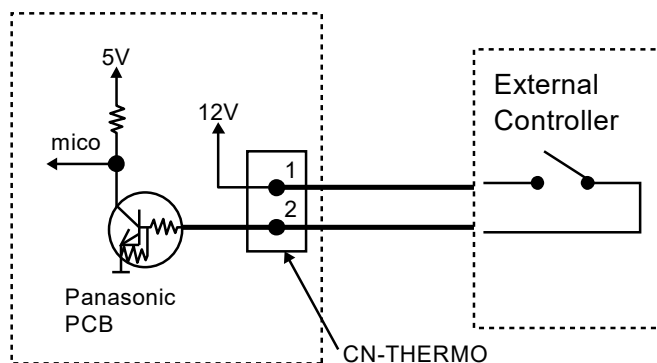

- Maximum length of communication cable is 50 meter.
- Control content:

External Control Switch	Control Panel OFF/ON	Control Panel Power LED	System Status
ON	ON	ON	ON
ON	OFF	OFF	OFF
OFF	ON	ON	OFF
OFF	OFF	OFF	OFF

### Remocon Screen Display and Control Detail:

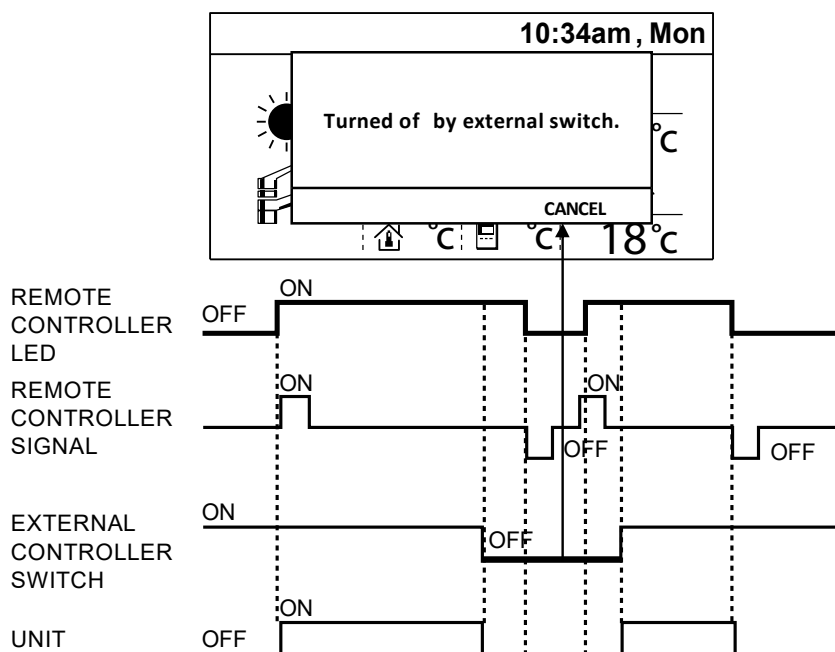

When External SW connection select "YES" from remocon installer menu:

- Heating or Cooling system will operate normally if the External Switch signal is ON.
- Once the External Switch turn OFF, System Turn OFF (Heat pump, water pump, heater etc...)
- Remocon LED remain ON or OFF according to the current operation request.
- Pop up menu at remocon main screen as above screen to inform customer system stop by External Switch.
- It is possible to press cancel and return to main screen to do change of operation setting while waiting the External Switch turn ON back.
- Remocon LED will always follow the latest changes from remocon.
- If no action on remocon for continuous 5 minutes, the pop up screen will show again on the screen.
- But once the External Switch Turn ON back, pop up screen will disappear and system can operate normally according to the latest operation setting and request.

## 14.28 External Compressor Switch (Optional PCB)

External compressor switch port can have two purpose of control as below:

- Heat source ON/OFF function (Remocon select "Heat source")
- Heater ON/OFF function (Remocon select "Heater")
  
- Heat source ON/OFF function

Purpose:

- Heat pump ON/OFF function is use to turn OFF the high power consumption device (Heat pump, & Heater) when there is energy or electric current limitation. Other optional function still can be operate under heat pump and heater OFF condition.

Control Detail:

- This External Compressor Switch is possible to connect to Optional PCB only.
- Once the remocon select External Compressor Switch connection "YES", & select "Heat source" This heat pump ON/OFF function will activate
- The ON/OFF signal of this External Compressor Switch is same as External Switch.
- When the External Compressor Switch is ON:
  - Heat pump system operate normally
- When the External Compressor Switch is OFF:
  - Heat pump, Water pump & Heater (Booster heater & Backup Heater) need to turn OFF
  - Solar, Boiler and zone control can be operate follow normal control condition.
  - \* pump delay OFF also included in this control

(There is NO pop up screen like External Switch when this External Compressor Switch is OFF.)

- Heater ON/OFF function

Purpose:

- Heater ON/OFF function is use to turn OFF the heater (backup heater & booster heater) when there is energy or electric current limitation. Heat pump and other optional function still can operate.

Control detail:

- This External Compressor Switch is possible to connect to Optional PCB only.
- Once the remocon select External Compressor Switch connection "YES", & select "Heater" This heater ON/OFF function will activate
- When the External Compressor Switch is ON:
  - Heat pump and heater operate normally
- When the External Compressor Switch is OFF:
  - Backup heater and booster heater cannot operate even heater request is ON.
  - Heat pump and option function (Solar, Boiler and zone control) can be operate follow normal control condition.

(There is NO pop up screen like External Switch when this External Compressor Switch is OFF.)

## 14.29 Heat/Cool Switch (Optional PCB)

Purpose:

- User can switch the running mode from heat to cool or cool to heat through external installed Heat/Cool switch. This kind of heat / cool switch may built in inside the field supply room remocon as well.

Control contents:

- Heat/Cool Switch can only be set when Cool Function is "enable" at custom menu setting, & Extension PCB select "YES" & Zone 1 not set "Pool" condition.
- This heat/cool switch control will be activate only when installer set the Heat/Cool Switch "USE" through remocon.
- Once the Heat/Cool Switch Set "USE", remocon will check indoor send Signal to judge the option of mode select.
  - When Heat/Cool Switch Contact Open : Remocon only can select Heat Mode, or Heat + Tank Mode, or Tank Mode
  - When Heat/Cool Switch Contact Close : Remocon only can select Cool Mode, or Cool + Tank Mode, or Tank Mode


- Operation ON/OFF will depend on remocon request.
- When Heat Mode is running with Contact Open, user change this setting to contact close, indoor will this signal to remocon judge and change mode to cool and send back to indoor. And it is same as from cool mode change to heat mode.
- \* This switch have higher priority, remocon follow indoor send signal when control activated.
- \* There is no effect to the operation when the mode running is only Tank Mode.

(Weekly Timer are ignored and cannot be set during Heat / Cool Switch is "Enable" Condition.)

### 14.30 SG Ready Control (Optional PCB)

Purpose:

- To set ON/OFF of heat pump and target temperature by digital input of third party device if necessary in field.

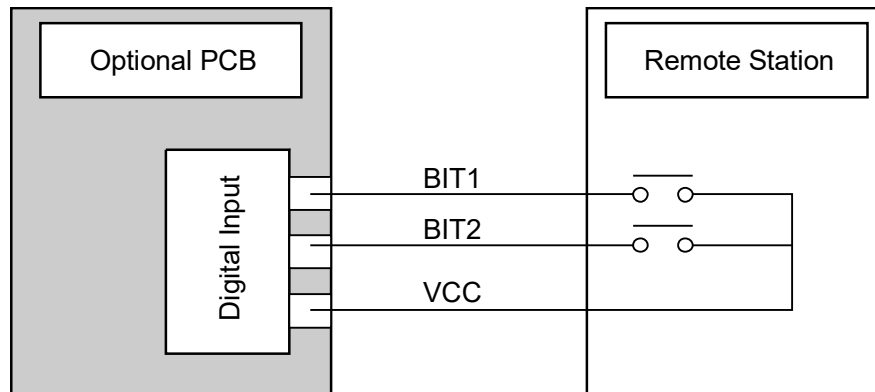

#### Remote control setting

For this function, following items need to be set on R/C (installer menu) –

- SG control = YES or NO
- Capacity up setting 1
  - Heating capacity [50 ~ 150 %]
  - DHW capacity [50 ~ 150 %]
  - Cooling capacity [-15 ~ 0 °C]
- Capacity up setting 2
  - Heating capacity [50 ~ 150 %]
  - DHW capacity [50 ~ 150 %]
  - Cooling capacity [-15 ~ 0 °C]
- HPU stop consumption [0.5 ~ 10.0 kW]
- Power consumption setting 1\*
  - Heating Power consumption [0.5 ~ 10.0 kW]
  - DHW Power consumption [0.5 ~ 10.0 kW]
  - Cooling Power consumption [0.5 ~ 10.0 kW]
- Power consumption setting 2\*
  - Heating Power consumption [0.5 ~ 10.0 kW]
  - DHW Power consumption [0.5 ~ 10.0 kW]
  - Cooling Power consumption [0.5 ~ 10.0 kW]

\* The setting range for the Power consumption setting varies depending on the outdoor unit model. Furthermore, the maximum target power consumption depends on the "HPU stop consumption" setting.

#### Control contents:

If SG control on remote control = "Yes", then following control only activate by digital input.

- **While Digital input is " 00 " (Normal operation)**
  - Normal operation. Once detect '00' system will operate back to normal condition.  
(All the target set temperature for heating side and DHW side will return back to previous set temperature when digital signal change from "10" or "11" back to "00".)
- **While digital input is detected " 01 " (HP stop)**
  - Heat pump & room heater & tank heater cannot operate.  
**(Solar control and Boiler back up and 2 Zone control can activate.)**

- **While digital input is detected " 10 " (Capacity 1)**
  - Target temperature for heating and DHW Tank is changed according to the percentage set by Remote control setting. However, which setting temperature is change depend on system setting.
  - Target temperature of cooling is change according to the adjustment value set by remocon setting.
- **While digital input is detected " 11 " (Capacity 2)**
  - Target temperature for heating and DHW Tank is changed according to the percentage set by Remote control setting. However, which setting temperature is change depend on system setting.
  - Target temperature of cooling is change according to the adjustment value set by remocon setting.
- **While digital input is detected " 10 " (Capacity 1)**
  - Setting temperature for heating and Tank is changed.  
However, which setting temperature is change depend on system setting.

**If Buffer selection is “YES”**

Room side

New Target Buffer tank temperature = Current Target Buffer Tank Temperature \* Remote Control setting (" capacity 1) %

\* Max Min regulation is follow Target Buffer tank temperature control specification

\*\* No change of Target zone water temperature, only set higher buffer tank temperature.

DHW Tank side

New Tank Set Temperature = Tank Set Temperature \* Remote Control setting for DHW ("Capacity 1) % \*  
(Max regulation depend on the tank max setting limit)

**If Buffer selection is “NO”**

Room side

New Target Zone Water Temperature = Current Target Zone Water Temperature \* Remote Control Setting (\*Capacity 1) %

(Zone 1 and Zone 2 will change according to its own target zone water temperature.)

(Max regulation depend on the temperature control type select)

DHW Tank side

New Tank Set Temperature = Tank Set Temperature \* Remote Control setting for DHW ("Capacity 1) %  
\* (Max regulation depends on the tank max setting limit)

Setting temperature for cooling is changed

New Target water temperature = target water temperature + R/C setting for cool (\*Capacity 1)

\* (Min/max regulation of cooling water set apply)

- **While digital input is detected " 11 " (Capacity 2)**

- Setting temperature for heating and Tank is changed.

However, which setting temperature is change depend on system setting.

**If Buffer selection is “YES”**

Room side

New Target Buffer tank temperature = Current Target Buffer Tank Temperature \* Remote Control setting (" capacity 2) %

\* Max Min regulation is follow Target Buffer tank temperature control specification

\*\* No change of Target zone water temperature, only set higher buffer tank temperature.

DHW Tank side

New Tank Set Temperature = Tank Set Temperature \* Remote Control setting for DHW ("Capacity 2) %  
\* (Max regulation depends on the tank max setting limit)

**If Buffer selection is “NO”**

Room side

New Target Zone Water Temperature = Current Target Zone Water Temperature \* Remote Control Setting (\*Capacity 2) %

(Zone 1 and Zone 2 will change according to it's own target zone water temperature.)

(Max regulation depend on the temperature control type select)

#### DHW Tank side

New Tank Set Temperature = Tank Set Temperature \* Remote Control setting for DHW ("Capacity 2) %  
\* (Max regulation depends on the tank max setting limit)

\*\* This function is not applicable for Cooling mode.

Setting temperature for cooling is changed

New Target water temperature = target water temperature + R/C setting for cool (\*Capacity 2)

\* (Min/max regulation of cooling water set apply)

#### **HPU stop consumption**

Operation will stop when the power consumption of the entire system exceeds (HPU stop consumption kW).

- **While digital input is detected " 10 " (Power consumption 1)**

#### Room side

Operate with the target of reducing power consumption to (Heating Power consumption 1) or less.

#### DHW Tank side

Operate with the target of reducing power consumption to (DHW Power consumption 1) or less.

#### Cool mode

Operate with the target of reducing power consumption to (Cooling Power consumption 1) or less.

- **While digital input is detected " 11 " (Power consumption 2)**

#### Room side

Operate with the target of reducing power consumption to (Heating Power consumption 2) or less.

#### DHW Tank side

Operate with the target of reducing power consumption to (DHW Power consumption 2) or less.

#### Cool mode

Operate with the target of reducing power consumption to (Cooling Power consumption 2) or less.

### **14.31 Demand Control (Optional PCB)**

Remote control setting:

- When Optional PCB connection select 'YES', Demand Control function can select "YES" or "NO".

Purpose:

- After the demand control select YES, below control will activated.
  - 0-10V Demand control

#### 0-10V Demand control

- Demand control is use to reduce the current usage of heat pump unit by third party device.

#### Control start condition:

- Select "YES" at Demand control at installer menu.
- 0-10V input for this electrical current control is detected.

#### Control content:

- If start condition is fulfilled, indoor will receive the voltage signal from optional PCB. Indoor will send the rate value to outdoor unit.
- Outdoor will change the current limit according to the percentage receive from indoor unit.

### 14.32 Holiday Mode

- Purpose:
  - Promotes energy saving by allowing the user to stop the system during holiday and enables the system to resume at the preset temperature after holiday.
- Control details:
  - Indoor operate the unit according running mode request. Target temperature will follow holiday setting temperature.
    - If heat mode request is receive, Target Water Out Temperature will change according to holiday shift temperature set.  
[If heat is set OFF at holiday, unit, water pump and zone control will OFF]
    - If tank mode request is receive, Target Tank Set Temperature will change according to the holiday tank shift temperature set.  
[If tank is set OFF at holiday, heat pump and tank heater will OFF]
  - After days of holiday have been set, heat pump will stop and only resume operation at the end of holiday countdown.
- Start condition:
  - Holiday timer set and the holiday timer start
    - \* The day holiday mode was set is counted as day 1.
- Stop condition:
  - OFF/ON button is pressed.
  - Holiday timer is reached.

### 14.33 Dry Concrete

- Purpose
  - Provide heat to floor heating panel and dry the wet concrete during installation.
- Setting condition:
  - Dry concrete parameter can be set through remote control under system setup.
  - Parameters are possible to set up to 99 days with different target set temperature
- Control details:
  - Dry concrete mode will be activates when select ON from service setup.
  - Once start dry concrete function, remote control will send step 1 setting temperature to indoor unit.  
\* This temperature is set at zone temperature. If system is 2 zones, both zone target temperature is set as same temperature.
  - Heat pump will start heat mode operation to room side with received target water outlet temperature.  
\* Heat pump will operate according to Heat pump Target Water Temperature.
  - After complete day 1 setup operation, day 2 data will be send to indoor at 12.00am on the second day.
  - Each preset data will be send every day until dry concrete mode is complete, unit will turns OFF and exit dry concrete function.
  - 3 ways valve and booster heater will turn OFF and 2 ways valve will turns ON.
- Cancel condition:
  - Dry concrete mode is complete and OFF signal is received.
  - OFF signal is received by pressing OFF/ON button.

### 14.34 Flow Sensor

- The water flow sensor serves as an overload protector that shuts down the unit when the water level is detected to be low.
- Abnormal flow detection:

Sequence	Abnormal flow	Normal flow
Normal case	Flow rate < 8 l/min or $\geq 69$ l/min	$\geq 8$ l/min
During status 2~6 on Anti-freeze deice	$\geq 8$ l/min	< 8 l/min

# 15. Protection Control

## 15.1 Protection Control for All Operations

### 15.1.1 Time Delay Safety Control

- 1 The compressor will not start for three minutes after stop of operation.

### 15.1.2 Total Running Current Control

- 1 When the outdoor running current exceeds X value, the compressor frequency will decrease.
- 2 If the outdoor running current does not exceed X value, the compressor frequency will return to normal operating frequency.
- 3 If the outdoor running current continue to increase till exceed Y value, compressor will stop, and if this occurs 3 times within 20 minutes, system will stop operation and OFF/ON control panel LED will blink (F16 error occurs).


Operation Mode	WH-WDG09ME8		WH-WDG12ME8		WH-WDG16ME8	
	X (A)	Y (A)	X (A)	Y (A)	X (A)	Y (A)
Heating	10.0	13.0	10.0	13.0	10.0	13.0
Cooling	9.0	13.0	9.0	13.0	9.0	13.0

#### A. DC Peak Current Control

- 1 When the current to IPM exceeds set value of 79.5 A, compressor will stop. Compressor will restart after three minutes.
- 2 If the set value exceeds again for more than 30 seconds after the compressor restarts, operation will restart after two minutes.
- 3 If the set value exceeds again for within 30 seconds after the compressor restarts, operation will restart after one minute. If this condition repeats continuously for seven times, system will stop operation and OFF/ON control panel LED will blink (F23 error occurs).

### 15.1.3 Compressor Overheating Prevention Control

- The compressor operating frequency is regulated in accordance to discharge temperature as shown in below figures. When the discharge temperature exceeds 107°C, compressor will stop, and if this occurs 4 times within 30 minutes, system will stop operation and OFF/ON control panel LED will blink (F20 error occurs).

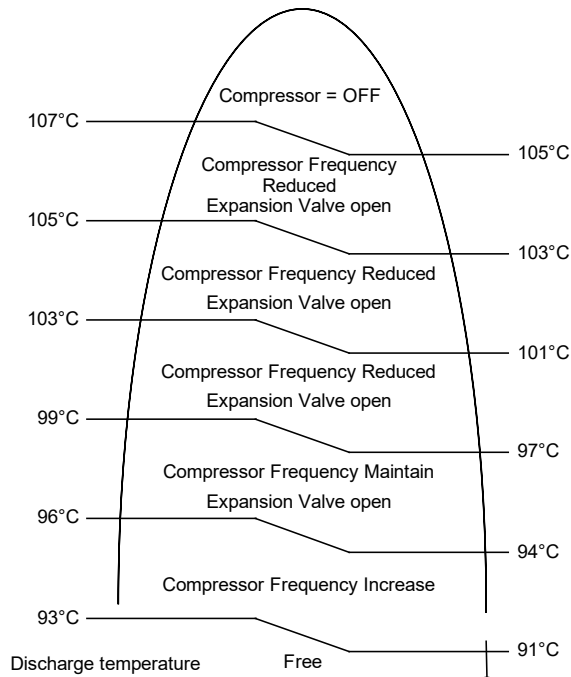


### 15.1.4 High Pressure Sensor Control


- Purpose:
  - To protect the system operation.
- Detection period:
  - After compressor on for 1 minute.
- Detection conditions:
  - When abnormal high voltage detection, 5 V or when open circuit detection 0V for 5 seconds continuously.
- After detection:
  - When abnormality is detected 4 times within 120 minutes, unit stop operation.
  - OFF/ON control panel LED will blink (H64 error occurs).

### 15.1.5 Outside Temperature Current Control

Heating

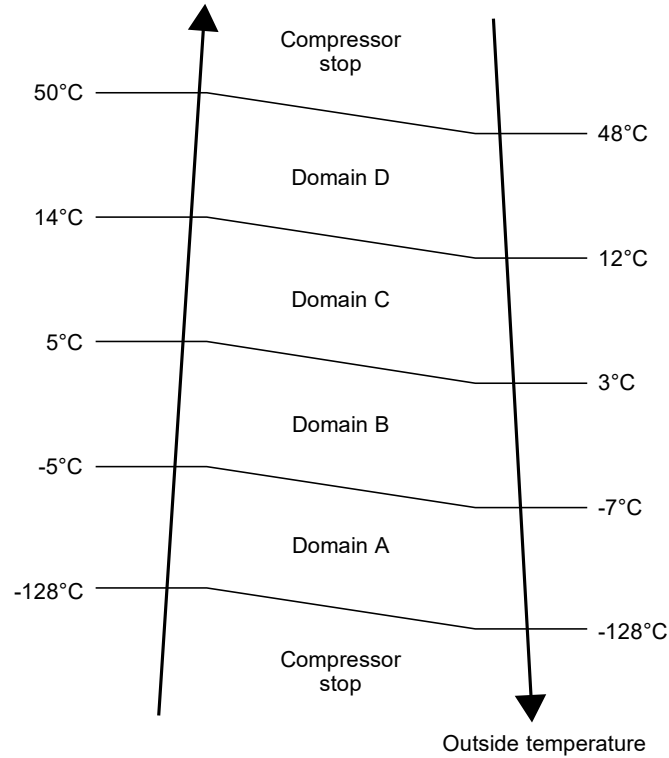

Cooling

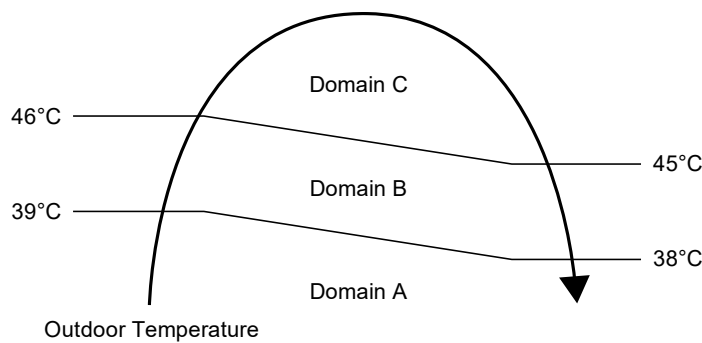

### 15.1.6 Pre-Heat Control

- Purpose:
  - For compressor protection during low outdoor ambient operation (during heating low temperature operation).
- Control content:
  - a. Trigger Pre-Heat Control condition
    - When the outdoor air temperature is below than -10°C, and discharge temperature is -10°C or below.
  - b. Resetting Pre-Heat Control condition
    1. When the outdoor air temperature exceeds entry condition (-7°C)
    2. When the discharge temperature exceeds entry condition (-7°C)

## 15.2 Protection Control for Heating Operation

### 15.2.1 Outdoor Air Temperature Control


The maximum current value is regulated when the outdoor air temperature rises above 14°C in order to avoid compressor overloading.

### 15.2.2 Deice Operation

When outdoor pipe temperature and outdoor air temperature is low, deice operation start where outdoor fan motor stop.


- Deice judging condition

Outdoor Unit Deice Control

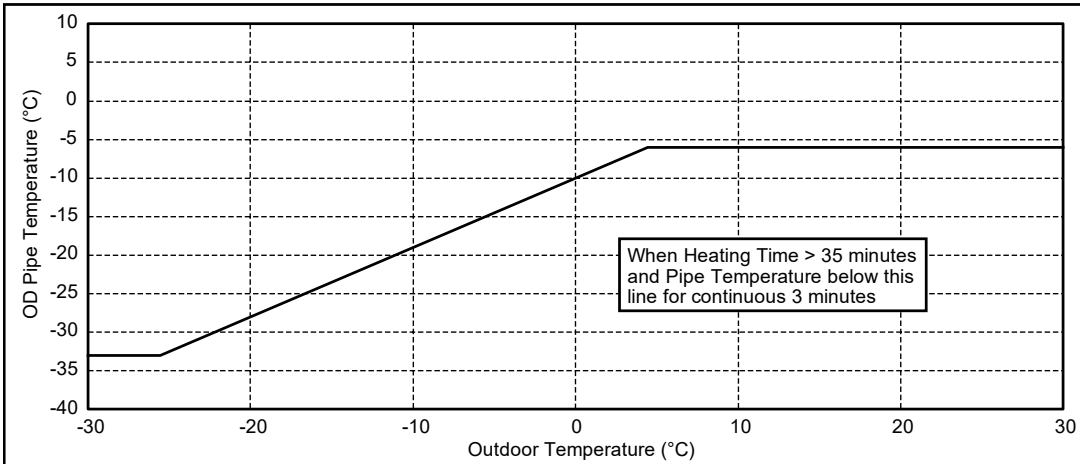

**Deice start depends:**  
 1. Outdoor air sensor temp.  
 2. Outdoor pipe sensor temp.  
 3. Heating accumulation time

- Deice mode selection condition
  - There are 2 deice modes, according to water inlet temperature and outdoor ambient temperature the deice mode is decided.

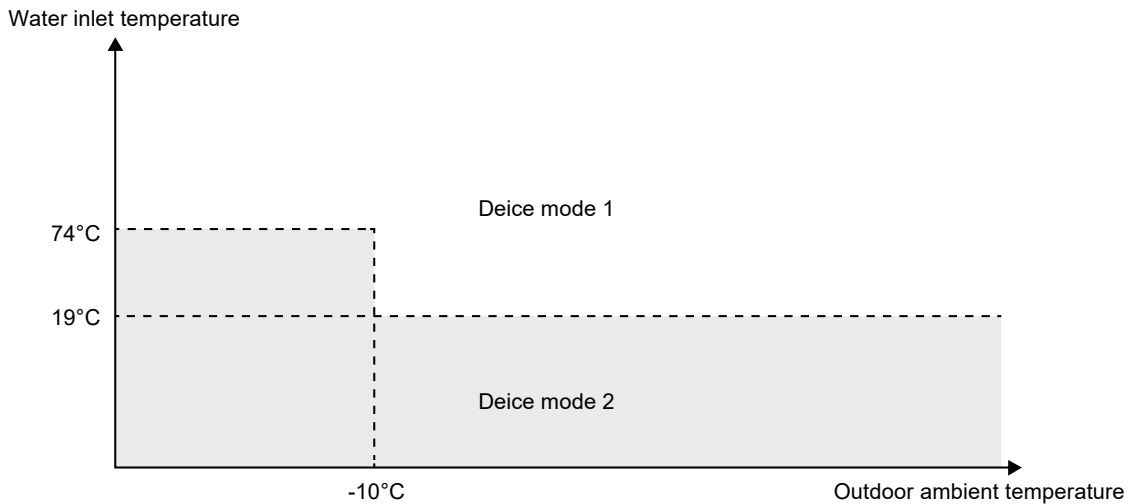


Judgement details:


- 1 When water inlet temperature is more than 74°C, unit will operate deice mode 1.
- 2 When water inlet temperature is less than 19°C, unit will operate deice mode 2.
- 3 When water inlet temperature is less than 74°C and outdoor ambient temperature is less than -10°C, unit will operate deice mode 2.
- 4 When water outlet temperature sensor 2 detect temperature is less than 14°C, unit will operate deice mode 2.

- Deice operation time diagram

a. Deice mode 1 control:

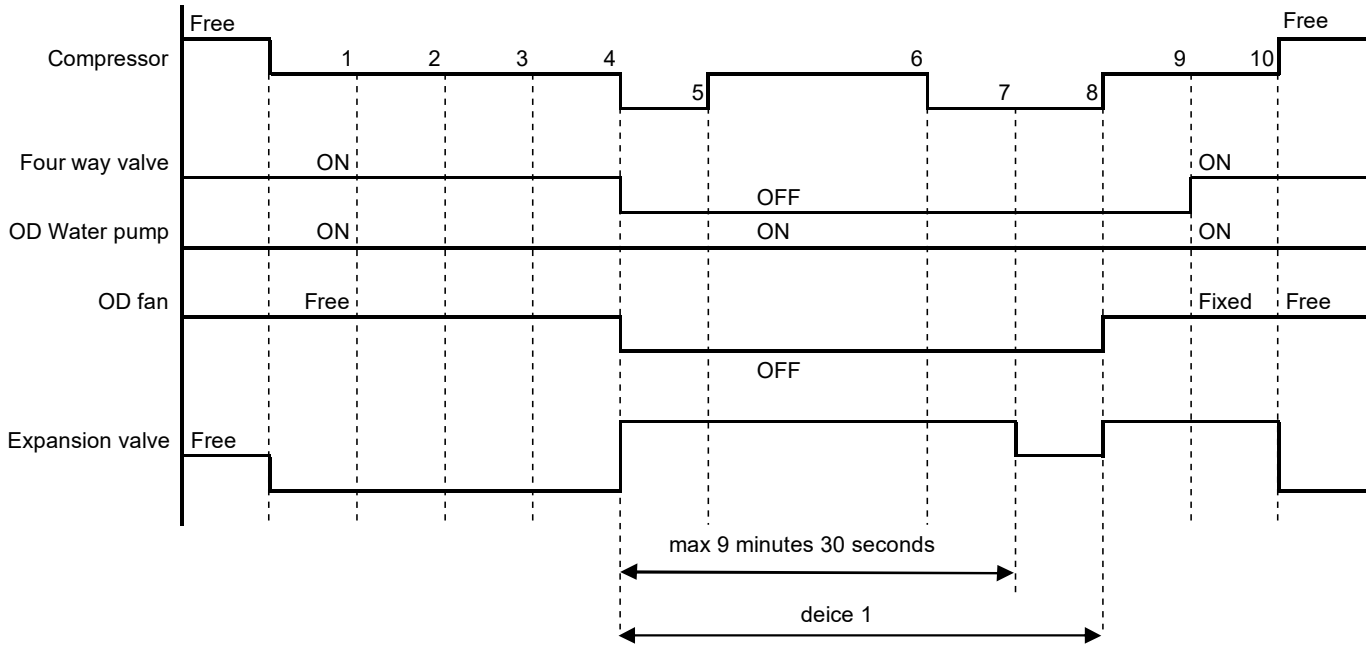

b. Deice mode 2 control:

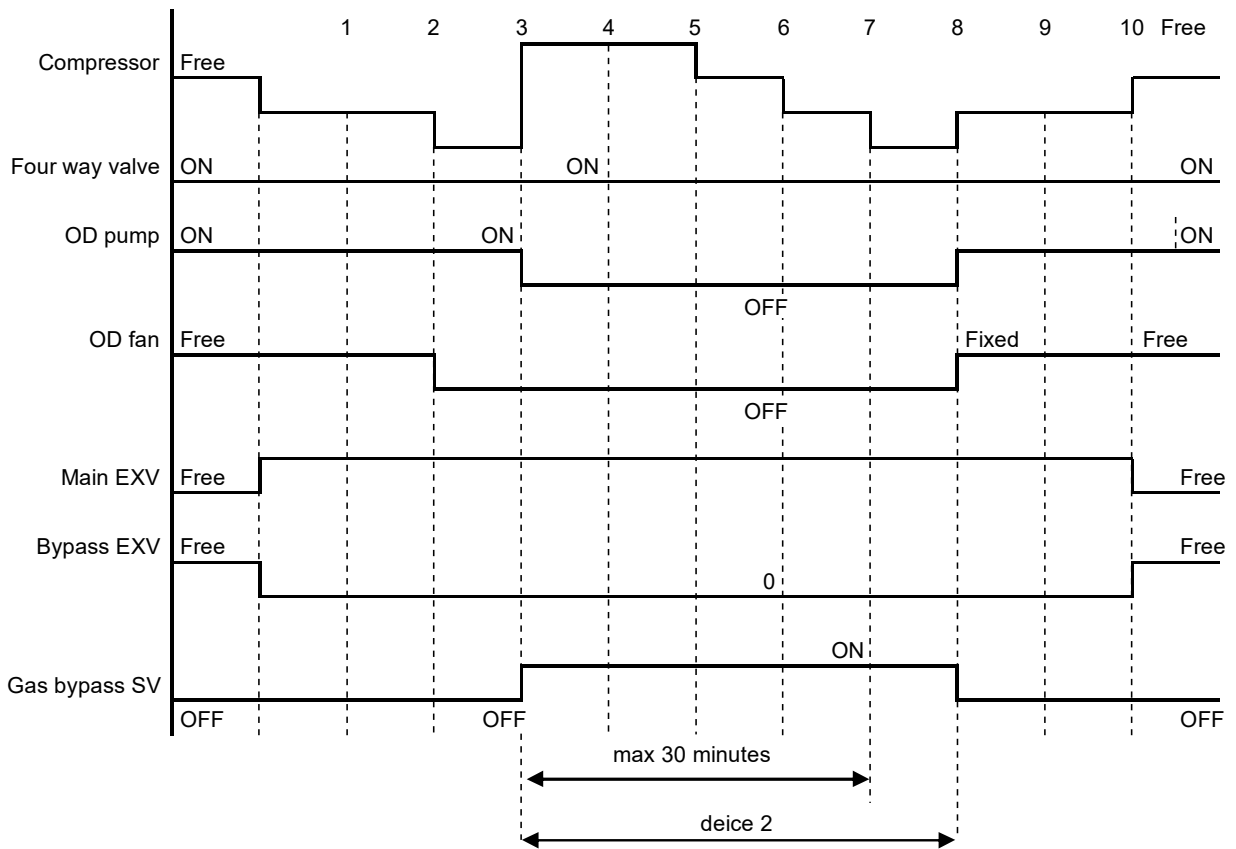

### **15.2.2.1 Ice Choke Detection Control**

This control is only available on models equipped with [Deice mode 2].

#### **Purpose**

Ice choke detection and forced defrosting to melt the ice are performed to prevent abnormal rises in discharge port temperature.

#### **Control Content**

1. During heating operation (excluding deice control)

#### **Start Conditions**

- 1 During heating operation (excluding deice mode 2 control)
- 2 Outdoor temperature < 10°C
- 3 Compressor is ON
- 4 After Compressor starting control ends
- 5 High-pressure saturation temperature - Indoor piping temperature  $\geq 40^{\circ}\text{C}$
- 6 EVA outlet temperature - Outdoor piping temperature  $\geq 35^{\circ}\text{C}$
- 7 Outdoor piping temperature <  $-35^{\circ}\text{C}$
- 8 Outdoor temperature - EVA outlet temperature <  $-4^{\circ}\text{C}$

If all the above start conditions 1 to 7 are met continuously for 30 seconds, or if all the above start conditions 1 to 5 and 8 are met continuously for 30 seconds, deice mode 2 control will be executed.

※If the conditions are no longer met during the timer 30 seconds, the timer of 30 seconds count will be reset.

2. During normal deice (excluding antifreezing deice control)

#### **Start Conditions**

- 1 During normal deice (including 0Hz instruction sequence)
- 2 Outdoor temperature < 10°C
- 3 High-pressure saturation temperature - Indoor piping temperature  $\geq 20^{\circ}\text{C}$
- 4 Indoor piping temperature <  $-25^{\circ}\text{C}$

If all the above start conditions 1 to 4 are met continuously for 30 seconds, forced antifreezing deice control will be executed.

### 15.2.3 Delayed Stop Control of the Compressor

#### Purpose

When the compressor is stopped while the current is high, it may generate noise. Therefore, the current is reduced before stopping.

Additionally, if there is a large pressure difference between the high-pressure and low-pressure sides of the refrigerant circuit before stopping, there is a risk of compressor reverse rotation, which may place a load on the circuit board.

To prevent this, pressure equalization is performed just before stopping.

#### Control Details

##### Start Condition 1

1. Power consumption is 15A or more
2. Outdoor temperature is 0°C or higher, or outlet water temperature 2 is 60°C or higher

Under the above conditions, when the operation is stopped via remote control:

##### Control Action 1

The compressor frequency is gradually reduced.

The compressor is stopped either when the frequency drops to 17Hz or when the total current falls below 15A.

It may take up to approximately 30 seconds from the remote control stop command until the compressor stops.

##### Start Condition 2

1. Heating operation
2. Outdoor temperature is below 0°C and outlet water temperature 2 is below 60°C

Under the above conditions, when the operation is stopped via remote control:

##### Control Action 2


The compressor frequency is reduced to 17Hz, then pressure equalization is performed, and finally the compressor is stopped.

It may take up to approximately 100 seconds from the remote control stop command until the compressor stops.

## 15.3 Protection Control for Cooling Operation

### 15.3.1 Outdoor Air Temperature Control

- The Compressor operating frequency is regulated in accordance to the outdoor air temperature as shown in the diagram below.
- This control will begin 1 minute after the compressor starts.
- Compressor frequency will adjust base on outdoor air temperature.

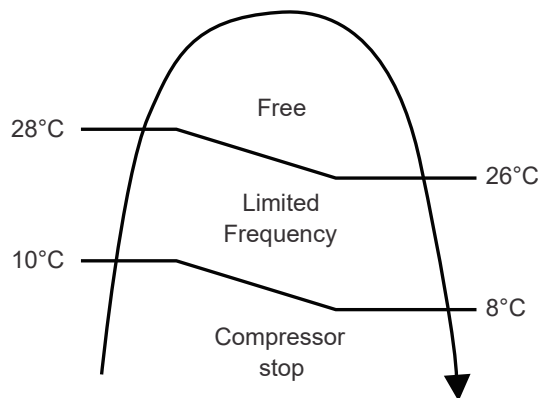

### 15.3.2 Freeze Prevention Control 1


- 1 When refrigerant temperature is lower than 0°C continuously for 10 seconds, compressor will stop operating.
- 2 Compressor will resume its operation three minutes after the refrigerant heat exchanger is higher than 2°C.
- 3 Heat exchanger freeze prevention (H99) will memory in error history.

## 16. Servicing Guide

### 16.1 How to Take Out Front Plate

#### Open and Close Front Plate ⑭ (ID)

- 1 Remove the 2 mounting screws of Front Plate ⑭ (ID).
- 2 Slide it upwards to unhook the Front Plate ⑭ (ID) hook.
- 3 Reverse above steps 1~2 for close it.

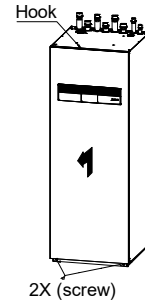

**CAUTION**

Open or close the Front Plate carefully.  
The heavy Front Plate may injure the fingers.

\* The remote control cable is connected to the front panel, so be careful when removing the panel.

### 16.2 Test Run

- 1 Before test run, make sure below items have been checked:-
  - a) Pipework are properly done.
  - b) Electric cable connecting work are properly done.
  - c) Tank Unit is filled up with water and trapped air is released.
  - d) Please turn on the power supply after filling the tank until full.
- 2 Switch ON the power supply of the Tank Unit. Set the Tank Unit RCCB/ELCB to "ON" condition. Then, please refer to the Operation Instruction for operation of Remote Controller ① (ID).

#### Note:

- During winter, turn on the power supply and standby the unit for at least 15 minutes before test run. Allow sufficient time to warm up refrigerant and prevent wrong error code judgement.

- 3 For normal operation, Water Pressure reading should be in between 0.5 bar and 4 bar (0.05 MPa and 0.4 MPa). If necessary, adjust the Water Pump ⑦ (OD) SPEED accordingly to obtain normal water pressure operating range. If adjust Water Pump ⑦ (OD) SPEED cannot solve the problem, contact your local authorized dealer.
- 4 After test run, please clean the Magnet Water Filter ⑧ (OD). Reinstall it after finish cleaning.

If air purging during initial commissioning is insufficient, lead to pump dry running.


- Air purging function can be access from remote control service setup.
- It is highly recommended to use this function before actual A2W startup & commissioning.

### 16.3 Expansion Vessel ⑪ (ID) Pre Pressure Checking

#### For Space Heating / Cooling

- Expansion Vessel ⑪ (ID) with 12 L air capacity and initial pressure of 1 bar is installed in this Tank Unit.
- Total amount of water in system should be below 200 L. (Inner volume of Tank Unit's piping is about 10 L)
- If total amount of water is over 200 L, please add another expansion vessel. (field supply)
- Please keep the installation height difference of system water circuit within 10 m. (Extra pump may be required)
- Be sure to check the precharge pressure of the expansion vessel when installing. (Air will gradually escape even during storage.)
- It is highly recommended that the expansion vessel precharge pressure be checked once a year. (The pressure will be reduced by half in two years.)
- If the static pressure in the expansion vessel falls below 0.5 bar, cavitation may occur and the pump may lock.


## 16.4 How to Adjust Pump Speed

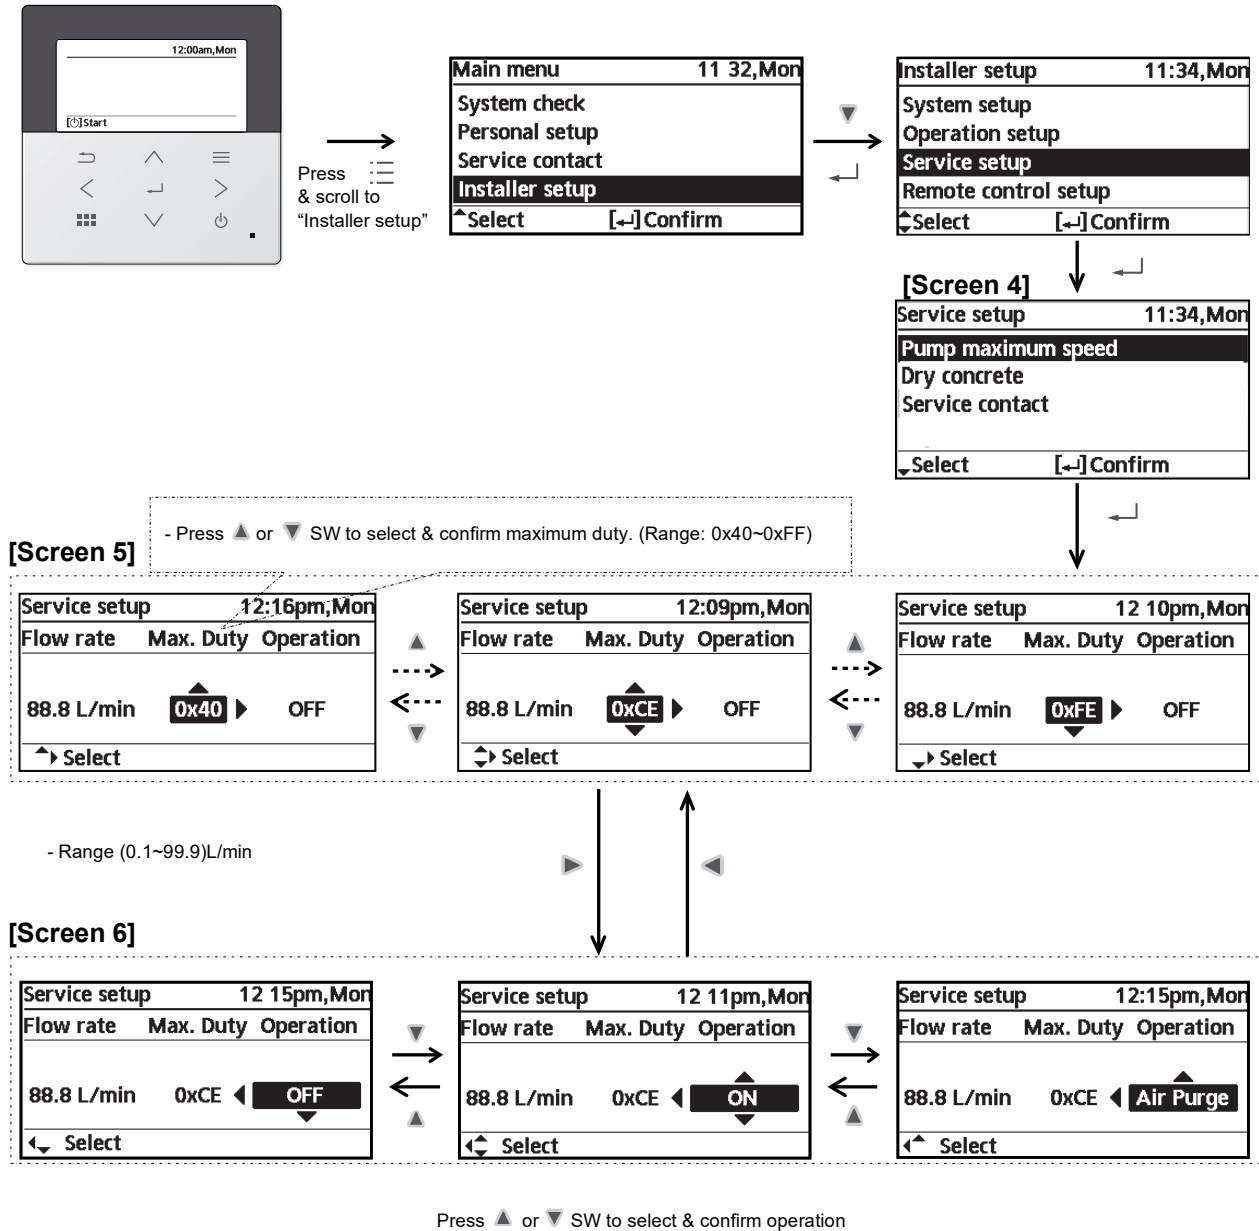


### NOTE:

1. Whenever at [Screen 5], if press SW to OFF, pump operation should be turned OFF.
2. Whenever at [Screen 6], if press SW to OFF, pump operation should be turned OFF.

## 16.5 How to Unlock Cool Mode

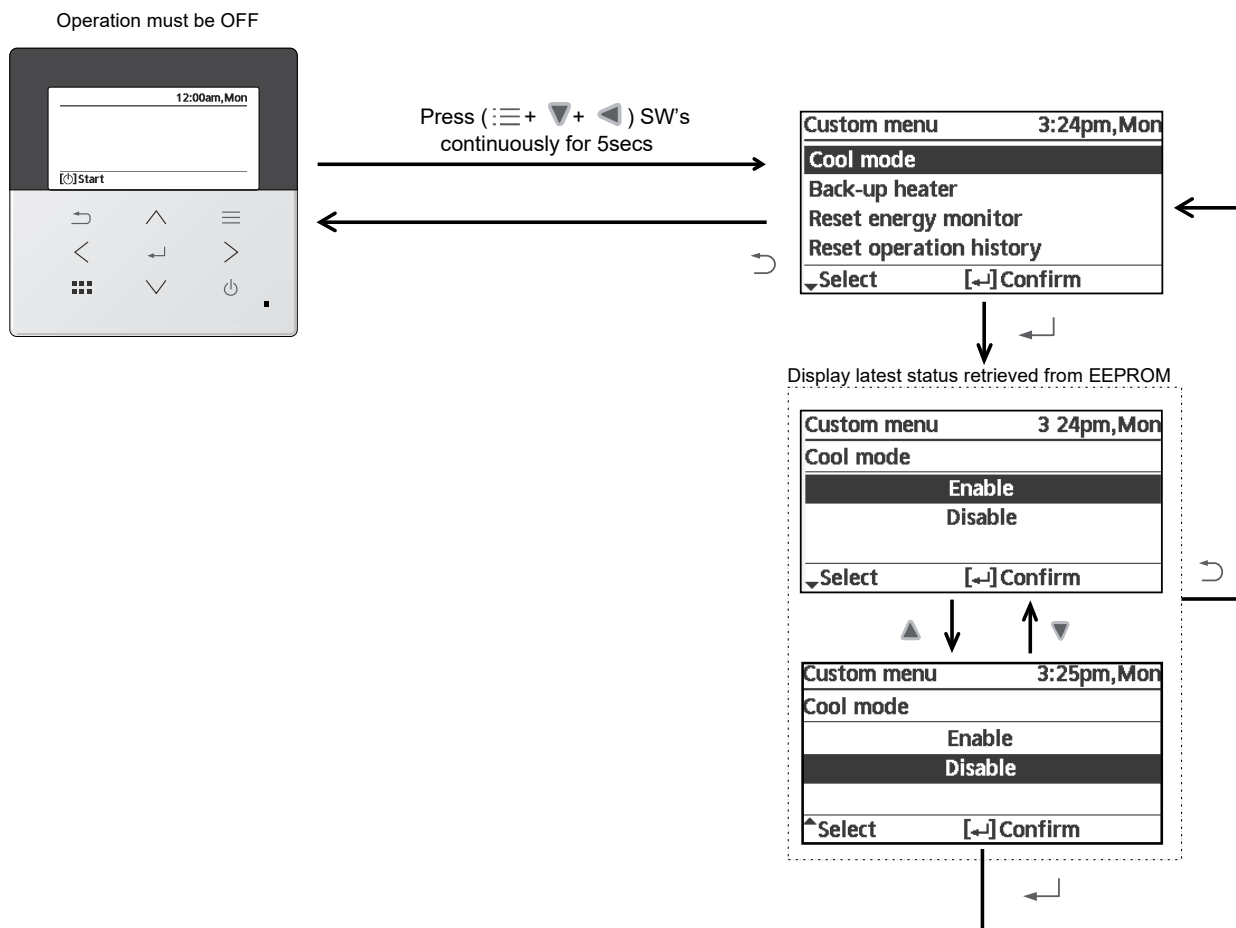


## 16.6 EEPROM Factory Default Data Setup Procedure

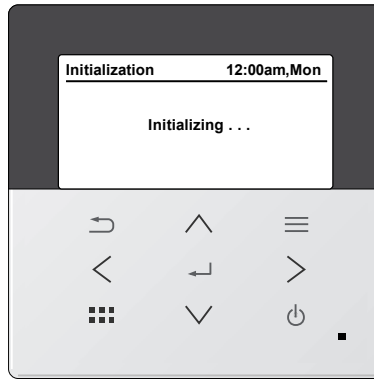


- EEPROM default data setup is only possible during initialization process.
- Press (▲, ▼, ◀, ▶) simultaneously for 5secs continuously, initialization process will stop & EEPROM default data setup process will start.


During EEPROM default data setup process, display should be as shown below.

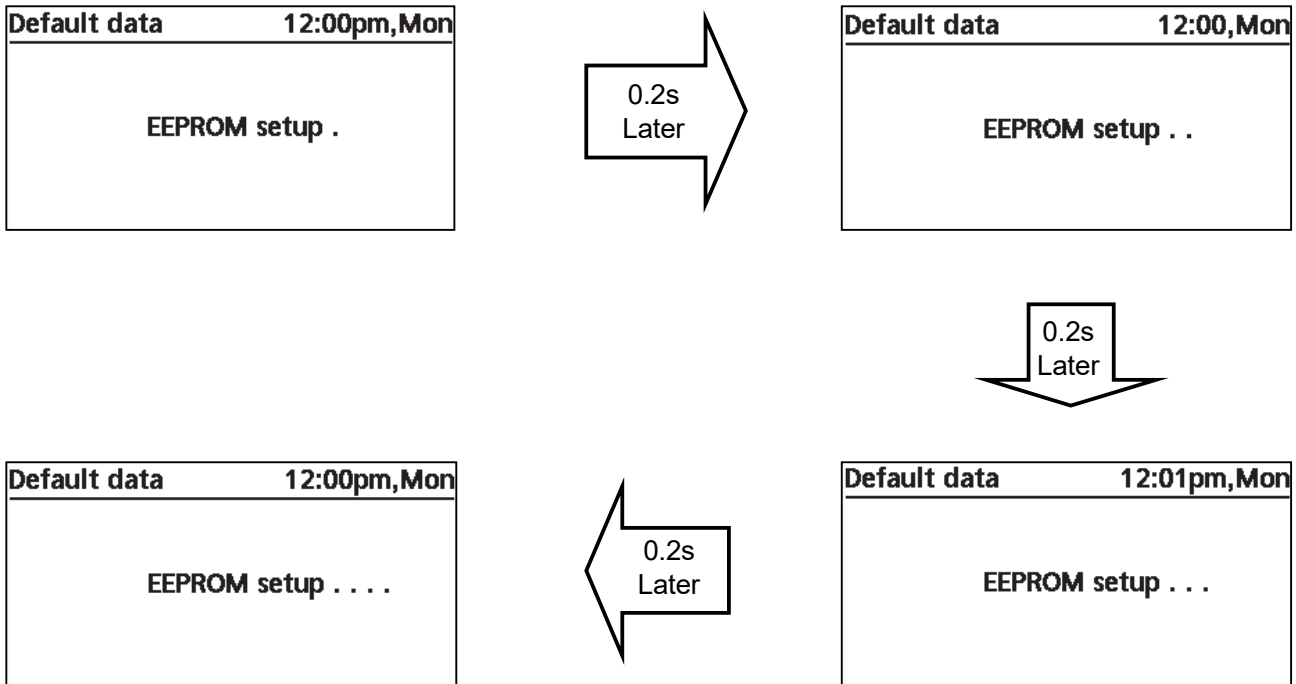

- Once EEPROM default data setup process is complete, initialization process will re-start from beginning.

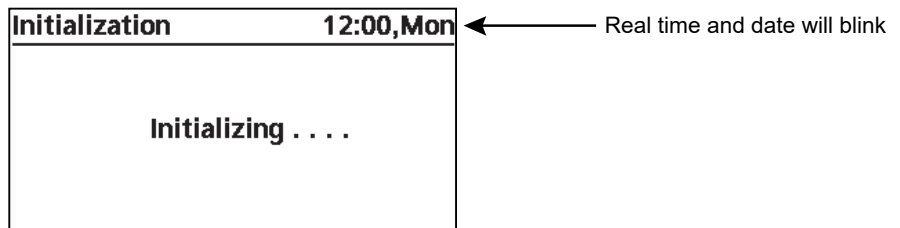

## 16.7 Dry Concrete Setup

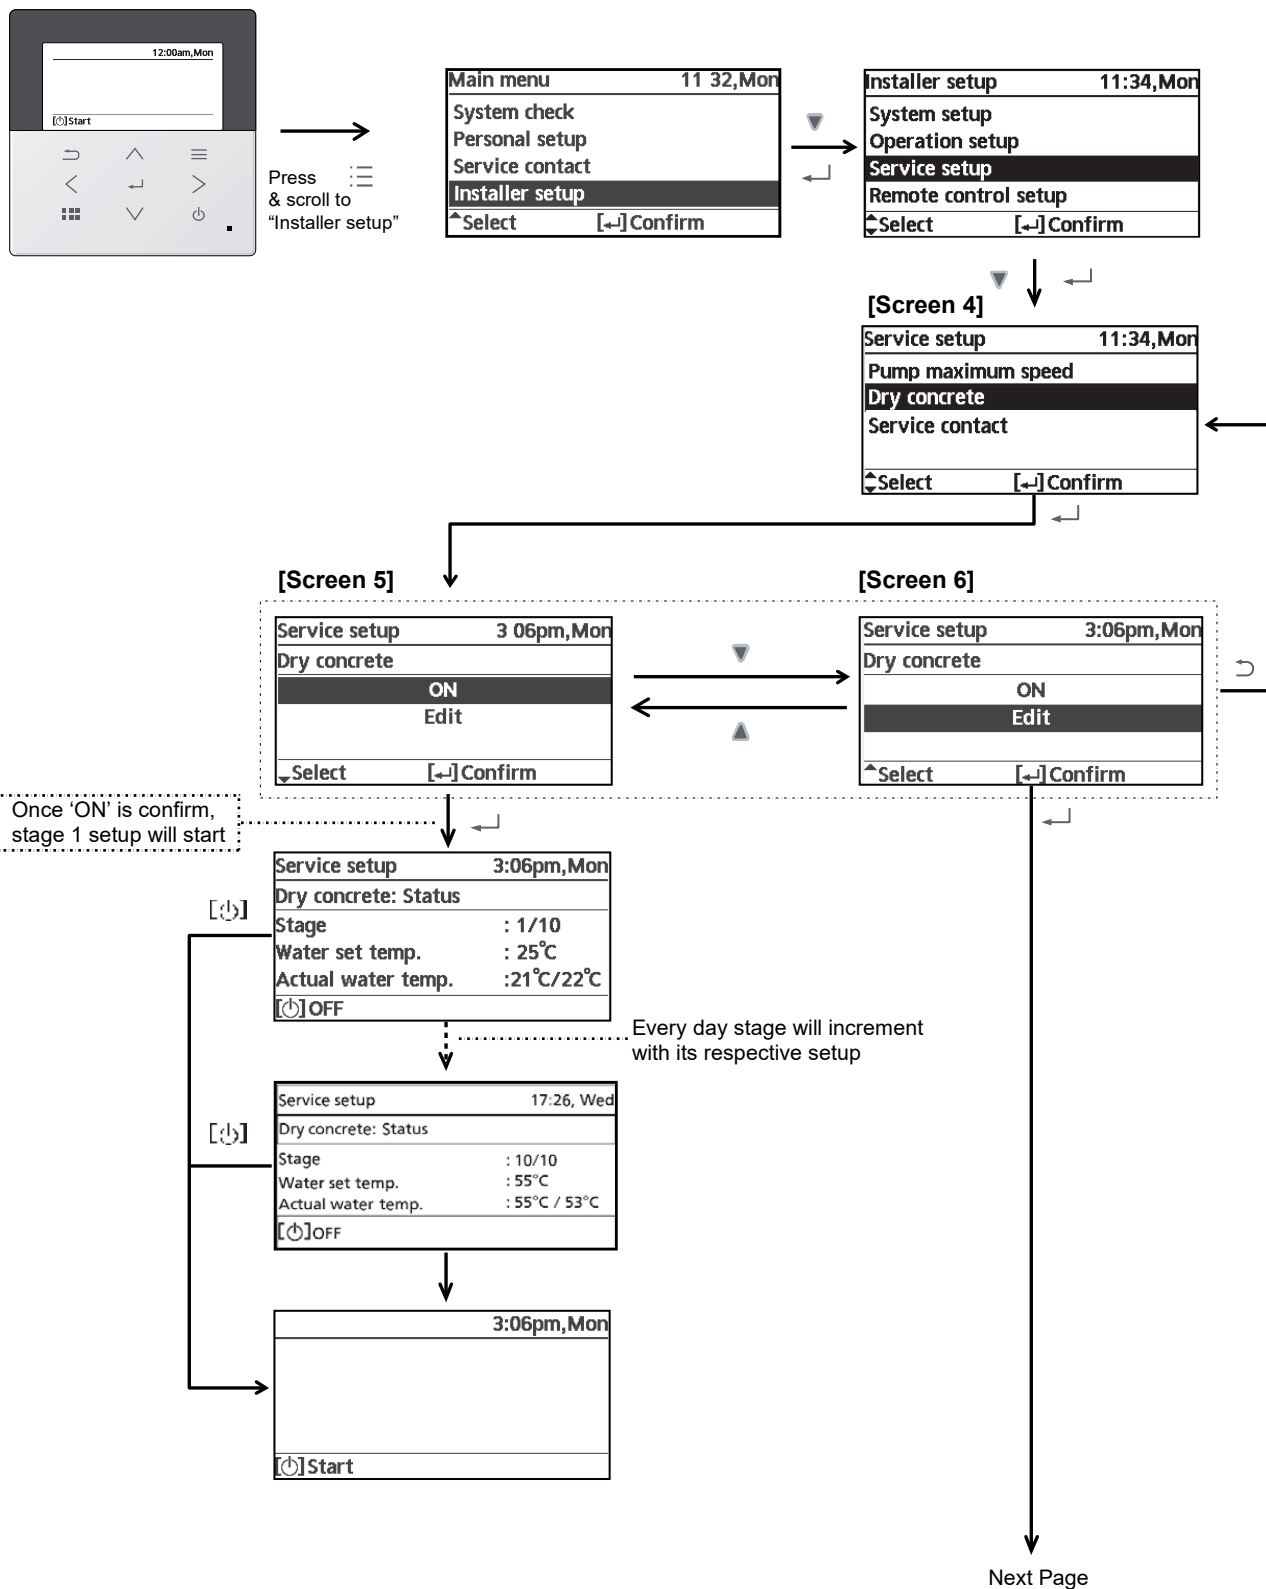


- Press ▲ or ▼ button to select no. of stages.  
 - Press ↵ to store latest status.  
 - Press ⏪ button, display will return to [Screen 6].

- If suppose to select 10 stages, then setup will start from stage 1/10.  
 - Press ▲ or ▼ button to select set temperature.  
 - Press ↵ button to store latest status.

- Move to next stage 2/10  
 - Repeat the same procedure

- Move to next stage 10/10  
 - Repeat the same procedure.  
 - Press ↵ to store latest status the the display will return to [Screen 4]  
 - Press ⏪ button to return to stage 9/10.

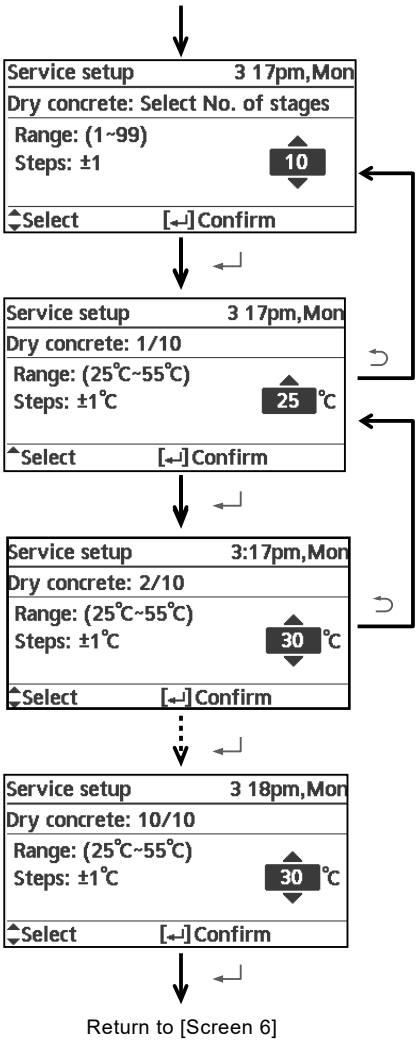

## 17. Maintenance Guide


In order to ensure safety and optimal performance of the Tank Unit, seasonal inspections on the Tank Unit, functional check of RCCB/ELCB, field wiring and piping have to be carried out at regular intervals. This maintenance should be carried out by authorized dealer. Contact dealer for scheduled inspection.

### 1 Charging and Discharging the Water

Make sure all the piping installations are properly done before carry out below steps.


Charge the Water

- For Domestic Hot Water Tank
  - a. Set the Domestic Hot Water Tank Discharge (Drain Tap) ⑨ to "CLOSE".

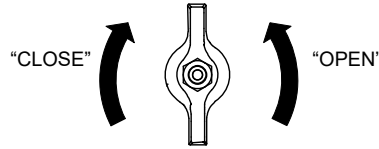

Domestic Hot Water Tank Discharge (Drain Tap) ⑨


- b. Set all Tap / Shower "OPEN".
  - c. Start filling water to the Domestic Hot Water Tank via Tube Connector ③.  
After 20~40min, water should flow out from Tap / Shower.  
Else, please contact your local authorized dealer.
  - d. Check and make sure no water leaking at the tube connecting points.
  - e. Set the Domestic Hot Water Tank Discharge (Drain Tap) ⑨ to "OPEN" for 10 seconds to release air from this pipeline. Then set it "CLOSE".
  - f. Turn the Safety Relief Valve ⑳ (ID) knob counterclockwise slightly and hold for 10 seconds to release air from this pipeline. Then recover the knob to original position.
  - g. Ensure Step 5 & 6 is carried out each time after charging water to Domestic Hot Water Tank.
  - h. To prevent back pressure from happening to the Safety Relief Valve ⑳ (ID), do turn the Safety Relief Valve ⑳ (ID) knob counterclockwise.
- For Space Heating / Cooling
    - a. Start filling water (with pressure more than 1 bar (0.1MPa)) to the Space Heating/Cooling circuit via Tube Connector ①.
    - b. Stop filling water if the free water flow through Pressure Relief Valve drain pipe. (Check the Outdoor Unit)
    - c. Turn ON the Tank Unit.
    - d. Remote control menu → Installer setup → Service setup → pump maximum speed → Turn on the pump.
    - e. Make sure Water Pump ⑦ (OD) is running.
    - f. Check and make sure no water leaking at the tube connecting points.
    - g. Reinstall the Cabinet front plate f by tightening the 2 mounting screws.

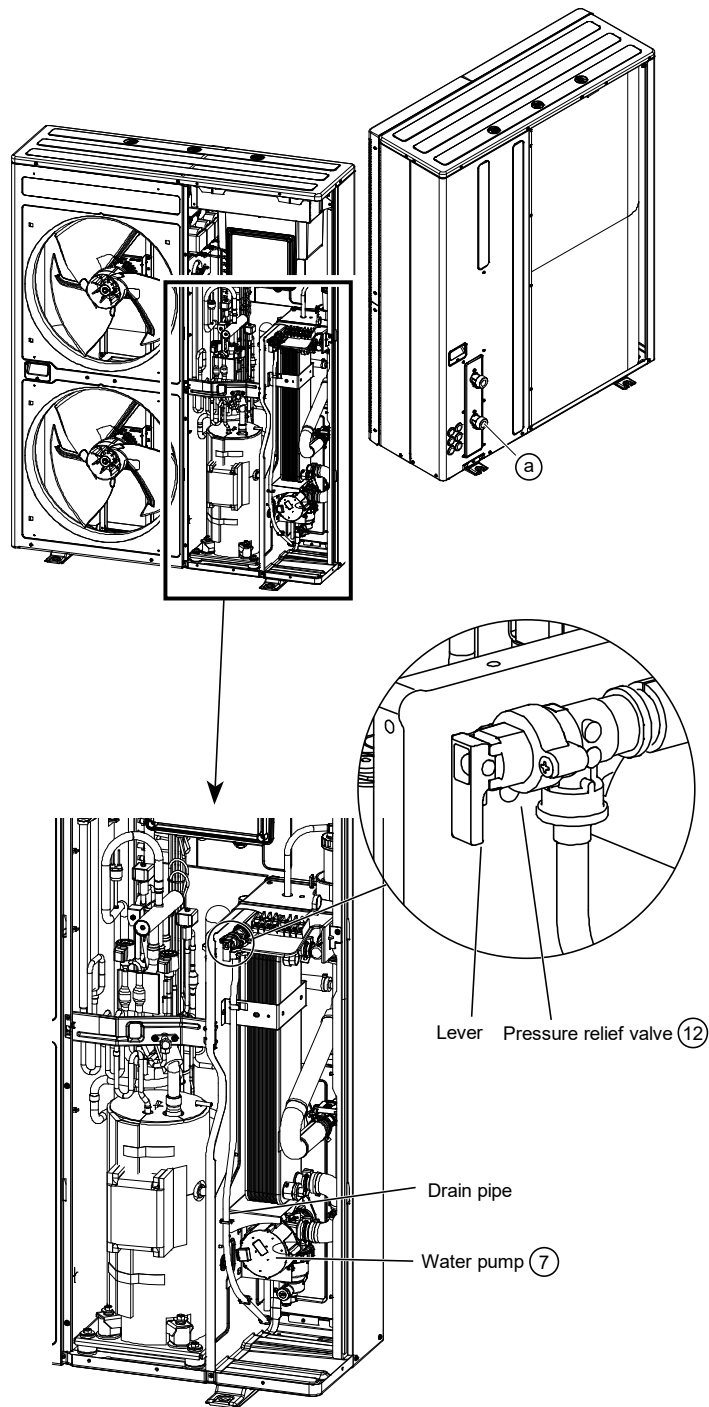

### Discharge the Water

- For Domestic Hot Water Tank
  - a. Turn OFF power supply.
  - b. Set the Domestic Hot Water Tank Discharge (Drain Tap) ⑨ to “OPEN”.
  - c. Open Tap / Shower to allow air inlet.
  - d. Turn the Safety Relief Valve ⑳ (ID) knob counterclockwise slightly and hold it until all air is released from this pipeline. Then recover the knob to original position after ensured the pipeline is emptied.
  - e. After discharge, set Domestic Hot Water Tank Discharge (Drain Tap) ⑨ to “CLOSE”.

- 2 Check Water Pressure \*(1 bar = 0.1 MPa)  
Water pressure should not lower than 0.5 bar (with inspects the Water Pressure from Remote Controller). If necessary add water into Tank Unit (via Tube Connector ⑩).
- 3 Check Pressure Relief Valve  
\*Pressure Relief Valve is mounted in the Outdoor Unit.
  - Confirm that the pressure relief valve is working properly, Pull the lever horizontal direction.
  - Release the lever when water comes out of the drain pipe of the pressure relief valve.  
(While the air continues to come out of the drain pipe, keep raising the lever to completely discharge the air.)
  - Confirm that the water from the drain pipe stops.
  - If water is leaking, pull the lever several times and return it to make sure the water stops.
  - If water keeps coming out of the drain, drain water.
  - Turn off the system and contact your local authorized dealer.

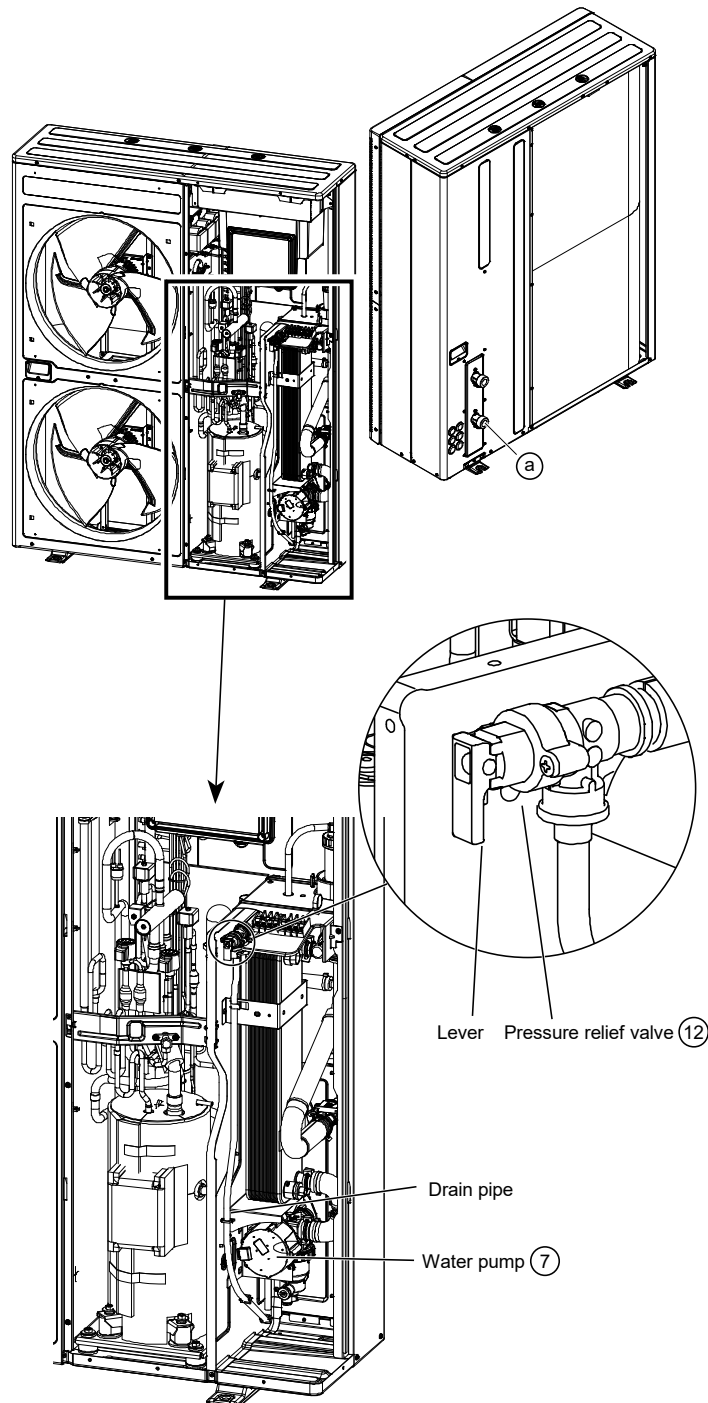


- 4 Check Air Accumulation
  - Open the air vent plugs on the heating panel, fan convector, etc., and remove the air accumulated in the equipment and piping.
  - If the outdoor unit and the indoor unit are installed on different floors, open the air vent plug on the water plug of the outdoor unit and the air vent plug on the heater bottle inside the indoor unit to remove the air. (be careful, water will come out)
- 5 Indoor Unit Control Board Area  
Thorough visual inspection of the control board and look for defects, i.e. loose connection, melting of wire insulator and etc.
- 6 RCCB/ELCB  
Ensure the RCCB/ELCB set to “ON” condition before check RCCB/ELCB.  
Turn on the power supply to the Tank Unit.  
This testing could only be done when power is supplied to the Tank Unit.


**⚠ WARNING**

Be careful not to touch parts other than RCCB/ELCB test button when the power is supplied to Tank Unit. Else, electrical shock may happen. Before obtaining access to terminals, all supply circuits must be disconnected.

- Push the “TEST” button on the RCCB/ELCB. The lever would turn down and indicate “0”, if it functions normal.
  - Contact authorized dealer if the RCCB/ELCB malfunction.
  - Turn off the power supply to the Tank Unit.
  - If RCCB/ELCB functions normal, set the lever to “ON” again after testing finish.
- 7 Reset Overload Protector  
Overload Protector serves the safety purpose to prevent the water over heating. When the Overload Protector trip at high water temperature, take below steps to reset it.
    - a. Take out the cover.
    - b. Use a test pen to push the centre button gently in order to reset the Overload Protector.
    - c. Fix the cover to the original fixing condition.

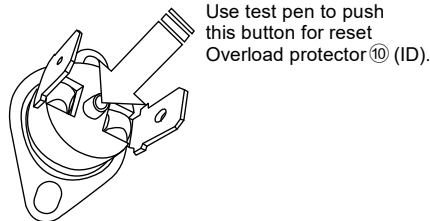

- 8 Maintenance for Magnet Water Filter ⑧ (OD)
  - a. Turn OFF power supply.
  - b. Place a container below Magnet Water Filter ⑧ (OD).
  - c. Turn to remove the Magnet Bar at bottom of Magnet Water Filter ⑧ (OD).
  - d. By using Allen key (8mm), remove the Cap of Discharge Port.
  - e. By using Allen Key (4mm), open the Service Valve to release the dirty water from the Discharge Port into a container. Close the service valve when the container is full to avoid spillage in the tank unit. Dispose the dirty water.
  - f. Reinstall the Cap of Discharge Port and Magnet Bar.
  - g. Re-charging the water to Space Heating / Cooling circuit if necessary (refer Section 5 for details.)
  - h. Turn ON power supply.

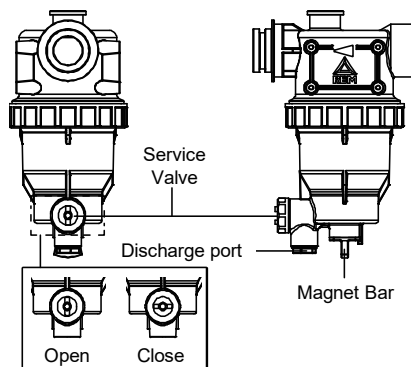

9 Maintenance for Safety Relief Valve ②① (ID)

It is strongly recommended to operate the valve by turn the knob counter clockwise to ensure free water flow through discharge pipe at regular intervals to ensure it is not blocked and to remove lime deposit.

Stagnant water in Tank Unit should be drained if it is not going to be operated for more than 60 days.
--

10 Maintenance for Expansion Vessel

- a. Turn OFF power supply.
- b. Drain the water circuit until no more circulating fluid comes out.
- c. Connect the air pump to the air charge valve of the expansion vessel.
- d. Check the pressure and add air if it is low.
- e. Return the valve and refill the fluid until the water pressure exceeds 1 bar.

It is highly recommended that the expansion vessel precharge pressure be checked once a year. (The pressure will be reduced by half in two years.)

If the static pressure in the expansion vessel falls below 0.5 bar, cavitation may occur and the pump may lock.

# 17.1 Maintenance for Magnetic Water Filter Set

## 17.1.1 Service and Maintenance

**If forget Password and cannot operate remote controller**

Press + + for 5 sec.  
 Password unlock screen appears, press Confirm and it shall reset.  
 Password will become 0000. Please reset it again.  
 (CAUTION) Only display when it is locked by password.

## 17.1.2 Maintenance Menu

**How to set up the Maintenance menu**

Maintenance menu	12:00 pm, Mon
<b>Actuator check</b>	
Test mode	
Sensor setup	
Reset password	
▼ Select	[↵] Confirm

+ + Press for 5 seconds.

Items that can be set:

- Actuator check (Manual ON/OFF of all functional parts)  
 Note: As there is no protection action, be careful not to cause any errors when operating each part (e.g., do not turn ON the pump when there is no water).
- Test mode (Test run)  
 This mode is generally not used.
- Sensor setup (Offset gap of detected temperature of each sensor, can be set within a range of -3°C to 3°C).  
 Note: Use this setting only if the sensor is deviated as it affects temperature control.
- Reset password (Password reset)

## 17.1.3 Custom Menu

Custom menu	12:00 pm, Mon
<b>Cool mode</b>	
Back-up heater	
Reset energy monitor	
Reset operation history	
▼ Select	[↵] Confirm

Custom menu	12:00 pm, Mon
Reset energy monitor	
Reset operation history	
Smart DHW	
<b>Anti-stick mode</b>	
▲ Select	[↵] Confirm

+ + Press for 5 seconds.

Items that can be set:

- Cool mode (Select Cooling function: Enable/Disable)  
 Default setting is Disable.  
 Note: Enabling or disabling Cool Mode may affect electricity usage, be careful and do not simply change it.  
 In Cool mode, ensure that piping is properly insulated; otherwise, condensation may occur, leading to water dripping on the floor and potentially causing damage.
- Back-up heaters (Select Back-up heaters: Enable/Disable)  
 Note: This setting differs from the customer's choice to use or not use the back-up heater. It disables the heater power for freeze protection. (This setting should only be used if requested by the utility company.)  
 This setting may result in a lower heating temperature, potential failure of defrosting, and system stoppages (H75 error).  
 Installation must be performed by a qualified personnel. If the system stops frequently, the issue may be due to insufficient circulation flow or a heating set temperature that is too low.
- Reset energy monitor (Deletes the memory of the energy monitor)  
 Use this function when moving house or handing over the unit.
- Reset operation history (Deletes the memory of the operation history)  
 Use this function when moving house or handing over the unit.
- Smart DHW (Set Smart DHW mode Parameter)
  - Start time: Tank reboil at lower ON Temp. onward.
  - Stop time: Tank reboil at normal ON Temp. onward.
  - ON Temp.: Tank Reboil Temp when Smart DHW start.
- Anti-stick mode (select Anti-stick mode: Enable/Disable)  
 Default setting is Enable.  
 The actuator is automatically activated every Monday at 3:00 am to prevent the actuating parts from sticking together.  
 If you wish to stop the periodic activation, select "Disable".  
 Parts and other components that are not operated for an extended period may stick if Anti-stick mode is disabled.

## 17.1.4 Specifications

### 17.1.4.1 Specifications of Fresh Water as Heat Transfer Medium in Brazed Heat Exchanger

\*Example : Connection Panasonic AiO Tank unit

Parameter	Quality Limits for Tap Water on the Secondary Side
Temperature	Below 65°C
pH	7 to 9
Alkalinity	60mg/l $\text{HCO}_3^-$ < 300mg/l
Conductivity	< 1250 $\mu\text{S/cm}$
Hardness	$[\text{Ca}^{2+}, \text{Mg}^{2+}] / [\text{HCO}_3^-] > 0.5$
Chloride	< 200mg/l at 60°C
Sulphate	$[\text{SO}_4^{2-}] > 100\text{mg/l}$ and $[\text{HCO}_3^-] / [\text{SO}_4^{2-}] > 1$
Nitrate	$\text{NO}_3^- < 100\text{mg/l}$
Chlorine	< 0.5mg/l

### 17.1.4.2 External Filter

Solids in the water must be filtered.


Minimum filter mesh size required for the field supply external filter in the water inlet is 20 mesh.

# 18. Troubleshooting Guide







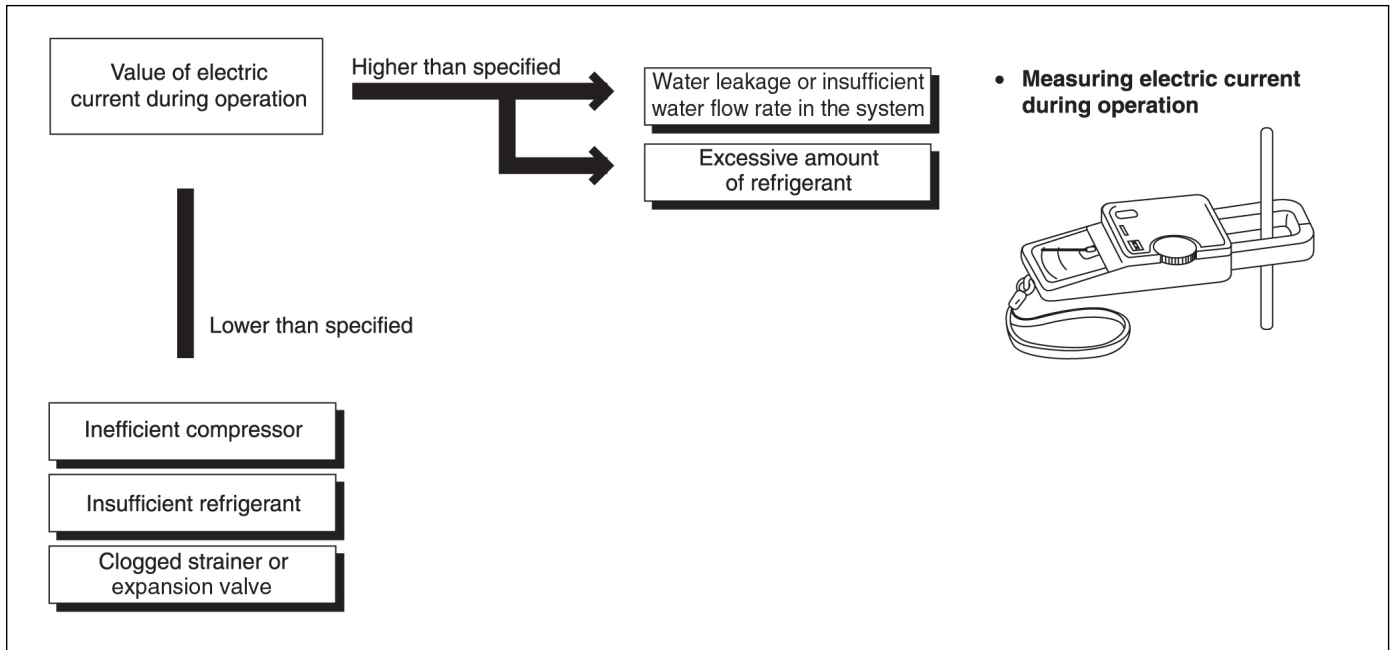





## 18.1 Refrigeration Cycle System

In order to diagnose malfunctions, make sure that there are no electrical problems before inspecting the refrigeration cycle.

Such problems include insufficient insulation, problem with the power source, malfunction of a compressor and a fan.



## 18.2 Relationship Between the Condition of the Air-to-Water Heatpump Indoor and Outdoor Units and Electric Current

Condition of the Air-to-Water Heatpump indoor and outdoor units	Heating Mode	Cooling Mode
	Electric current during operation	Electric current during operation
Water leakage or insufficient water flow rate in the system		
Excessive amount of refrigerant		
Inefficient compression		
Insufficient refrigerant (gas leakage)		
Outdoor heat exchange deficiency		
Clogged expansion valve or Strainer		


- Carry out the measurements of pressure, electric current, and temperature fifteen minutes after an operation is started.

## 18.3 Breakdown Self Diagnosis Function

### 18.3.1 Self Diagnosis Function (Three Digits Alphanumeric Code)


- When abnormality occur during operation, the system will stop operation, and OFF/ON control panel LED will blink and error code will display on the control panel.
- Even error code is reset by turning OFF power supply or by selecting ERROR RESET, if the system abnormality is still unrepaired, system will again stop operation, and OFF/ON control panel LED will again blinks and error code will be display.
- The error code will store in IC memory.
- **To check the error code**
  - 1 When an abnormality occurs, system will stop operation and OFF/ON control panel LED will blink.
  - 2 Error code of the abnormality will be display on the control panel.
  - 3 To determine the abnormality description, the error code table needs to be referred.

eg:

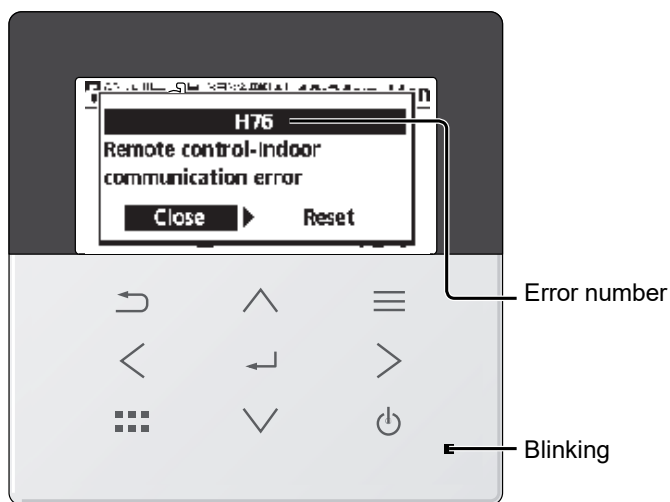

Press < > to select Close / Reset then press ↵

- **To display past/last error code**
  - 1 Turn ON power supply.
  - 2 Refer below procedure to retrieve the error code history.
- **To permanently delete error code from IC memory**
  - 1 Turn ON power supply.
  - 2 Refer below procedure to clear error history.

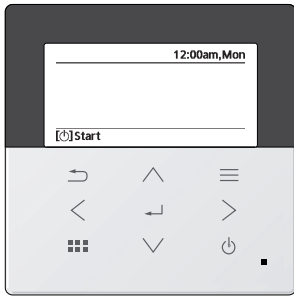

Press button and select "System Check"

Main menu 9:40am, Mon	
Function setup	
<b>System check</b>	
Personal setup	
Service contact	
Select	[+/-] Confirm

System check 9:40am, Mon	
<b>Energy monitor</b>	
System information	
Error history	
Compressor	
Select	[+/-] Confirm

[Screen 4] Press SW to select "Error history"

System check 9:40am, Mon	
Energy monitor	
System information	
<b>Error history</b>	
Compressor	
Select	[+/-] Confirm

Display last 4 error retrieved from EEPROM

Error history 9:40am, Mon	
1. H76 (2024/02/19)	
2. H15 (2024/02/18)	
3. H70 (2024/02/17)	
4. H76 (2024/02/16)	
[+/-] Clear history	

Do you want to clear error history?	
Yes	<b>No</b>

Do you want to clear error history?	
<b>Yes</b>	No

Error history 9:40am, Mon	
1. --	
2. --	
3. --	
4. --	
[+/-] Clear history	

## 18.4 Error Codes Table

Diagnosis display	Abnormality/Protection control	Abnormality judgement	Primary location to verify
H00	No abnormality detected	—	—
H12	Indoor/Outdoor capacity unmatched	10s after power supply	<ul style="list-style-type: none"> <li>Indoor/outdoor connection wire</li> <li>Indoor/outdoor PCB</li> <li>Specification and combination table in catalogue</li> </ul>
*H15	Outdoor compressor temperature sensor abnormality	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Compressor temperature sensor (defective or disconnected)</li> </ul>
*H17	Zone 2 water pump abnormality	Continue for 10 sec.	<ul style="list-style-type: none"> <li>Indoor PCB (main)</li> <li>Water pump (malfunction)</li> </ul>
H20	Water pump abnormality	Continue for 10 sec.	<ul style="list-style-type: none"> <li>Indoor PCB</li> <li>Water pump (malfunction)</li> </ul>
H21	Abnormal water pressure	Continue for 300 sec.	<ul style="list-style-type: none"> <li>Water pressure sensor</li> </ul>
*H22	Abnormal tank 2 sensor	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Tank 2 sensor</li> </ul>
H23	Indoor refrigerant liquid temperature sensor abnormality	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Refrigerant liquid temperature sensor (defective or disconnected)</li> </ul>
*H27	Service valve error	Continue for 300 sec.	<ul style="list-style-type: none"> <li>High pressure sensor (defective or disconnected)</li> </ul>
H28	Abnormal solar sensor	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Solar temperature sensor (defective or disconnected)</li> </ul>
H31	Abnormal swimming pool sensor	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Pool temperature sensor (defective or disconnected)</li> </ul>
H36	Abnormal buffer tank sensor	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Buffer tank sensor (defective or disconnected)</li> </ul>
H38	Brand code not match	When indoor and outdoor brand code not same	—
H42	Compressor low pressure abnormality	—	<ul style="list-style-type: none"> <li>Outdoor pipe temperature sensor</li> <li>Clogged expansion valve or strainer</li> <li>Insufficient refrigerant</li> <li>Outdoor PCB (main)</li> <li>Compressor</li> </ul>
H43	Abnormal Zone 1 sensor	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Water temperature Zone 1 sensor</li> </ul>
H44	Abnormal Zone 2 sensor	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Water temperature Zone 2 sensor</li> </ul>
H62	Water flow switch abnormality	Continue for 140 sec.	<ul style="list-style-type: none"> <li>Water flow switch</li> </ul>
H64	Refrigerant high pressure abnormality	4 times in 120 minutes	<ul style="list-style-type: none"> <li>Outdoor high pressure sensor (defective or disconnected)</li> </ul>
H65	Abnormal deice water circulation	Water flow > 8L/min continuously for 10 seconds during anti freeze deice	<ul style="list-style-type: none"> <li>Water pump</li> </ul>
H67	Abnormal External Thermistor 1	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Room temperature Zone 1 sensor</li> </ul>
H68	Abnormal External Thermistor 2	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Room temperature Zone 2 sensor</li> </ul>
H70	Back-up heater OLP abnormality	Continue for 60 sec.	<ul style="list-style-type: none"> <li>Back-up heater OLP (Disconnection or activated)</li> </ul>
H72	Tank sensor abnormal	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Tank sensor</li> </ul>
H74	PCB communication error	Communication or transfer error	<ul style="list-style-type: none"> <li>Indoor main PCB and Sub PCB</li> </ul>
H75	Low water temperature control	Room heater disable and deice request to operate under low water temperature	<ul style="list-style-type: none"> <li>Heater operation must enable to increase water temperature</li> </ul>
H76	Communication error (RC-1 & Indoor or RC-1 & RC-2)	—	<ul style="list-style-type: none"> <li>Indoor - control panel (defective or disconnected)</li> <li>control panel 1 - control panel 2 (defective or disconnected)</li> </ul>
H90	Indoor/outdoor abnormal communication	> 15 sec. after starting operation	<ul style="list-style-type: none"> <li>Internal/external cable connections</li> <li>Indoor/Outdoor PCB</li> </ul>
H91	Tank heater OLP abnormality	Continue for 60 sec.	<ul style="list-style-type: none"> <li>Tank heater OLP (Disconnection or activated)</li> </ul>

Diagnosis display	Abnormality/Protection control	Abnormality judgement	Primary location to verify
H95	Indoor/Outdoor wrong connection	—	<ul style="list-style-type: none"> <li>Indoor/Outdoor supply voltage</li> </ul>
H98 / F95	Outdoor high pressure overload protection Cooling high pressure overload protection	—	<ul style="list-style-type: none"> <li>Outdoor high pressure sensor</li> <li>Water pump or water leakage</li> <li>Clogged expansion valve or strainer</li> <li>Excess refrigerant</li> <li>Outdoor PCB (main)</li> </ul>
H99	Indoor heat exchanger freeze prevention	—	<ul style="list-style-type: none"> <li>Indoor heat exchanger</li> <li>Refrigerant shortage</li> </ul>
F12	Pressure switch activate	4 times occurrence within 30 minutes	<ul style="list-style-type: none"> <li>Pressure switch</li> </ul>
F14	Outdoor compressor abnormal revolution	4 times occurrence within 20 minutes	<ul style="list-style-type: none"> <li>Outdoor compressor</li> </ul>
F15	Outdoor fan motor lock abnormality	2 times occurrence within 30 minutes	<ul style="list-style-type: none"> <li>Outdoor PCB</li> <li>Outdoor fan motor</li> </ul>
F16	Total running current protection	3 times occurrence within 20 minutes	<ul style="list-style-type: none"> <li>Excess refrigerant</li> <li>Outdoor PCB</li> </ul>
F20	Outdoor compressor overheating protection	4 times occurrence within 30 minutes	<ul style="list-style-type: none"> <li>Compressor tank temperature sensor</li> <li>Clogged expansion valve or strainer</li> <li>Insufficient refrigerant</li> <li>Outdoor PCB (main)</li> <li>Compressor</li> </ul>
F22	IPM (power transistor) overheating protection	3 times occurrence within 30 minutes	<ul style="list-style-type: none"> <li>Improper heat exchange</li> <li>IPM (Power transistor)</li> </ul>
F23	Outdoor Direct Current (DC) peak detection	7 times occurrence continuously	<ul style="list-style-type: none"> <li>Outdoor PCB (main)</li> <li>Compressor</li> </ul>
F24	Refrigeration cycle abnormality	2 times occurrence within 30 minutes	<ul style="list-style-type: none"> <li>Insufficient refrigerant</li> <li>Outdoor PCB (main)</li> <li>Compressor low compression</li> </ul>
F25	Cooling/Heating cycle changeover abnormality	4 times occurrence within 30 minutes	<ul style="list-style-type: none"> <li>4-way valve</li> <li>V-coil</li> </ul>
F27	Pressure switch abnormality	Continue for 1 min.	<ul style="list-style-type: none"> <li>Pressure switch</li> </ul>
F30	Water outlet sensor 2 abnormality	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Water outlet sensor 2 (defective or disconnected)</li> </ul>
F32	Abnormal Internal Thermostat	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Control panel PCB thermostat</li> </ul>
F36	Outdoor air temperature sensor abnormality	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Outdoor air temperature sensor (defective or disconnected)</li> </ul>
F37	Indoor water inlet temperature sensor abnormality	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Water inlet temperature sensor (defective or disconnected)</li> </ul>
F40	Outdoor discharge pipe temperature sensor abnormality	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Outdoor discharge pipe temperature sensor (defective or disconnected)</li> </ul>
F41	PFC control	4 times occurrence within 10 minutes	<ul style="list-style-type: none"> <li>Voltage at PFC</li> </ul>
F42	Outdoor heat exchanger temperature sensor abnormality	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Outdoor heat exchanger temperature sensor (defective or disconnected)</li> </ul>
*F43	Outdoor defrost sensor abnormality	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Outdoor defrost sensor (defective or disconnected)</li> </ul>
F45	Indoor water outlet temperature sensor abnormality	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Water outlet temperature sensor (defective or disconnected)</li> </ul>
*F46	Outdoor Current Transformer open circuit	—	<ul style="list-style-type: none"> <li>Insufficient refrigerant</li> <li>Outdoor PCB (main)</li> <li>Compressor low</li> </ul>
F48	Outdoor EVA outlet temperature sensor abnormality	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Outdoor EVA outlet temperature sensor (defective or disconnected)</li> </ul>
F49	Outdoor bypass outlet temperature sensor abnormality	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Outdoor bypass outlet temperature sensor (defective or disconnected)</li> </ul>
F50	Water inlet 2 sensor error	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Water inlet 2 sensor</li> </ul>
F51	Economizer outlet sensor abnormality	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Economizer outlet sensor (defective or disconnected)</li> </ul>
F52	Bypass inlet sensor abnormality	Continue for 5 sec.	<ul style="list-style-type: none"> <li>Bypass inlet sensor (defective or disconnected)</li> </ul>

Diagnosis display	Abnormality/Protection control	Abnormality judgement	Primary location to verify
F53	Main expansion valve overcurrent protection	4 times occurrence within 40 minutes	<ul style="list-style-type: none"> <li>• Main expansion valve</li> </ul>
F54	Bypass expansion valve overcurrent protection	4 times occurrence within 40 minutes	<ul style="list-style-type: none"> <li>• Bypass expansion valve</li> </ul>
F55	Electrical anode error	Continue for 60 sec.	<ul style="list-style-type: none"> <li>• Electric anode</li> <li>• Electric anode PCB</li> <li>• Indoor PCB (main)</li> </ul>
F56	Outdoor heat exchanger middle sensor abnormality	Continue for 5 sec.	<ul style="list-style-type: none"> <li>• Outdoor heat exchanger middle sensor (defective or disconnected)</li> </ul>

**Note:** \* This error code is not applicable for this system.

## 18.5 Self-Diagnosis Method

### 18.5.1 Connection Capability Rank Abnormality (H12)

#### Malfunction Decision Conditions:

During startup operation of cooling and heating, the capability rank of indoor checked by the outdoor is used to determine connection capability rank abnormality.


#### Malfunction Caused:

- 1 Wrong model interconnected.
- 2 Wrong indoor unit or outdoor unit PCB (main) used.
- 3 Faulty indoor unit or outdoor unit PCB (main).

#### Abnormality Judgment:

Continue for 10 seconds.

#### Troubleshooting:

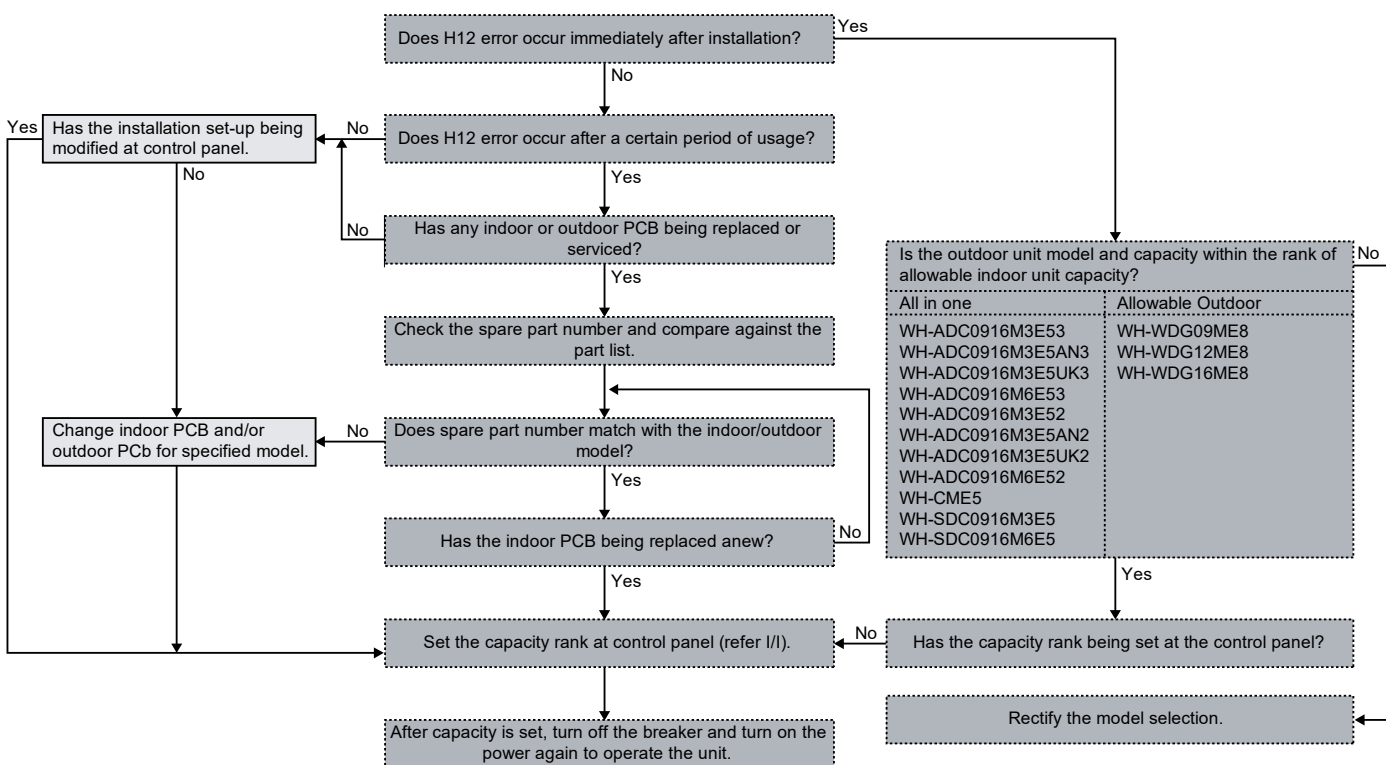

## 18.5.2 Compressor Tank Temperature Sensor Abnormality (H15)

### Malfunction Decision Conditions:

During startup and operation of cooling and heating, the temperatures detected by the compressor tank temperature sensor are used to determine sensor error.


### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

### Abnormality Judgment:

Continue for 5 seconds.

### Troubleshooting:

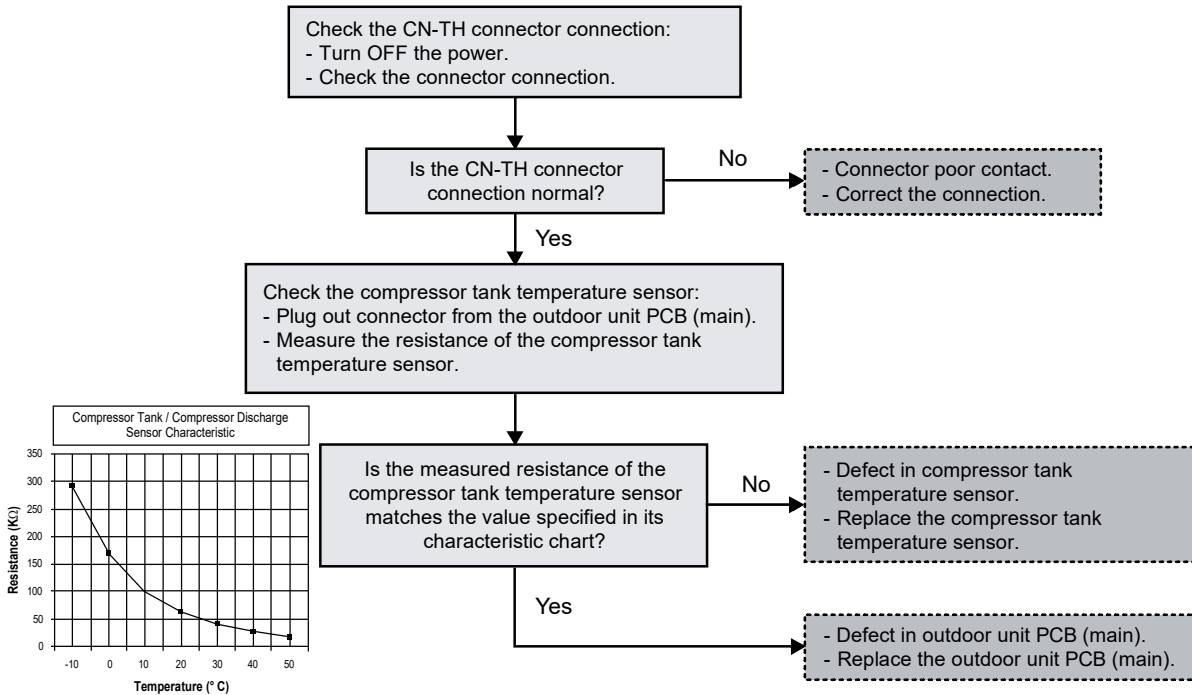

### 18.5.3 Zone 2 Water Pump Abnormality (H17)

#### Malfunction Decision Conditions:

During startup and operation of cooling and heating, the rotation speed detected by the IPM of water pump motor during water pump operation is used to determine abnormal water pump (feedback of rotation > 6,000rpm or < 300rpm).

#### Malfunction Caused:

- 1 Operation stop due to short circuit inside the water pump motor winding.
- 2 Operation stop due to breaking of wire inside the water pump motor.
- 3 Operation stop due to breaking of water pump lead wires.
- 4 Operation stop due to water pump motor IPM malfunction.
- 5 Operation error due to faulty indoor unit PCB (main).

#### Abnormality Judgment:


Continue for 10 seconds.

#### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

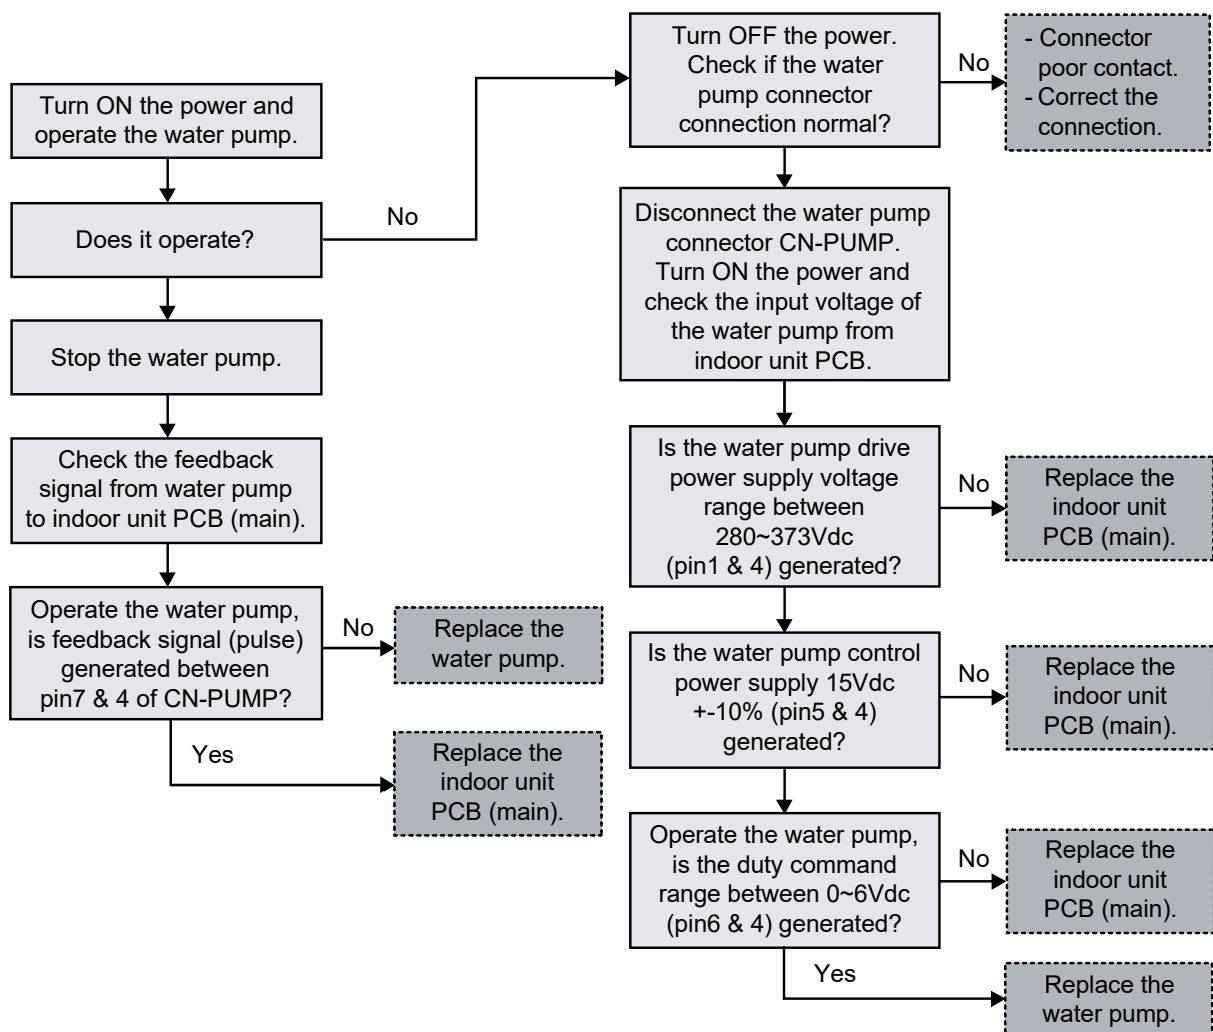

## 18.5.4 Water Pump Abnormality (H20)

### Malfunction Decision Conditions:

During startup and operation of cooling and heating, the rotation speed detected by the IPM of water pump motor during water pump operation is used to determine abnormal water pump (feedback of rotation > 6,000rpm or < 300rpm).

### Malfunction Caused:

- 1 Operation stop due to short circuit inside the water pump motor winding.
- 2 Operation stop due to breaking of wire inside the water pump motor.
- 3 Operation stop due to breaking of water pump lead wires.
- 4 Operation stop due to water pump motor IPM malfunction.
- 5 Operation error due to faulty outdoor unit PCB (main).
- 6 Operation error due to faulty outdoor unit PCB (sub).

### Abnormality Judgment:


Continue for 10 seconds.

### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

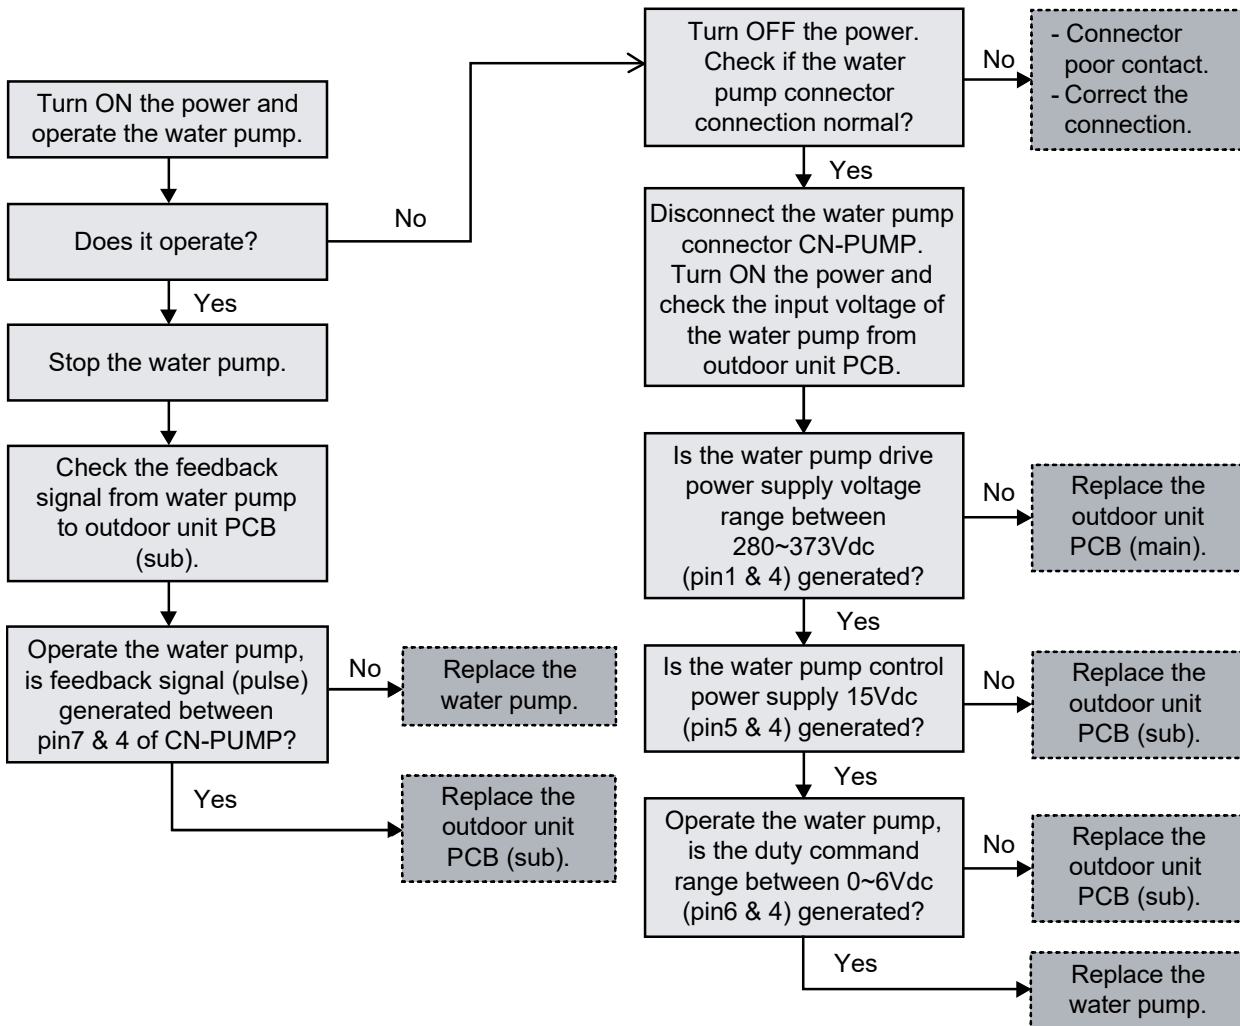

## 18.5.5 Water Pressure Abnormality (H21)

### Malfunction Decision Conditions:

During startup and operation of cooling and heating, the pressure detected by the water pressure sensor while the water pump is running is used to determine abnormalities in the water circuit (water pressure feedback > 5.0 bar or < 0.2 bar).

### Malfunction Caused:

- 1 Water leak in system.
- 2 Faulty connector connection.
- 3 Faulty water Pressure sensor.
- 4 Faulty outdoor unit PCB (main).

### Abnormality Judgment:


Continue for 300 seconds.

### Troubleshooting:



### Caution

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

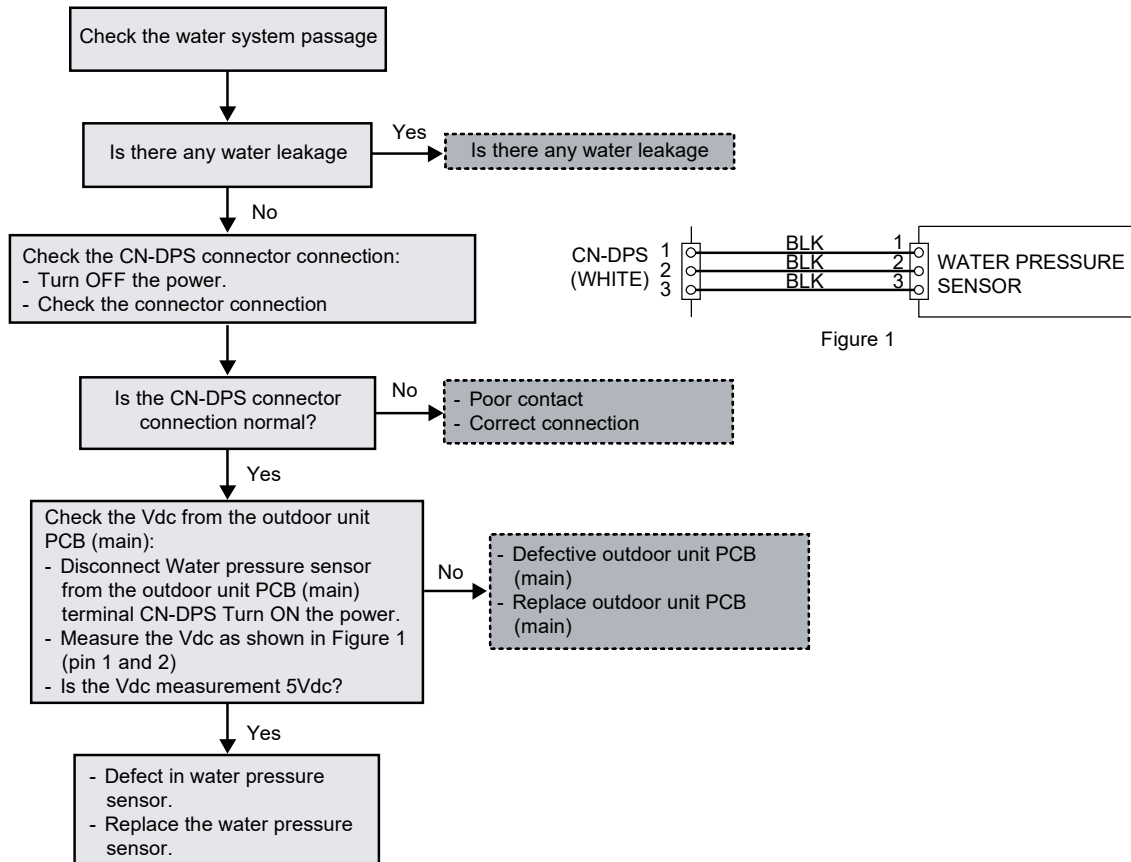

## 18.5.6 Refrigerant Liquid Temperature Sensor Abnormality (H23)

### Malfunction Decision Conditions:

During startup and operation of cooling and heating, the temperatures detected by the refrigerant liquid temperature sensor are used to determine sensor error.

### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).


### Abnormality Judgment:

Continue for 5 seconds.

### Troubleshooting:



For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

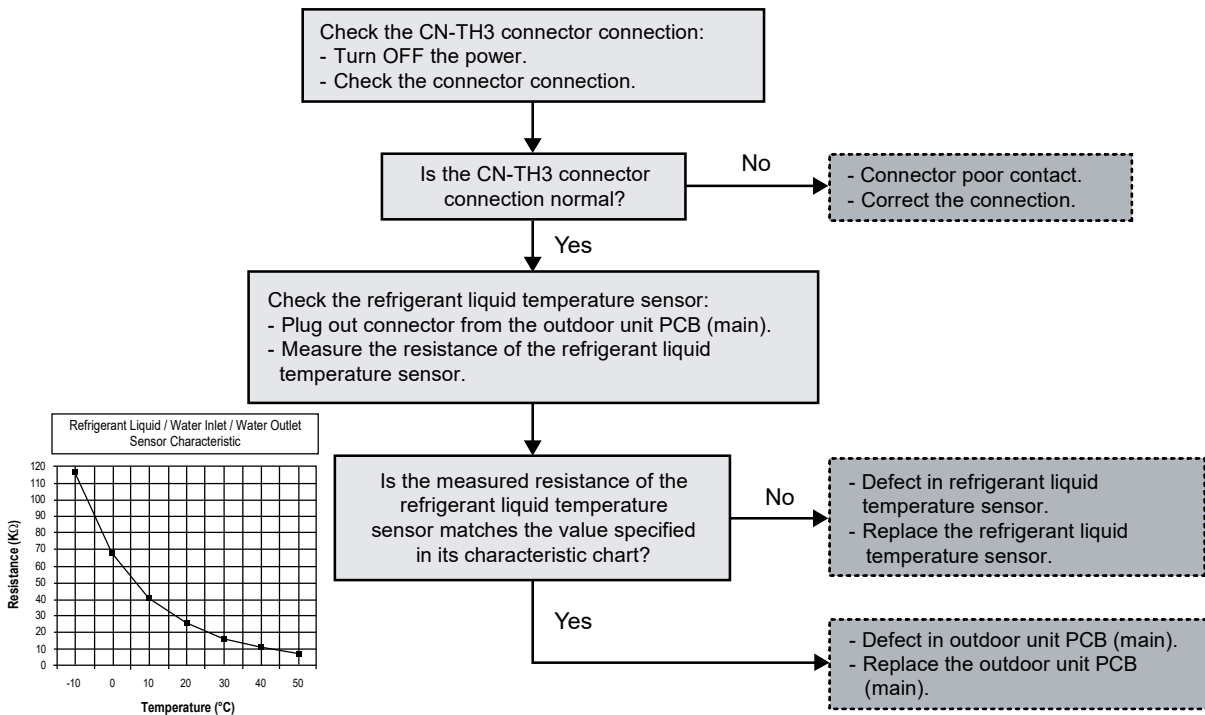

### 18.5.7 Service Valve Error (H27)

**Malfunction Decision Conditions:**

During cooling operation, when:-

[a] Indoor refrigerant pipe temperature at compressor startup - present indoor refrigerant pipe temperature < 2°C

[b] Present high pressure - high pressure at compressor startup < 5kg/cm<sup>2</sup>

\*\*Judgment only for first time cooling operation and not during pump down operation.

**Malfunction Caused:**


- 1 3 way valves closed.
- 2 Faulty high pressure sensor.
- 3 Faulty indoor refrigerant pipe temperature sensor
- 4 Faulty outdoor unit PCB (main).

**Abnormality Judgment:**

Continue for 5 minutes.

**Troubleshooting:**  **Caution**


For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

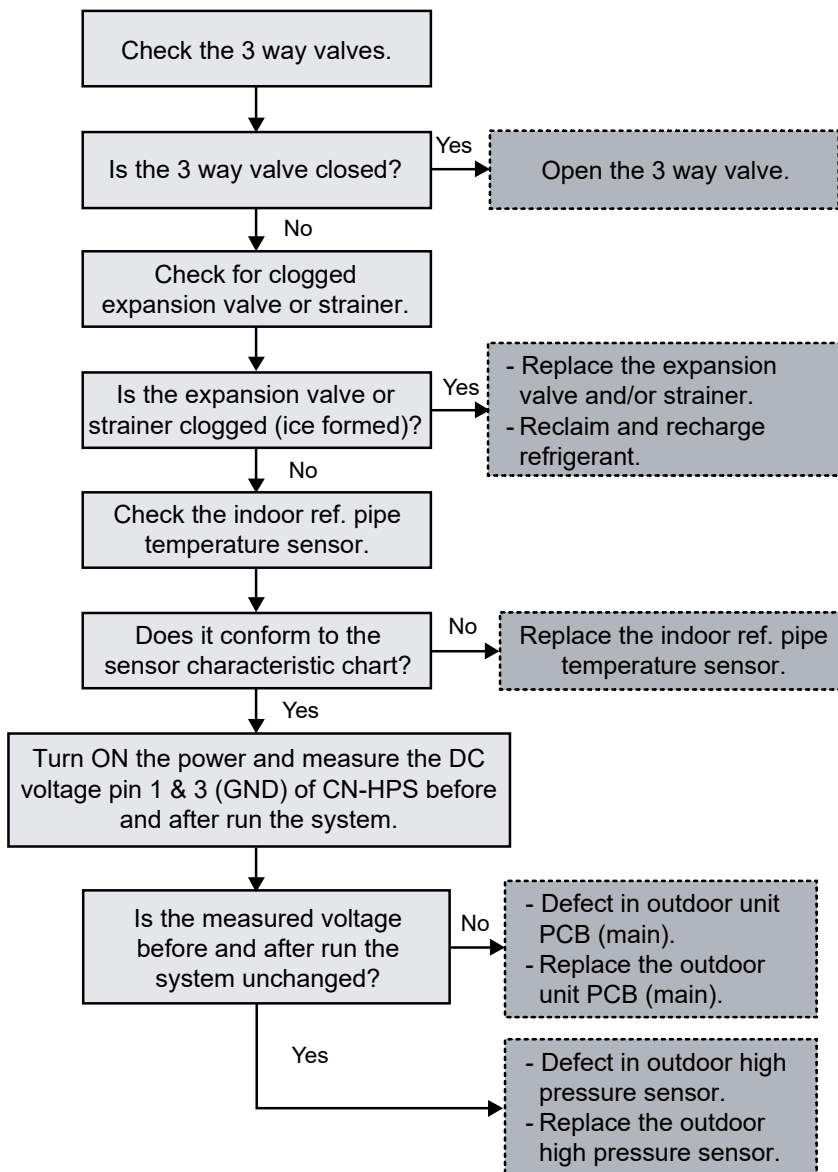

### 18.5.8 Brand Code Not Matching (H38)

**Malfunction Caused:**

- 1 Indoor and outdoor brand code not match.

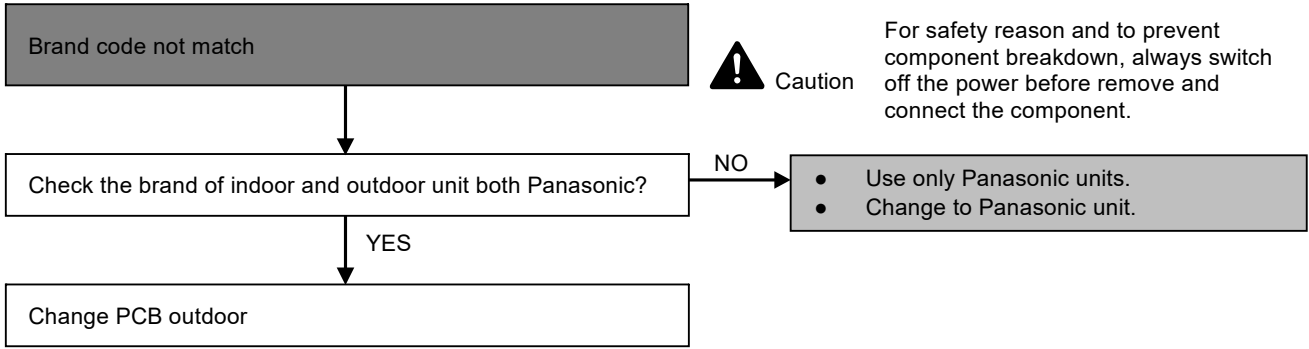

## 18.5.9 Compressor Low Pressure Protection (H42)

### Malfunction Decision Conditions:

During operation of heating and after 5 minutes compressor ON, when outdoor pipe temperature below  $-40^{\circ}\text{C}$  or above  $37^{\circ}\text{C}$  is detected by the outdoor pipe temperature sensor.

### Malfunction Caused:


- 1 Dust accumulation on the outdoor unit heat exchanger.
- 2 Air short circuit at outdoor unit.
- 3 Faulty outdoor unit fan motor.
- 4 Refrigerant shortage (refrigerant leakage).
- 5 Clogged expansion valve or strainer.
- 6 Faulty outdoor pipe temperature sensor.
- 7 Faulty outdoor unit main PCB (main).

### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

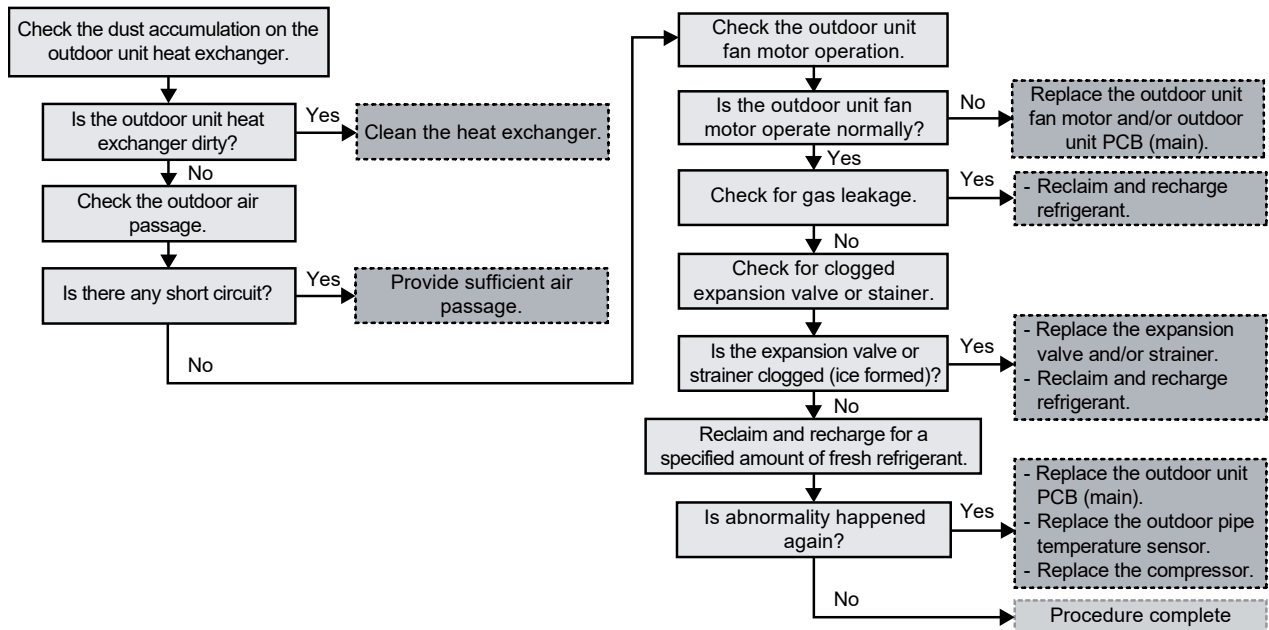

## 18.5.10 Water Flow Switch Abnormality (H62)

### Malfunction Decision Conditions:

During operation of cooling and heating, the water flow detected by the outdoor water flow switch is used to determine water flow error.

### Malfunction Caused:

- 1 Faulty water pump.
- 2 Water leak in system.
- 3 Faulty connector connection.
- 4 Faulty water flow switch.
- 5 Faulty outdoor unit PCB (sub).

### Abnormality Judgment:

Continue for 140 seconds (but no judgment for 30 seconds after water pump startup/restart).

### Troubleshooting: Caution

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

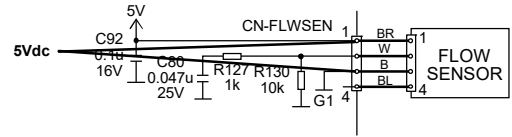
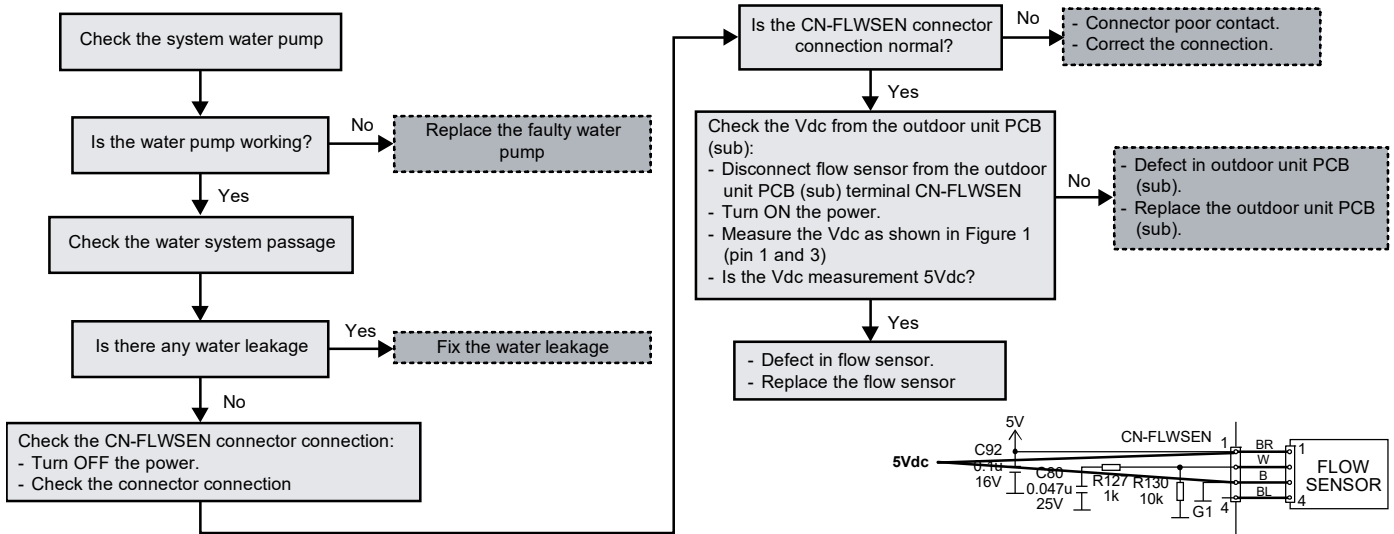


Figure 1

## 18.5.11 Outdoor High Pressure Abnormality (H64)

### Malfunction Decision Conditions:

During operation of cooling and heating, when the outdoor high pressure sensor output signal is 0 Vdc or 5 Vdc.

### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

### Abnormality Judgment:


Continue 4 times in 120 minutes.

### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

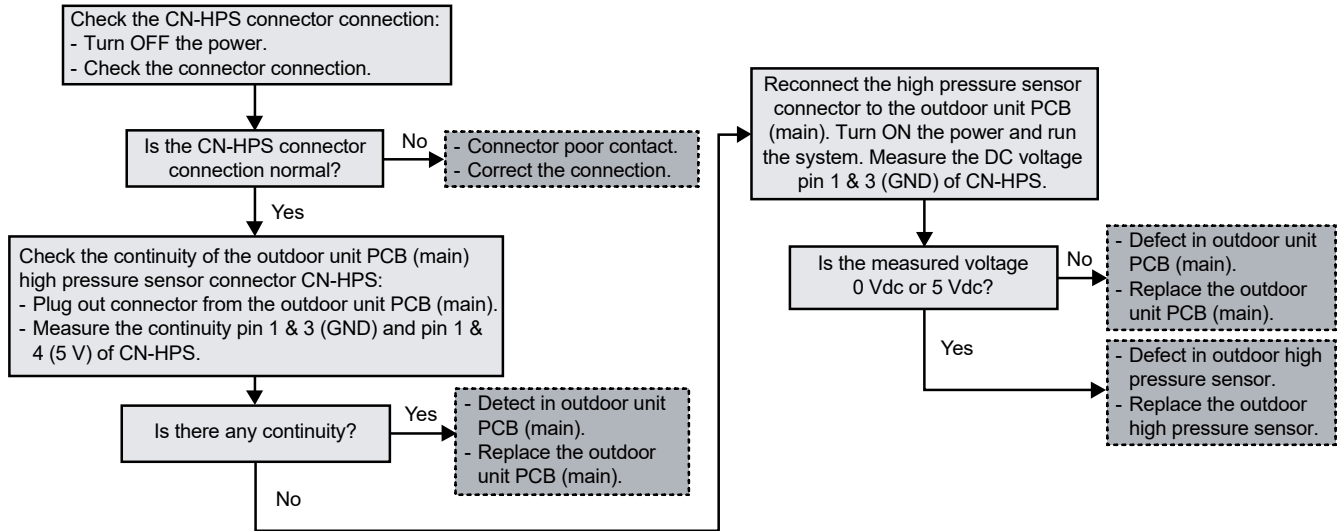

## 18.5.12 Deice Circulation Error (H65)

### Malfunction Decision Conditions:

During startup and operation of deice (mode 2), the water flow (> 8 l/min) detected by the water flow switch is used to determine deice circulation error.

### Malfunction Caused:

- 1 Water flow in air-to-water heatpump unit circuitry.
- 2 Faulty outdoor unit water flow switch.
- 3 Faulty outdoor unit water pump.
- 4 Faulty outdoor unit PCB (sub).
- 5 Faulty outdoor unit PCB (main).

### Abnormality Judgment:


Continue for 10 seconds.

### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

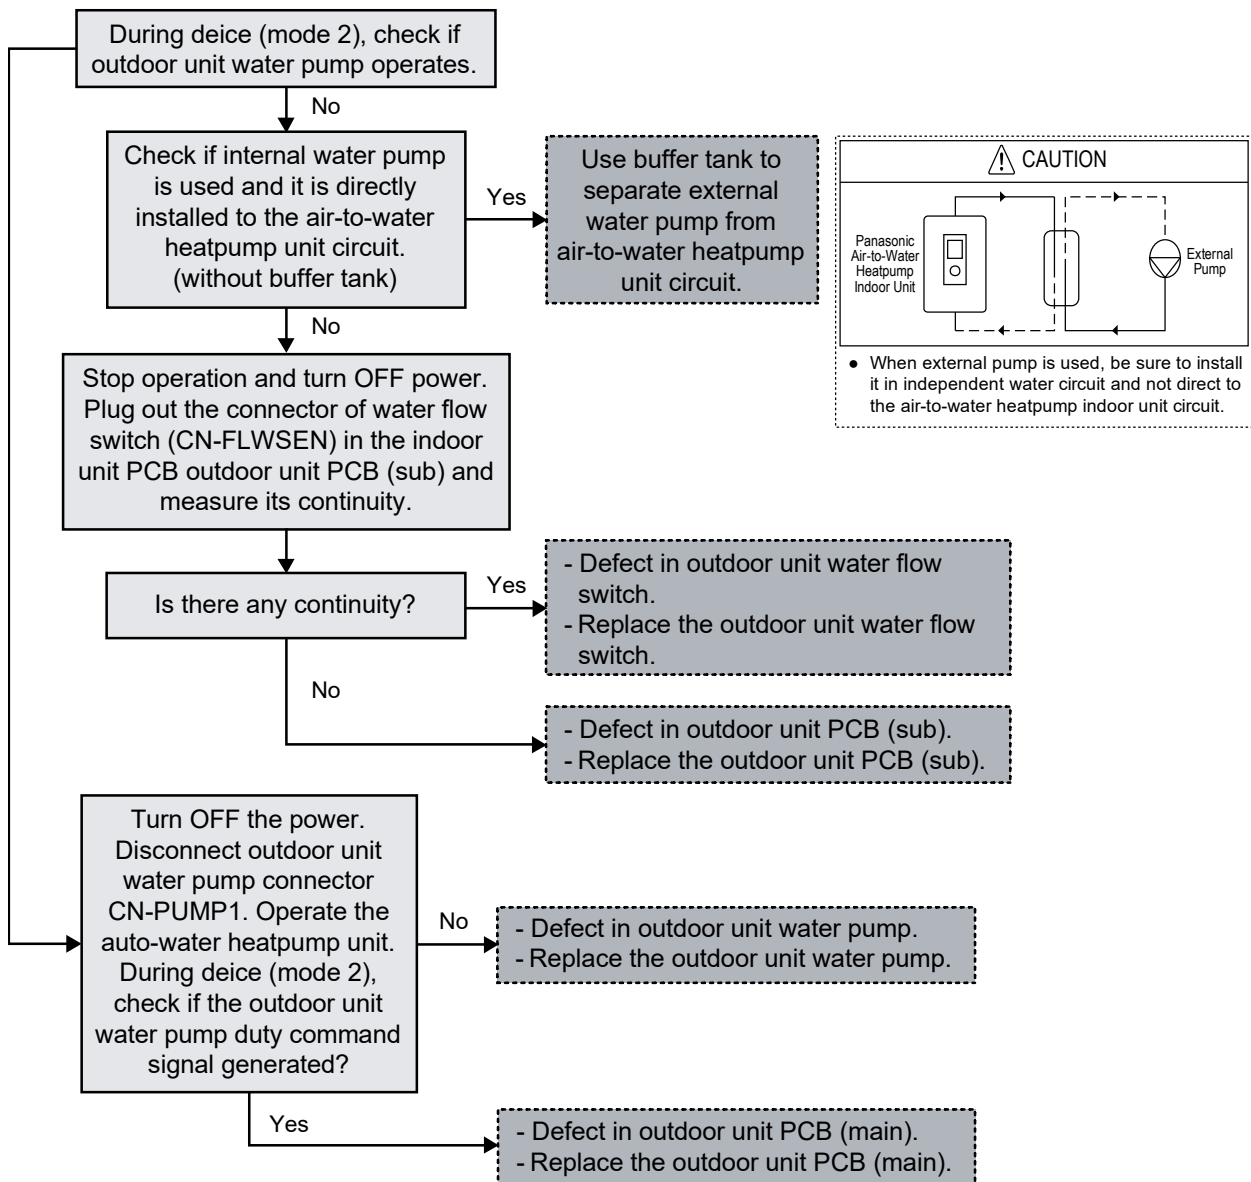

### 18.5.13 Tank Temperature Sensor Abnormality (H72)

**Malfunction Decision Conditions:**

When tank connection is set to ON, the temperatures detected by the tank temperature sensor are used to determine sensor error.

**Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty indoor unit PCB (main).
- 4 Faulty outdoor unit PCB (sub).


**Abnormality Judgment:**

Continue for 5 seconds.

**Troubleshooting:**



For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

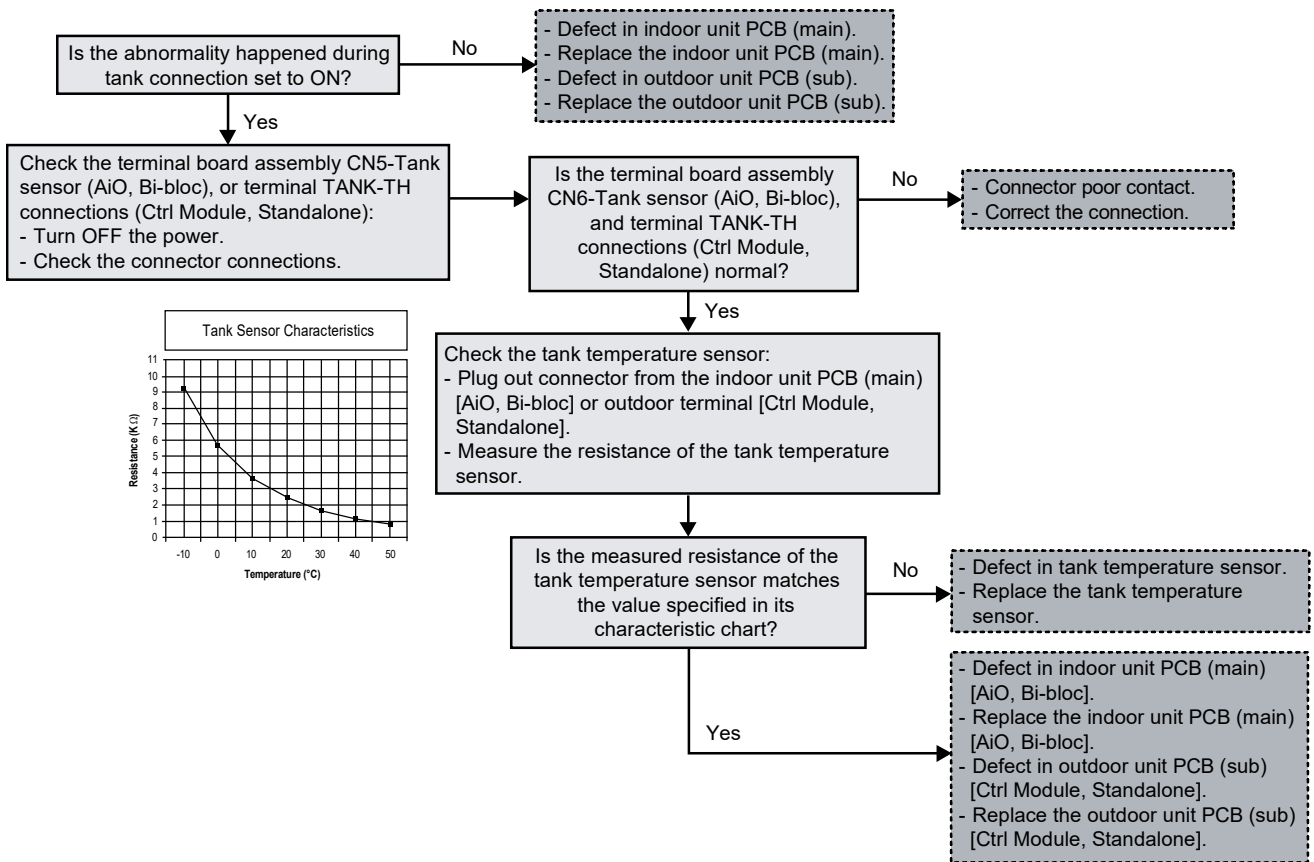

## 18.5.14 Low Water Temperature Control (H75)

### Malfunction Decision Conditions:

If defrosting is performed when the heater cannot be used and the water temperature is low, a warning will be issued as there is a risk of the water circuit freezing.

### Malfunction Caused:

- 1 The heater setting is disabled.
- 2 Low water flow rate.
- 3 Target  $\Delta T$  is large and the heating target temperature setting is low.

### Abnormality Judgment:

Room heater disable and device request to operate under low water temperature.

### Troubleshooting:



#### Caution

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

If the model you are using is equipped with a heater [AiO, Bi-bloc], enable the heater setting if it is disabled.

If the system stops frequently, the issue may be due to insufficient circulation flow or a heating set temperature that is too low.

## 18.5.15 Indoor-Control Panel Communication Abnormality (H76)

### Malfunction Decision Conditions:


During standby and operation of cooling and heating, indoor-control panel error occur.

### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty control panel.
- 3 Faulty indoor unit PCB (main).
- 4 Faulty outdoor unit PCB (sub).

### Troubleshooting: **Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

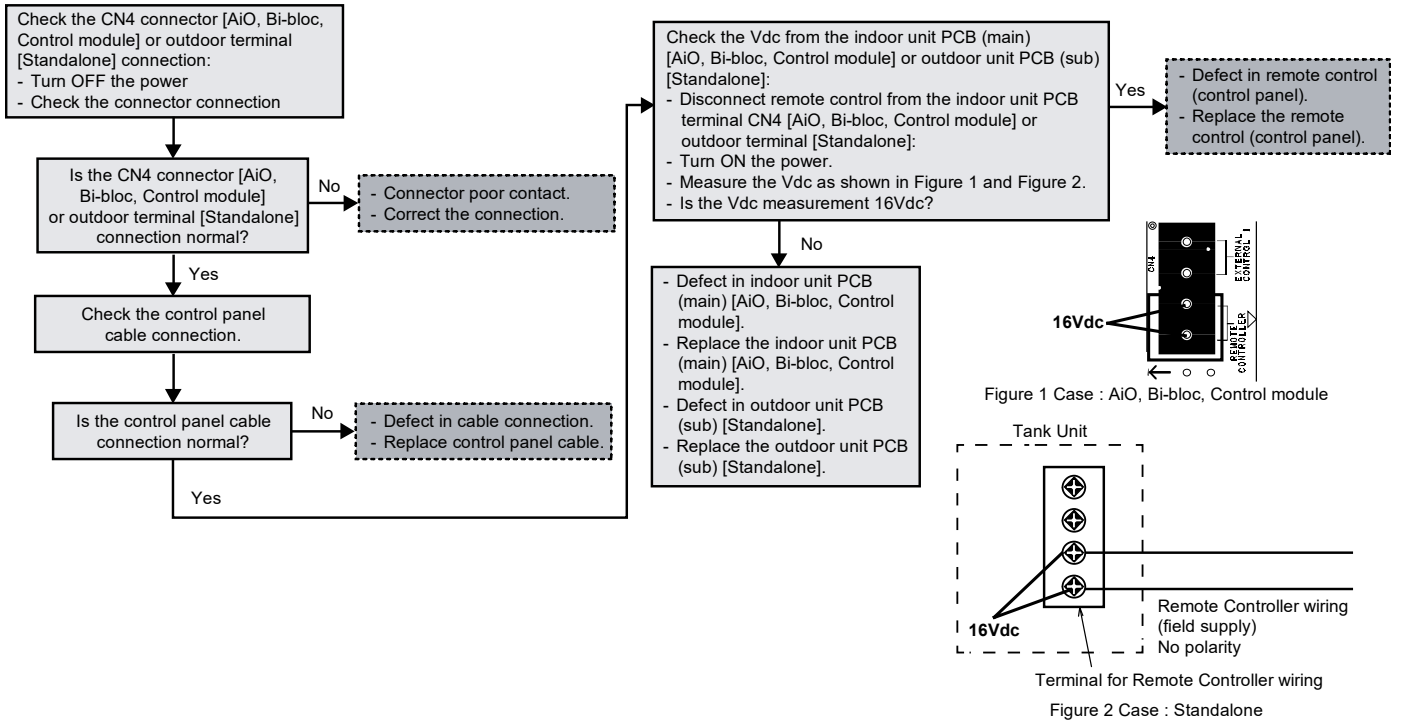

## 18.5.16 Indoor/Outdoor Abnormal Communication (H90)

### Malfunction Decision Conditions:

During operation of cooling and heating, the data received from outdoor unit in indoor unit signal transmission is checked whether it is normal.

### Malfunction Caused:


- 1 Faulty outdoor unit PCB (main).
- 2 Faulty outdoor unit PCB (sub).
- 3 Faulty indoor unit PCB (main).
- 4 Indoor-outdoor signal transmission error due to wrong wiring.
- 5 Indoor-outdoor signal transmission error due to breaking of wire in the connection wires between the indoor and outdoor units.
- 6 Indoor-outdoor signal transmission error due to disturbed power supply waveform.

### Abnormality Judgment:

Continue for 15 seconds after operation.

### Troubleshooting: **Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

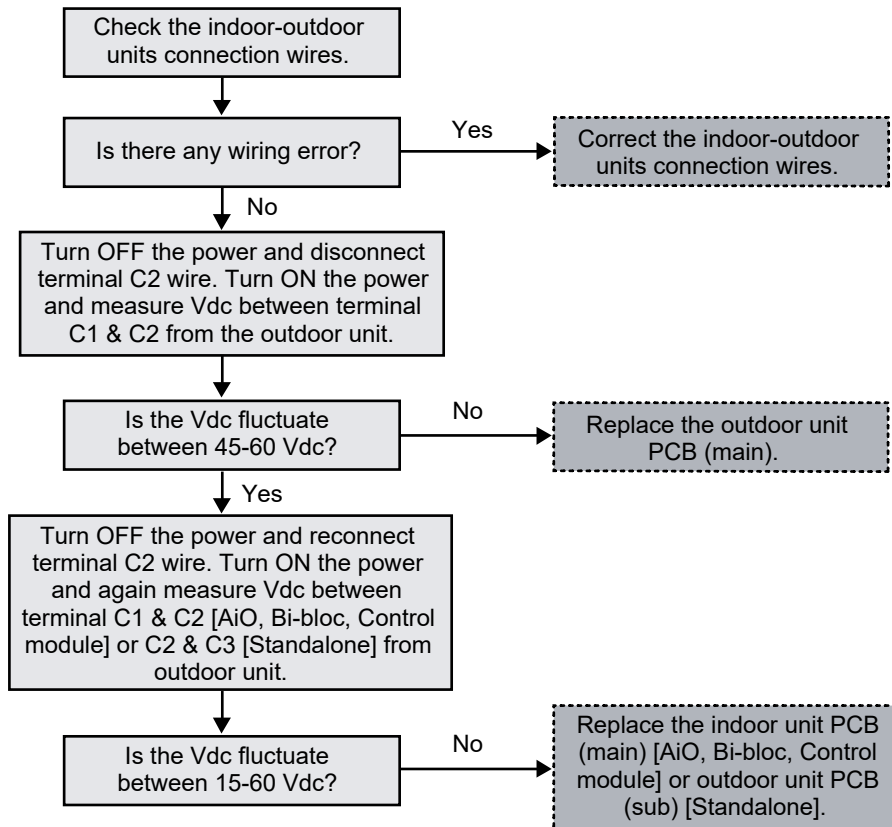



## 18.5.18 Outdoor High Pressure Protection (H98 / F95)

### Malfunction Decision Conditions:

During operation of cooling / heating, when pressure 3.2 MPa and above is detected by outdoor high pressure sensor.

### Malfunction Caused:


- 1 Faulty water pump.
- 2 Insufficient water flow rate in system.
- 3 Water leak in system.
- 4 Dust accumulation in the outdoor unit heat exchanger.
- 5 Air short circuit at outdoor.
- 6 Faulty outdoor unit fan motor.
- 7 Clogged expansion valve or strainer.
- 8 Excessive refrigerant.
- 9 Faulty outdoor high pressure sensor.
- 10 Faulty outdoor unit PCB (main).

### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

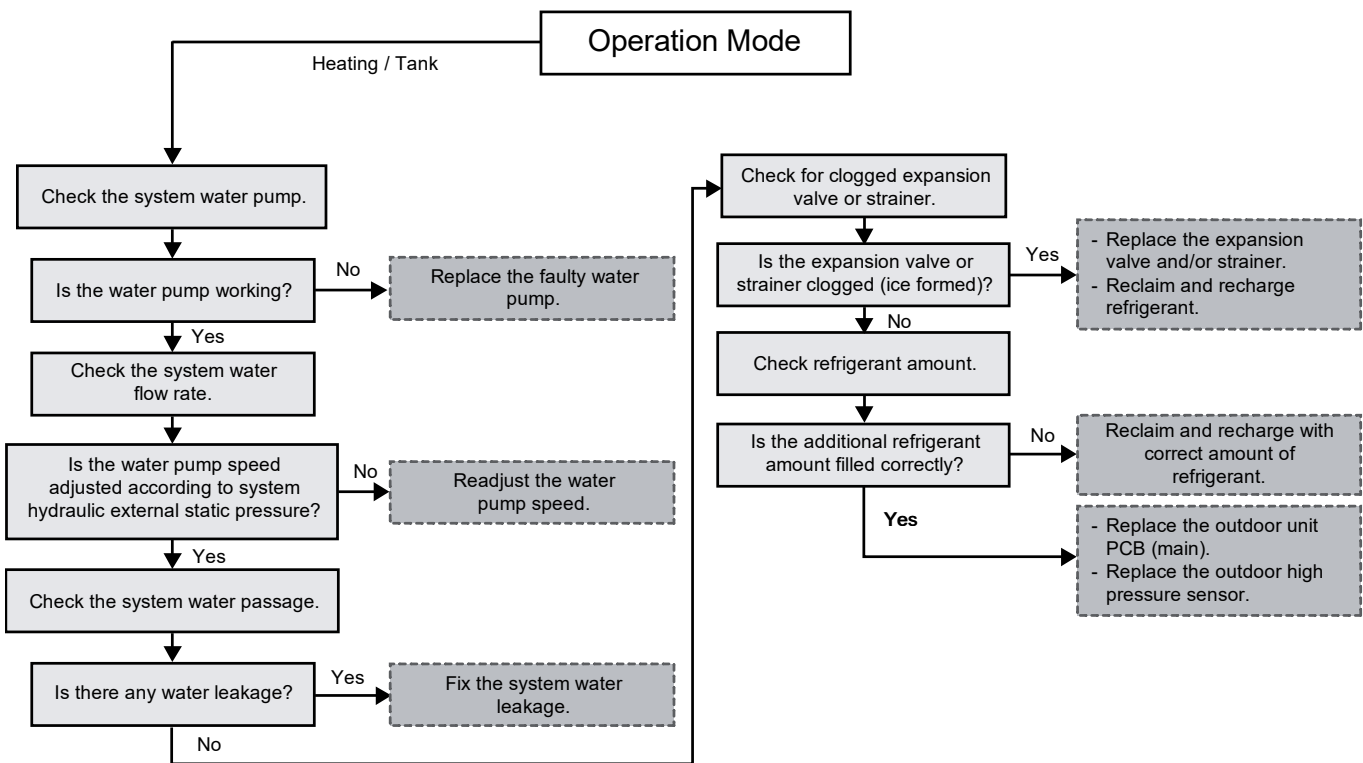


# Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

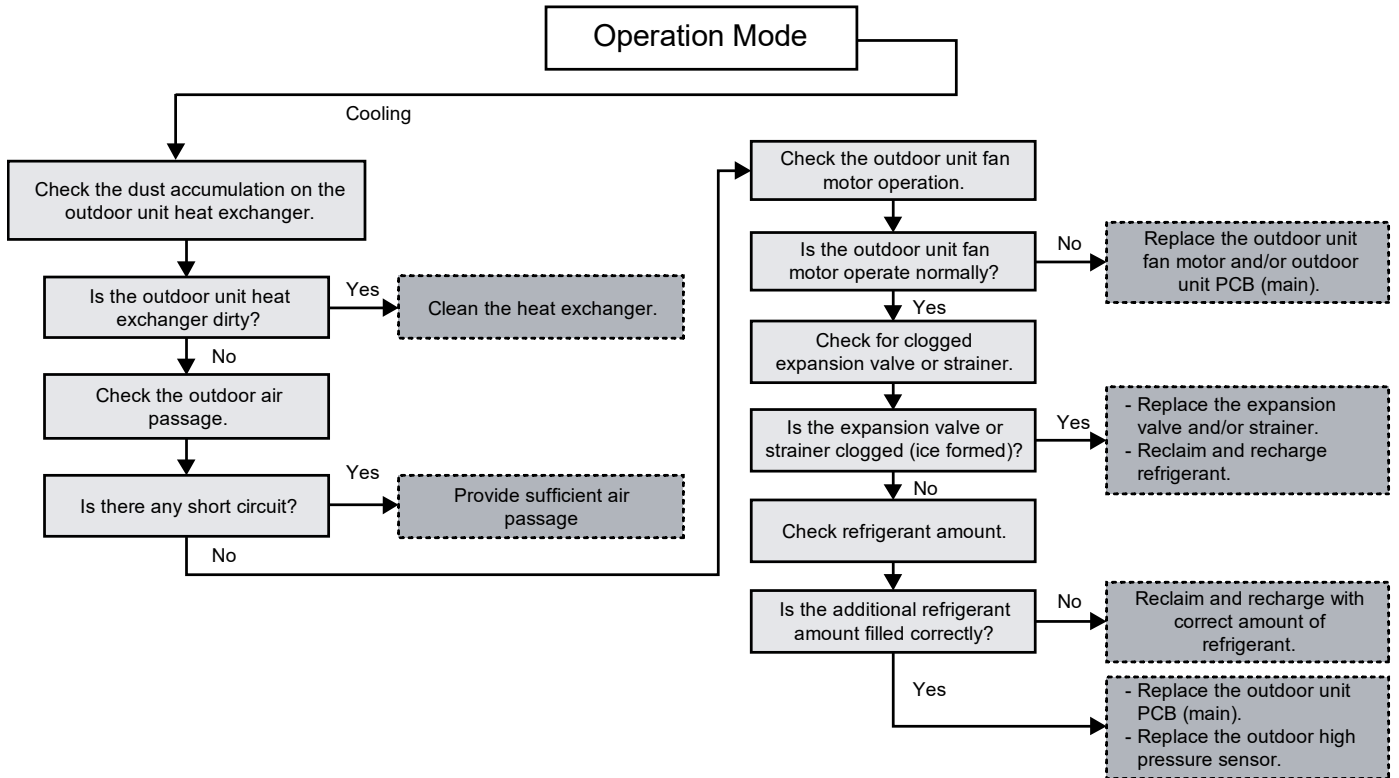

## 18.5.19 Indoor Freeze-up Protection (H99)

### Malfunction Decision Conditions:

During anti-freezing control in cooling operation, when the refrigerant liquid temperature  $< 0^{\circ}\text{C}$ .

### Malfunction Caused:


- 1 Faulty water pump.
- 2 Insufficient water flow rate in system.
- 3 Water leak in system.
- 4 Clogged expansion valve or strainer.
- 5 Refrigerant shortage (refrigerant leakage).
- 6 Faulty indoor refrigerant liquid temperature sensor.
- 7 Faulty outdoor unit PCB (main).

### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

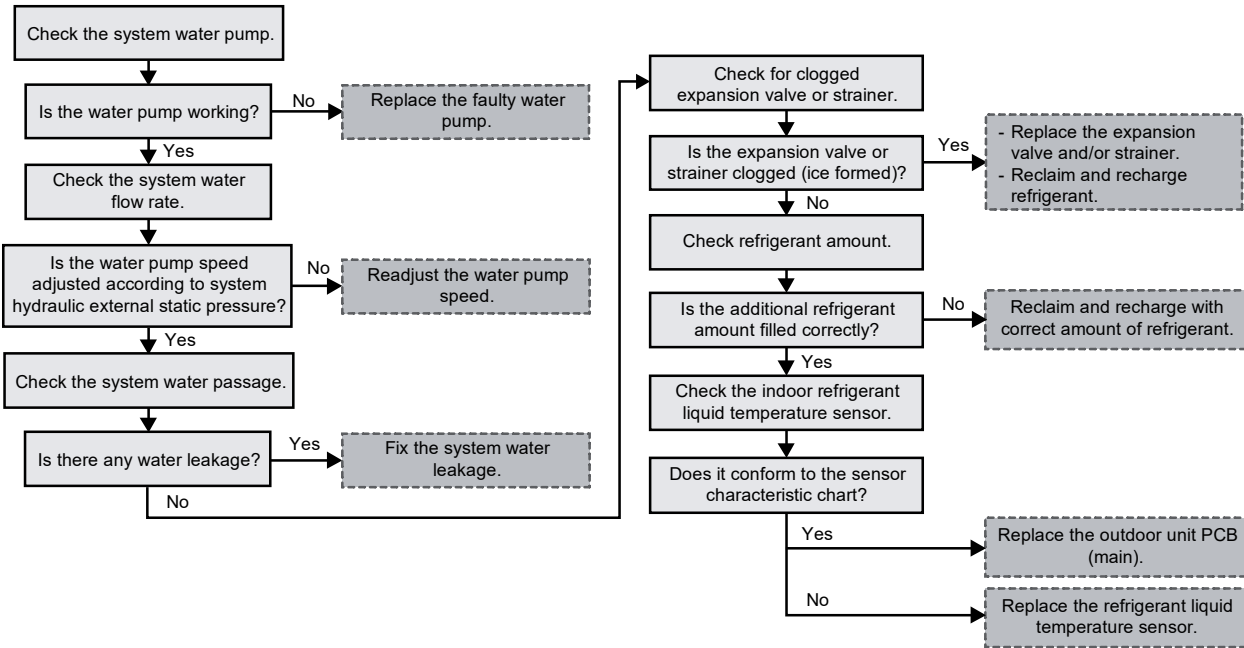

## 18.5.20 Outdoor High Pressure Switch Activate (F12)

### Malfunction Decision Conditions:

During operation of cooling and heating, when pressure 3.9 MPa and above is detected by outdoor high pressure switch.

### Malfunction Caused:

- 1 Dust accumulation on the outdoor unit heat exchanger.
- 2 Air short circuit at outdoor unit.
- 3 Faulty water pump.
- 4 Insufficient water flow rate in system.
- 5 Water leak in system.
- 6 Clogged expansion valve or strainer.
- 7 Excessive refrigerant.
- 8 Faulty outdoor high pressure sensor and switch.
- 9 Faulty outdoor unit PCB (main).

### Abnormality Judgment:


Continue 4 times in 30 minutes.

### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

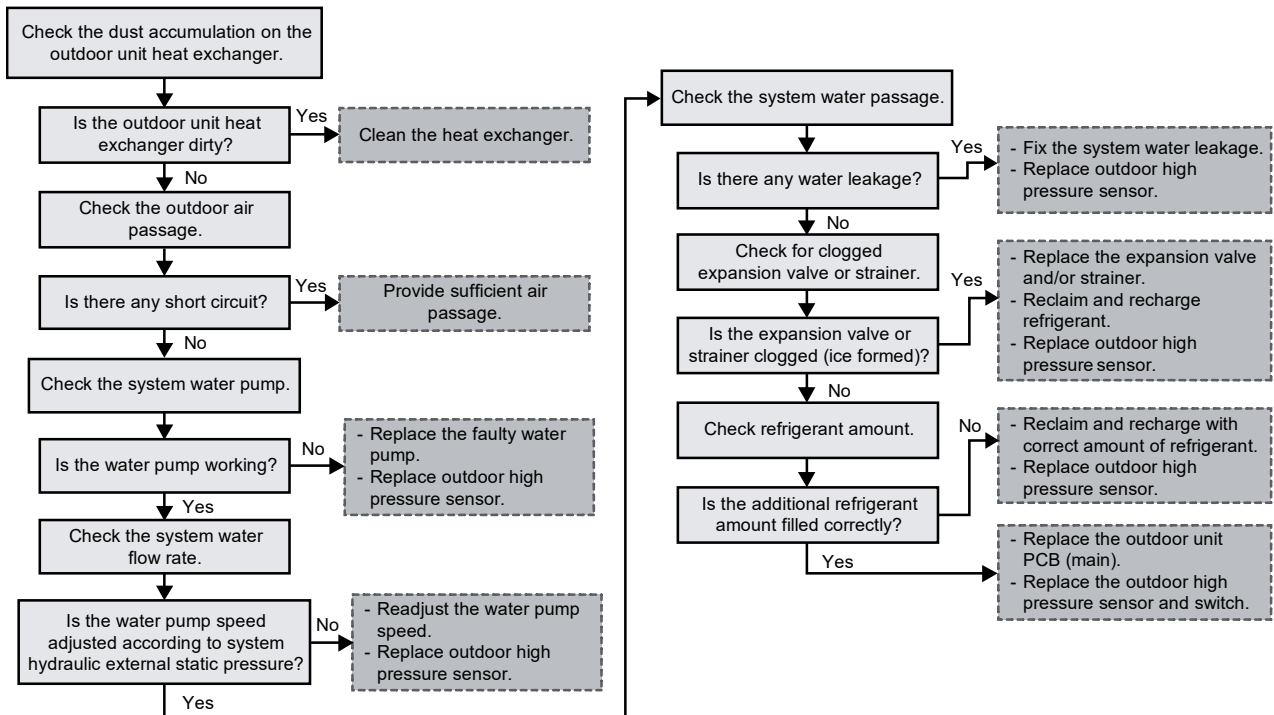

## 18.5.21 Compressor Rotation Failure (F14)

### Malfunction Decision Conditions:

A compressor rotation failure is detected by checking the compressor running condition through the position detection circuit.

### Malfunction Caused:

- 1 Compressor terminal disconnect.
- 2 Faulty outdoor unit PCB (main).
- 3 Faulty compressor.

### Abnormality Judgment:


Continue 4 times in 20 minutes.

## Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

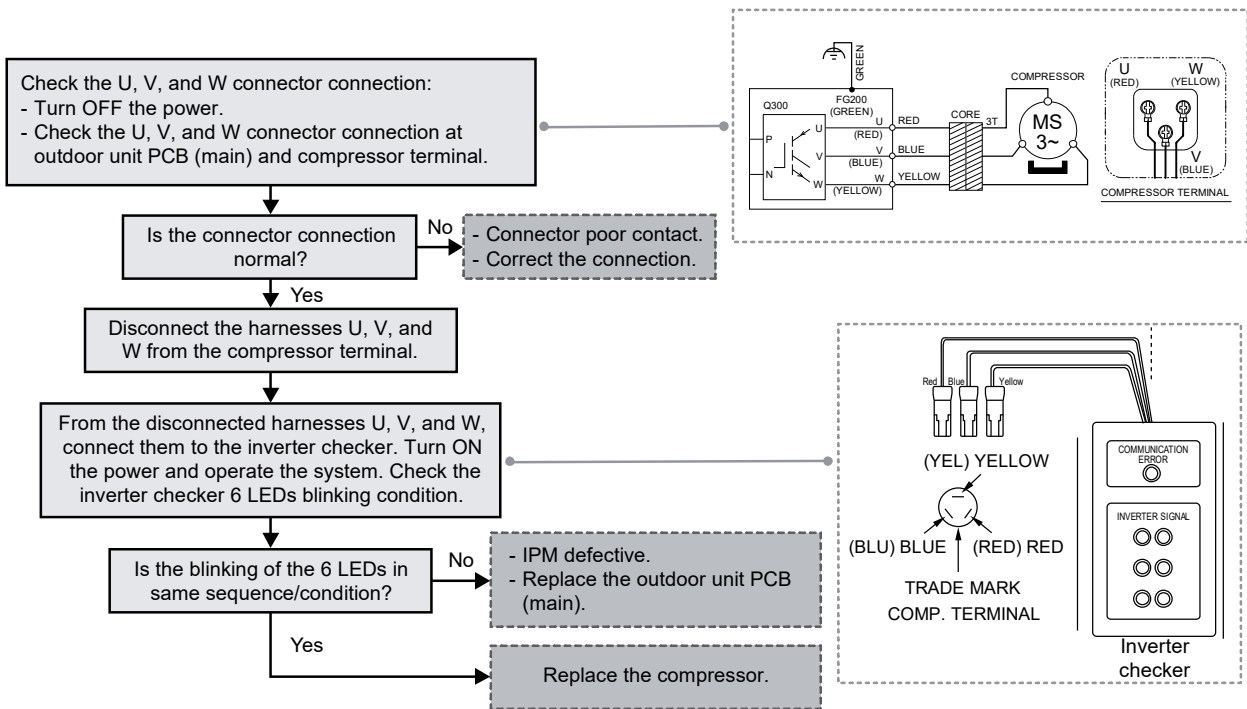

## 18.5.22 Outdoor Fan Motor (DC Motor) Mechanism Locked (F15)

### Malfunction Decision Conditions:

The rotation speed detected by the Hall IC of the fan motor during fan motor operation is used to determine abnormal fan motor (feedback of rotation > 2550 rpm or < 20 rpm).

### Malfunction Caused:

- 1 Operation stop due to short circuit inside the fan motor winding.
- 2 Operation stop due to breaking of wire inside the fan motor.
- 3 Operation stop due to breaking of fan motor lead wires.
- 4 Operation stop due to fan motor Hall IC malfunction.
- 5 Operation error due to faulty outdoor unit PCB (main).

### Abnormality Judgment:


Continue 2 times in 20 minutes.

### Troubleshooting:



Caution

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

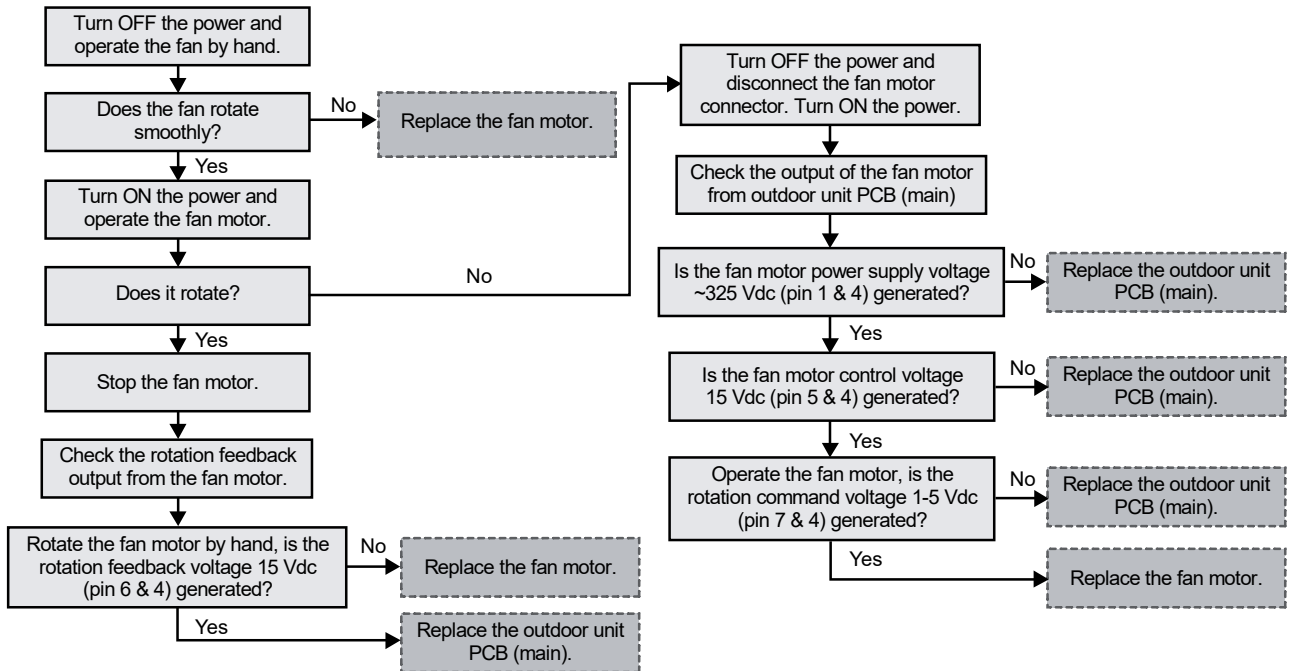

### 18.5.23 Input Over Current Detection (F16)

**Malfunction Decision Conditions:**

During operation of cooling and heating, when outdoor current above 13A is detected by the current transformer (CT) in the outdoor unit PCB.

**Malfunction Caused:**


- 1 Excessive refrigerant.
- 2 Faulty outdoor unit PCB (main).

**Abnormality Judgment:**

Continue 3 times in 20 minutes.

**Troubleshooting:**  **Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

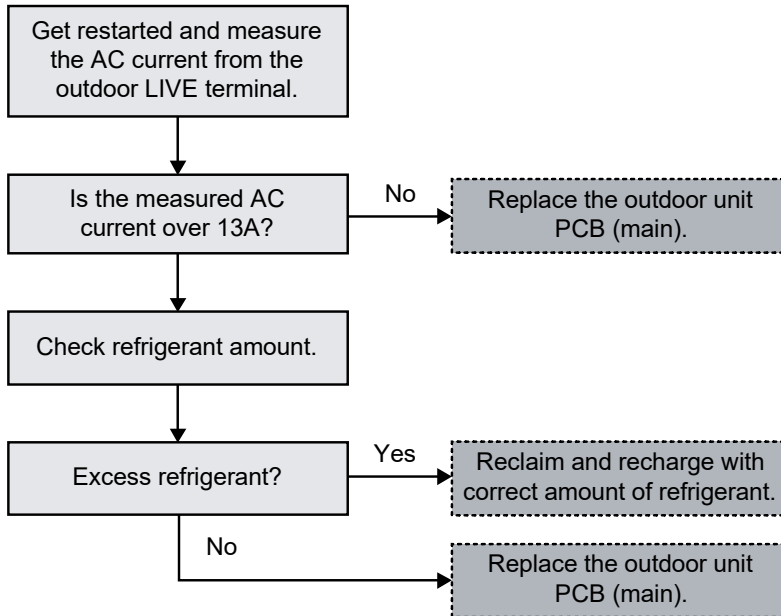

Operation Mode	WH-WDG09ME8		WH-WDG12ME8		WH-WDG16ME8	
	X (A)	Y (A)	X (A)	Y (A)	X (A)	Y (A)
Heating	10.0	13.0	10.0	13.0	10.0	13.0
Cooling	9.0	13.0	9.0	13.0	9.0	13.0

## 18.5.24 Compressor Overheating (F20)

### Malfunction Decision Conditions:

During operation of cooling and heating, when temperature above 112°C is detected by the outdoor discharge pipe temperature sensor.

### Malfunction Caused:

- 1 Faulty outdoor discharge pipe temperature sensor.
- 2 Refrigerant shortage (refrigerant leakage).
- 3 Clogged expansion valve or strainer.
- 4 Faulty outdoor unit PCB (main).
- 5 Faulty compressor.

### Abnormality Judgment:


Continue 4 times in 30 minutes.

### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

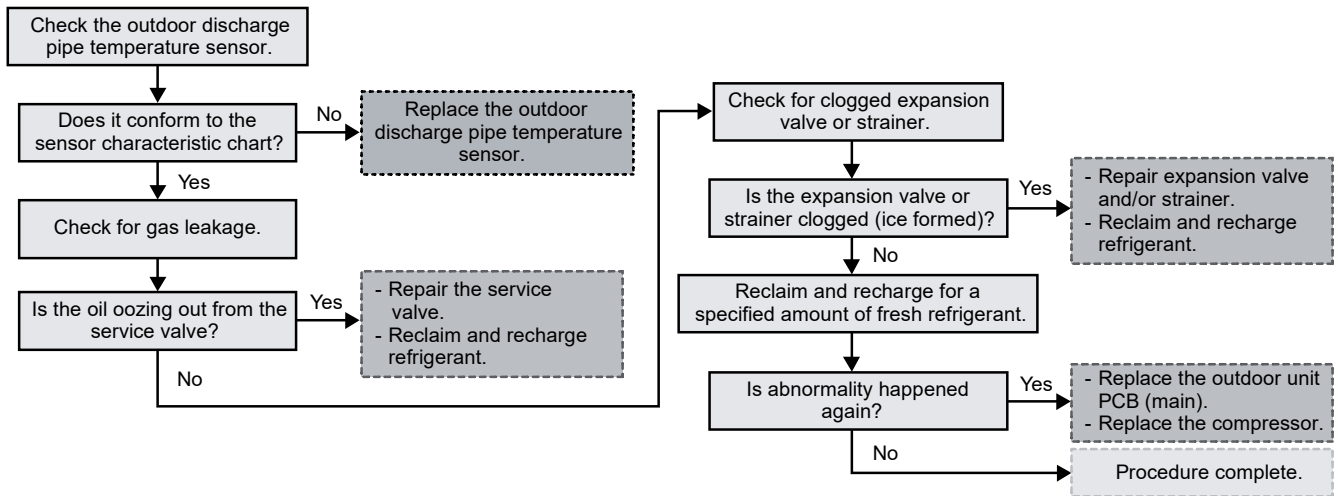

## 18.5.25 IPM Overheating (F22)

### Malfunction Decision Conditions:

During operation of cooling and heating, when temperature 95°C is detected by the outdoor IPM temperature sensor.

### Malfunction Caused:

- 1 Faulty outdoor unit fan motor.
- 2 Faulty outdoor unit PCB (main).

### Abnormality Judgment:


Continue 4 times in 30 minutes.

### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

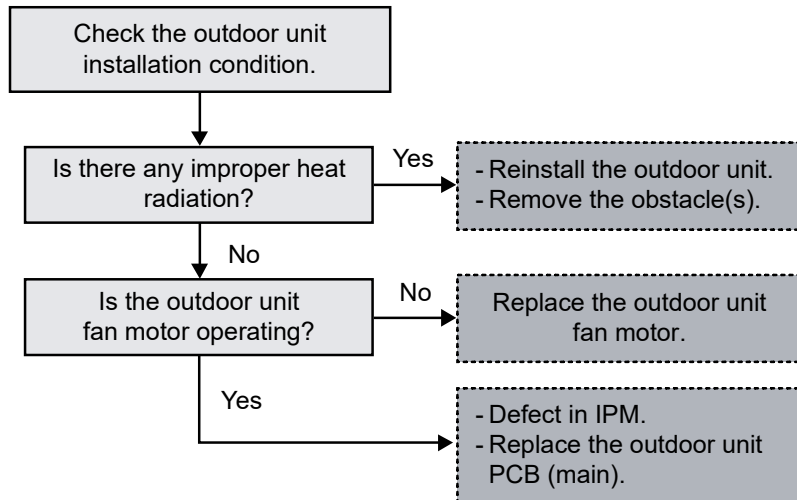

## 18.5.26 Output Over Current Detection (F23)

### Malfunction Decision Conditions:

During operation of cooling and heating, when outdoor DC current is above set value is detected by the IPM DC Peak sensing circuitry in the outdoor unit PCB (main).

### Malfunction Caused:

- 1 Faulty outdoor unit PCB (main).
- 2 Faulty compressor.


### Abnormality Judgment:

Continue for 7 times.

## Troubleshooting:



For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

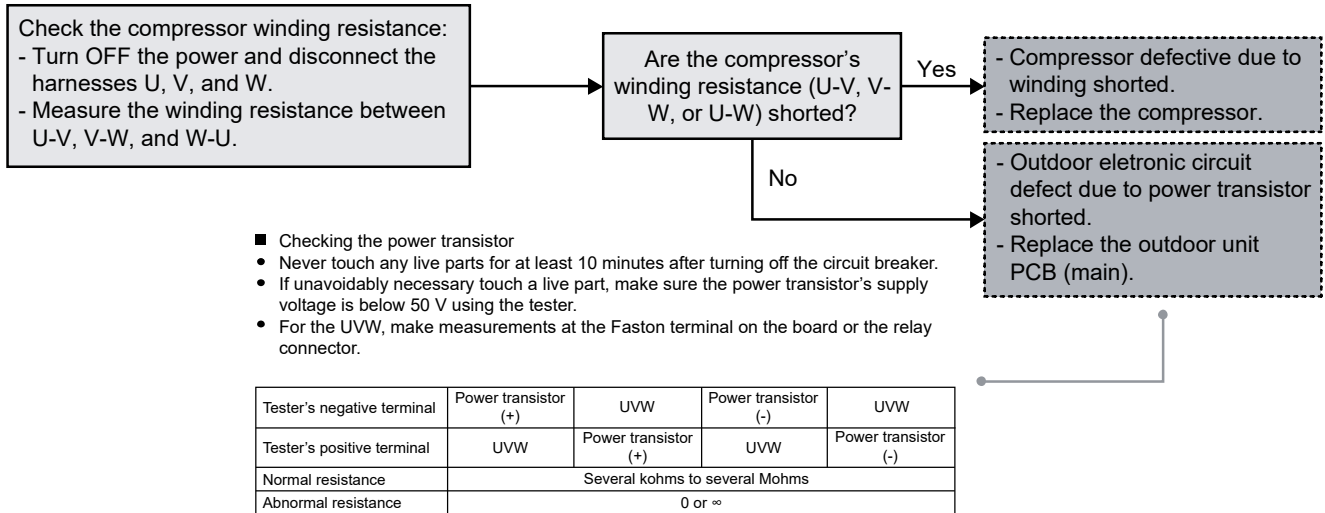

### Resistance of Compressor Windings

MODEL	WH-WDG09ME8 / WH-WDG12ME8 / WH-WDG16ME8
CONNECTION	7CD081XA01
U - V	0.210 Ω
V - W	0.210 Ω
U - W	0.210 Ω

Note: Resistance at 20°C of ambient temperature.

## 18.5.27 Refrigeration Cycle Abnormality (F24)

### Malfunction Decision Conditions:


- 1 During compressor running (heating / cooling) for more than 10 minutes except deice and test mode.
- 2 During heating, water outlet and water inlet difference is less than 3°C.
- 3 During cooling, water outlet and water inlet difference is less than 2°C.
- 4 During heating, high pressure < 0.16 MPa (23 Psi) for more than 10 minutes or during cooling, high pressure < 0.04 MPa (6 Psi) for more than 10 minutes or high pressure < 0.01 MPa (1 Psi) for more than 5 minutes.
- 5 During heating, discharge temperature - saturation temperature of high pressure  $\geq 65^{\circ}\text{C}$ .
- 6 During cooling, discharge temperature - saturation temperature of high pressure  $\geq 70^{\circ}\text{C}$ .

### Malfunction Caused:

- 1 Refrigerant shortage (refrigerant leakage).
- 2 Faulty indoor water inlet, indoor water outlet, compressor discharge temp sensor or high pressure sensor.
- 3 Clogged expansion valve or strainer.
- 4 Faulty indoor or outdoor PCB (main).

### Abnormality Judgment:

Continue 2 times in 30 minutes.

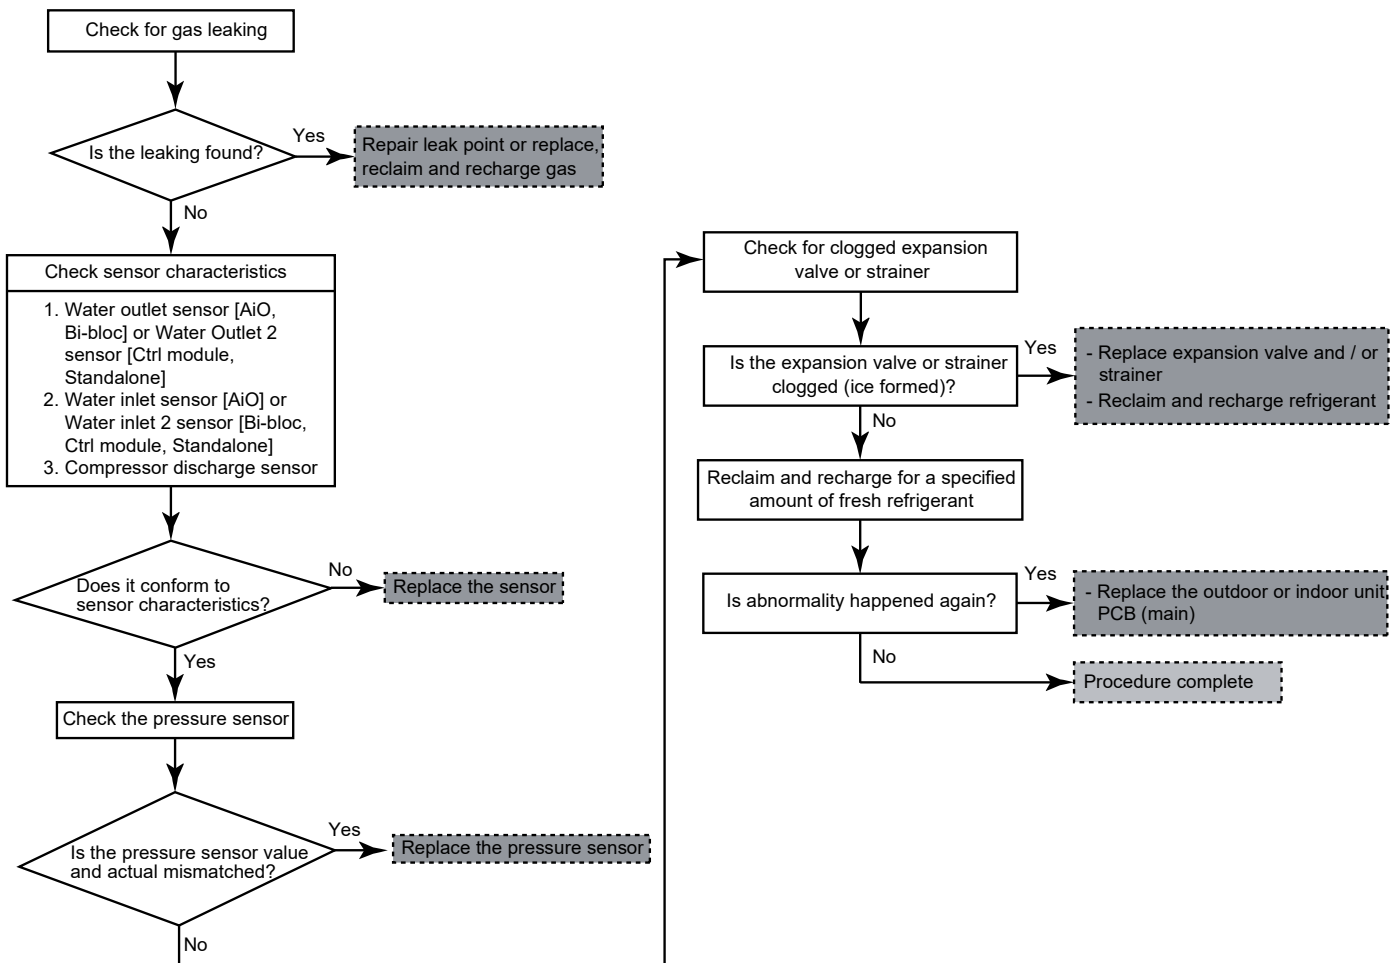

## 18.5.28 Four Way Valve Abnormality (F25)

### Malfunction Decision Conditions:

- 1 During heating operation, when the refrigerant liquid temperature of thermostat ON indoor unit  $< 0^{\circ}\text{C}$ .
- 2 During cooling operation, when the refrigerant liquid temperature of thermostat ON indoor unit  $> 45^{\circ}\text{C}$ .

### Malfunction Caused:

- 1 Faulty sensor.
- 2 Faulty connector connection.
- 3 Faulty outdoor unit PCB (noise filter/main).
- 4 Faulty four way valve.

### Abnormality Judgment:


Continue 3 times in 40 minutes.

### Troubleshooting:



Caution

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

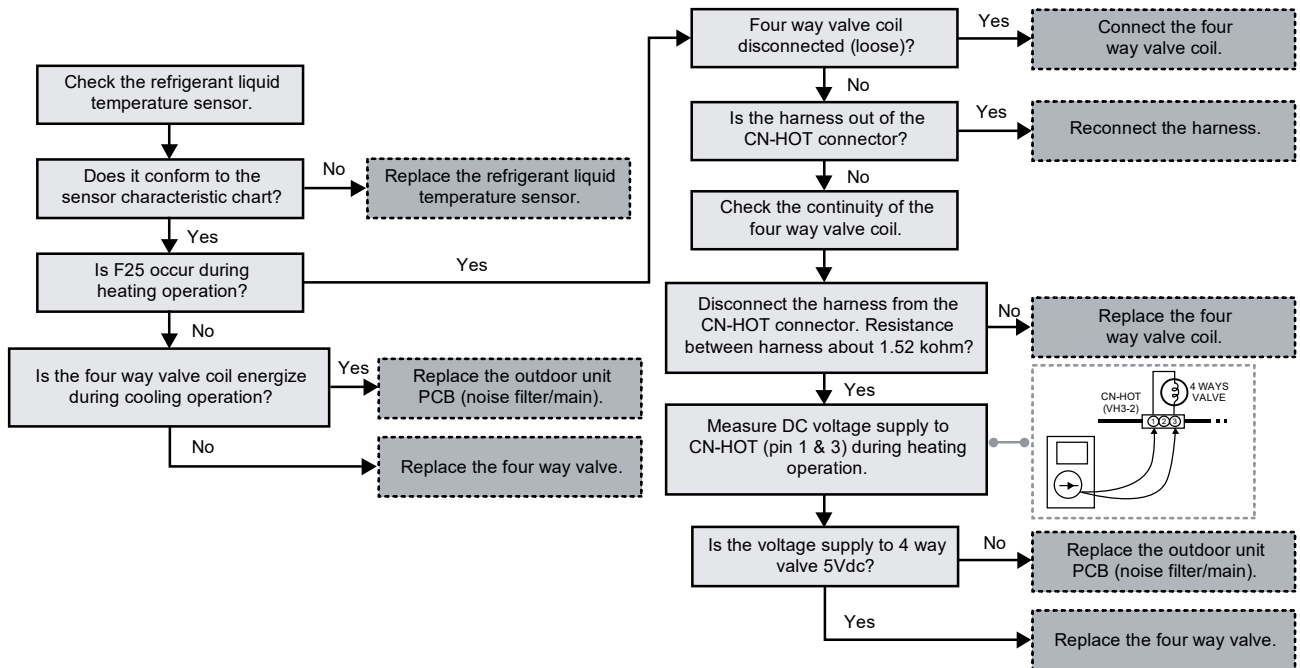

## 18.5.29 Outdoor High Pressure Switch Abnormal (F27)

### Malfunction Decision Conditions:

During compressor stop, and outdoor high pressure switch is remain opened.

### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty switch.
- 3 Faulty outdoor unit PCB (main).

### Abnormality Judgment:


Continue for 1 minute.

### Troubleshooting:



### Caution

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

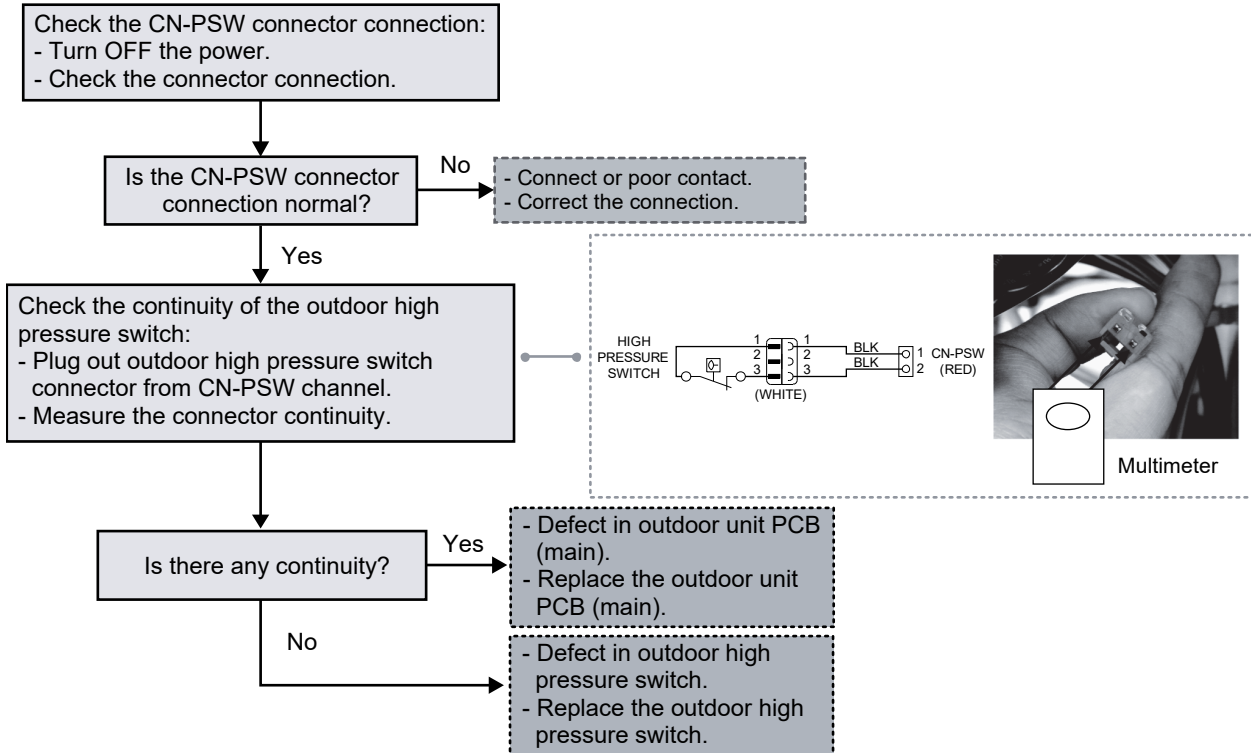

### 18.5.30 Indoor Water Outlet Temperature Sensor 2 Abnormality (F30)

**Malfunction Decision Conditions:**

During startup and operation of cooling and heating, the temperatures detected by the water outlet temperature sensor 2 are used to determine sensor error.

**Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).



**Abnormality Judgment:**

Continue for 5 seconds.

**Troubleshooting:**



For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

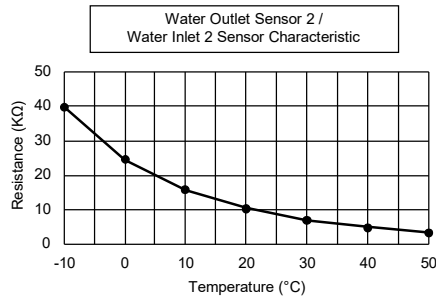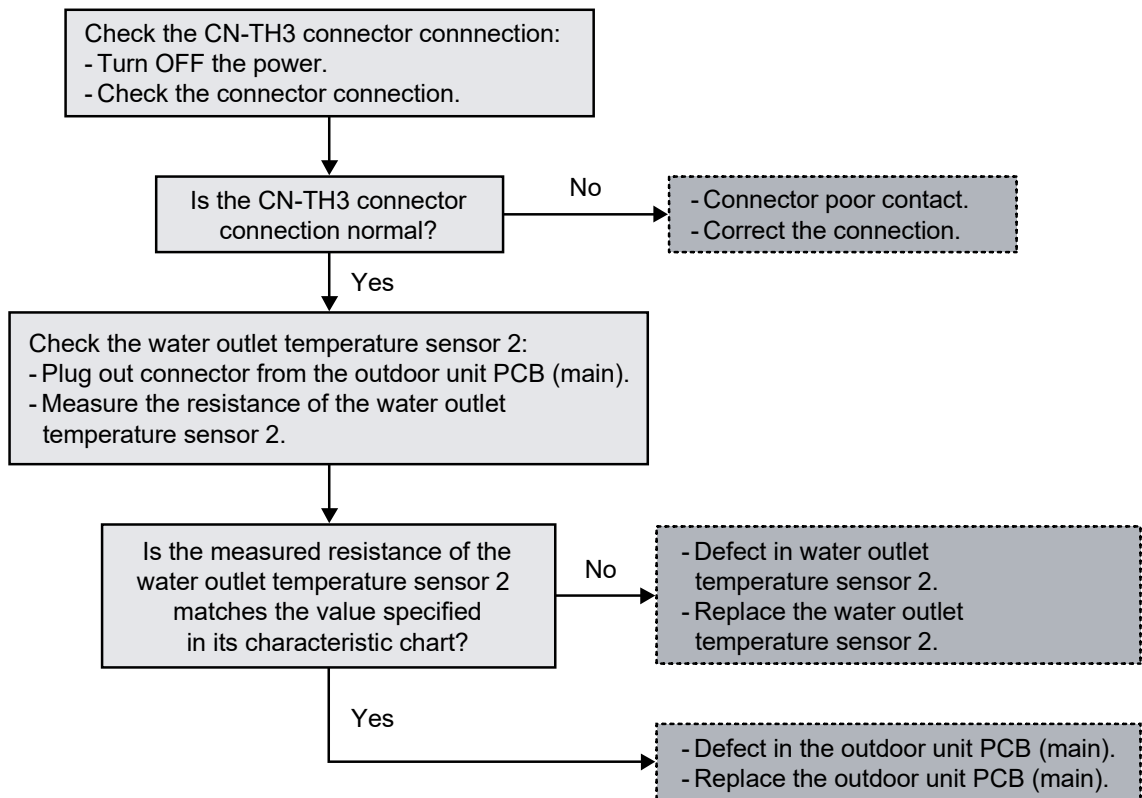

## 18.5.31 Internal Thermostat Error [RC-1 or RC-2] (F32)

### Malfunction Decision Conditions:

During startup and operation of cooling and heating, the temperatures detected by Internal thermostat in control panel are used to determine sensor error.

### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty control panel.
- 3 Faulty Indoor unit PCB (main).
- 4 Faulty Outdoor unit PCB (sub).

### Abnormality Judgment:


Continue for 5 seconds.

### Troubleshooting:



### Caution

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

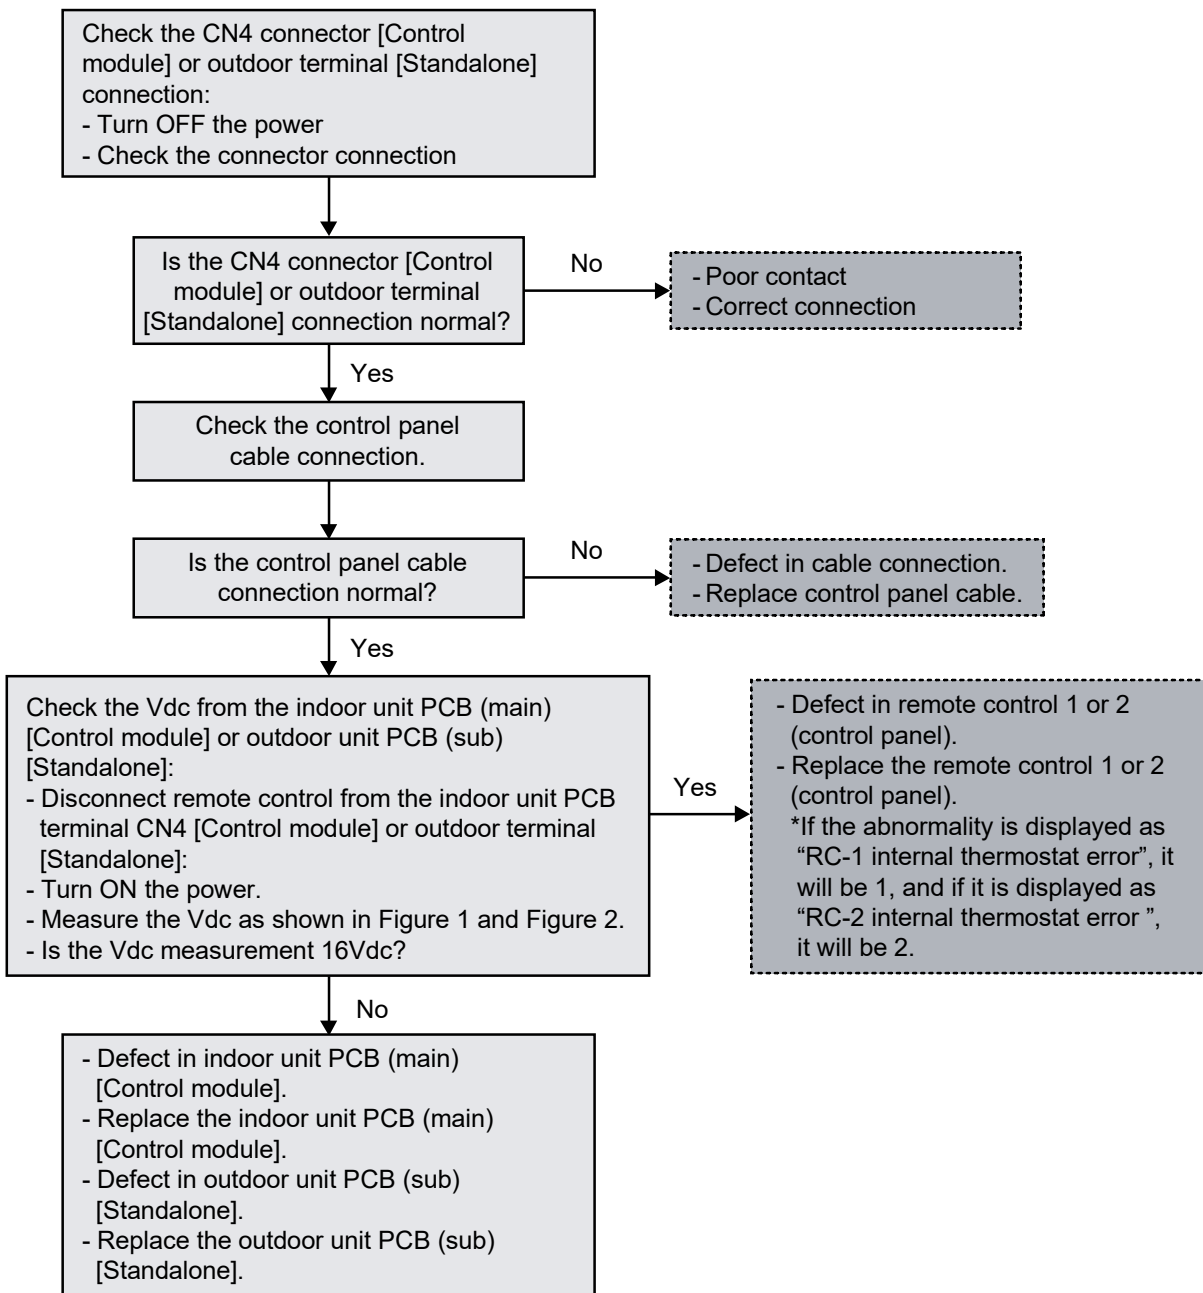

### 18.5.32 Outdoor Air Temperature Sensor Abnormality (F36)

#### Malfunction Decision Conditions:

During startup and operation of cooling and heating, the temperatures detected by the outdoor air temperature sensor are used to determine sensor error.

#### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).


#### Abnormality Judgment:

Continue for 5 seconds.

#### Troubleshooting:



For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

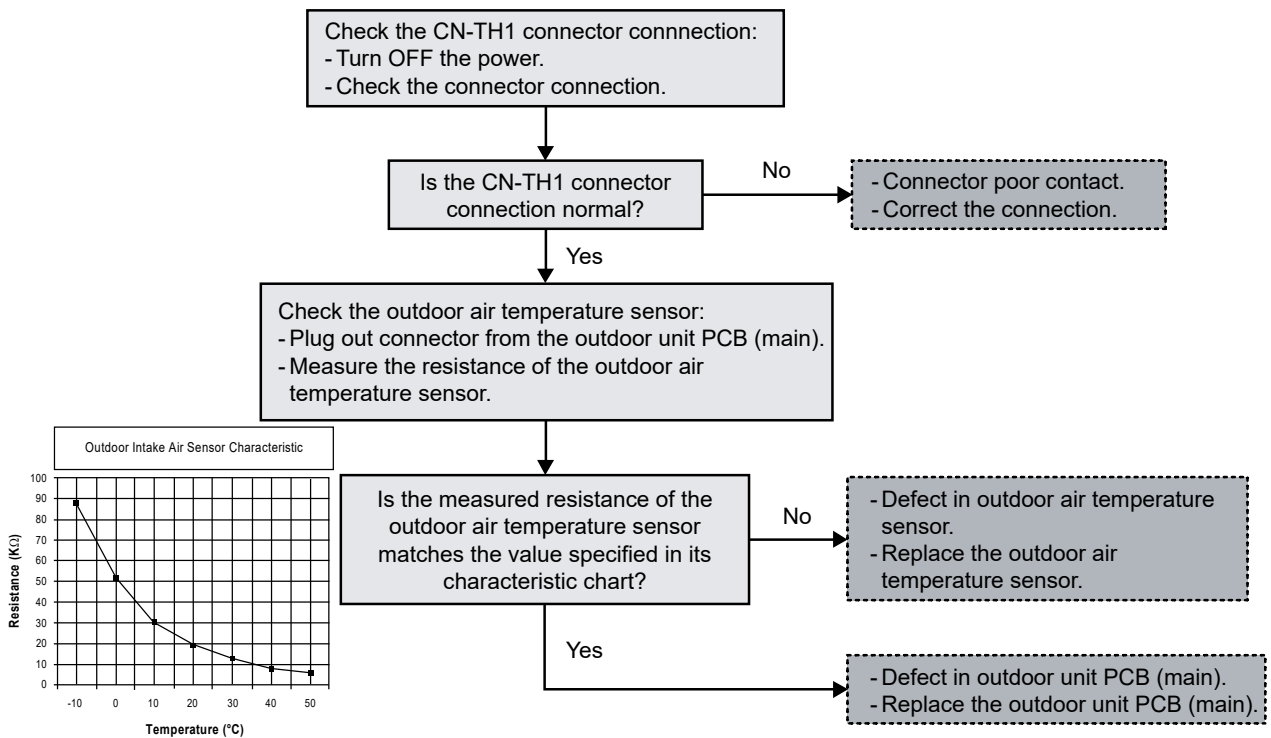

## 18.5.33 Outdoor Discharge Pipe Temperature Sensor Abnormality (F40)

### Malfunction Decision Conditions:

During startup and operation of cooling and heating, the temperatures detected by the outdoor discharge pipe temperature sensor are used to determine sensor error.

### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

### Abnormality Judgment:


Continue for 5 seconds.

### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

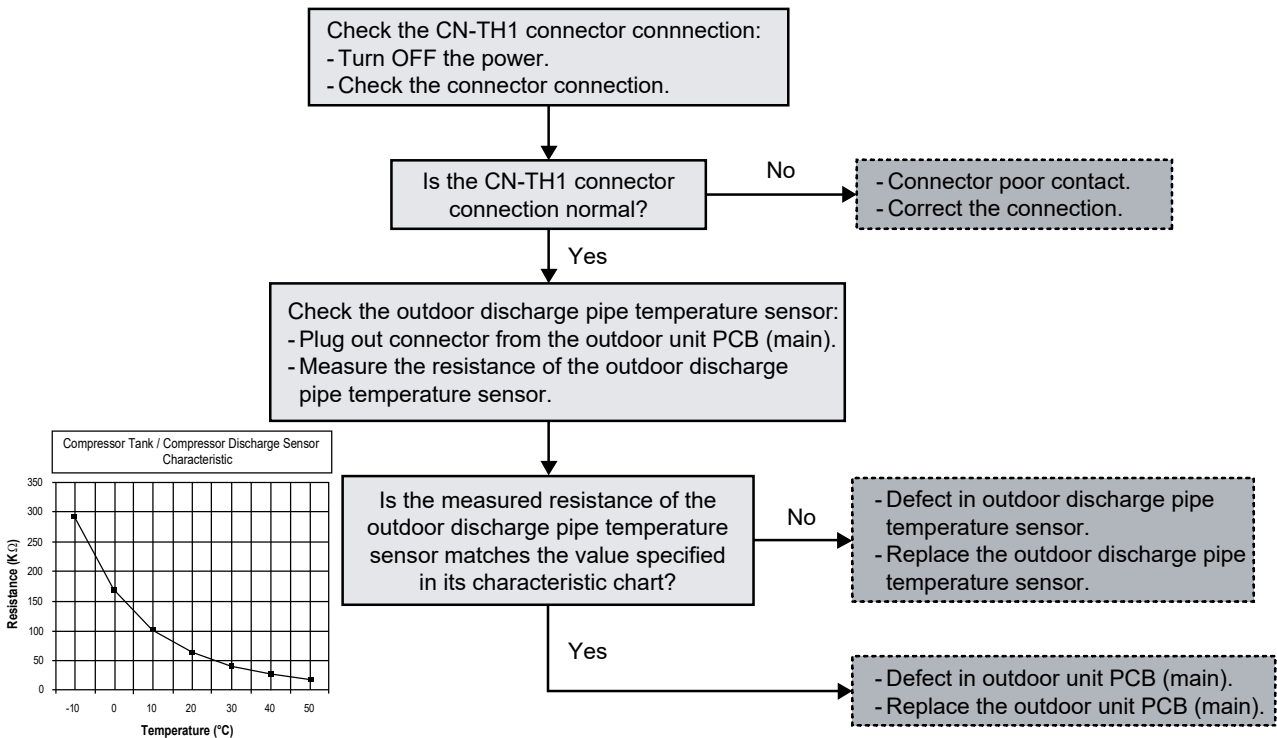

### 18.5.34 Power Factor Correction (PFC) Abnormality (F41)

**Malfunction Decision Conditions:**

During operation of cooling and heating, when the PFC protection circuitry in the outdoor unit PCB (main) senses abnormal high DC voltage level.

**Malfunction Caused:**

- 1 Power supply surge.
- 2 Compressor windings not uniform.
- 3 Faulty outdoor unit PCB (main).

**Abnormality Judgment:**


Continue 4 times in 20 minutes.

**Troubleshooting:**



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

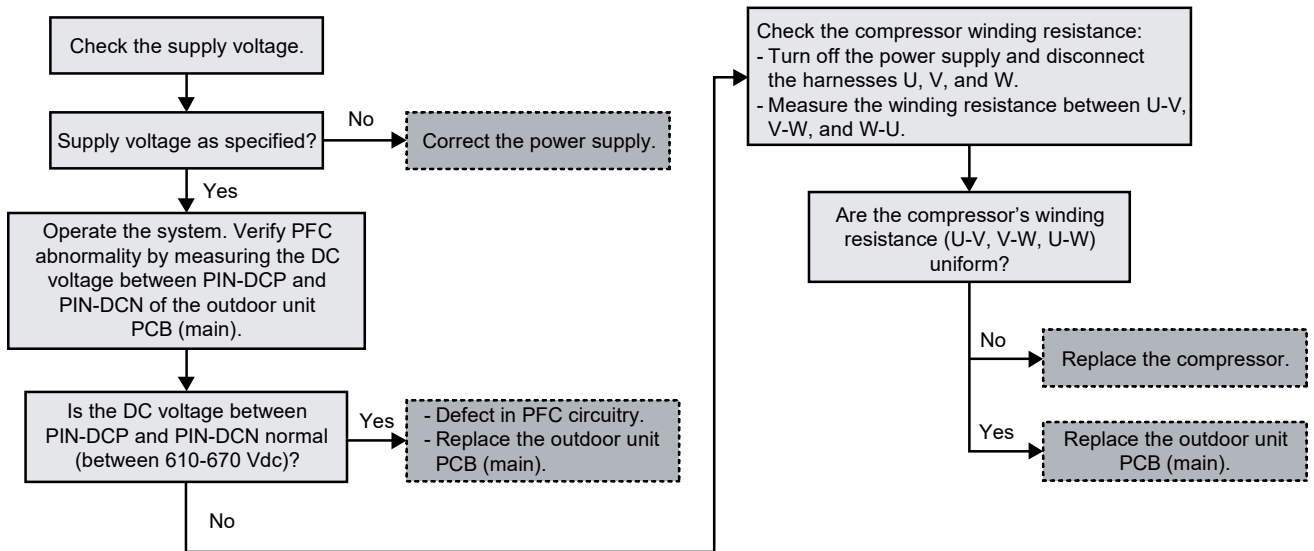

## 18.5.35 Outdoor Pipe Temperature Sensor Abnormality (F42)

### Malfunction Decision Conditions:

During startup and operation of cooling and heating, the temperatures detected by the outdoor pipe temperature sensor are used to determine sensor error.

### Malfunction Caused:


- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

### Abnormality Judgment:


Continue for 5 seconds.

### Troubleshooting: Caution

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

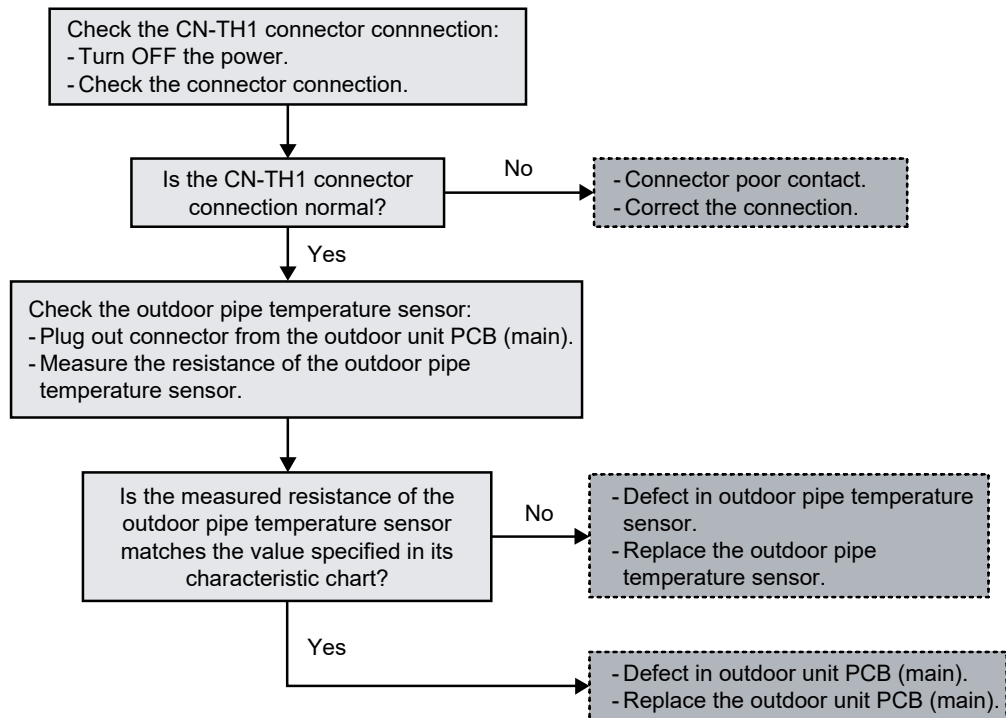

Evaporator Outlet Sensor /  
Outdoor Pipe Sensor /  
Bypass Outlet Sensor /  
Bypass Inlet Sensor /  
Economizer Outlet Sensor /  
Outdoor Heat Exchanger Middle Sensor /  
Defrost Sensor Characteristic

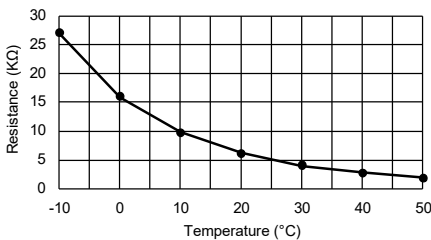

### 18.5.36 Outdoor Defrost Temperature Sensor Abnormality (F43)

**Malfunction Decision Conditions:**


During startup and operation of cooling and heating, the temperatures detected by the outdoor defrost temperature sensor are used to determine sensor error.



**Malfunction Caused:**

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

**Abnormality Judgment:**

Continue for 5 seconds.

**Troubleshooting:**  **Caution** For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

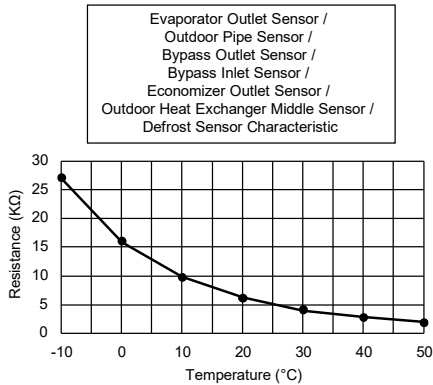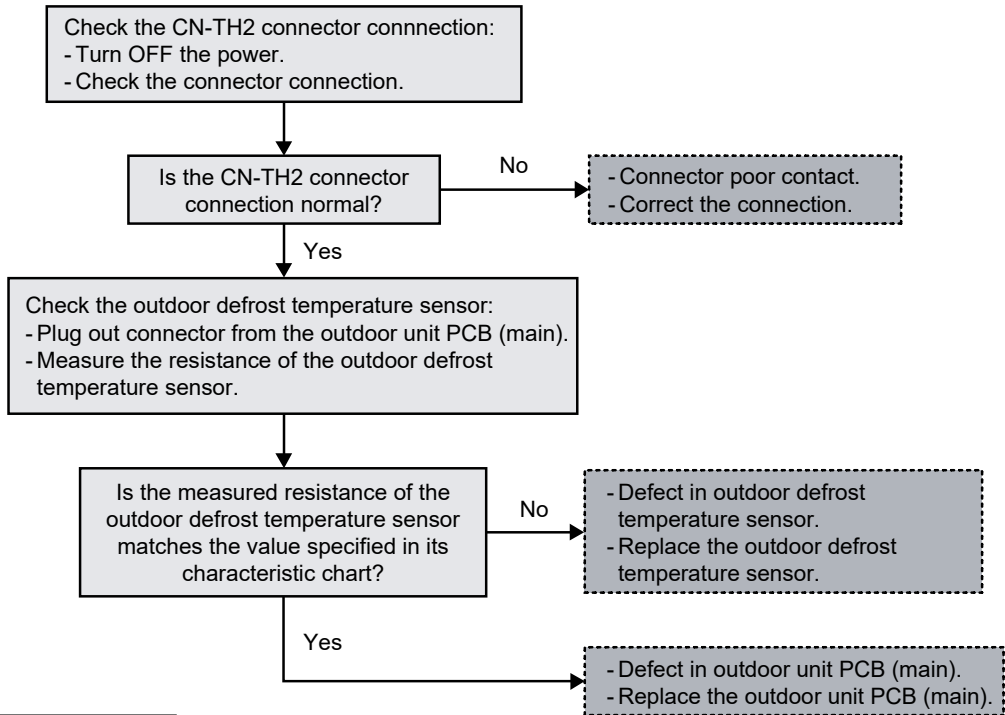

## 18.5.37 Indoor Water Outlet Temperature Sensor Abnormality (F45)

### Malfunction Decision Conditions:

During startup and operation of cooling and heating, the temperatures detected by the indoor water outlet temperature sensor are used to determine sensor errors.

### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty indoor unit PCB (main).

### Abnormality Judgment:


Continue for 5 seconds.

### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

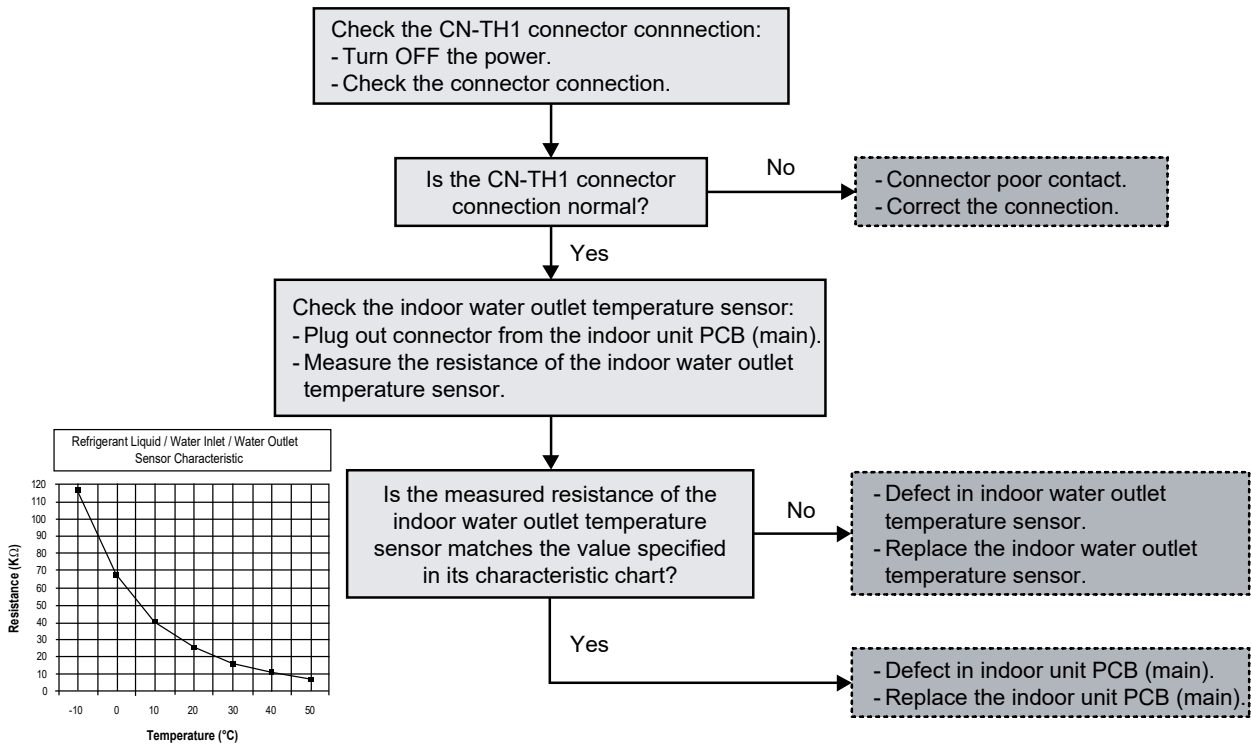

### 18.5.38 Outdoor Current Transformer Open Circuit (F46)

**Malfunction Decision Conditions:**

A current transformer (CT) open circuit is detected by checking the compressor running frequency ( $\geq$  rated frequency) and CT detected input current ( $< 0.65$  A) for continuously 20 seconds.

**Malfunction Caused:**


- 1 CT defective.
- 2 Faulty outdoor unit PCB (main).
- 3 Compressor defective (low compression).

**Abnormality Judgment:**

Continue 3 times in 20 minutes.

**Troubleshooting:**  **Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

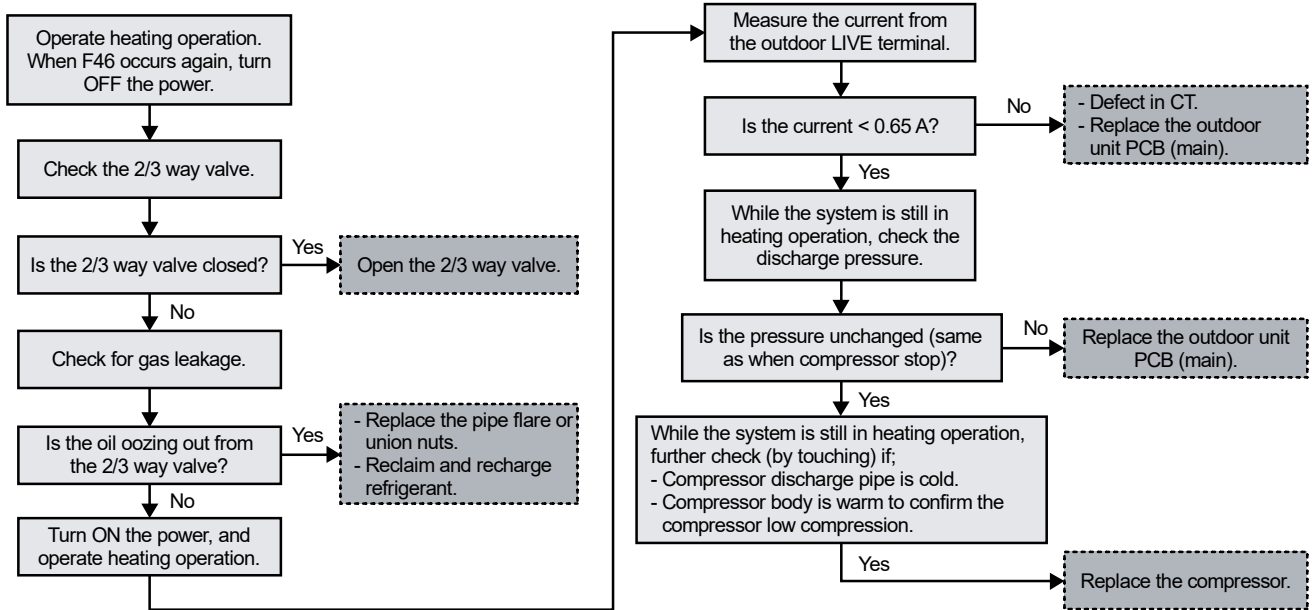

## 18.5.39 Outdoor Evaporator Outlet Temperature Sensor Abnormality (F48)

### Malfunction Decision Conditions:

During start up and operation of cooling and heating, the temperature detected by outdoor evaporator outlet sensor is used to determine sensor error.

### Malfunction Caused:

- 1 Faulty connector connection
- 2 Faulty sensor
- 3 Faulty outdoor unit PCB (main)

### Abnormality Judgment:


Continuous for 5 seconds

### Troubleshooting:




**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

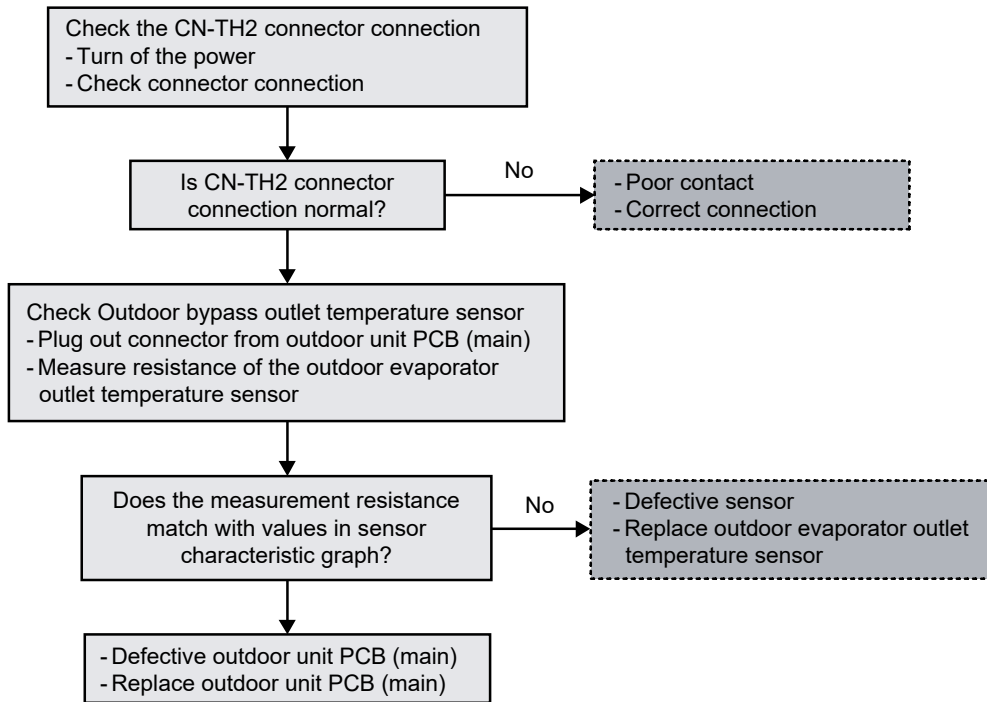

Evaporator Outlet Sensor /  
Outdoor Pipe Sensor /  
Bypass Outlet Sensor /  
Bypass Inlet Sensor /  
Economizer Outlet Sensor /  
Outdoor Heat Exchanger Middle Sensor /  
Defrost Sensor Characteristic

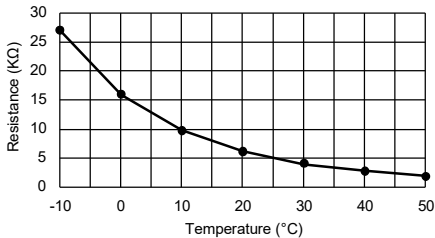

## 18.5.40 Outdoor Bypass Outlet Temperature Sensor (F49)

### Malfunction Decision Conditions:

During start up and operation of cooling and heating, the temperature detected by outdoor bypass outlet sensor is used to determine sensor error.

### Malfunction Caused:

- 1 Faulty connector connection
- 2 Faulty sensor
- 3 Faulty outdoor unit PCB (main)

### Abnormality Judgment:



Continuous for 5 seconds

### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

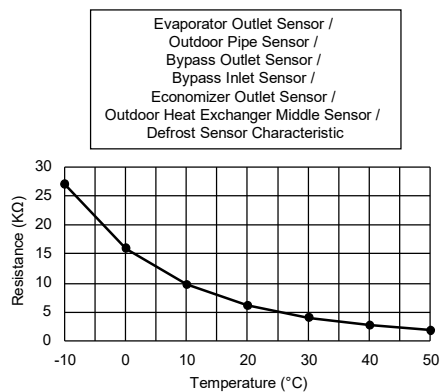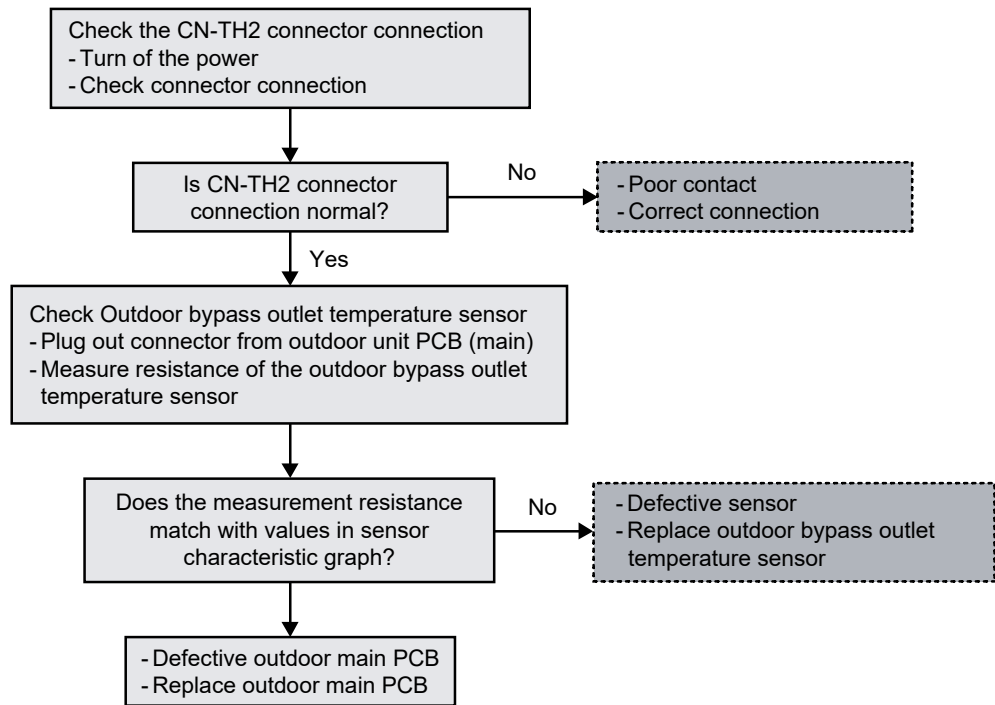

## 18.5.41 Outdoor Water Inlet 2 Temperature Sensor Abnormality (F50)

### Malfunction Decision Conditions:

During startup and operation of cooling and heating, the temperatures detected by the indoor water inlet 2 temperature sensor are used to determine sensor error.

### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

### Abnormality Judgment:



Continue for 10 seconds.

### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

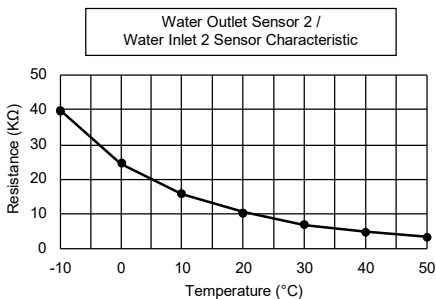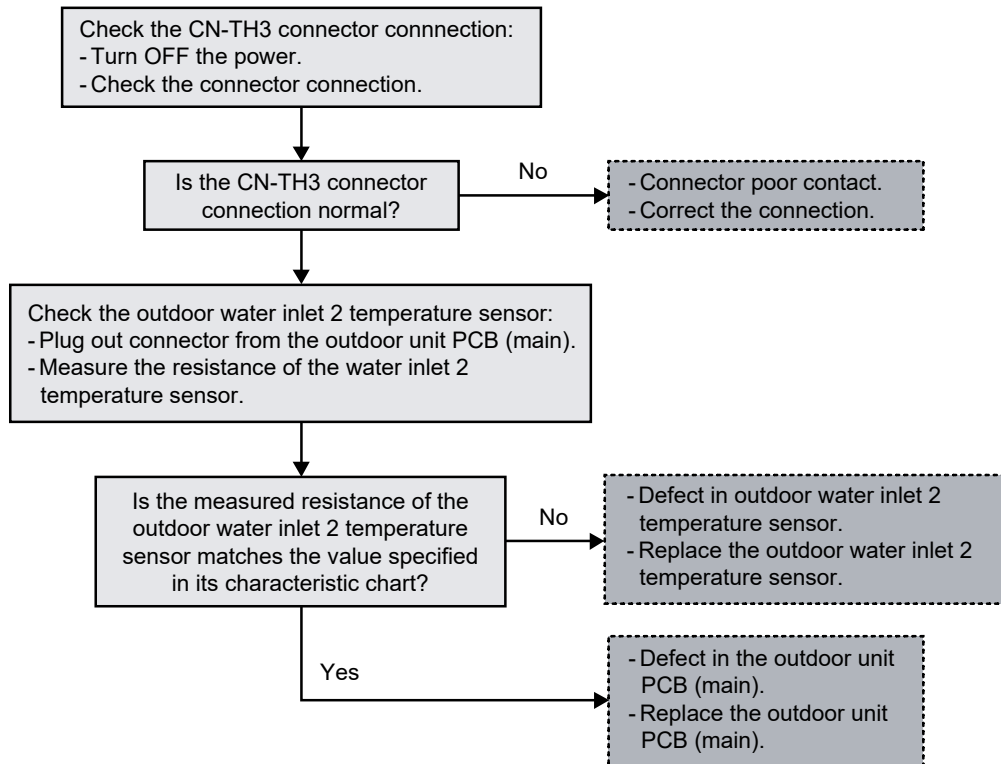

## 18.5.42 Outdoor Economizer Outlet Temperature Sensor Abnormality (F51)

### Malfunction Decision Conditions:

During start up and operation of cooling and heating, the temperature detected by outdoor economizer outlet sensor is used to determine sensor error.

### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

### Abnormality Judgment:



Continuous for 5 seconds.

### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

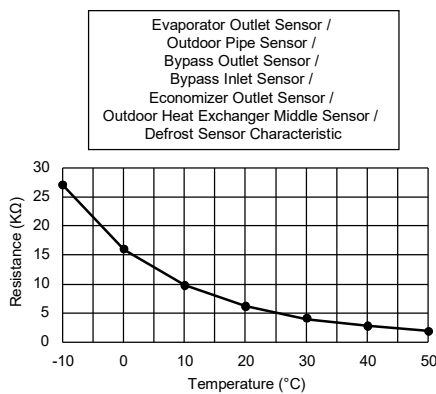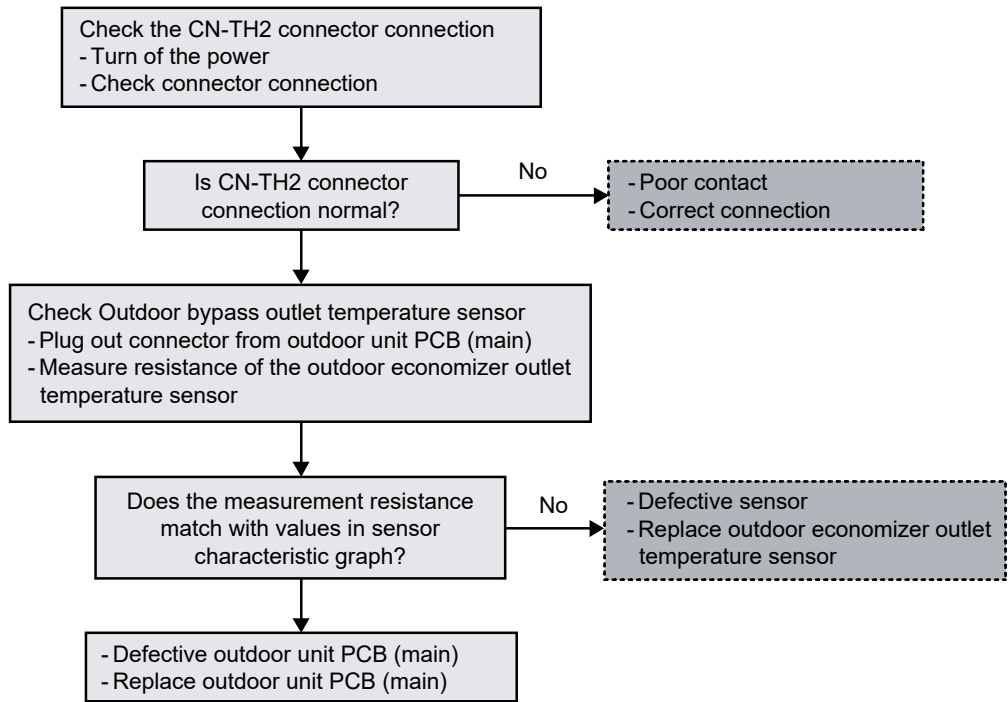

## 18.5.43 Outdoor Bypass Inlet Temperature Sensor Abnormality (F52)

### Malfunction Decision Conditions:

During start up and operation of cooling and heating, the temperature detected by outdoor bypass inlet sensor is used to determine sensor error.

### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

### Abnormality Judgment:


Continuous for 5 seconds.

### Troubleshooting:




**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

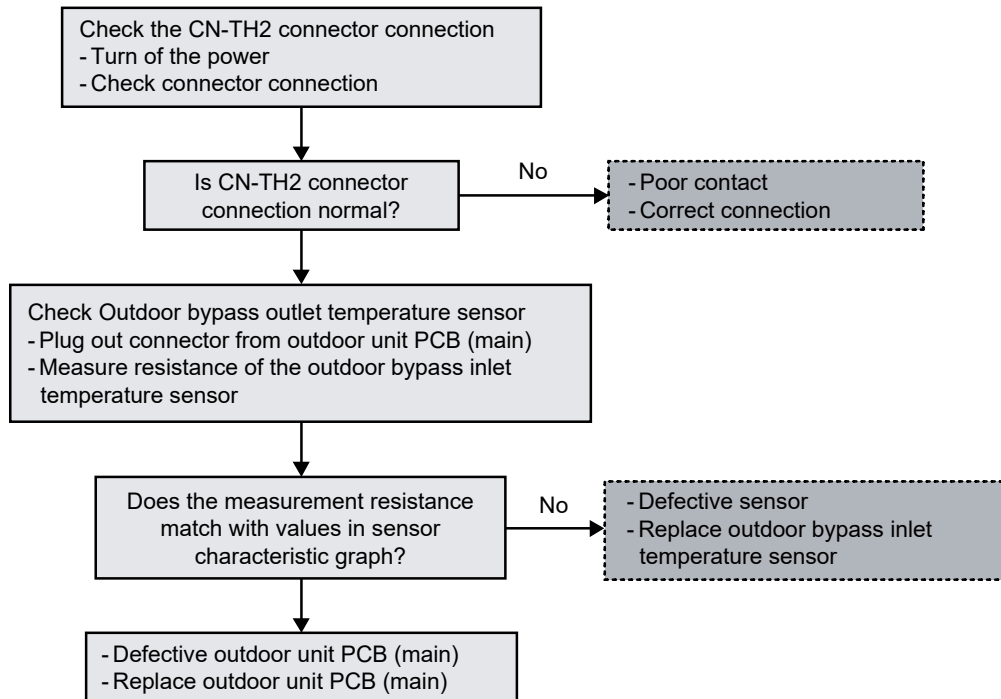

Evaporator Outlet Sensor /  
Outdoor Pipe Sensor /  
Bypass Outlet Sensor /  
Bypass Inlet Sensor /  
Economizer Outlet Sensor /  
Outdoor Heat Exchanger Middle Sensor /  
Defrost Sensor Characteristic

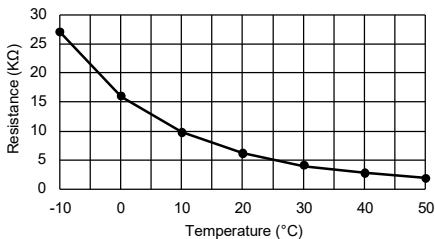

## 18.5.44 Main Expansion Valve Overcurrent Protection (F53)

### Malfunction Decision Conditions:

During start up and operation of cooling and heating, the determination is made based on whether or not an overcurrent flows through the main expansion valve coil.

### Malfunction Caused:

- 1 Faulty connector connection
- 2 Faulty main expansion valve coil
- 3 Faulty outdoor unit PCB (main)

### Abnormality Judgment:


4 times occurrence in 40 minutes

### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

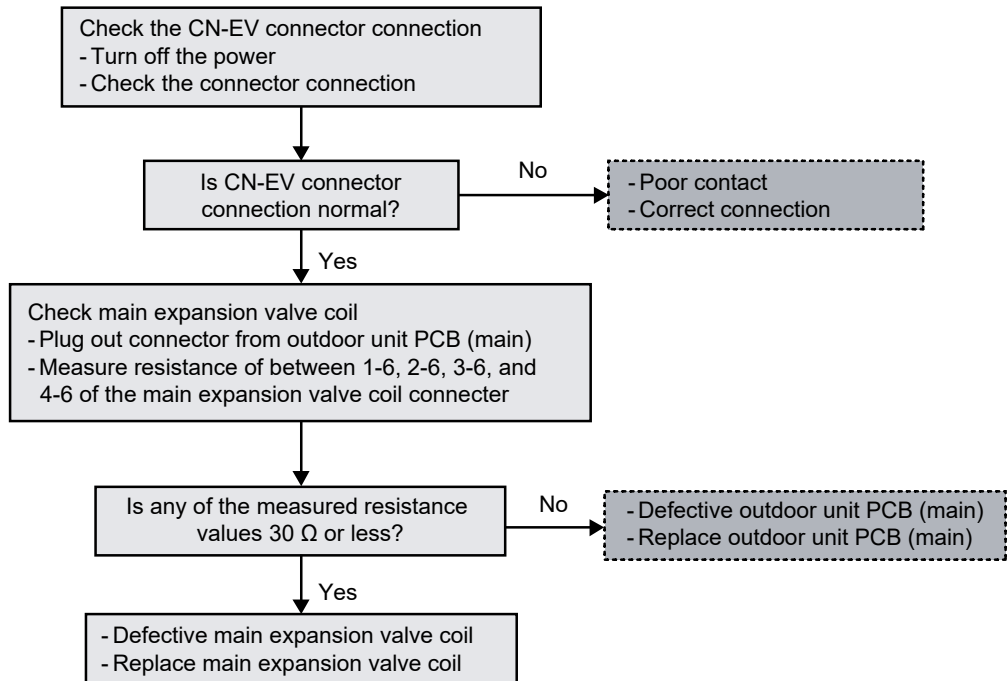

## 18.5.45 Bypass Expansion Valve Overcurrent Protection (F54)

### Malfunction Decision Conditions:

During start up and operation of cooling and heating, the determination is made based on whether or not an overcurrent flows through the bypass expansion valve coil.

### Malfunction Caused:

- 1 Faulty connector connection
- 2 Faulty bypass expansion valve coil
- 3 Faulty outdoor unit PCB (main)

### Abnormality Judgment:


4 times occurrence in 40 minutes

### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

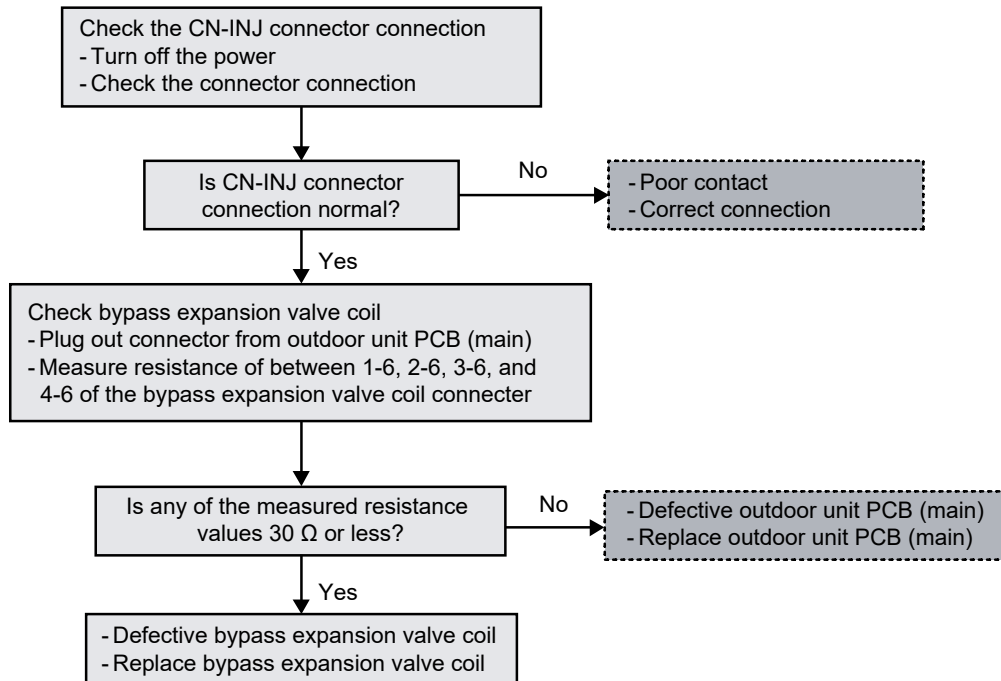

## 18.5.46 Outdoor Heat Exchanger Middle Temperature Sensor Abnormality (F56)

### Malfunction Decision Conditions:

During start up and operation of cooling and heating, the temperature detected by outdoor heat exchanger middle sensor is used to determine sensor error.

### Malfunction Caused:

- 1 Faulty connector connection.
- 2 Faulty sensor.
- 3 Faulty outdoor unit PCB (main).

### Abnormality Judgment:



Continuous for 5 seconds.

### Troubleshooting:



**Caution**

For safety reason and to prevent component breakdown, always switch off the power before remove and connect the component.

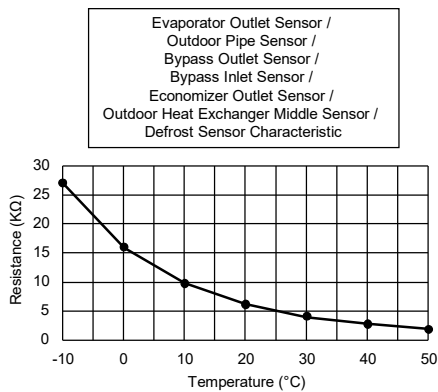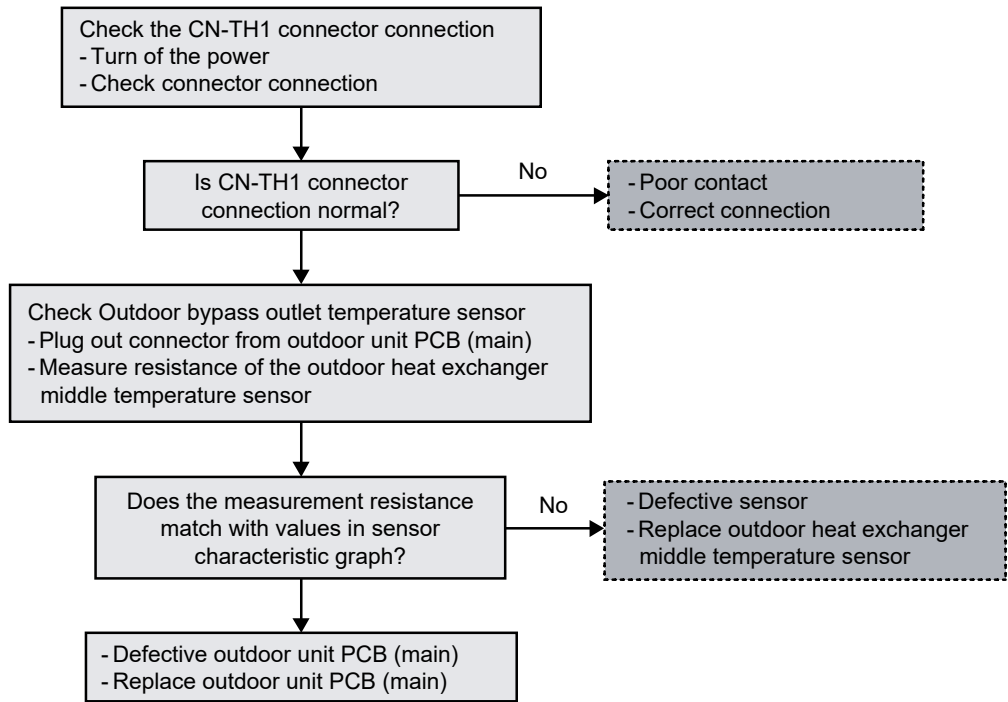

## 19. Disassembly and Assembly Instructions




### WARNING


This symbol shows that this equipment uses a flammable refrigerant with safety A3 group per ISO 817. If the refrigerant is leaked, together with an external ignition source, there is a possibility of fire / explosion.

- If you are working on the R290 product, before starting work and when entering the service area, always turn ON the combustible gas leak detector to ensure there is no leakage.
- Keep all ignition sources away from the product. In particular, open flames, hot surfaces, electrical devices that are not free from electrical sources, static discharges.
- Ensure the servicing area is well ventilated.
- Ensure all the serving tools and equipment complied with ATEX (Atmosphere Explosible) standard.
- Ensure the product is service by certified and authorized serviceman.
- Ensure to always have the approved fire extinguisher during servicing.
- Use a warning placard to ensure that unauthorized personnel cannot enter the protective zone.


### 19.1 Outdoor Unit


#### 19.1.1 Electronic Controller Removal Procedures

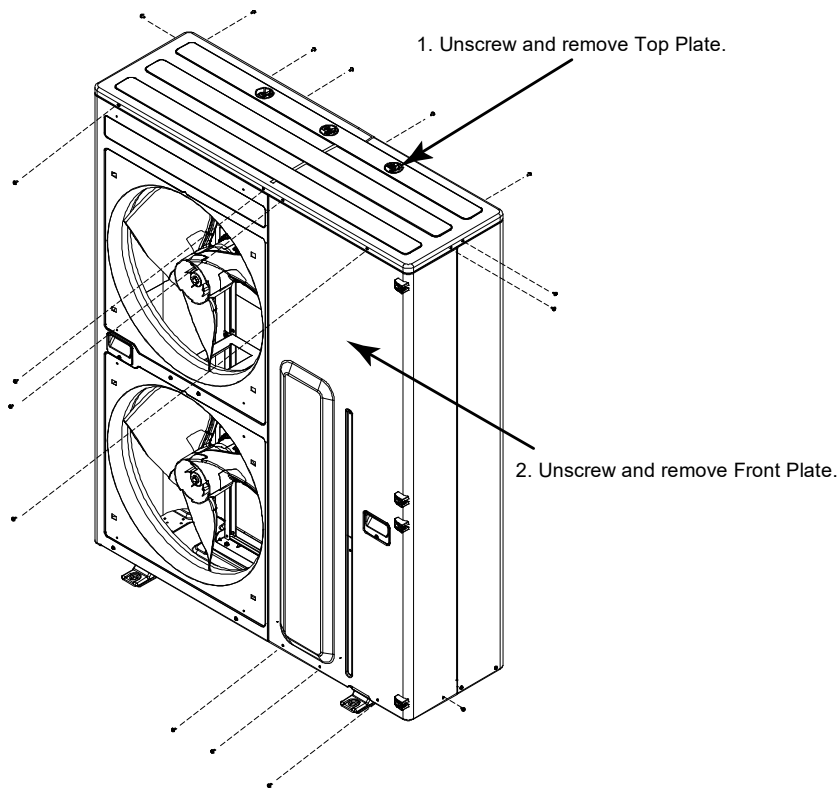

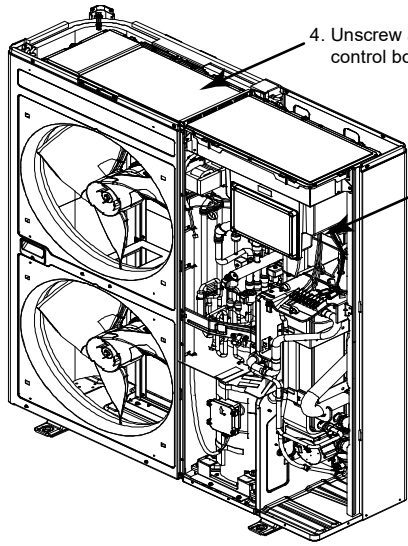


3. Remove all connectors.

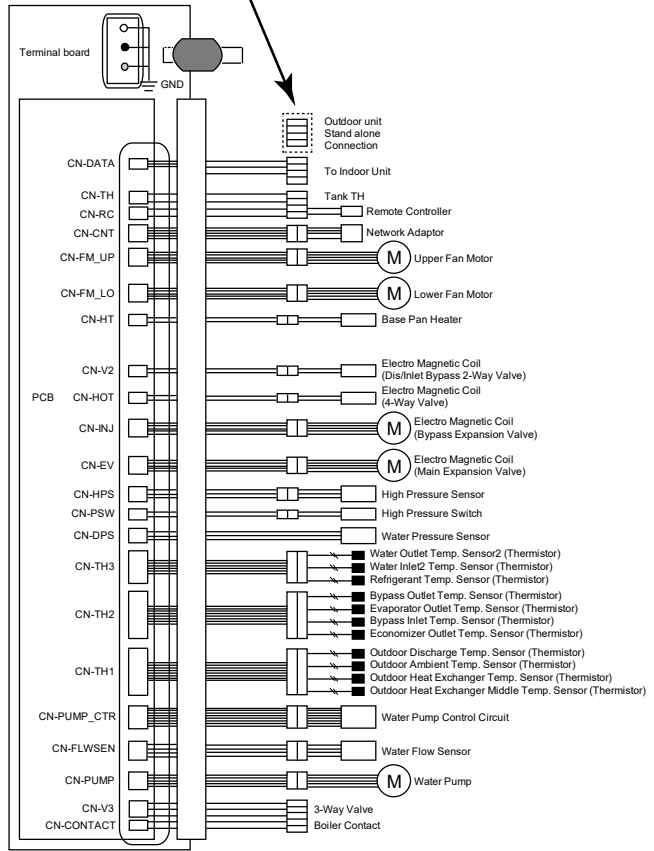

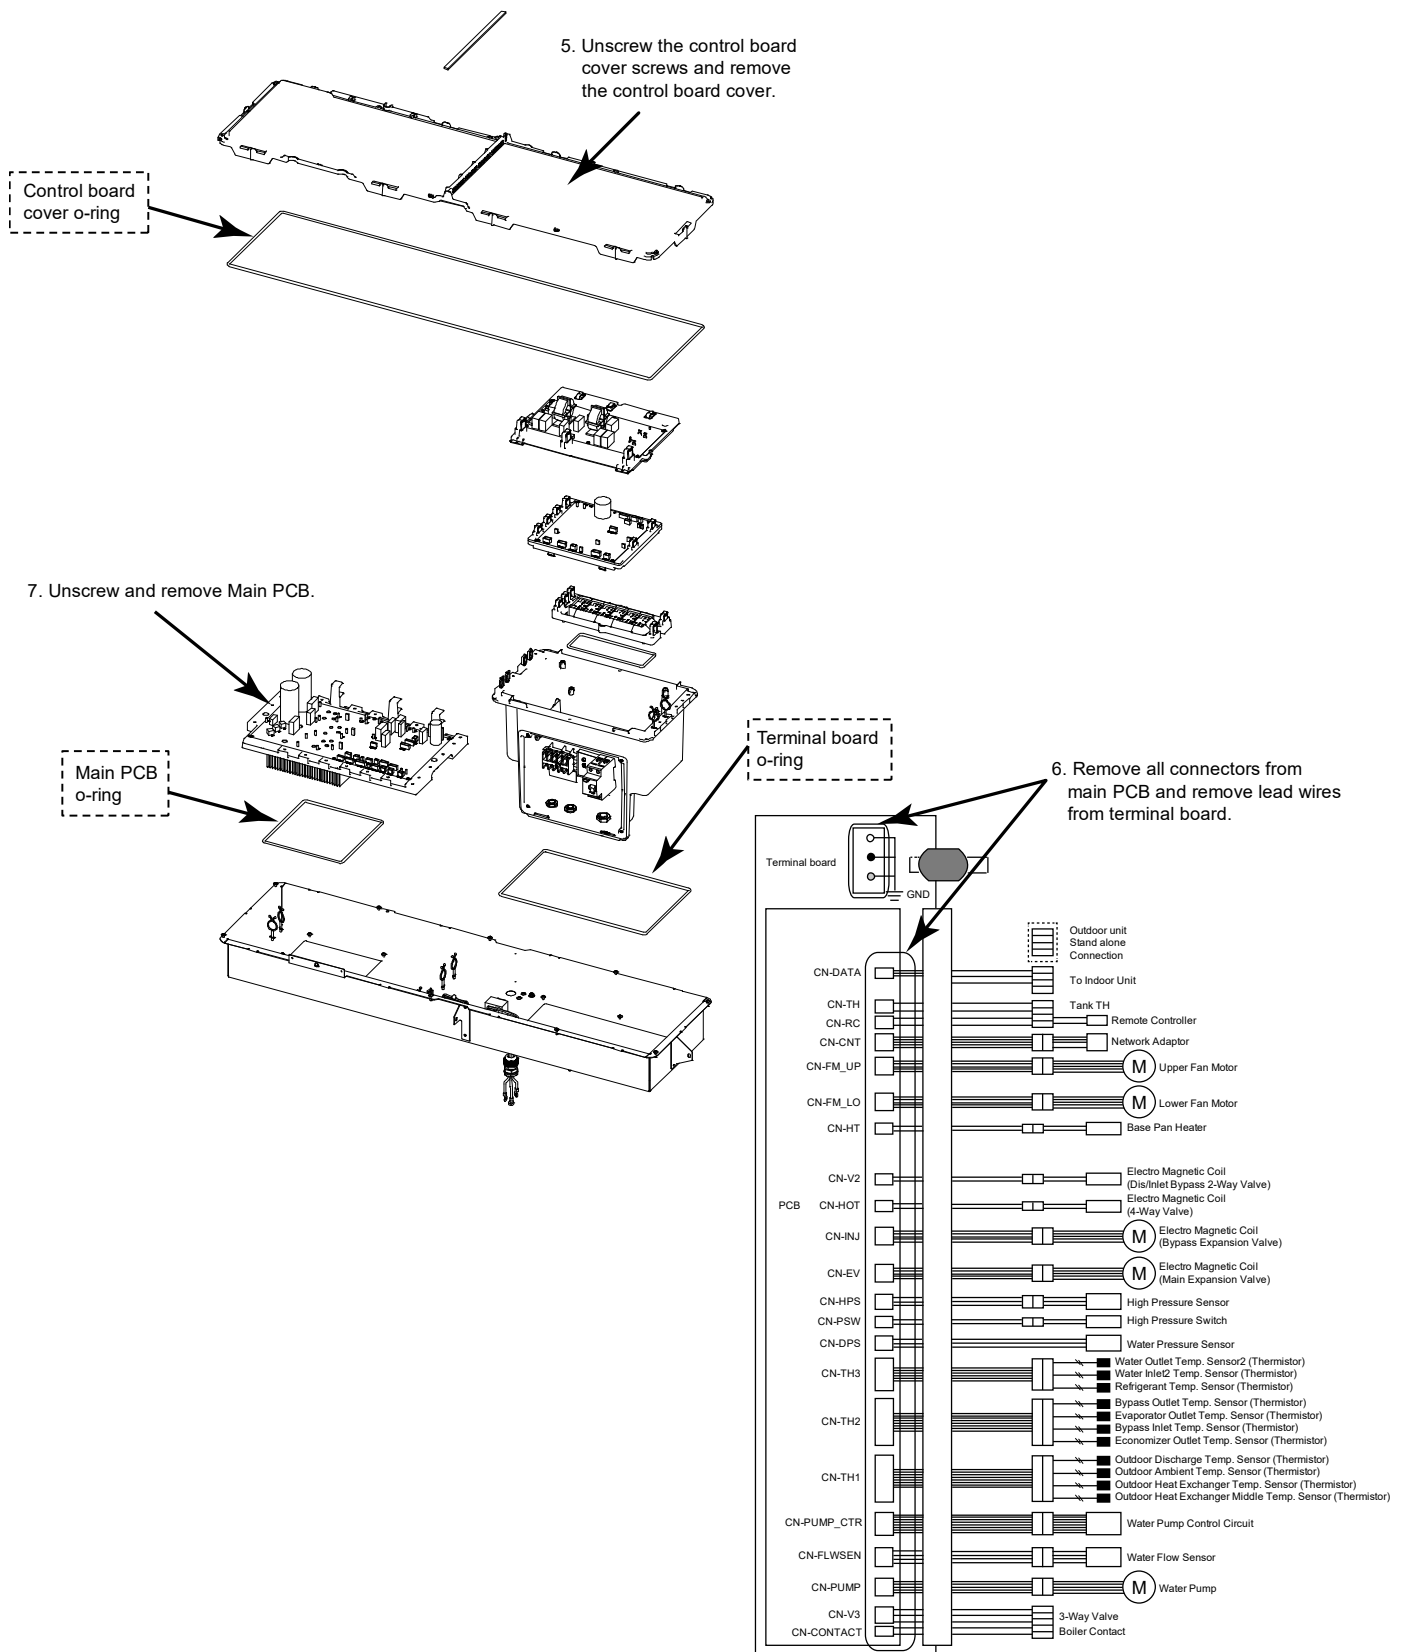


Note: During re-assemble the Main PCB, ensure to attach the O-ring properly to avoid gas leakage into the control board complete.

### 19.1.2 To Remove Flow Sensor

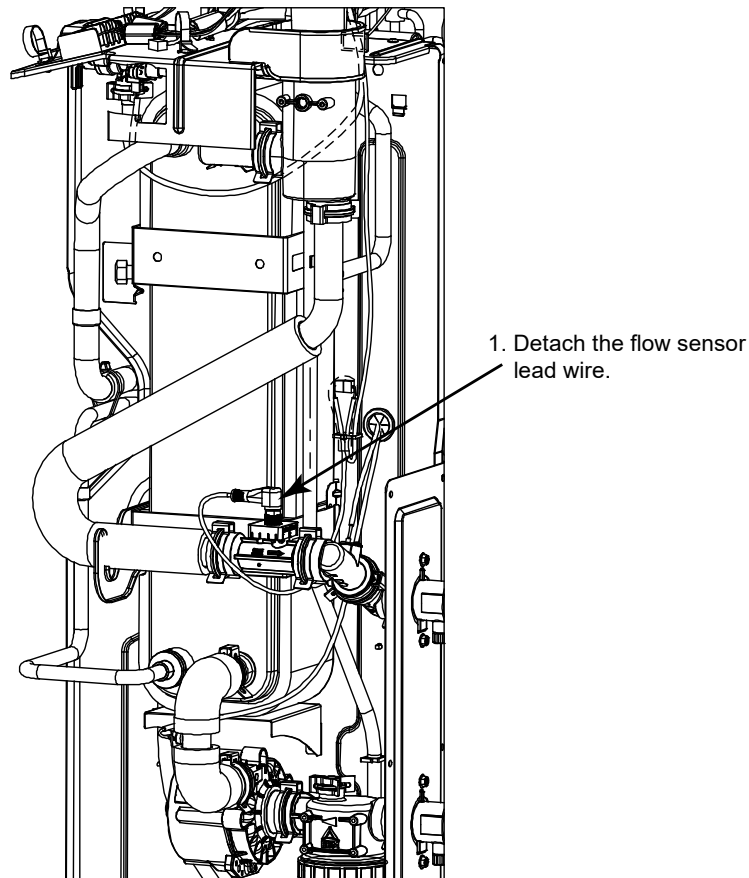

**⚠** When reinstall Flow sensor, ensure the arrow on the flow sensor is parallel with the pipe shaft and is facing in the direction of flow.

### 19.1.3 To Remove Water Pump

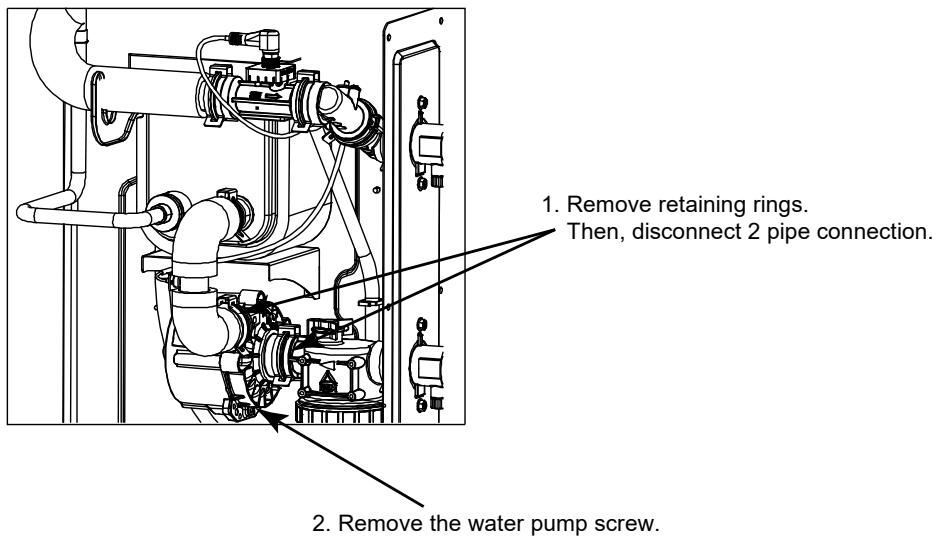

## 20. Technical Data

### 20.1 Operation Characteristics

#### 20.1.1 WH-WDG09ME8





##### Heating Characteristics at Different Outdoor Air Temperature

Condition

Outdoor air temperature : 7°C (DBT), 6°C (WBT)

Indoor water inlet temperature : 30°C

Indoor water outlet temperature : 35°C

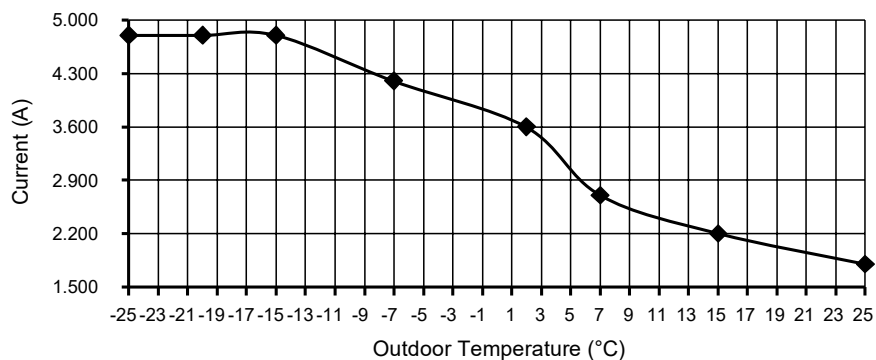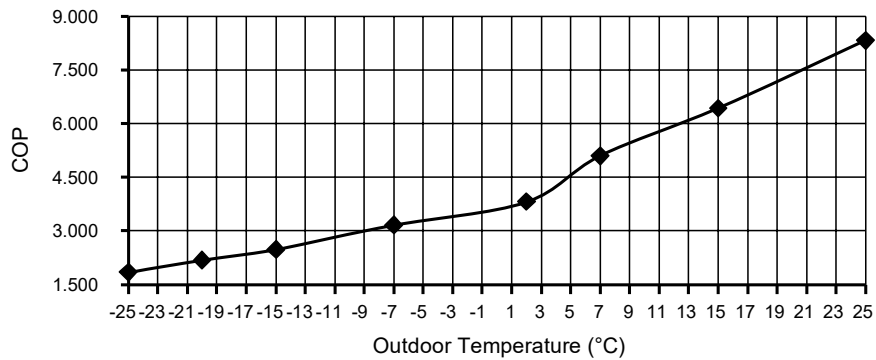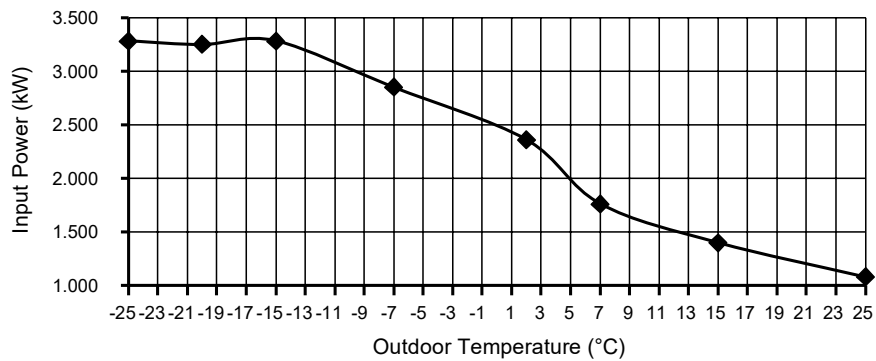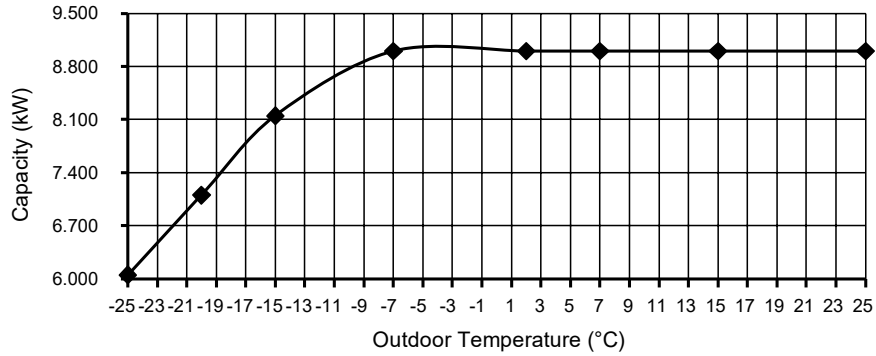





## Cooling Characteristics at Different Outdoor Air Temperature

Condition

Outdoor air temperature : 35°C (DBT), -°C (WBT)

Indoor water inlet temperature : 12°C

Indoor water outlet temperature : 7°C

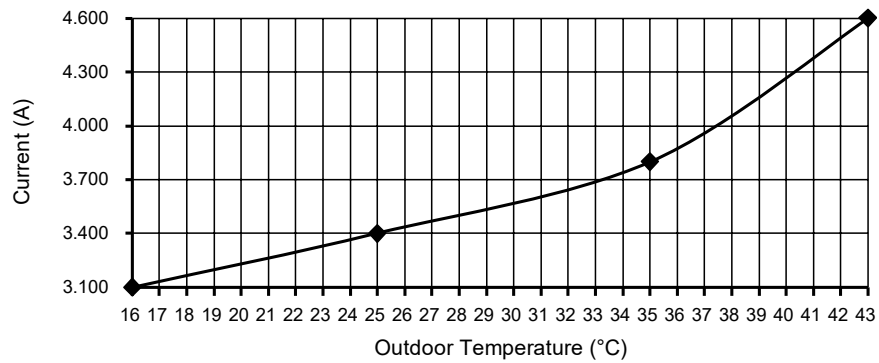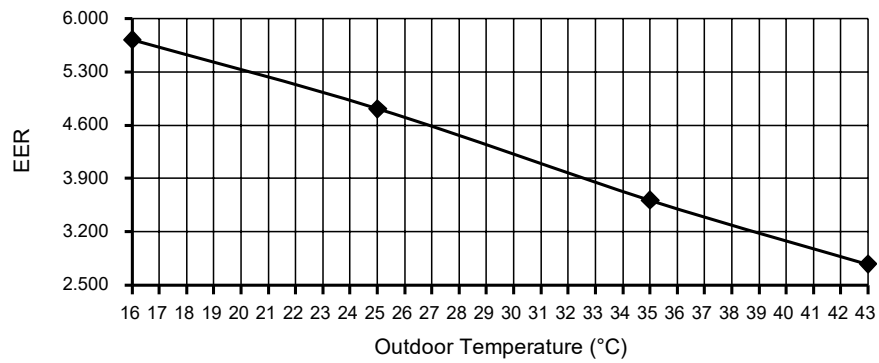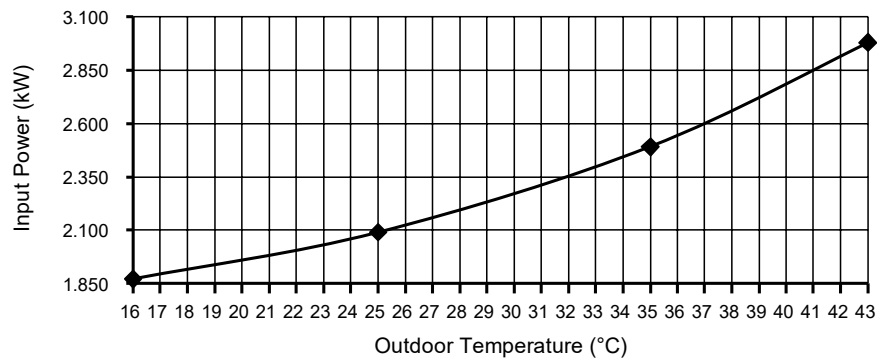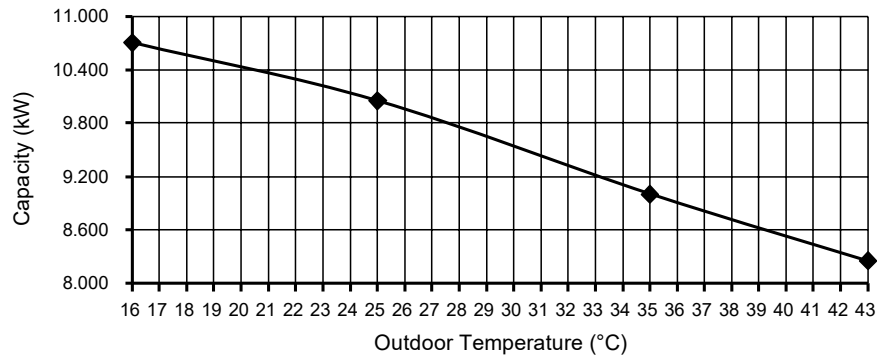





### Cooling Characteristics at Different Outdoor Air Temperature

Condition

Outdoor air temperature : 35°C (DBT), -°C (WBT)

Indoor water inlet temperature : 19°C

Indoor water outlet temperature : 14°C

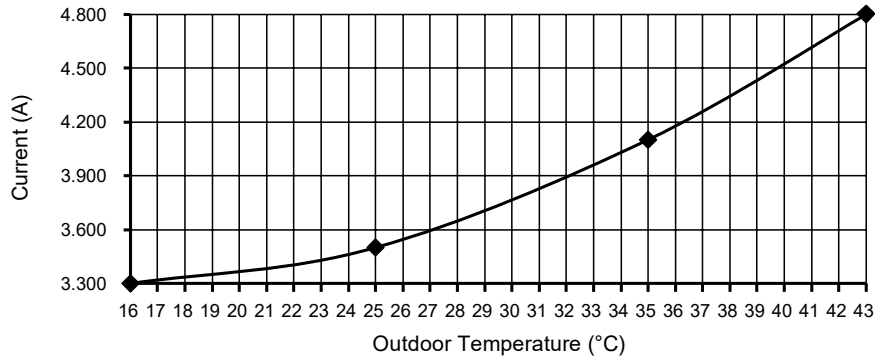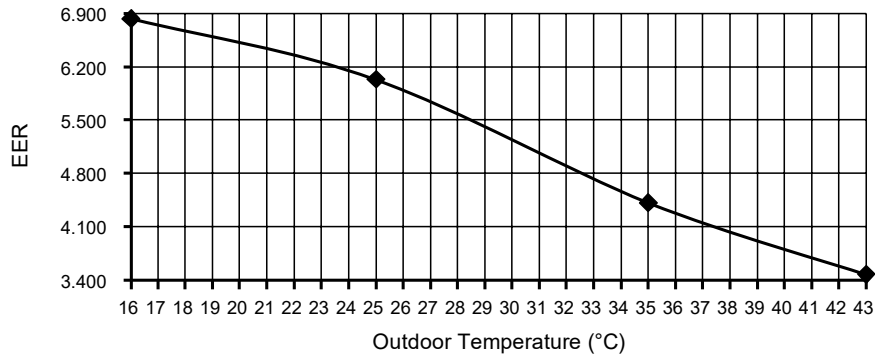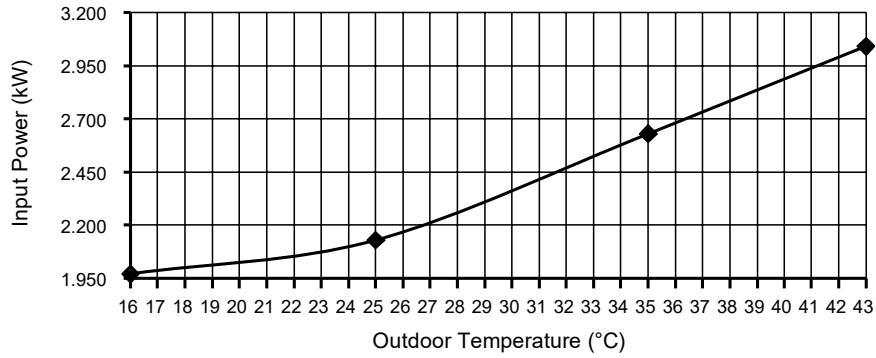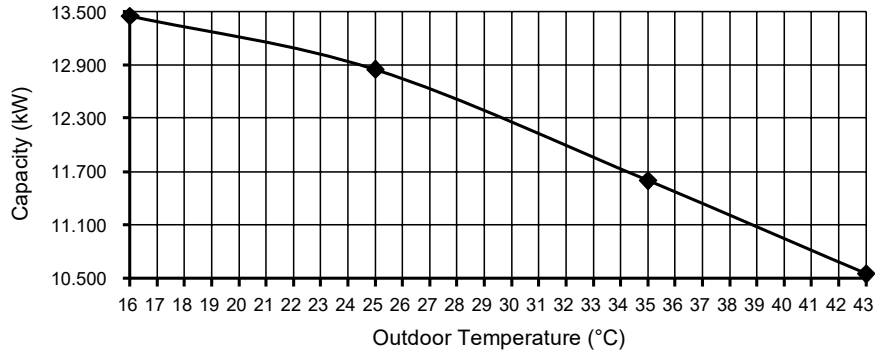





## Cooling Characteristics at Different Outdoor Air Temperature

Condition

Outdoor air temperature : 35°C (DBT), -°C (WBT)

Indoor water inlet temperature : 23°C

Indoor water outlet temperature : 18°C

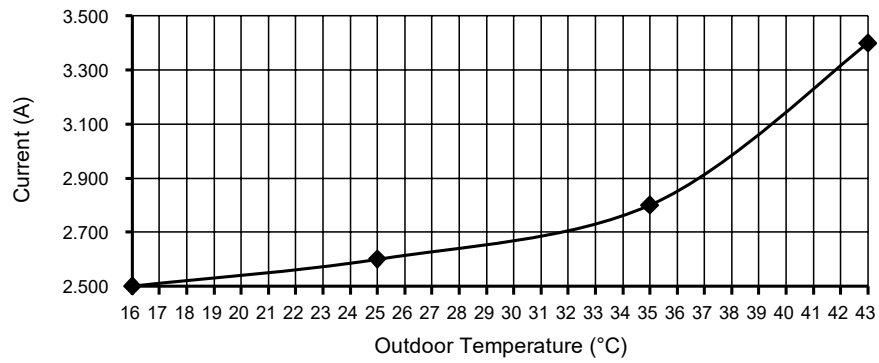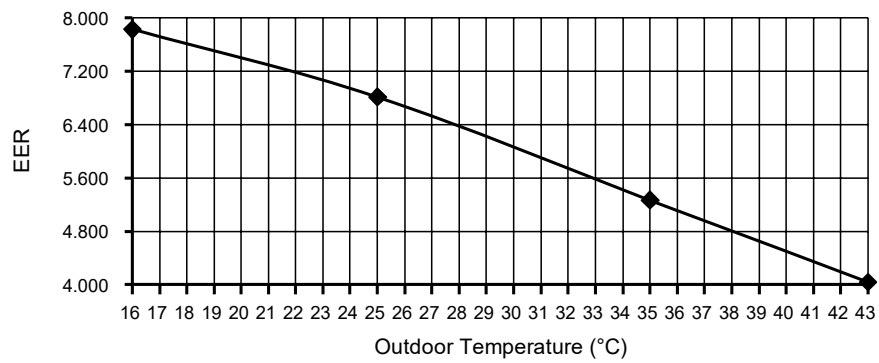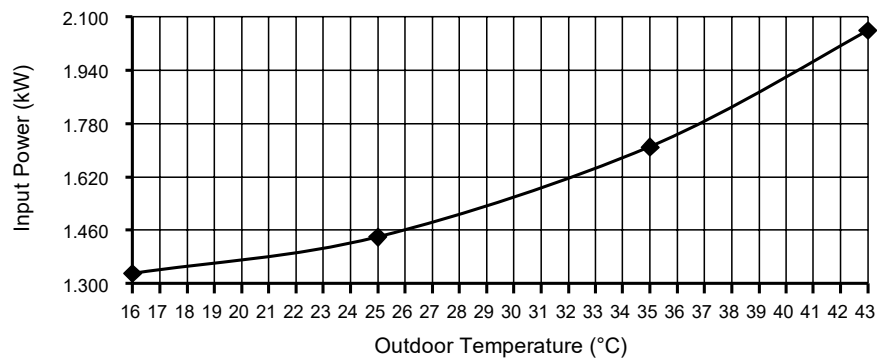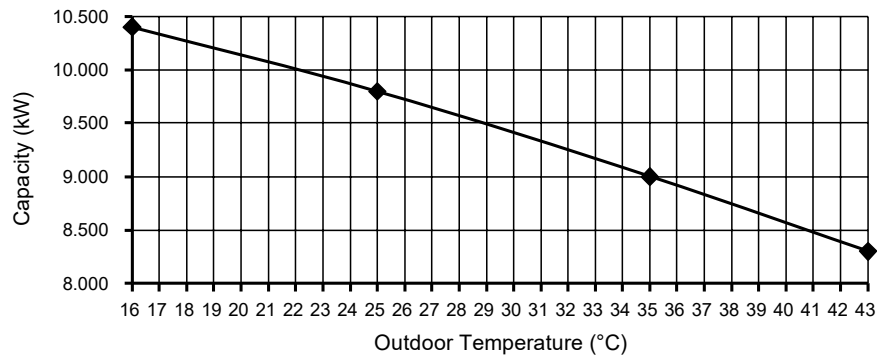

## 20.1.2 WH-WDG12ME8





### Heating Characteristics at Different Outdoor Air Temperature

Condition

Outdoor air temperature : 7°C (DBT), 6°C (WBT)

Indoor water inlet temperature : 30°C

Indoor water outlet temperature : 35°C

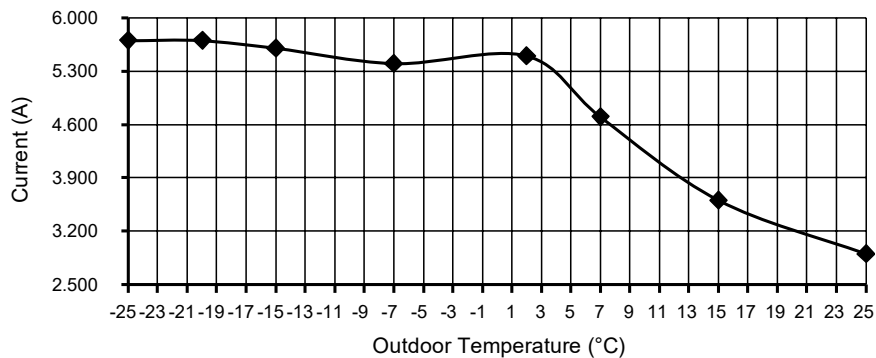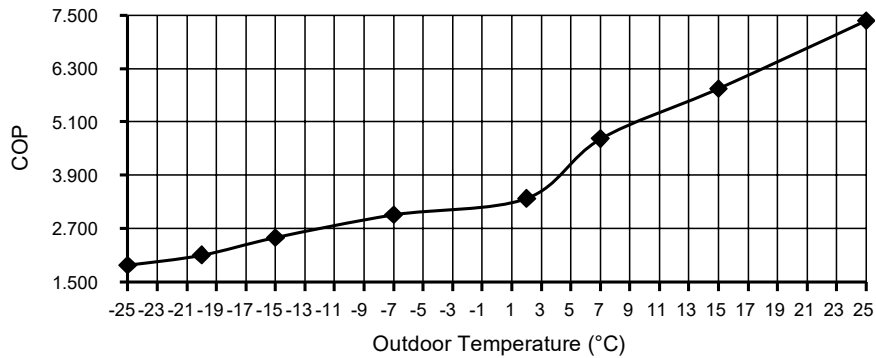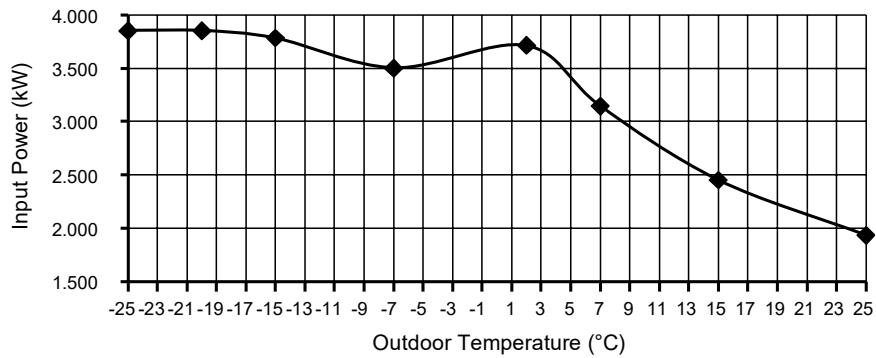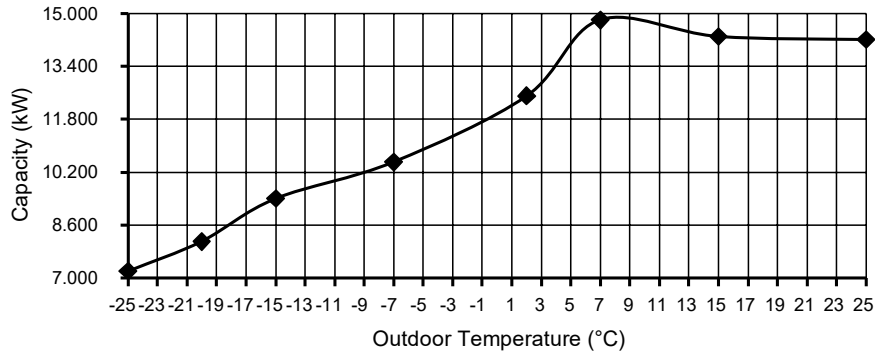





## Cooling Characteristics at Different Outdoor Air Temperature

Condition

Outdoor air temperature : 35°C (DBT), -°C (WBT)

Indoor water inlet temperature : 12°C

Indoor water outlet temperature : 7°C

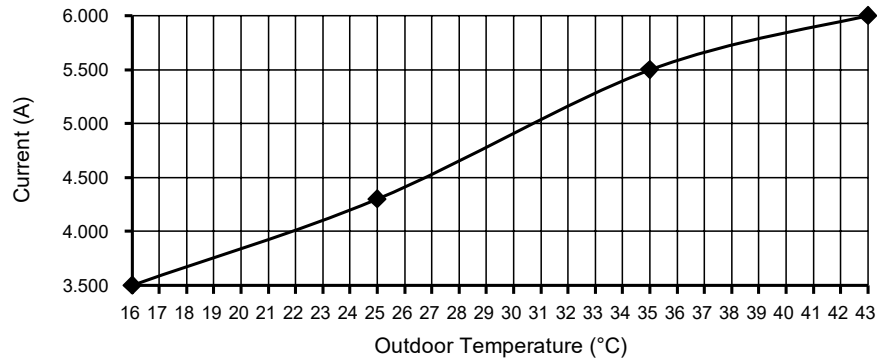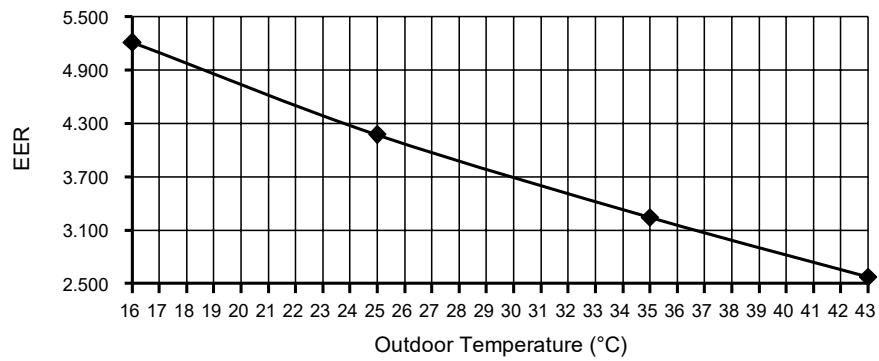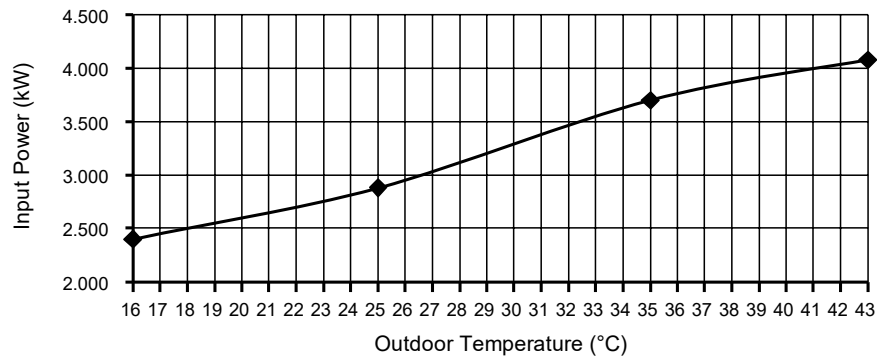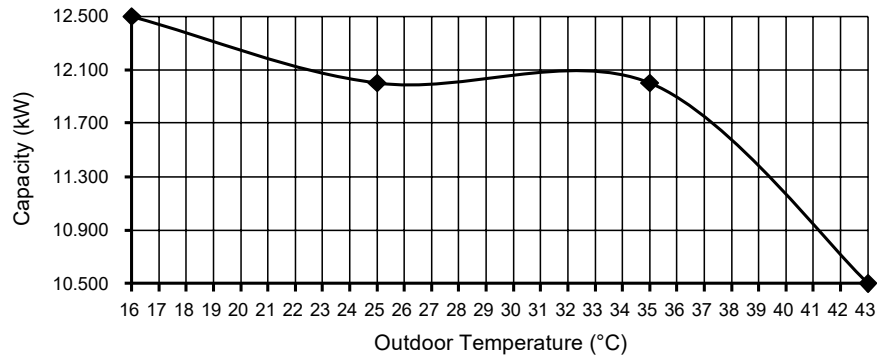





## Cooling Characteristics at Different Outdoor Air Temperature

Condition

Outdoor air temperature : 35°C (DBT), -°C (WBT)

Indoor water inlet temperature : 19°C

Indoor water outlet temperature : 14°C

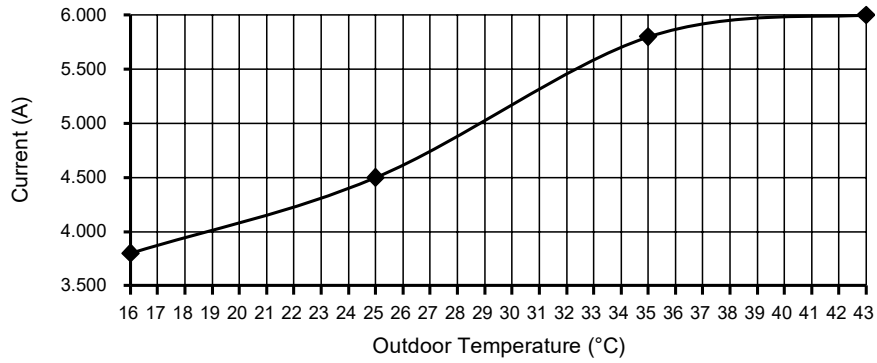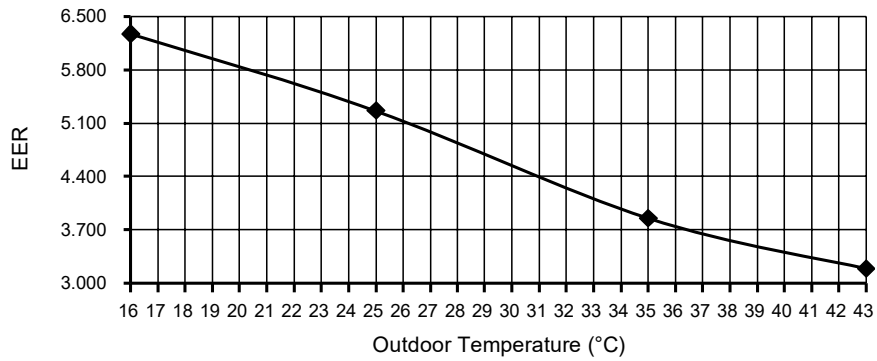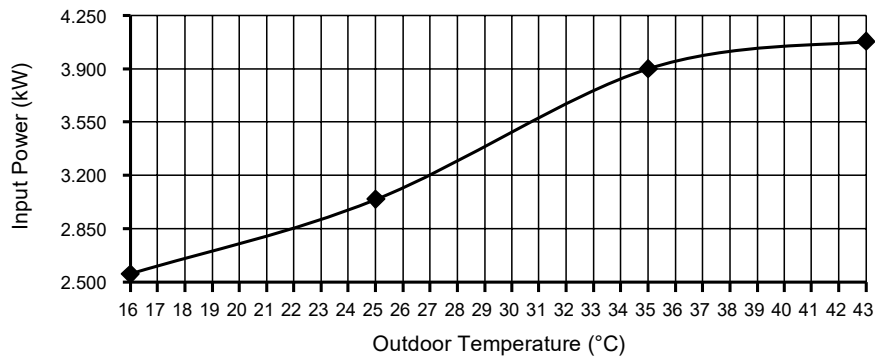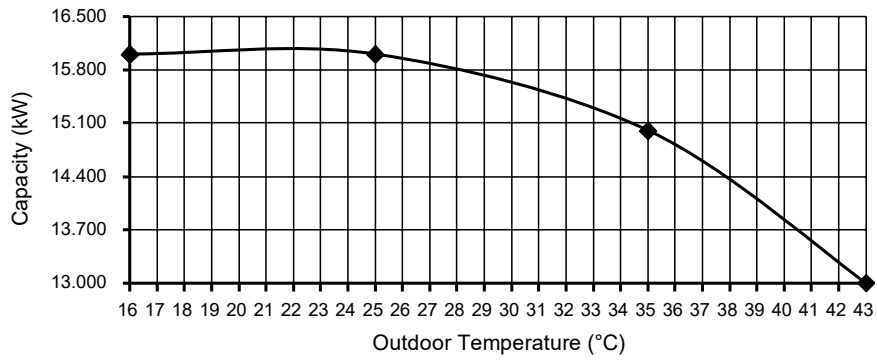





## Cooling Characteristics at Different Outdoor Air Temperature

Condition

Outdoor air temperature : 35°C (DBT), -°C (WBT)

Indoor water inlet temperature : 23°C

Indoor water outlet temperature : 18°C

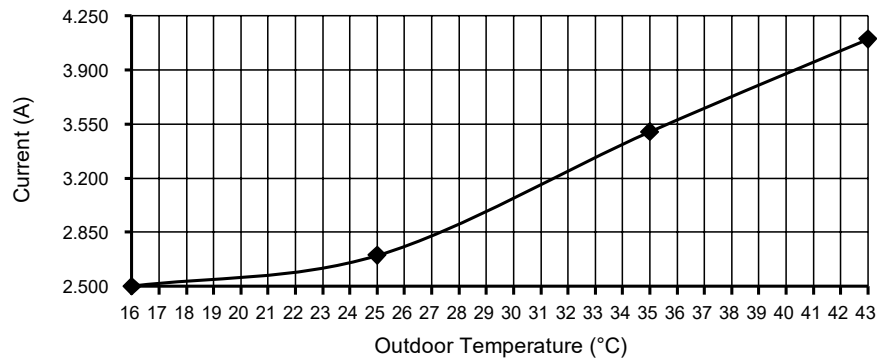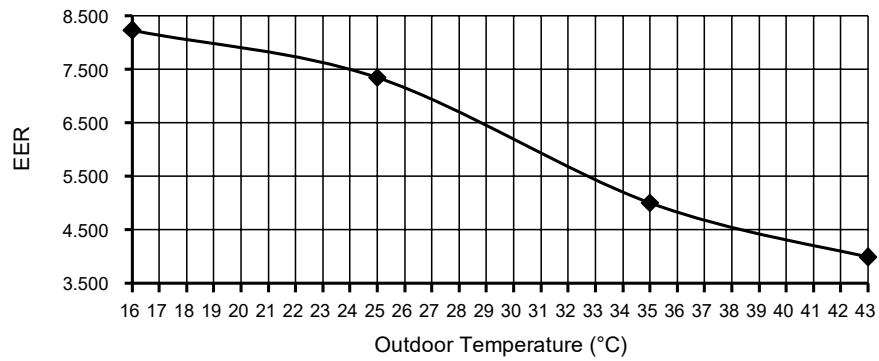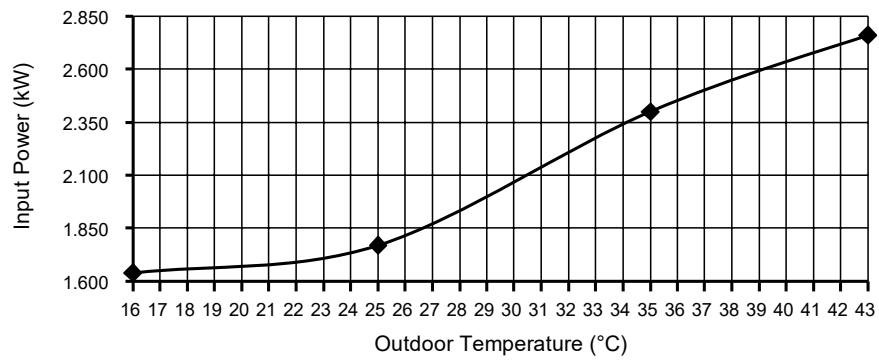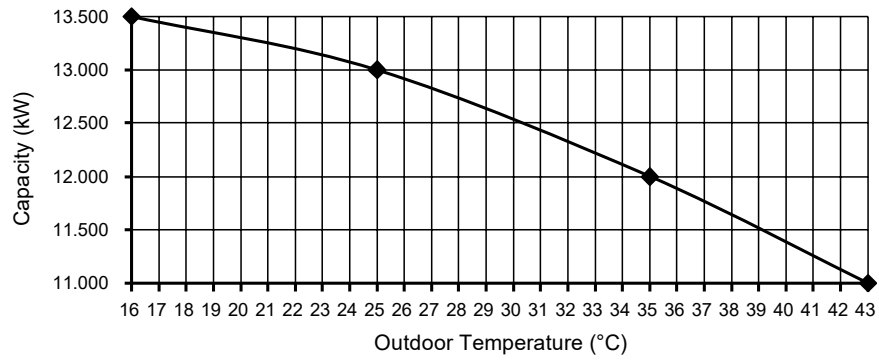

### 20.1.3 WH-WDG16ME8





#### Heating Characteristics at Different Outdoor Air Temperature

Condition

Outdoor air temperature : 7°C (DBT), 6°C (WBT)

Indoor water inlet temperature : 30°C

Indoor water outlet temperature : 35°C

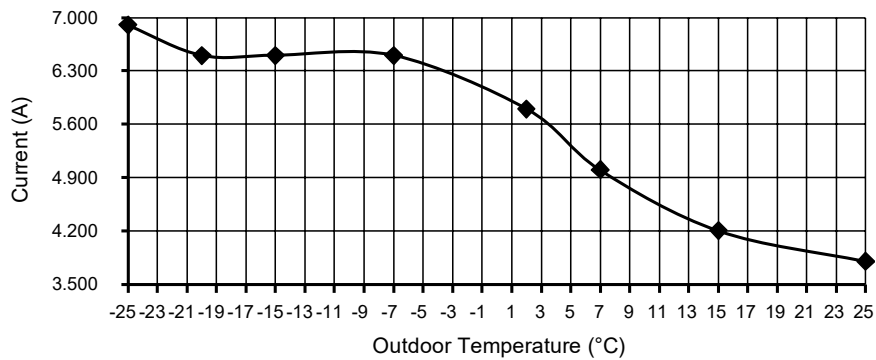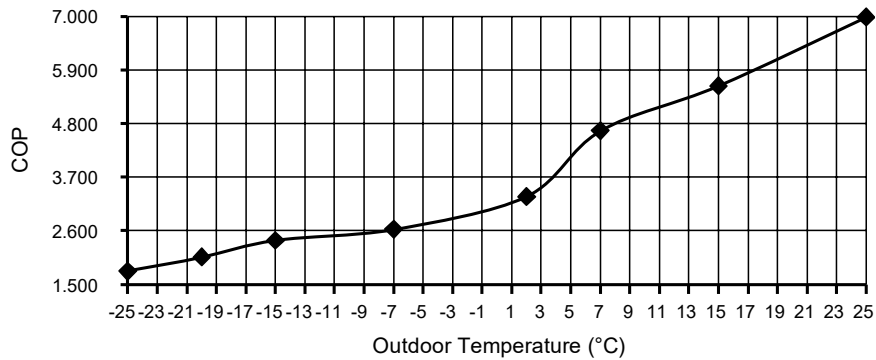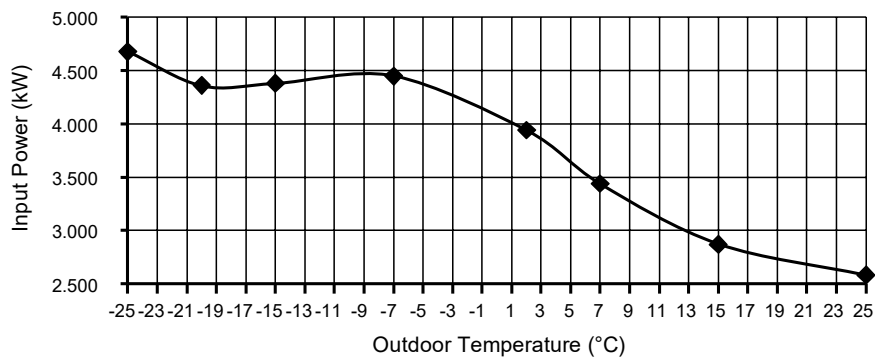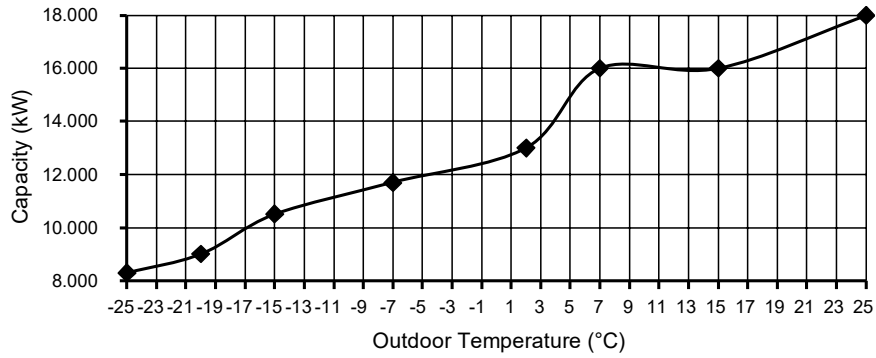





## Cooling Characteristics at Different Outdoor Air Temperature

Condition

Outdoor air temperature : 35°C (DBT), -°C (WBT)

Indoor water inlet temperature : 12°C

Indoor water outlet temperature : 7°C

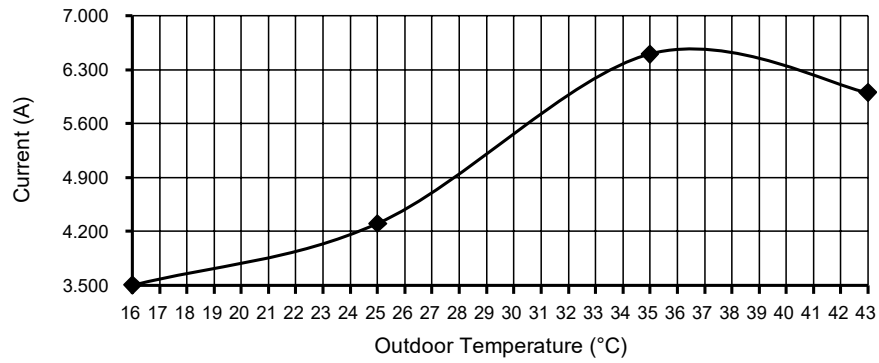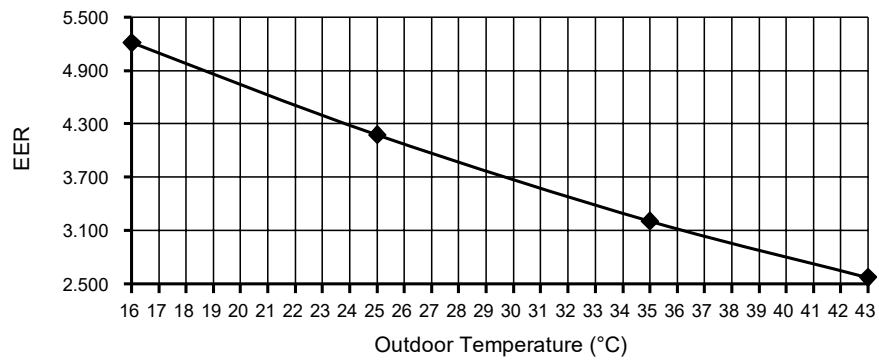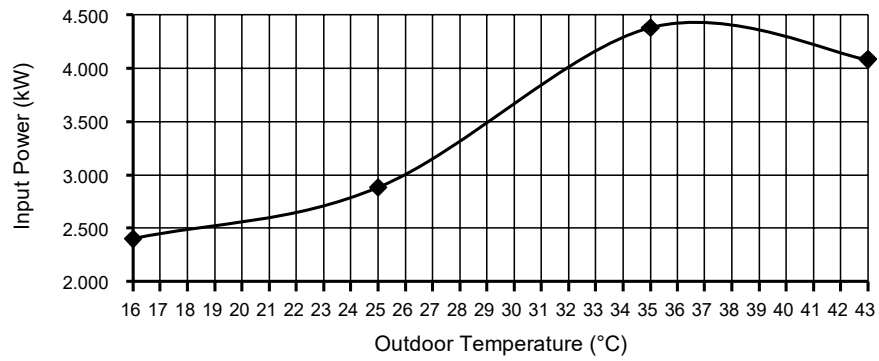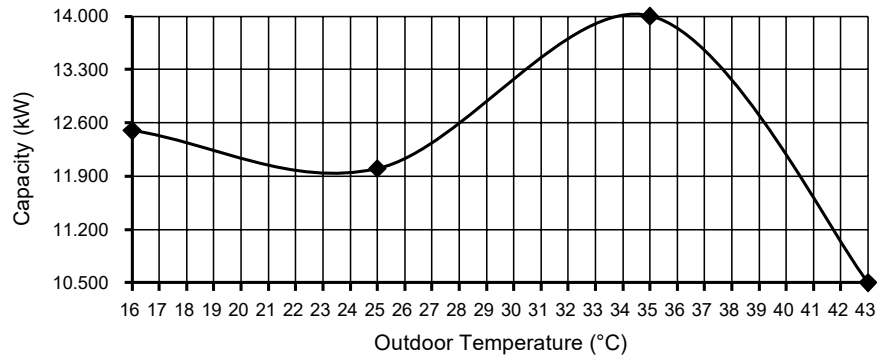





## Cooling Characteristics at Different Outdoor Air Temperature

Condition

Outdoor air temperature : 35°C (DBT), -°C (WBT)

Indoor water inlet temperature : 19°C

Indoor water outlet temperature : 14°C

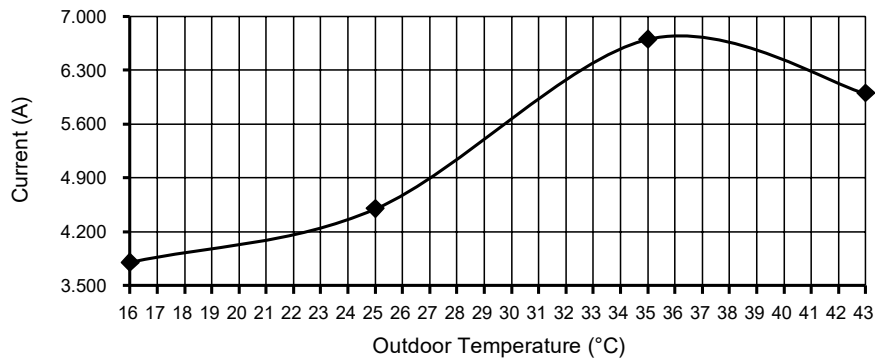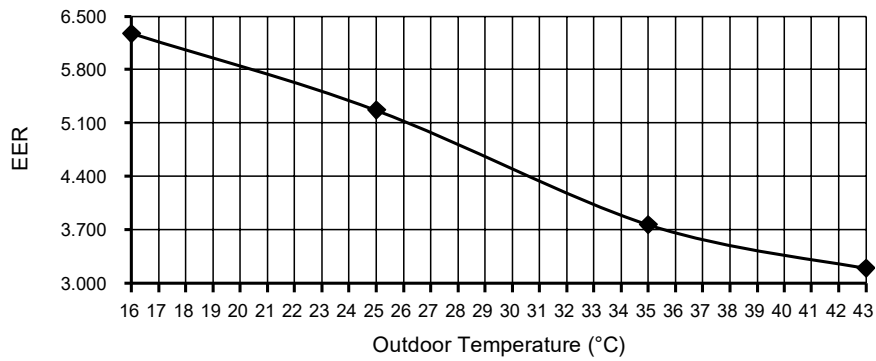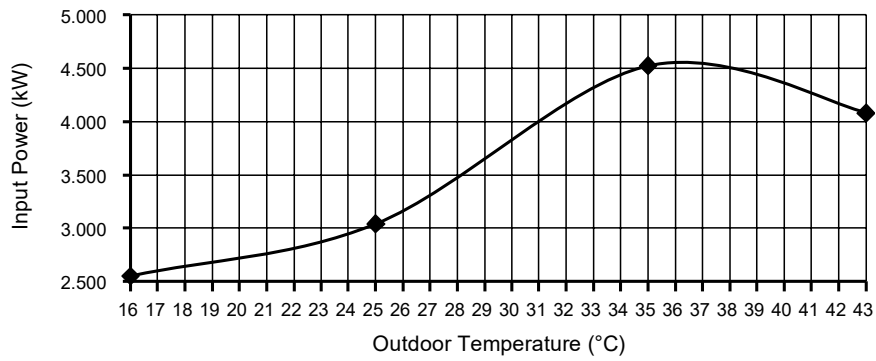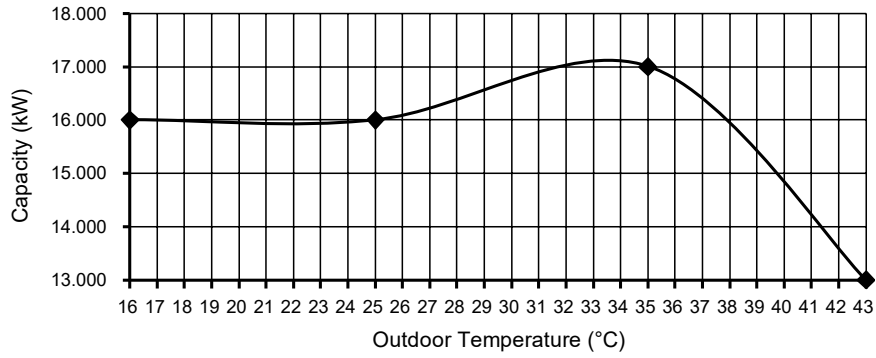





## Cooling Characteristics at Different Outdoor Air Temperature

Condition

Outdoor air temperature : 35°C (DBT), -°C (WBT)

Indoor water inlet temperature : 23°C

Indoor water outlet temperature : 18°C

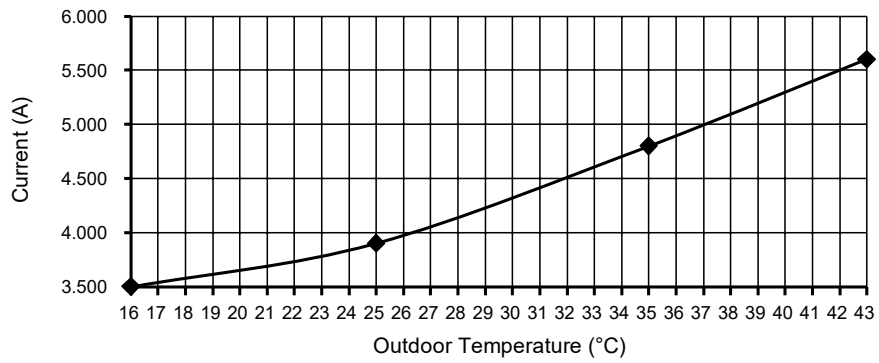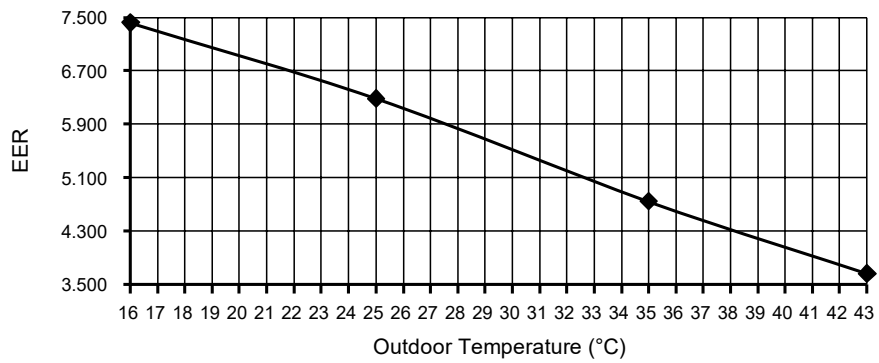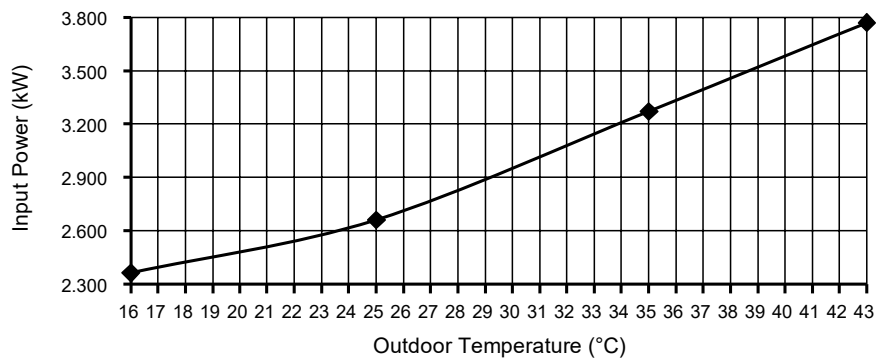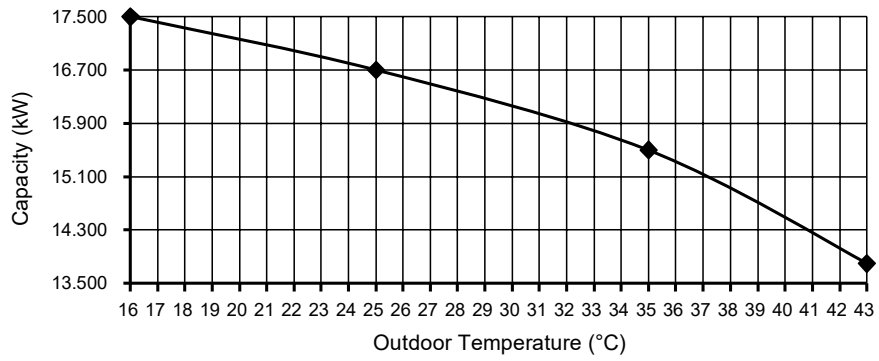

## 20.2 Heating Capacity Table

### 20.2.1 WH-WDG09ME8

Rating Frequency

Water Out (°C)	25				35				45			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	6400	2830	2.26	4.20	6050	3280	1.84	4.80	6150	4150	1.48	6.10
-20	7400	2780	2.66	4.10	7100	3250	2.18	4.80	7050	4050	1.74	5.90
-15	8400	2790	3.01	4.20	8150	3280	2.48	4.80	8150	4100	1.99	6.00
-7	8550	2460	3.48	3.70	9000	2850	3.16	4.20	9000	3500	2.57	5.20
2	8850	2050	4.32	3.20	9000	2360	3.81	3.60	9000	2910	3.09	4.40
7	9000	1420	6.34	2.20	9000	1760	5.10	2.70	9000	2340	3.85	3.50
15	9000	1130	7.96	1.80	9000	1400	6.43	2.20	9000	2010	4.48	3.00
25	6800	900	7.56	1.50	9000	1080	8.33	1.80	9000	1550	5.81	2.40

Water Out (°C)	55				65				70			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	6300	5030	1.25	7.40	-	-	-	-	-	-	-	-
-20	7150	4940	1.45	7.20	7100	6050	1.17	8.80	-	-	-	-
-15	8200	5080	1.61	7.40	8250	6210	1.33	9.10	7500	6400	1.17	9.50
-7	9000	4350	2.07	6.40	9000	5390	1.67	7.90	9000	6110	1.47	8.90
2	9000	3570	2.52	5.40	9000	4770	1.89	7.00	9000	5390	1.67	7.90
7	9000	2900	3.10	4.30	9000	3760	2.39	5.60	9000	4230	2.13	6.20
15	9000	2550	3.53	3.80	9000	3310	2.72	5.00	9000	3880	2.32	5.70
25	9600	2140	4.49	3.20	9000	2770	3.25	4.20	9000	3170	2.84	4.80

Water Out (°C)	75			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	-	-	-	-
-20	-	-	-	-
-15	6400	6200	1.03	9.20
-7	7900	6400	1.23	9.50
2	9000	6070	1.48	8.90
7	9000	4900	1.84	7.20
15	9000	4400	2.05	6.40
25	9000	3790	2.37	5.60

## Minimum Frequency

Water Out (°C)	25				35				45			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	4700	2010	2.34	3.0	4500	2380	1.89	3.5	4350	2830	1.54	4.2
-20	5500	2020	2.72	3.0	5300	2390	2.22	3.5	5100	2840	1.80	4.2
-15	6150	2000	3.08	3.0	5950	2370	2.51	3.5	5800	2820	2.06	4.2
-7	5600	1470	3.81	2.2	5400	1750	3.09	2.6	5200	2110	2.46	3.1
2	4350	890	4.89	1.5	4150	1100	3.77	1.7	3950	1320	2.99	2.0
7	5000	790	6.33	1.3	4800	1020	4.71	1.6	4700	1270	3.70	2.0
15	6000	650	9.23	1.1	5800	960	6.04	1.5	5600	1250	4.48	1.9
25	5450	760	7.17	1.3	6950	880	7.90	1.4	6750	1220	5.53	1.9

Water Out (°C)	55				65				70			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	5200	4060	1.28	6.0	-	-	-	-	-	-	-	-
-20	6150	4060	1.51	6.0	5800	5000	1.16	7.4	-	-	-	-
-15	6150	3530	1.74	5.2	5850	4250	1.38	6.3	5700	4650	1.23	6.9
-7	5600	2700	2.07	4.0	5350	3300	1.62	4.9	5300	3650	1.45	5.4
2	5800	2300	2.52	3.4	5450	2810	1.94	4.2	5350	3070	1.74	4.5
7	6700	2180	3.07	3.2	6500	2700	2.41	4.0	6400	2970	2.15	4.4
15	8000	2160	3.70	3.2	7600	2650	2.87	3.9	7350	2980	2.47	4.4
25	9600	2140	4.49	3.2	8900	2620	3.40	3.9	8500	3010	2.82	4.5

Water Out (°C)	75			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	-	-	-	-
-20	-	-	-	-
-15	5500	5150	1.07	7.6
-7	5100	4050	1.26	6.0
2	5150	3430	1.50	5.1
7	6200	3310	1.87	4.9
15	7150	3330	2.15	4.9
25	8300	3350	2.48	5.0

## 20.2.2 WH-WDG12ME8

### Rating Frequency

Water Out (°C)	25				35				45			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	7300	3170	2.30	4.7	7200	3850	1.87	5.7	7100	4680	1.52	6.9
-20	8300	3170	2.62	4.7	8100	3850	2.10	5.7	7800	4490	1.74	6.6
-15	9700	3200	3.03	4.8	9400	3780	2.49	5.6	9000	4440	2.03	6.6
-7	10000	2900	3.45	4.3	10500	3500	3.00	5.4	10200	4430	2.30	6.6
2	11500	2980	3.86	4.4	12500	3710	3.37	5.5	12000	4350	2.76	6.4
7	14800	2640	5.61	3.9	14800	3140	4.71	4.7	14200	3880	3.66	5.7
15	14600	1880	7.77	2.8	14300	2450	5.84	3.6	13600	3080	4.42	4.6
25	12000	1430	8.39	2.2	14200	1930	7.36	2.9	13500	2460	5.49	3.6

Water Out (°C)	55				65				70			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	7100	5680	1.25	8.4	-	-	-	-	-	-	-	-
-20	7800	5210	1.50	7.7	7350	6400	1.15	9.5	-	-	-	-
-15	8800	5200	1.69	7.7	8600	6400	1.34	9.5	7500	6400	1.17	9.5
-7	10000	5080	1.97	7.5	9800	6400	1.53	9.5	9100	6400	1.42	9.5
2	12000	5290	2.27	7.8	11000	6200	1.77	9.2	10200	6200	1.65	9.2
7	14100	4670	3.02	6.9	12900	5560	2.32	8.2	12600	6100	2.07	9.1
15	13000	3590	3.62	5.3	12700	4500	2.82	6.7	12000	4900	2.45	7.2
25	13100	3100	4.23	4.6	13000	3880	3.35	5.7	12000	4450	2.70	6.6

Water Out (°C)	75			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	-	-	-	-
-20	-	-	-	-
-15	6400	6200	1.03	9.2
-7	7900	6400	1.23	9.5
2	9000	6200	1.45	9.2
7	11000	6400	1.72	9.5
15	11000	5500	2.00	8.1
25	12000	4900	2.45	7.2

## Minimum Frequency

Water Out (°C)	25				35				45			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	4700	2010	2.34	3.0	4500	2380	1.89	3.5	4350	2830	1.54	4.2
-20	5500	2020	2.72	3.0	5300	2390	2.22	3.5	5100	2840	1.80	4.2
-15	6150	2000	3.08	3.0	5950	2370	2.51	3.5	5800	2820	2.06	4.2
-7	5600	1470	3.81	2.2	5400	1750	3.09	2.6	5200	2110	2.46	3.1
2	4350	890	4.89	1.5	4150	1100	3.77	1.7	3950	1320	2.99	2.0
7	5000	790	6.33	1.3	4800	1020	4.71	1.6	4700	1270	3.70	2.0
15	6000	650	9.23	1.1	5800	960	6.04	1.5	5600	1250	4.48	1.9
25	5450	760	7.17	1.3	6950	880	7.90	1.4	6750	1220	5.53	1.9

Water Out (°C)	55				65				70			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	5200	4060	1.28	6.0	-	-	-	-	-	-	-	-
-20	6150	4060	1.51	6.0	5800	5000	1.16	7.4	-	-	-	-
-15	6150	3530	1.74	5.2	5850	4250	1.38	6.3	5700	4650	1.23	6.9
-7	5600	2700	2.07	4.0	5350	3300	1.62	4.9	5300	3650	1.45	5.4
2	5800	2300	2.52	3.4	5450	2810	1.94	4.2	5350	3070	1.74	4.5
7	6700	2180	3.07	3.2	6500	2700	2.41	4.0	6400	2970	2.15	4.4
15	8000	2160	3.70	3.2	7600	2650	2.87	3.9	7350	2980	2.47	4.4
25	9600	2140	4.49	3.2	8900	2620	3.40	3.9	8500	3010	2.82	4.5

Water Out (°C)	75			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	-	-	-	-
-20	-	-	-	-
-15	5500	5150	1.07	7.6
-7	5100	4050	1.26	6.0
2	5150	3430	1.50	5.1
7	6200	3310	1.87	4.9
15	7150	3330	2.15	4.9
25	8300	3350	2.48	5.0

## 20.2.3 WH-WDG16ME8

### Rating Frequency

Water Out (°C)	25				35				45			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	8500	3830	2.22	5.7	8300	4680	1.77	6.9	7550	5050	1.50	7.5
-20	9150	3520	2.60	5.2	9000	4360	2.06	6.5	8450	4920	1.72	7.3
-15	10600	3530	3.00	5.2	10500	4380	2.40	6.5	9900	4950	2.00	7.3
-7	10700	3310	3.23	4.9	11700	4450	2.63	6.5	11300	5140	2.20	7.6
2	12300	3220	3.82	4.8	13000	3940	3.30	5.8	12200	4450	2.74	6.6
7	15400	2940	5.24	4.3	16000	3440	4.65	5.0	16000	4510	3.55	6.7
15	17000	2240	7.59	3.3	16000	2870	5.57	4.2	16000	3650	4.38	5.4
25	16000	1950	8.21	2.9	18000	2580	6.98	3.8	17400	3340	5.21	4.9

Water Out (°C)	55				65				70			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	7150	5700	1.25	8.4	-	-	-	-	-	-	-	-
-20	8200	5570	1.47	8.2	7350	6400	1.15	9.5	-	-	-	-
-15	9300	5570	1.67	8.2	8600	6400	1.34	9.5	7500	6400	1.17	9.5
-7	10800	5680	1.90	8.4	9800	6400	1.53	9.5	9100	6400	1.42	9.5
2	12000	5290	2.27	7.8	11000	6200	1.77	9.2	10200	6200	1.65	9.2
7	14700	4900	3.00	7.2	14700	6400	2.30	9.5	13200	6400	2.06	9.5
15	16000	4460	3.59	6.5	15400	5500	2.80	8.1	13400	5500	2.44	8.1
25	16800	4030	4.17	6.0	15400	5500	2.80	8.1	14600	5500	2.65	8.1

Water Out (°C)	75			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	-	-	-	-
-20	-	-	-	-
-15	6400	6200	1.03	9.2
-7	7900	6400	1.23	9.5
2	9000	6200	1.45	9.2
7	11000	6400	1.72	9.5
15	11000	5500	2.00	8.1
25	12700	5500	2.31	8.1

## Minimum Frequency

Water Out (°C)	25				35				45			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	4700	2010	2.34	3.0	4500	2380	1.89	3.5	4350	2830	1.54	4.2
-20	5500	2020	2.72	3.0	5300	2390	2.22	3.5	5100	2840	1.80	4.2
-15	6150	2000	3.08	3.0	5950	2370	2.51	3.5	5800	2820	2.06	4.2
-7	5600	1470	3.81	2.2	5400	1750	3.09	2.6	5200	2110	2.46	3.1
2	4350	890	4.89	1.5	4150	1100	3.77	1.7	3950	1320	2.99	2.0
7	5000	790	6.33	1.3	4800	1020	4.71	1.6	4700	1270	3.70	2.0
15	6000	650	9.23	1.1	5800	960	6.04	1.5	5600	1250	4.48	1.9
25	5450	760	7.17	1.3	6950	880	7.90	1.4	6750	1220	5.53	1.9

Water Out (°C)	55				65				70			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	5200	4060	1.28	6.0	-	-	-	-	-	-	-	-
-20	6150	4060	1.51	6.0	5800	5000	1.16	7.4	-	-	-	-
-15	6150	3530	1.74	5.2	5850	4250	1.38	6.3	5700	4650	1.23	6.9
-7	5600	2700	2.07	4.0	5350	3300	1.62	4.9	5300	3650	1.45	5.4
2	5800	2300	2.52	3.4	5450	2810	1.94	4.2	5350	3070	1.74	4.5
7	6700	2180	3.07	3.2	6500	2700	2.41	4.0	6400	2970	2.15	4.4
15	8000	2160	3.70	3.2	7600	2650	2.87	3.9	7350	2980	2.47	4.4
25	9600	2140	4.49	3.2	8900	2620	3.40	3.9	8500	3010	2.82	4.5

Water Out (°C)	75			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	COP	Current (A)
-25	-	-	-	-
-20	-	-	-	-
-15	5500	5150	1.07	7.6
-7	5100	4050	1.26	6.0
2	5150	3430	1.50	5.1
7	6200	3310	1.87	4.9
15	7150	3330	2.15	4.9
25	8300	3350	2.48	5.0

## 20.3 Cooling Capacity Table

### 20.3.1 WH-WDG09ME8

Water Out (°C)	7				14				18			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	EER	Current (A)	Capacity (W)	Input Power (W)	EER	Current (A)	Capacity (W)	Input Power (W)	EER	Current (A)
16	10700	1870	5.72	3.10	13450	1970	6.83	3.30	10400	1330	7.82	2.50
25	10050	2090	4.81	3.40	12850	2130	6.03	3.50	9800	1440	6.81	2.60
35	9000	2490	3.61	3.80	11600	2630	4.41	4.10	9000	1710	5.26	2.80
43	8250	2980	2.77	4.60	10550	3040	3.47	4.80	8300	2060	4.03	3.40

### 20.3.2 WH-WDG12ME8


Water Out (°C)	7				14				18			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	EER	Current (A)	Capacity (W)	Input Power (W)	EER	Current (A)	Capacity (W)	Input Power (W)	EER	Current (A)
16	12500	2400	5.21	3.5	16000	2550	6.27	3.8	13500	1640	8.23	2.5
25	12000	2880	4.17	4.3	16000	3040	5.26	4.5	13000	1770	7.34	2.7
35	12000	3700	3.24	5.5	15000	3900	3.85	5.8	12000	2400	5.00	3.5
43	10500	4080	2.57	6.0	13000	4080	3.19	6.0	11000	2760	3.99	4.1

### 20.3.3 WH-WDG16ME8

Water Out (°C)	7				14				18			
Outdoor Air (°C)	Capacity (W)	Input Power (W)	EER	Current (A)	Capacity (W)	Input Power (W)	EER	Current (A)	Capacity (W)	Input Power (W)	EER	Current (A)
16	12500	2400	5.21	3.5	16000	2550	6.27	3.8	17500	2360	7.42	3.5
25	12000	2880	4.17	4.3	16000	3040	5.26	4.5	16700	2660	6.28	3.9
35	14000	4380	3.20	6.5	17000	4520	3.76	6.7	15500	3270	4.74	4.8
43	10500	4080	2.57	6.0	13000	4080	3.19	6.0	13800	3770	3.66	5.6


# 21. Exploded View and Replacement Parts List

## 21.1 Outdoor Unit

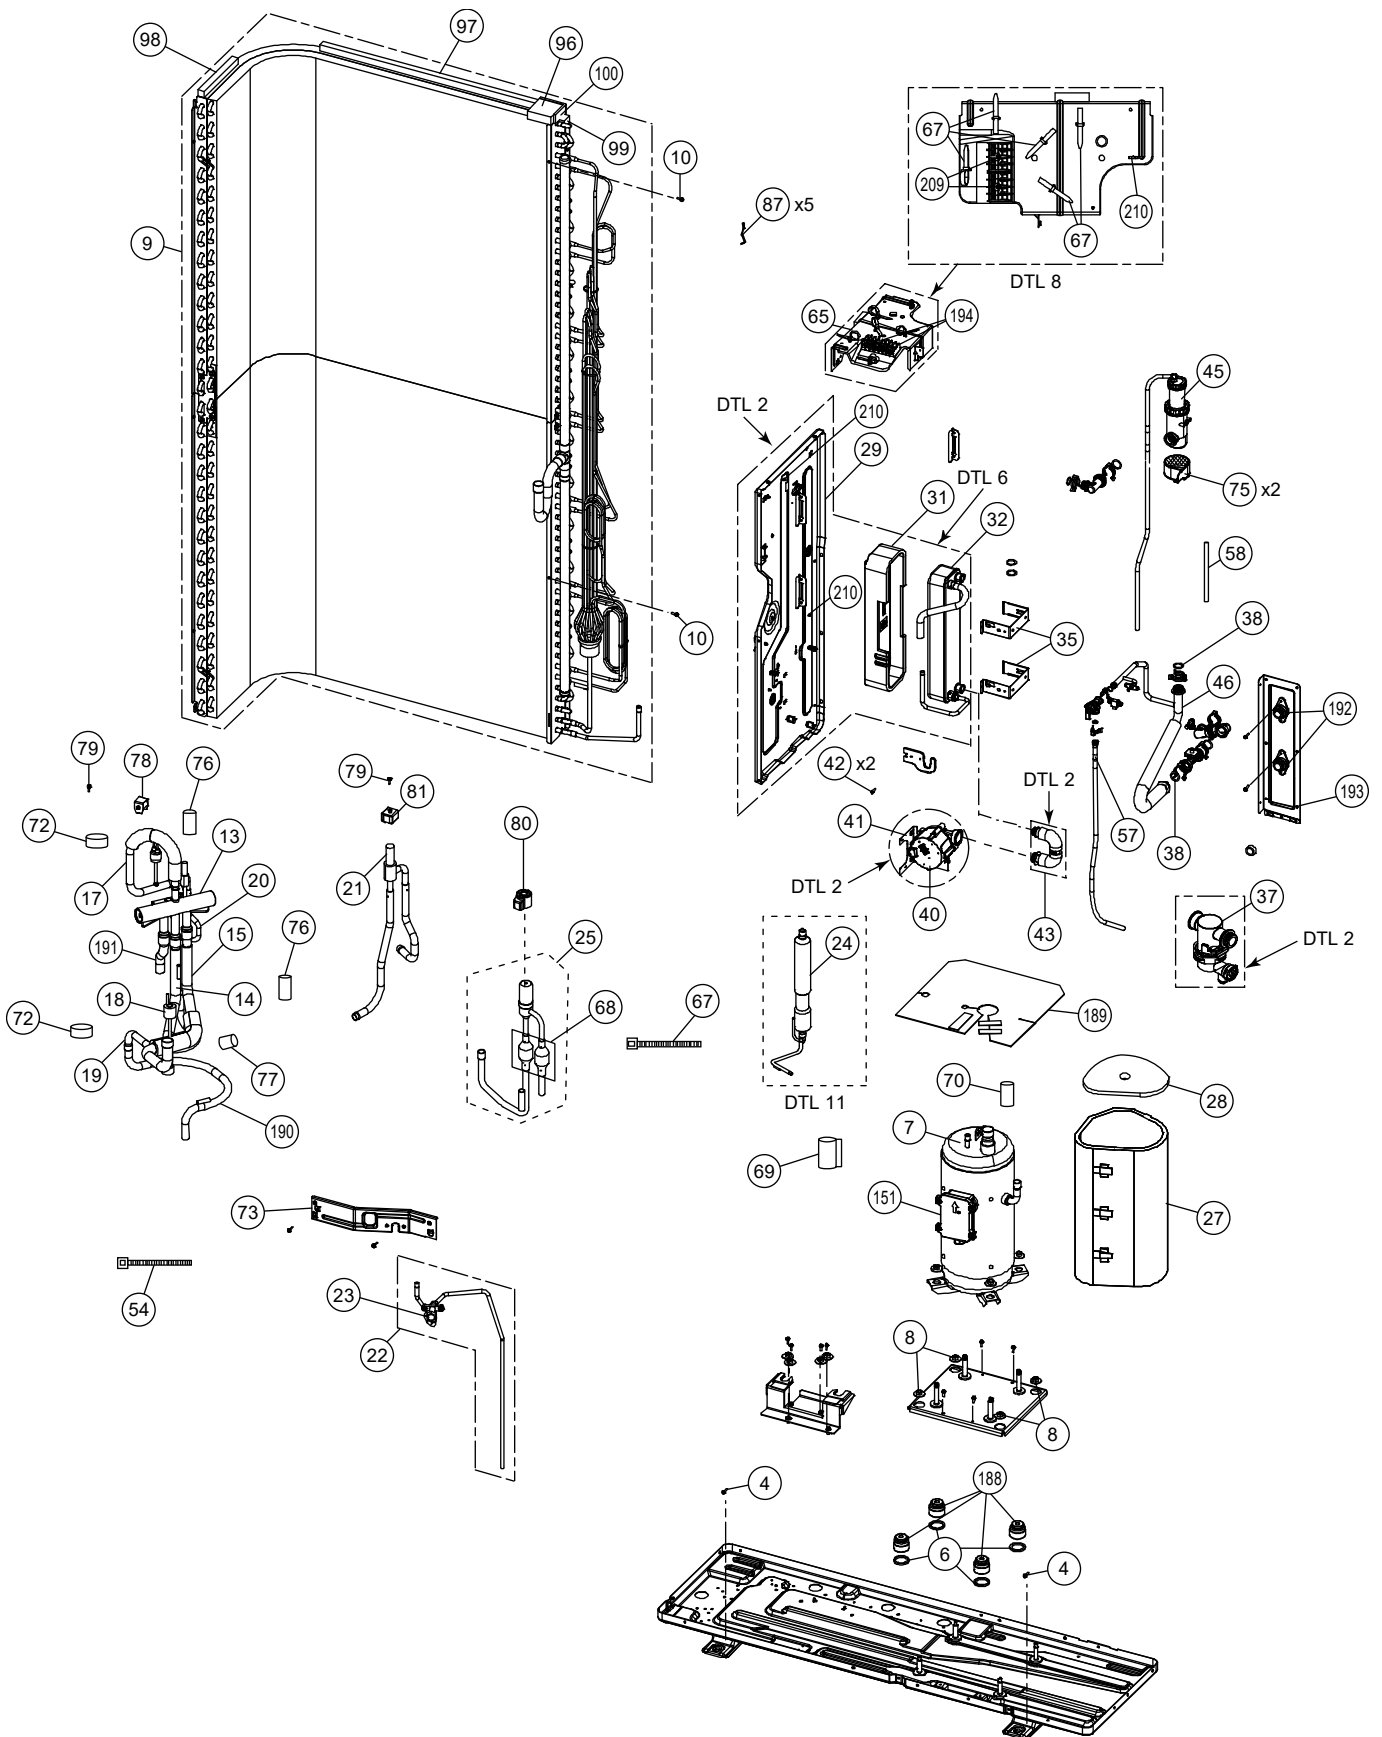


**Note:**

The above exploded view is for the purpose of parts disassembly and replacement. The non-numbered parts are not kept as standard service parts.

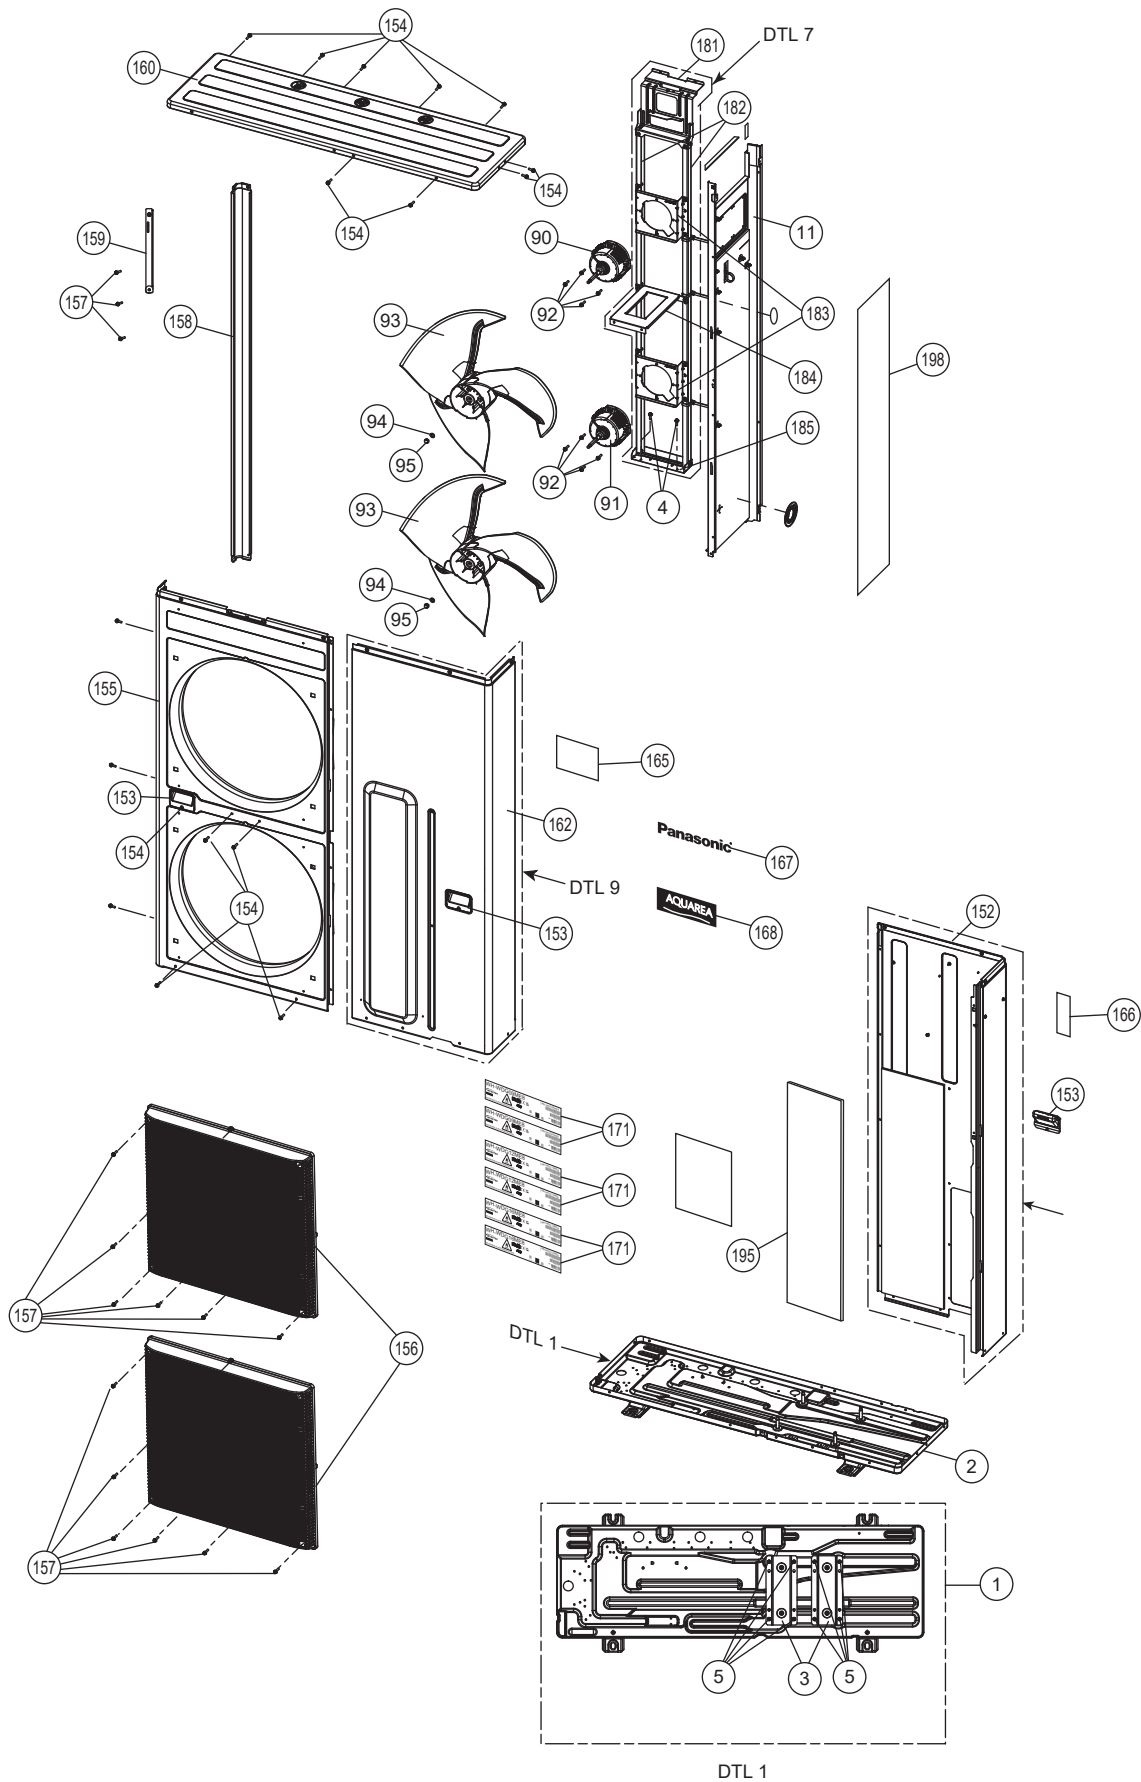


**Note:**  
 The above exploded view is for the purpose of parts disassembly and replacement.  
 The non-numbered parts are not kept as standard service parts.

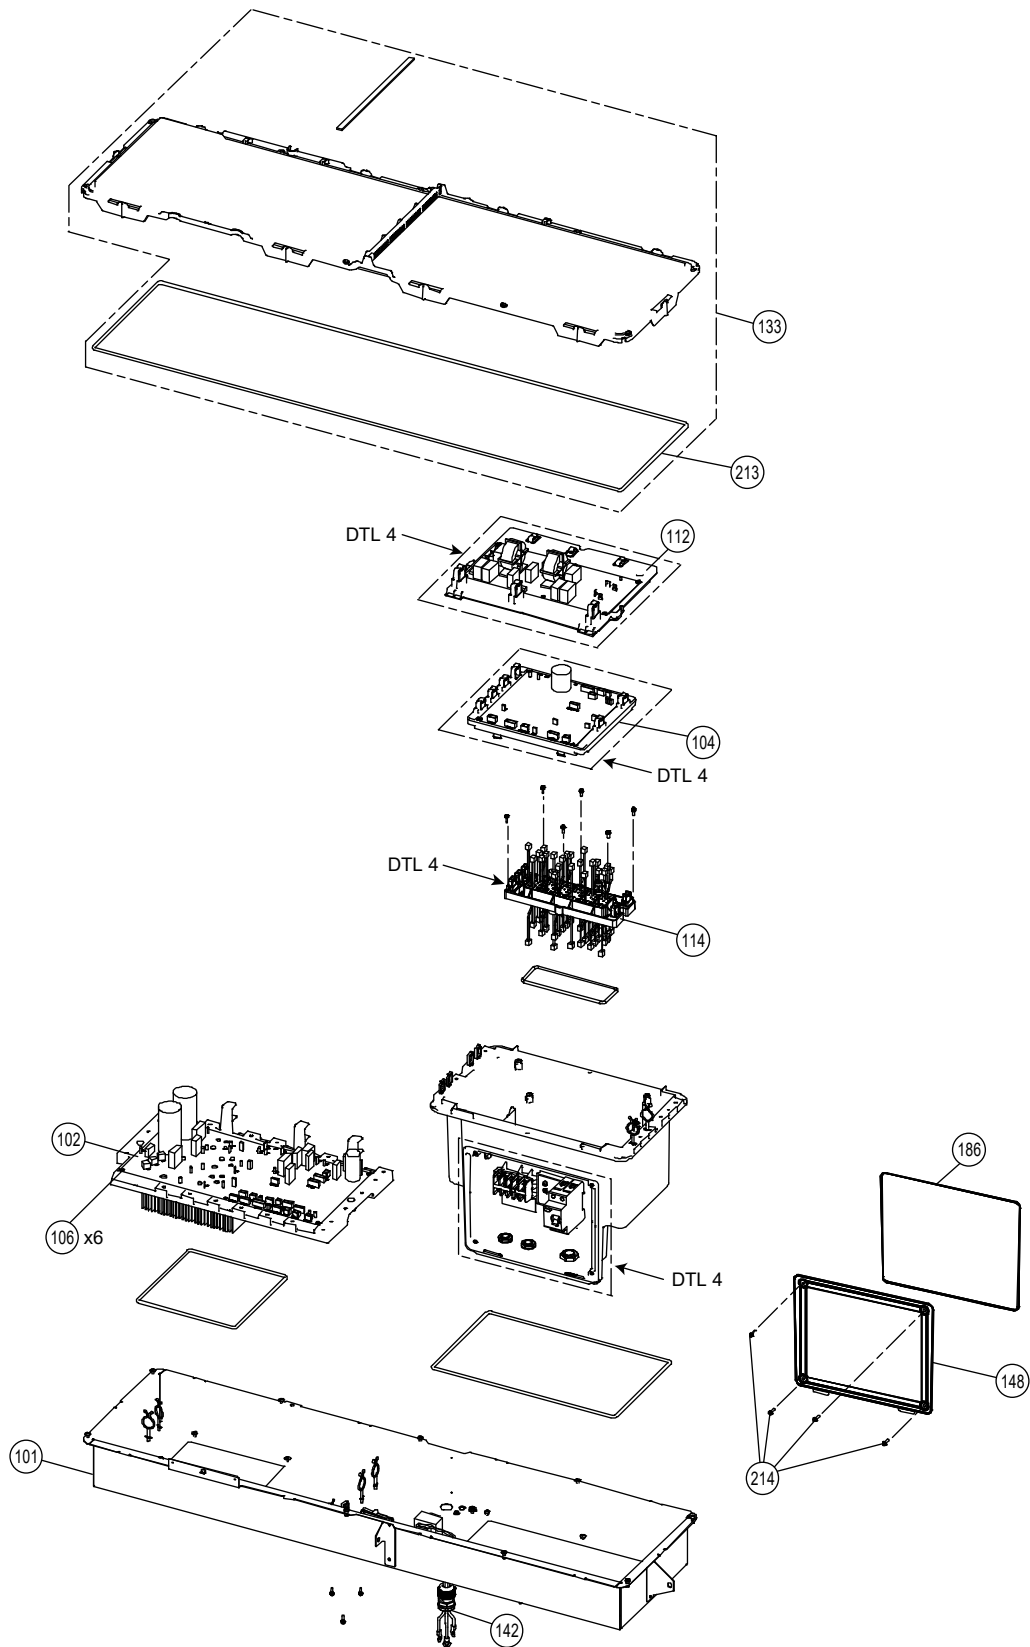


**Note:**

The above exploded view is for the purpose of parts disassembly and replacement. The non-numbered parts are not kept as standard service parts.

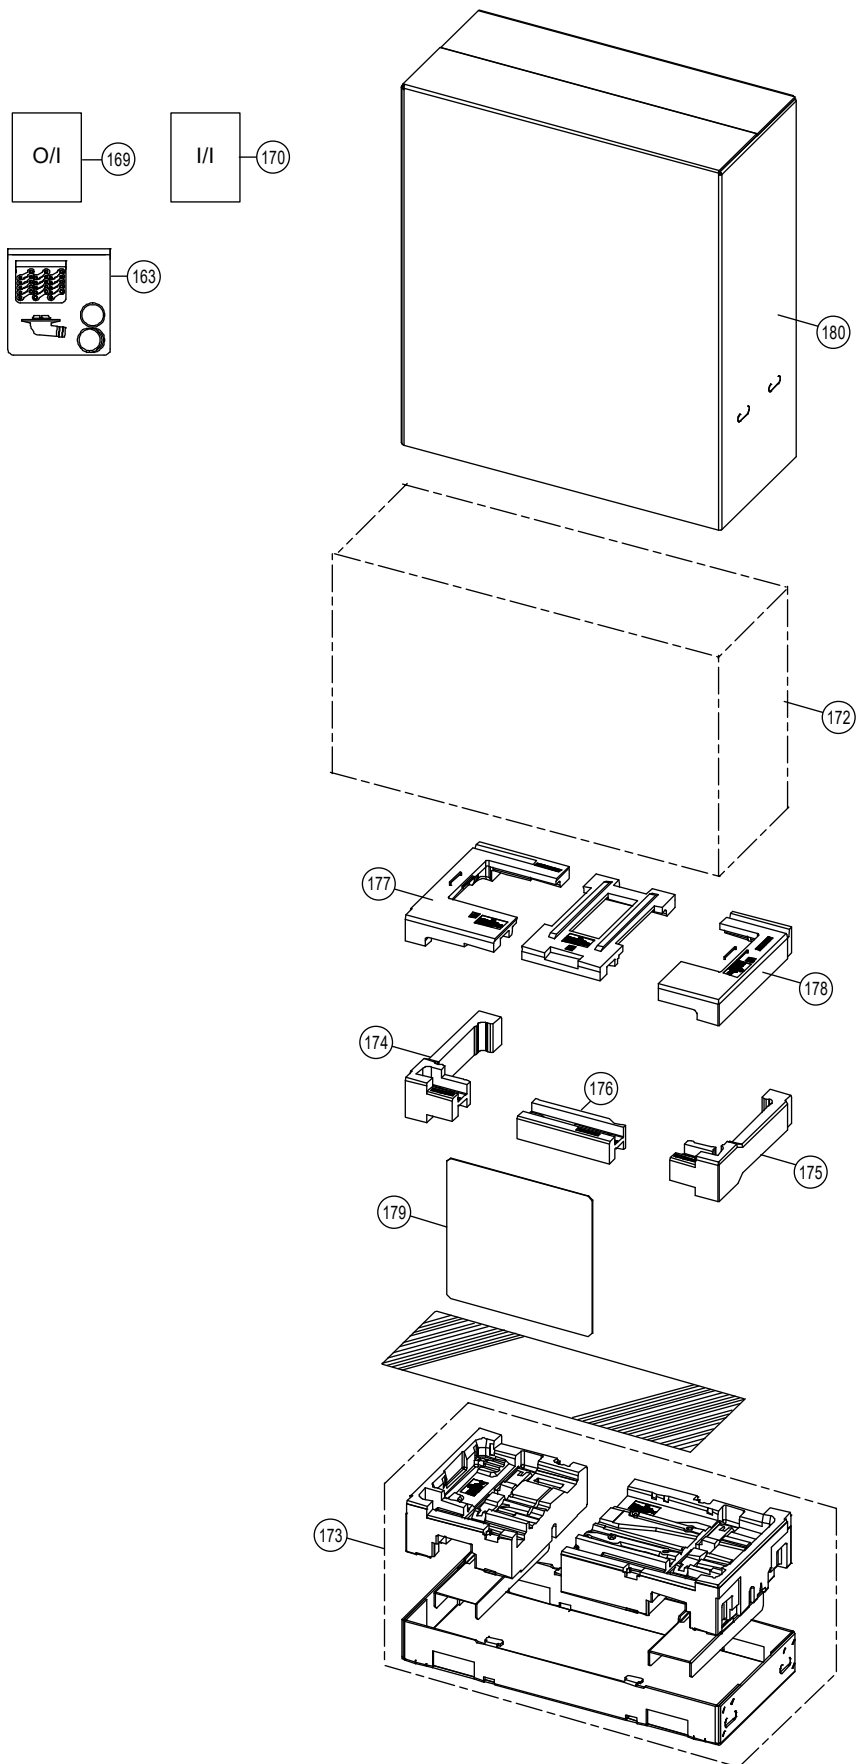


**Note:**




The above exploded view is for the purpose of parts disassembly and replacement. The non-numbered parts are not kept as standard service parts.

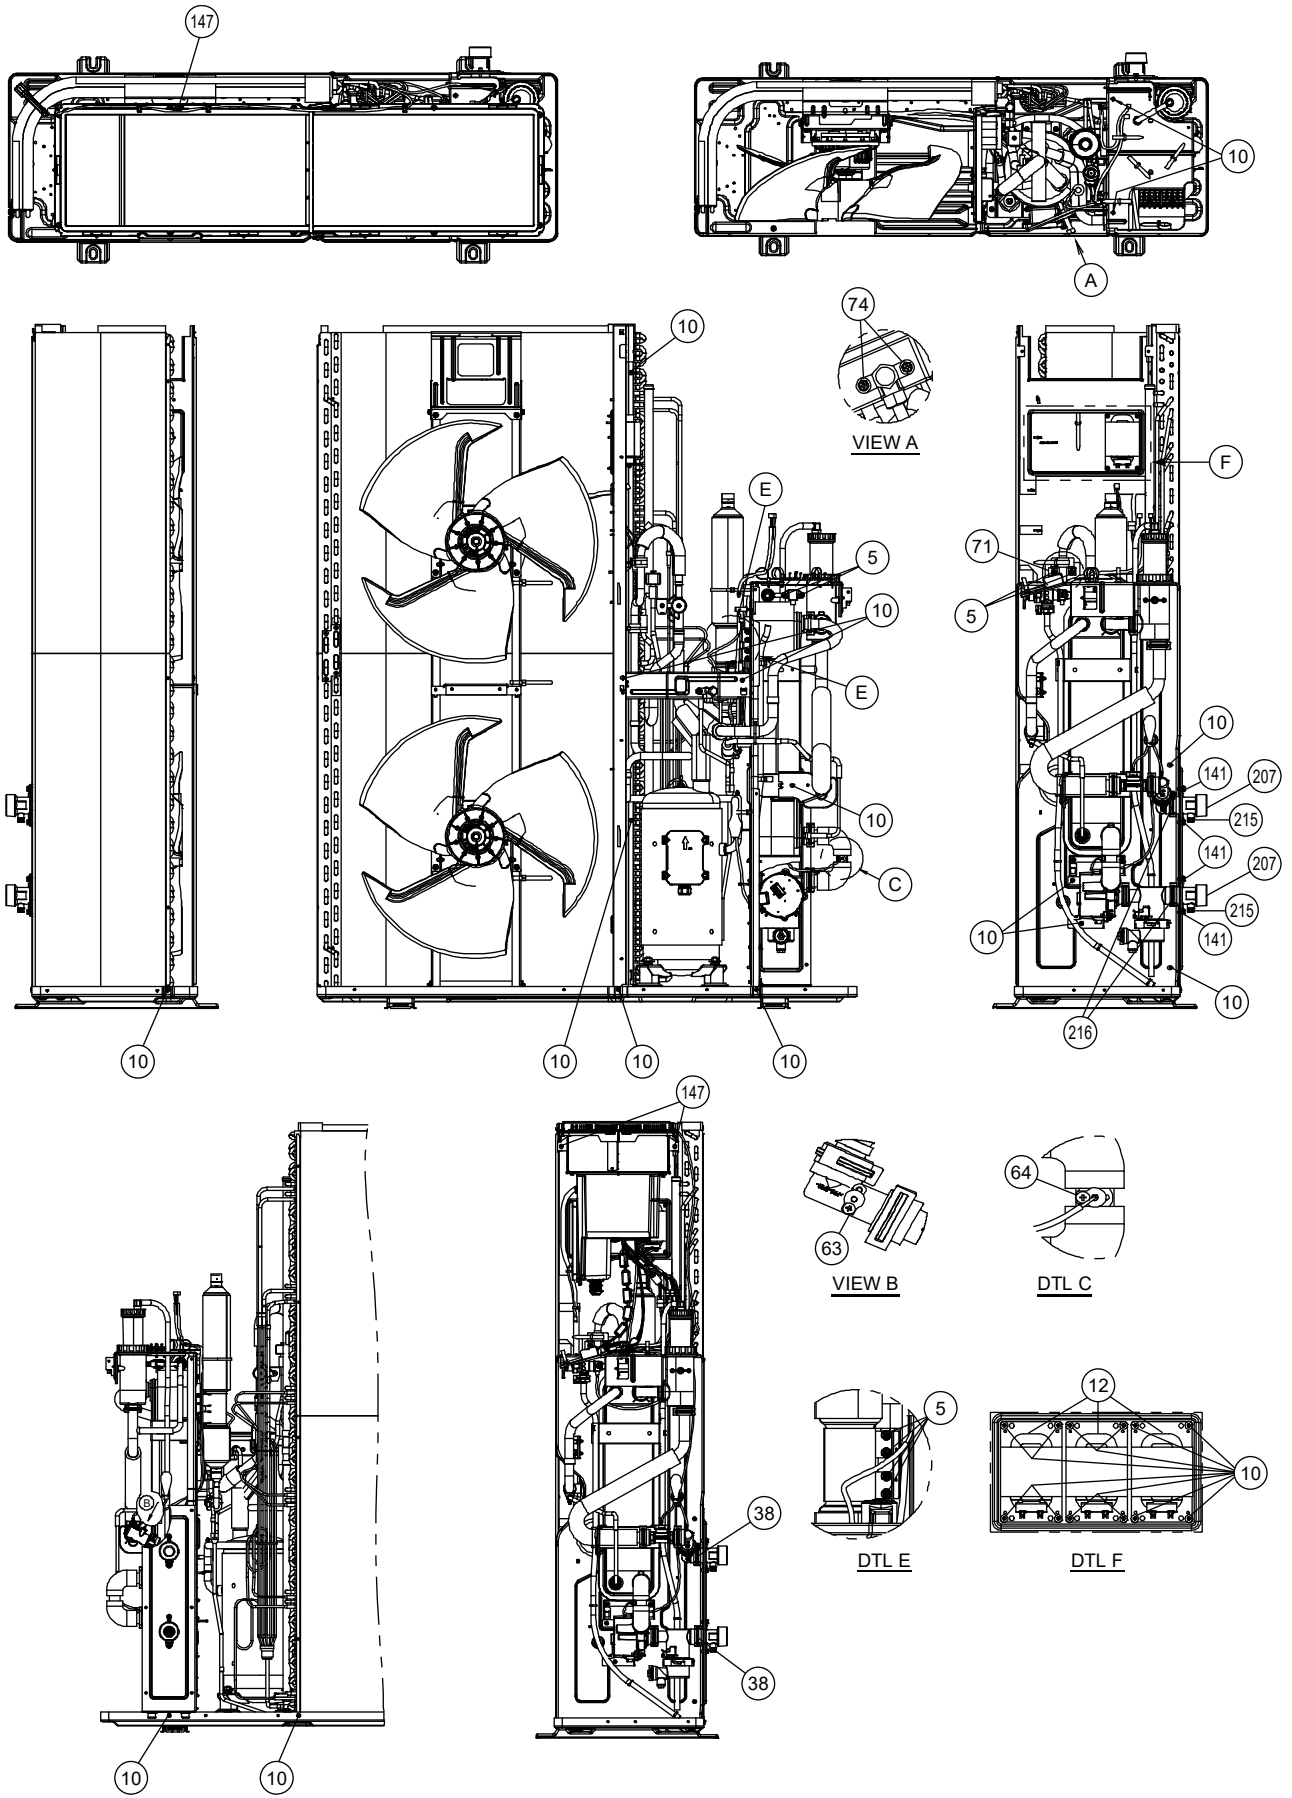

**Note:**  
 The above exploded view is for the purpose of parts disassembly and replacement.  
 The non-numbered parts are not kept as standard service parts.

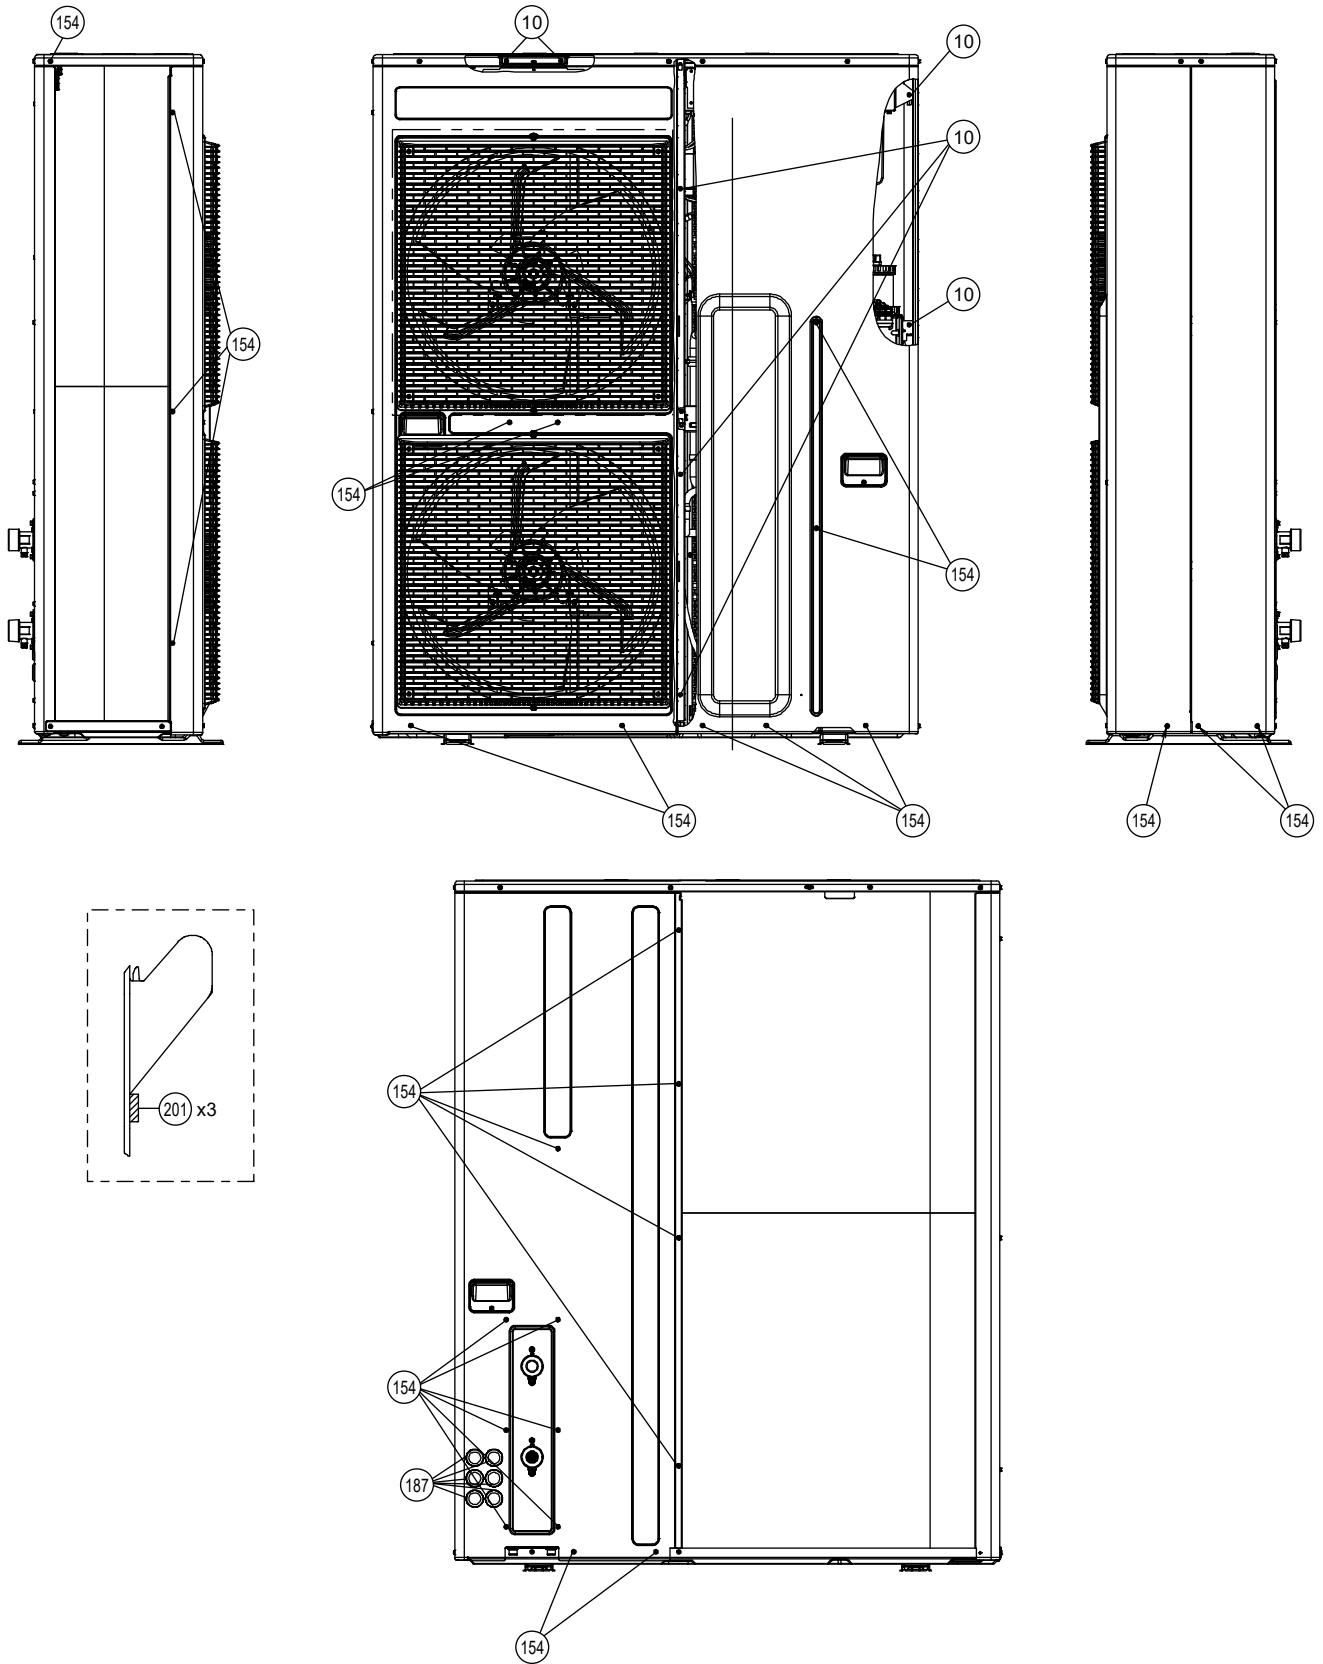


**Note:**  
 The above exploded view is for the purpose of parts disassembly and replacement.  
 The non-numbered parts are not kept as standard service parts.

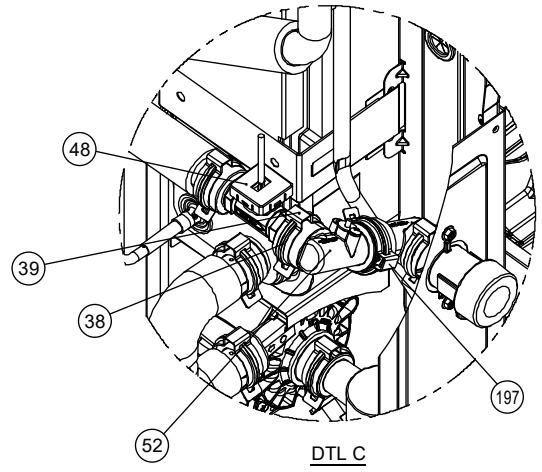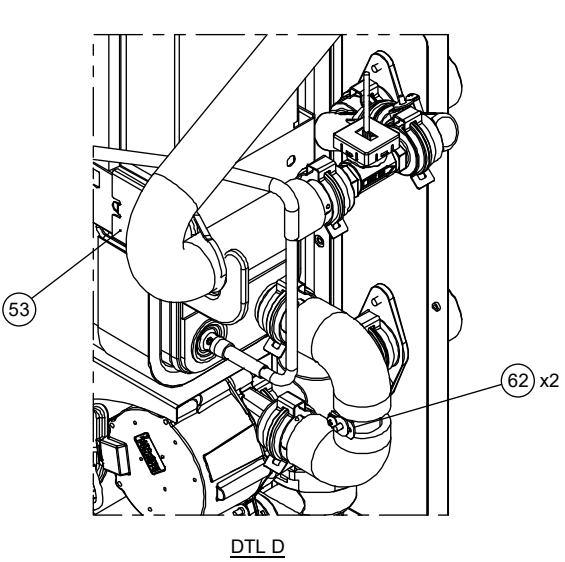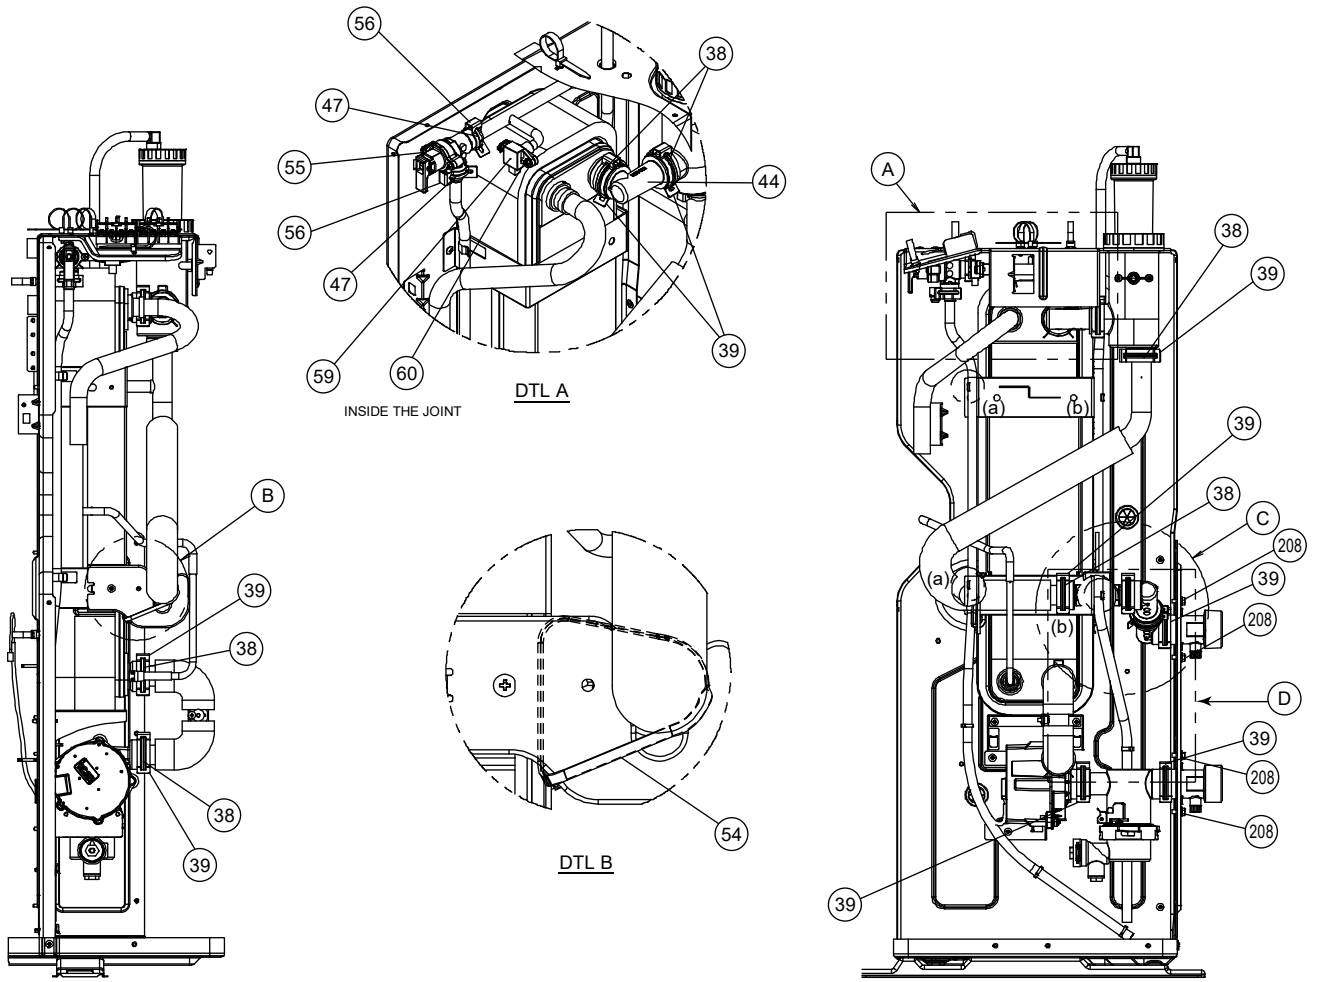


DTL 2

**Note:**  
 The above exploded view is for the purpose of parts disassembly and replacement.  
 The non-numbered parts are not kept as standard service parts.

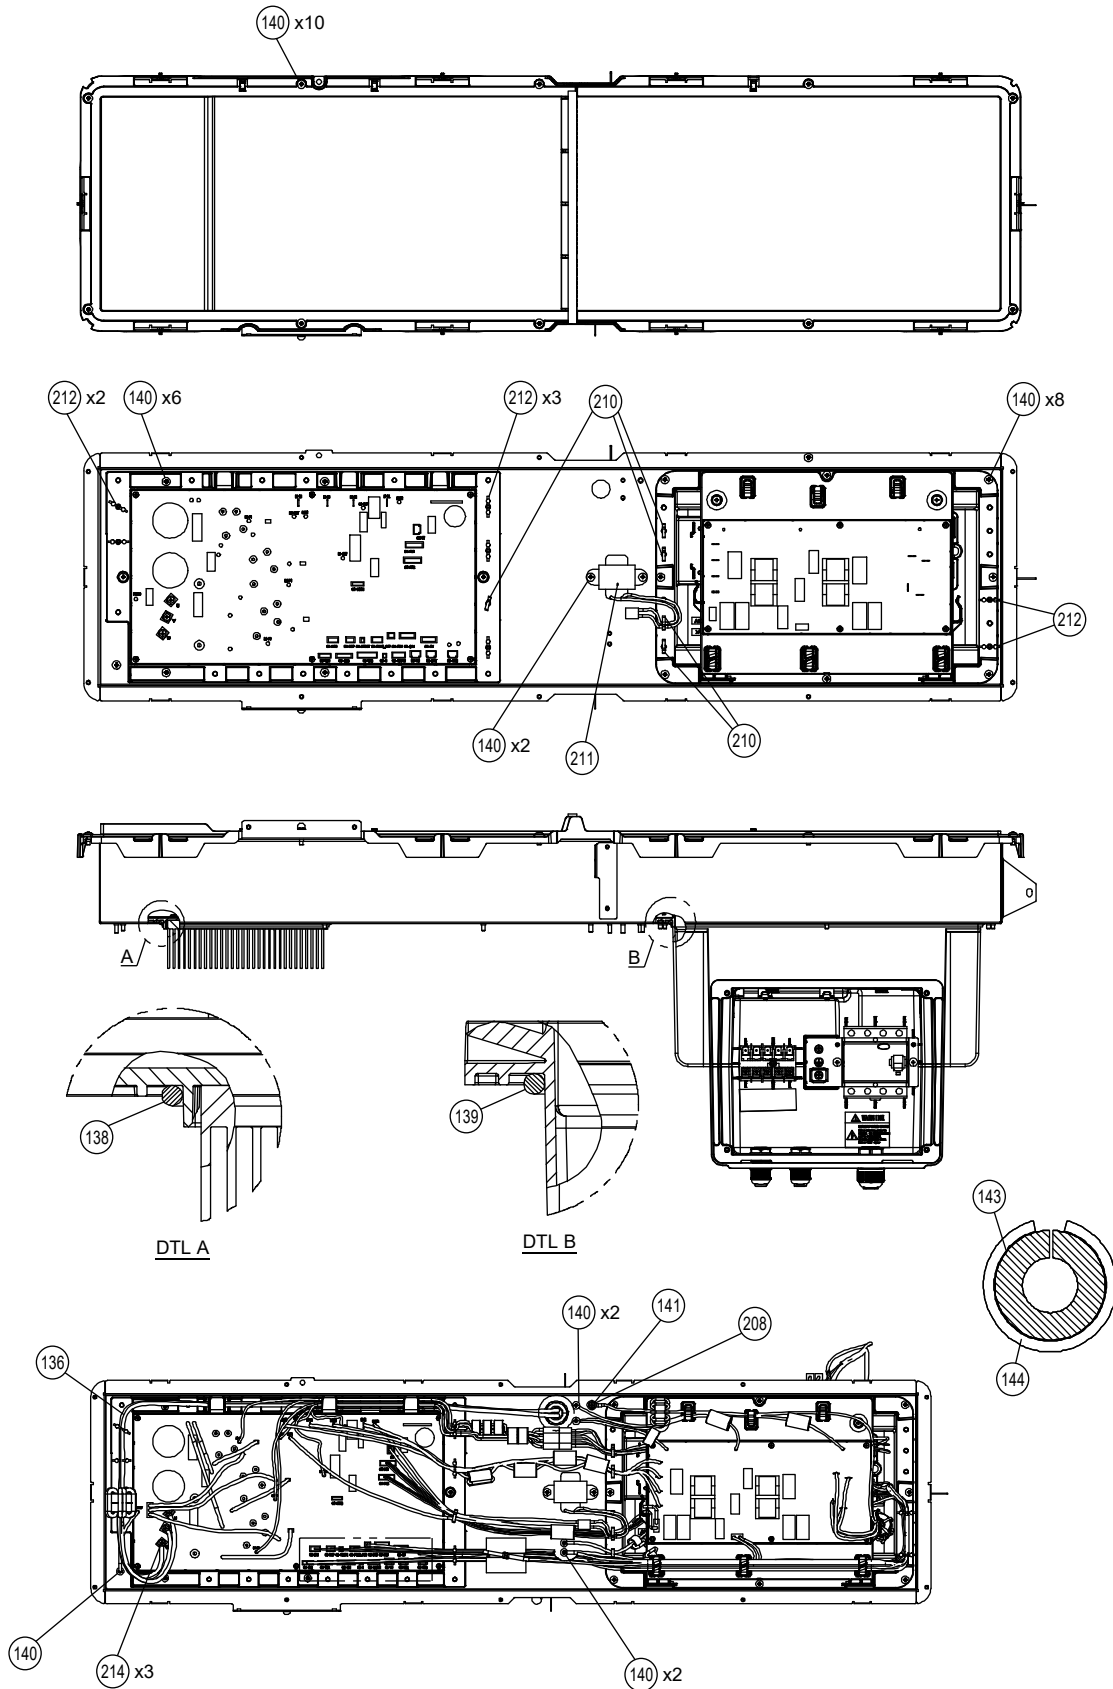



**Note:**  
 The above exploded view is for the purpose of parts disassembly and replacement.  
 The non-numbered parts are not kept as standard service parts.

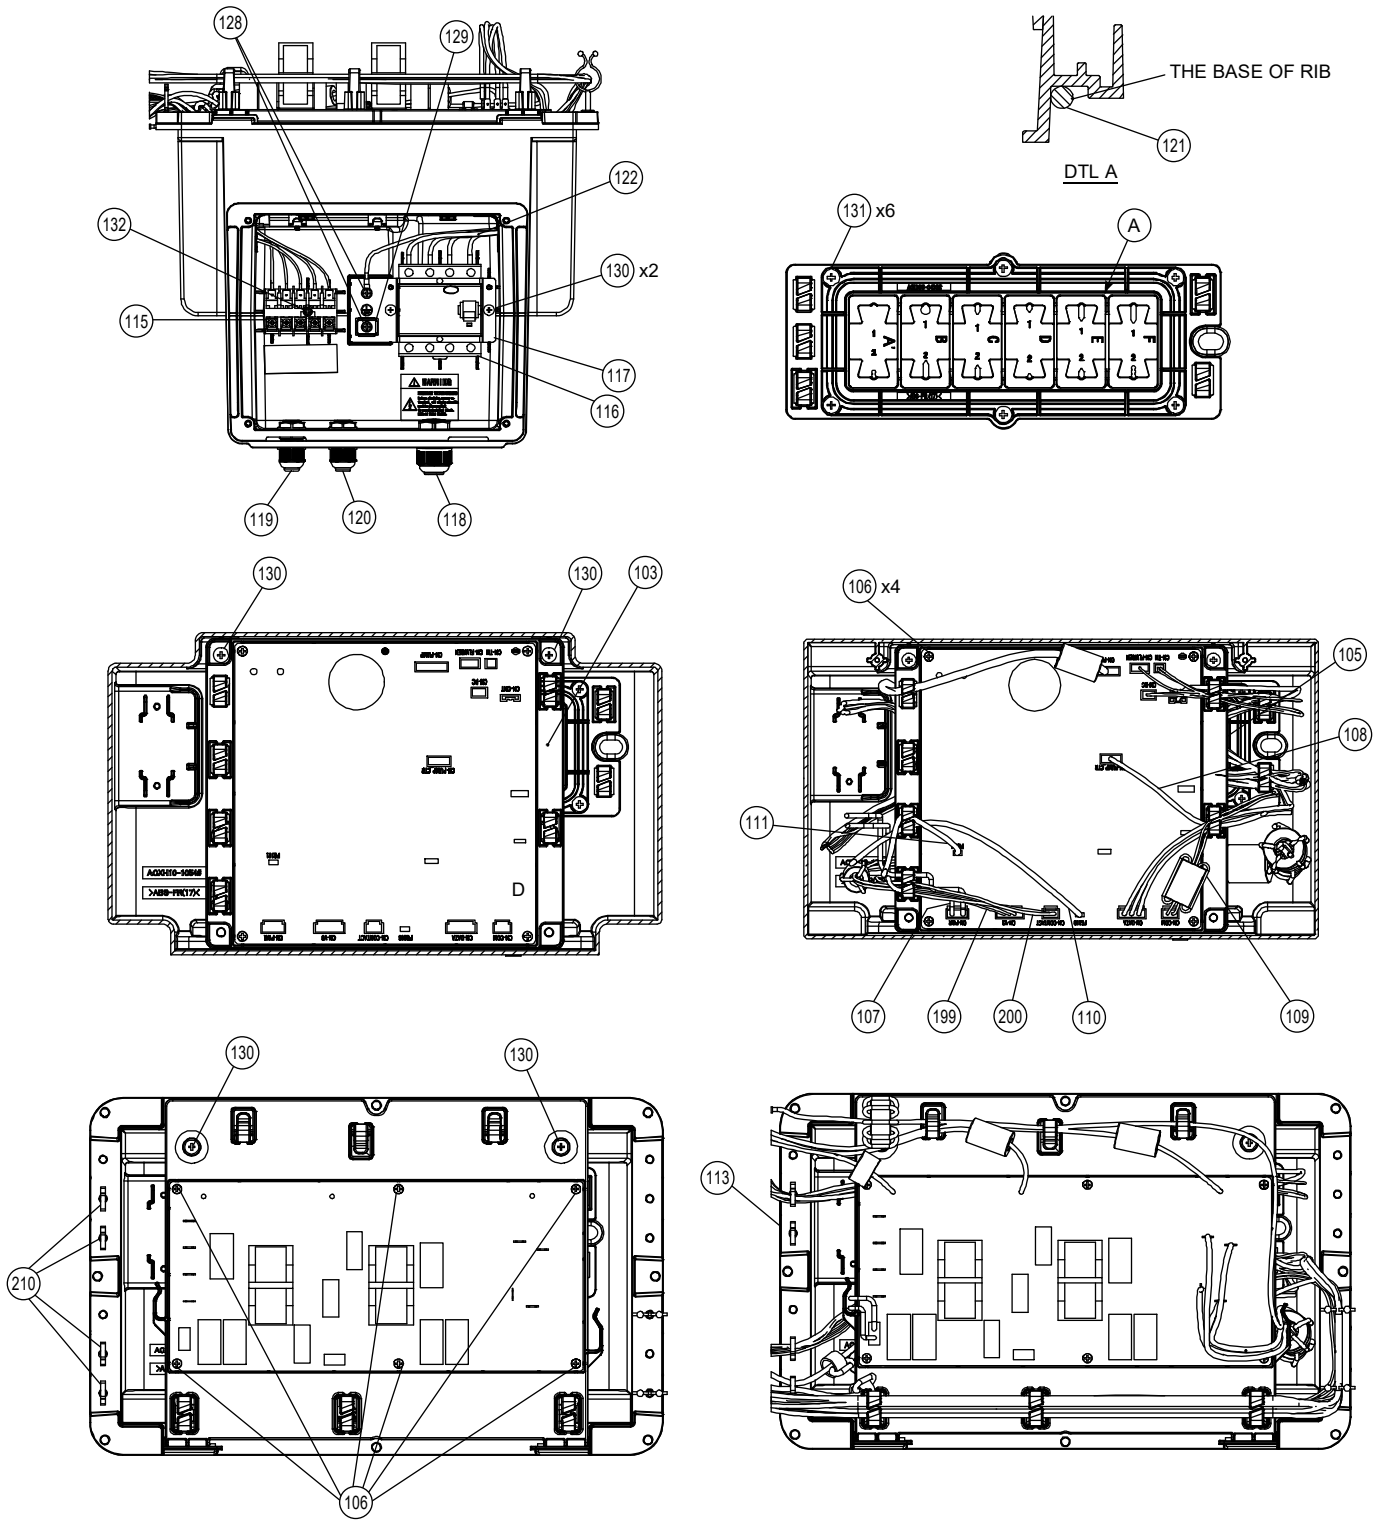


DTL 4

**Note:**


The above exploded view is for the purpose of parts disassembly and replacement.  
 The non-numbered parts are not kept as standard service parts.

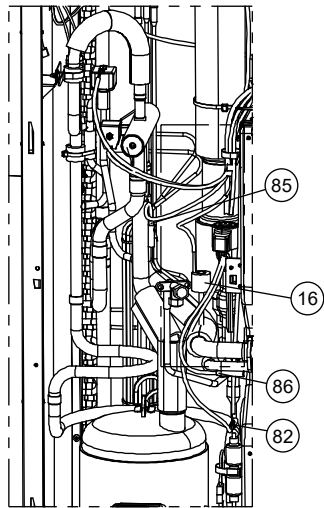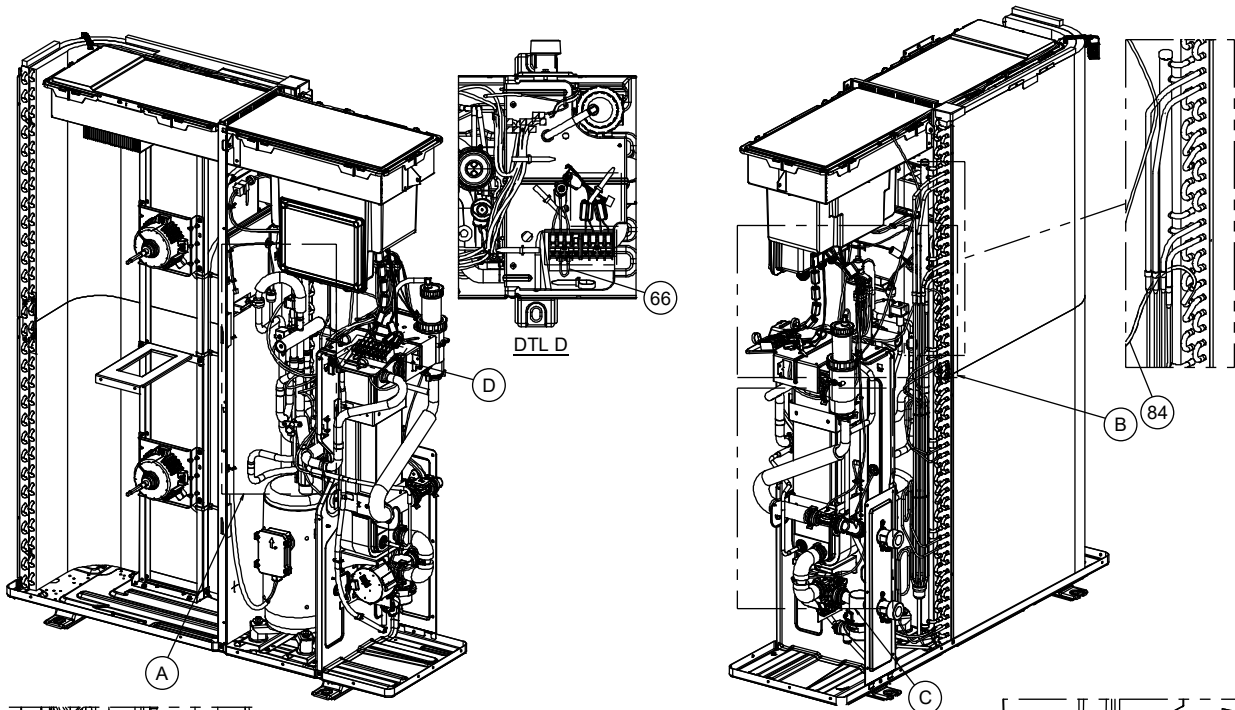


DTL A  
REFRIGERANT CIRCUIT

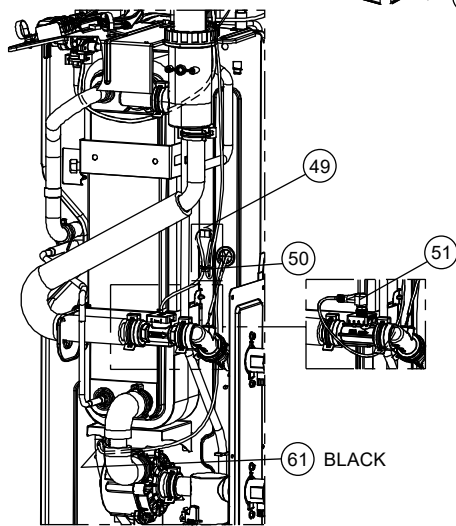


DTL C  
WATER CIRCUIT

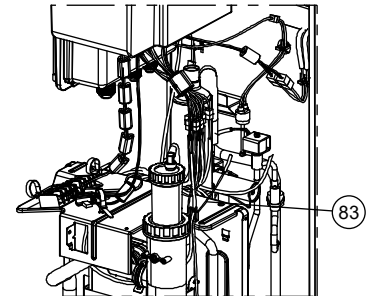

DTL B  
CONNECTING CONNECTORS

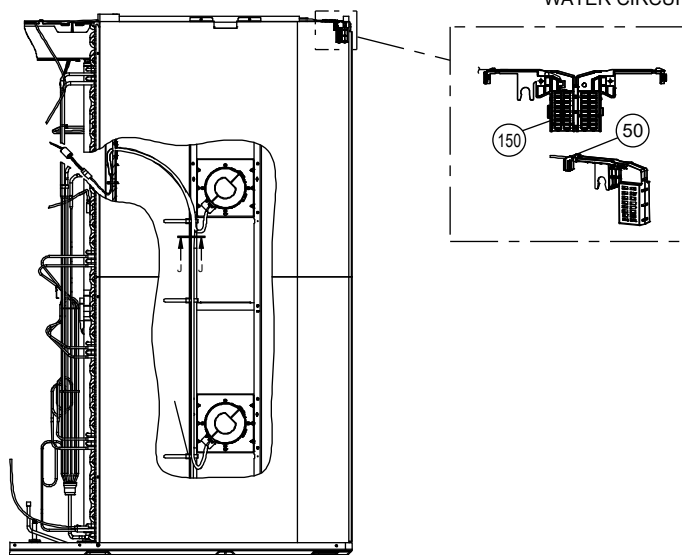

BACK VIEW  
FAN MOTOR L/W ROUTE

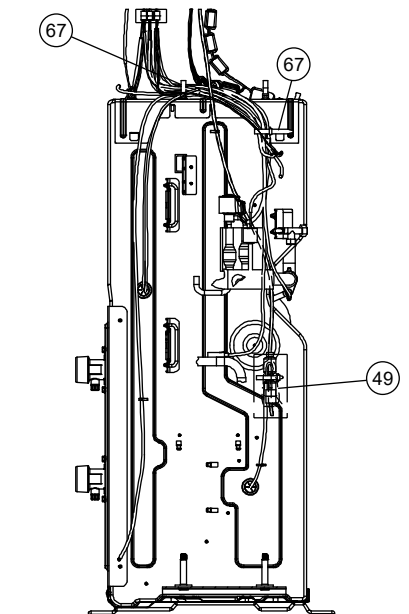


DTL 5  
SOUND PROOF BOARD OF WATER CIRCUIT



DTL 5

**Note:**


The above exploded view is for the purpose of parts disassembly and replacement.  
The non-numbered parts are not kept as standard service parts.

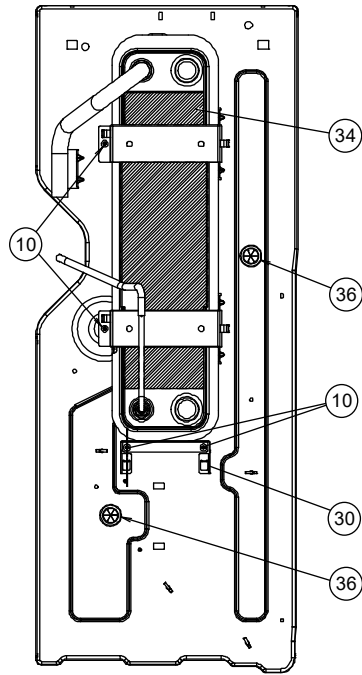

DTL 6

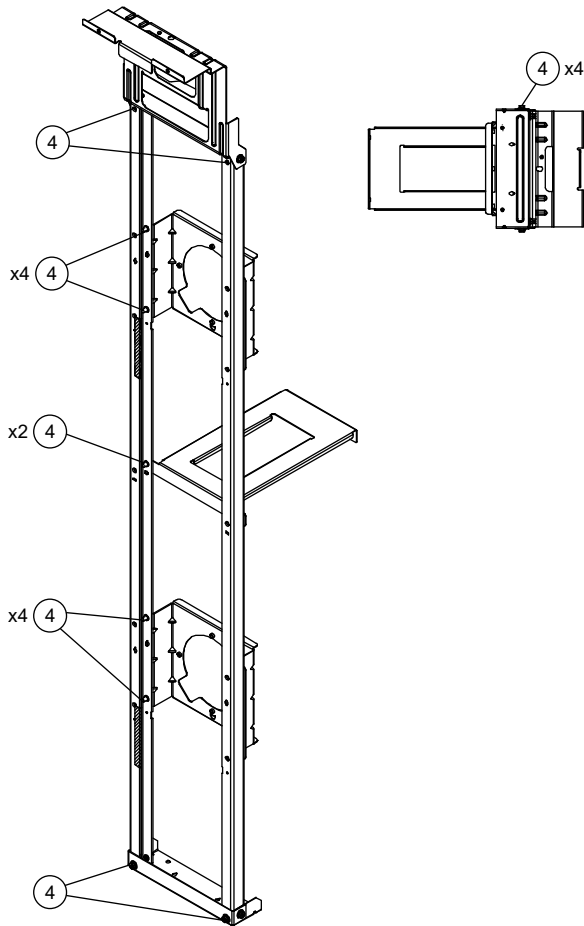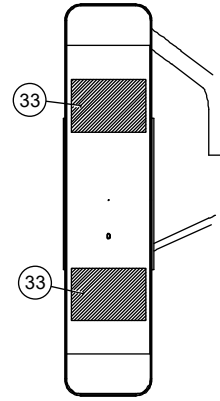


DTL 7

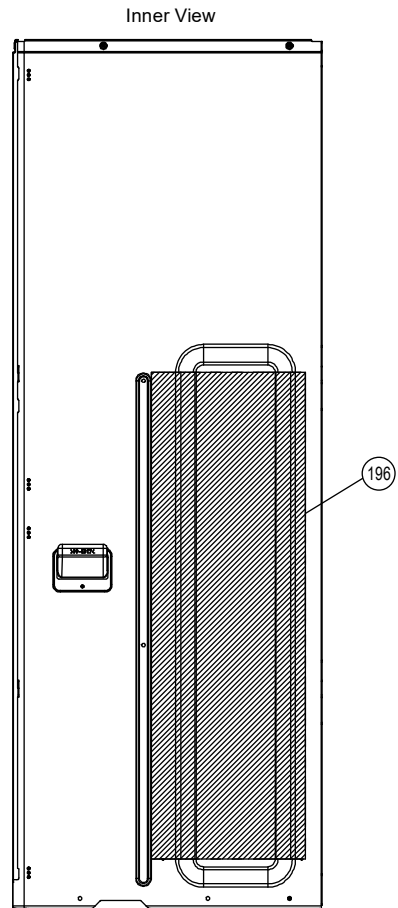


DTL 9

**Note:**

The above exploded view is for the purpose of parts disassembly and replacement.  
The non-numbered parts are not kept as standard service parts.

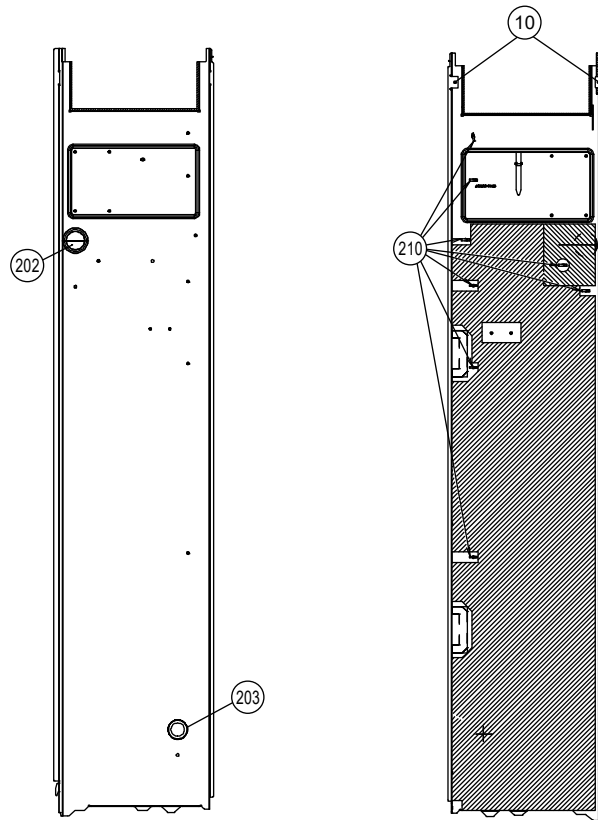

DTL 10

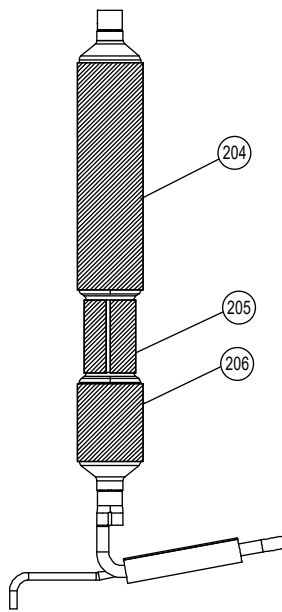



















DTL 11

**Note:**  
 The above exploded view is for the purpose of parts disassembly and replacement.  
 The non-numbered parts are not kept as standard service parts.


SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WDG09ME8	WH-WDG12ME8	WH-WDG16ME8	REMARK
	1	BASE PAN - COMPLETE	1	ACXD52C02020	←	←	
	2	BASE PAN ASSY	1	ACXD52K05840	←	←	
	3	CONVEX PLATE ASS'Y	2	ACXD65K00030	←	←	
	4	SCREW	22	H551040J	←	←	
	5	SCREW	16	H55406J	←	←	
	6	O-RING	4	ACXB81-07660	←	←	
⚠	7	COMPRESSOR	1	ACXB09-10670	←	←	O
	8	NUT	4	H561049	←	←	
	9	FIN & TUBE CONDENSER COMPLETE	1	ACXB32C32110	←	←	
	10	SCREW	39	ACXH55-07140	←	←	
	11	SOUND - PROOF BOARD	1	ACXH15-04301	←	←	
⚠	12	FIXED INDUCTORS	3	G0C392J00060	←	←	O
	13	4-WAYS VALVE	1	ACXB00-01530	←	←	O
	14	TUBE ASSY	1	ACXT00-90930	←	←	
	15	TUBE ASSY	1	ACXT00-94520	←	←	
⚠	16	SENSOR	1	ACXA50-06450	←	←	O
	17	TUBE ASSY	1	ACXT00-94530	←	←	
⚠	18	PRESSURE SWITCH	1	ACXA10-00710	←	←	O
	19	MULTIBENT TUBE	1	ACXT32-09830	←	←	
	20	TUBE ASSY	1	ACXT00-95520	←	←	
	21	2-WAYS VALVE	1	ACXB02-04110	←	←	O
	22	2-WAY VALVE COMPLETE_INHOUSE	1	ACXT00-94490	←	←	O
	23	2-WAYS VALVE	1	ACXB02-03960	←	←	O
	24	TUBE ASSY (RECEIVER)	1	ACXT00-94470	←	←	
	25	TUBE ASSY (EXPANSION VALVE)	1	ACXT00-94480	←	←	
	27	SOUND PROOF MATERIAL	1	ACXG30-16890	←	←	
	28	SOUND PROOF MATERIAL	1	ACXG30-14840	←	←	
	29	SOUND - PROOF BOARD	1	ACXH15K01171	←	←	
	30	PARTICULAR PLATE	1	ACXD90-30940	←	←	
	31	FOAMED POLYSTYRENE	1	ACXG07-08650	←	←	
⚠	32	HOT WATER COIL - COMPLETE	1	ACXB90C02160	←	←	
	33	POLY - E. FOAM	2	ACXE10A70-100	←	←	
	34	ADH. POLY - E. FOAM	1	ACXG12-42390	←	←	
	35	PARTICULAR PLATE	2	ACXD90-30950	←	←	
	36	BUSHING	2	ACXH51-01760	←	←	
	37	FILTER COMPLETE	1	ACXB51C00170	←	←	O
	38	O-RING	11	ACXB81-06910	←	←	
	39	RETAINING RING	10	ACXH58-00370	←	←	
⚠	40	PUMP	1	ACXB53-01000	←	←	O
	41	PARTICULAR PLATE	1	ACXD90-30970	←	←	

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WDG09ME8	WH-WDG12ME8	WH-WDG16ME8	REMARK
	42	SELF TAPPING SCREW	2	XTT4+16CFJ	←	←	
	43	TUBE ASSY - COMPLETE	1	ACXT00C52570	←	←	
	44	L-SHAPED TUBE	1	ACXT20-15030	←	←	
	45	FILTER COMPLETE	1	ACXB51C00160	←	←	O
	46	TUBE ASSY - COMPLETE INHOUSE	1	ACXT00C49260	←	←	
	47	O-RING	2	ACXB81-06820	←	←	
⚠	48	FLOW SENSOR (VALVE BODY)	1	ACXB62-00912	←	←	O
	49	BAG	2	G871059	←	←	
	50	BAND	2	H88000	←	←	
	51	LEAD WIRE - COMP. (VB01-FLWSEN)	1	ACXA61C04000	←	←	O
	52	U-SHAPED TUBE - COMPLETE	1	ACXT23C00170	←	←	
	53	PARTICULAR PLATE	1	ACXD90-31030	←	←	
	54	BAND	2	H881092	←	←	
⚠	55	VALVE BODY (PRESSURE RELIEF)	1	ACXB62-01320	←	←	O
	56	RETAINING RING	2	H581038	←	←	
	57	TUBE ASSY	1	ACXT00-85820	←	←	
	58	STRAIGHT TUBE	1	ACXT10-21230	←	←	
⚠	59	SENSOR - COMPLETE	1	ACXA50C20091	←	←	O
	60	O-RING	1	ACXB81-06790	←	←	
⚠	61	SENSOR - COMPLETE	1	ACXA50C20630	←	←	O
	62	O-RING	2	ACXB81-06780	←	←	
	63	SELF TAPPING SCREW	1	XTT4+8CFJ	←	←	
	64	SELF TAPPING SCREW	1	XTT4+8FFJ	←	←	
	65	PARTICULAR PLATE	1	ACXD90-30930	←	←	
	66	LEAD WIRE - COMPLETE (SIGNAL)	1	ACXA61C00650	←	←	O
	67	BAND	8	H88133	←	←	
	68	BUTYL TAPE	1	ACXKG3AF80-180	←	←	
	69	BUTYL TAPE	1	ACXKG5AF80-120	←	←	
	70	ADH. POLY - E. FOAM	1	ACXG12-42490	←	←	
	71	PARTICULAR PLATE	1	ACXD90-34880	←	←	
	72	RUBBER	2	G251016	←	←	
	73	PARTICULAR PLATE - COMPLETE	1	ACXD90C06790	←	←	
	74	SCREW	2	H55440J	←	←	
	75	C-PIECE	2	ACXD79-00390	←	←	
	76	RUBBER	2	G251015	←	←	
	77	RUBBER	1	G251021	←	←	
⚠	78	V-COIL COMPLETE	1	ACXA43C08090	←	←	O
	79	SCREW	2	H55082J	←	←	
⚠	80	V-COIL COMPLETE	1	ACXA43C08100	←	←	O
⚠	81	V-COIL COMPLETE	1	ACXA43C08120	←	←	O

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WDG09ME8	WH-WDG12ME8	WH-WDG16ME8	REMARK
	82	SENSOR - COMPLETE	1	ACXA50C20620	←	←	O
	83	SENSOR - COMPLETE	1	ACXA50C19550	←	←	O
	84	SENSOR - COMPLETE	1	ACXA50C19710	←	←	O
	85	SENSOR - COMPLETE	1	ACXA50C22040	←	←	O
	86	SENSOR - COMPLETE	1	ACXA50C19720	←	←	O
	87	PLATE SPRING	5	H711010	←	←	
	90	DC MOTORS (BRUSHLESS GENERAL USE)	1	L6CBYYL0590	←	←	O
	91	DC MOTORS (BRUSHLESS GENERAL USE)	1	L6CBYYL0591	←	←	O
	92	SCREW	8	H551455	←	←	
	93	FAN ASSY	2	ACXH03K01200	←	←	
	94	WASHER	2	H571075A	←	←	
	95	NUT	2	H561112A	←	←	
	96	POLY - E. FOAM	1	ACXE20A55-55	←	←	
	97	POLY - E. FOAM	1	ACXE15A15-500	←	←	
	98	POLY - E. FOAM	1	ACXE15A15-150	←	←	
	99	POLY - E. FOAM	1	ACXE15A15-25	←	←	
	100	EPT SEAL	1	ACXD5A20-100	←	←	
	101	CONTROL BOARD ASSY_PAINTED	1	ACXH10K03211A	←	←	
	102	ELECTRONIC CONTROLLER - COMPLETE (MAIN)	1	ACXA74C29170	ACXA74C29180	ACXA74C29190	O
	103	CONTROL BOARD/SUB - CBOX	1	ACXH10-10540	←	←	
	104	ELECTRONIC CONTROLLER (SUB)	1	ACXA74C07641	←	←	O
	105	CONTROL BOARD/SUB	1	ACXH10-10570	←	←	
	106	MACHINE SCREW & WASHER ASSY	16	XTB3+8CFJ	←	←	
	107	LEAD WIRE - COMP. (CN-PWR)	1	ACXA61C00910	←	←	O
	108	LEAD WIRE - COMP. (CN-PUMP_CTR)	1	ACXA61C00950	←	←	O
	109	LEAD WIRE - COMP. (CN-COM)	1	ACXA61C00960	←	←	O
	110	LEAD WIRE - COMP. (FG103)	1	ACXA61C04260	←	←	O
	111	LEAD WIRE - COMP. (FG101)	1	ACXA61C04270	←	←	O
	112	ELECTRONIC CONTROLLER (NF)	1	ACXA73-49470	←	←	O
	113	CONTROL BOARD/NF	1	ACXH10-10560	←	←	
	114	BOX SHAPED PLATE - COMPLETE	1	ACXD66C00860	←	←	
	115	TERMINAL BOARD ASSY	1	A28K1294	←	←	O
	116	CIRCUIT BREAKER	1	ACXA18-00021	←	←	O
	117	U-SHAPED PIECE	1	ACXD90-30990	←	←	
	118	HOLDER - P.S. CORD	1	ACXH31-01640	←	←	
	119	HOLDER - P.S. CORD	1	ACXH31-01620	←	←	
	120	HOLDER - P.S. CORD	1	ACXH31-01630	←	←	
	121	PACKING	1	ACXB81-07670	←	←	
	122	LEAD WIRE - COMP. (L1-L3/N/IN)	1	ACXA61C00900	←	←	O

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WDG09ME8	WH-WDG12ME8	WH-WDG16ME8	REMARK
	128	MACHINE SCREW & WASHER ASSY	2	XYN5DC10FJ	←	←	
	129	WASHER	1	H571044	←	←	
	130	SELF TAPPING SCREW	6	XTT4+10CFJ	←	←	
	131	SELF TAPPING SCREW	6	XTT4+12CFJ	←	←	
	132	SELF TAPPING SCREW	1	XTN4+20CFJ	←	←	
	133	CONTROL BOARD COVER - COMPLETE	1	ACXH13C06720	←	←	
	136	LEAD WIRE - COMP. (U/V/W)	1	ACXA61C00660	←	←	O
	138	PACKING	1	ACXB81-07211	←	←	
	139	PACKING	1	ACXB81-07680	←	←	
	140	SCREW	31	H551198	←	←	
	141	SCREW	5	H551049J	←	←	
	142	HOLDER - P.S. CORD	1	ACXH31-01650	←	←	
	143	FILTER FOR EMI/EMC (CORES)	1	J0KF00000101	←	←	O
	144	POLY - E. FOAM (FLAME PROOF)	1	ACXEN2A50-130	←	←	
	147	SCREW	3	ACXH55-00120	←	←	
	148	CONTROL BOARD COVER - COMPLETE	1	ACXH13C06650	←	←	
	150	HOLDER - SENSOR	1	ACXH32-01480	←	←	
	151	SOUND PROOF MATERIAL	1	ACXG30-14880	←	←	
	152	CABINET SIDE PLATE (R)	1	ACXE04-13920CZ	←	←	
	153	HANDLE	3	ACXE16-00230GCZ	←	←	
	154	SCREW	43	ACXH55-07980	←	←	
	155	CABINET FRONT PLATE (L)	1	ACXE06-06150CZ	←	←	
	156	DISCHARGE GRILLE	2	ACXE20-01960G	←	←	
	157	SCREW	15	ACXH55-07740	←	←	
	158	CABINET SIDE PLATE (L)	1	ACXE04-13910CZ	←	←	
	159	PARTICULAR PLATE	1	ACXD90-29140CZ	←	←	
	160	CABINET TOP PLATE	1	ACXE03-05151CZ	←	←	
	162	CABINET FRONT PLATE (R)	1	ACXE06-05910CZ	←	←	
	163	ACCESSORY - COMPLETE	1	ACXH82C33090	←	←	
	165	WIRING DIAGRAM (CU)	1	ACXF22-13030	←	←	
	166	NAME PLATE (CU)	1	ACXF03-08760	ACXF03-08770	ACXA74C29190	
	167	BADGE (PANASONIC)	1	ACXE37-20190	←	←	
	168	BADGE (AQUAREA)	1	ACXE37-20200	←	←	
	169	OPERATING INSTRUCTION - COMPLETE	1	ACXF55C33580	ACXF55C33590	←	
	170	INSTALLATION INSTRUCTION COMPLETE	1	ACXF60C22051	←	←	
	171	MODEL LABEL	1	ACXF87-71011	ACXF87-71021	←	
	172	BAG (UNIT)	1	ACXG86-06801	←	←	
	173	BASE BOARD - COMPLETE	1	ACXG62C03021	←	←	
	174	SHOCK ABSORBER	1	ACXG70-16303	←	←	

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WDG09ME8	WH-WDG12ME8	WH-WDG16ME8	REMARK
	175	SHOCK ABSORBER	1	ACXG70-16312	←	←	
	176	SHOCK ABSORBER	1	ACXG70-16323	←	←	
	177	SHOCK ABSORBER	1	ACXG70-15320	←	←	
	178	SHOCK ABSORBER	1	ACXG70-15330	←	←	
	179	CORRUGATED CARDBOARD	1	ACXG57-14870	←	←	
	180	C.C. CASE	1	ACXG50-64402	←	←	
	181	PARTICULAR PLATE	1	ACXD90-30921CZ	←	←	
	182	U-SHAPED PLATE	2	ACXD62-02960	←	←	
	183	FAN MOTOR BRACKET	2	ACXD54-05030	←	←	
	184	PARTICULAR PLATE	1	ACXD90-31171	←	←	
	185	PARTICULAR PLATE	1	ACXD90-30590	←	←	
	186	PACKING	1	ACXB81-07650	←	←	
	187	CAP (CABINET SIDE PLATE)	6	ACXH52-04230G	←	←	
	188	ANTI - VIBRATION BUSHING	4	H501113	H501113CZ	←	
	189	SOUND INSULATION SHEET	1	ACXH86-06850	←	←	
	190	TUBE ASSY	1	ACXT00-94540	←	←	
	191	MULTIBENT TUBE	1	ACXT32-09800	←	←	
	192	TUBE CONNECTER	2	ACXT29-01030	←	←	
	193	HOLDER - COUPLING	1	ACXH35-02360	←	←	
⚠	194	TERMINAL BOARD ASSY	2	ACXA28K02540	←	←	O
	195	SOUND PROOF MATERIAL	1	ACXG30-14850CZ	←	←	
	196	SOUND PROOF MATERIAL	1	ACXG30-14860	←	←	
	197	RETAINING RING	1	ACXH58-00371	←	←	
	198	SOUND PROOF MATERIAL	1	ACXG30-16610	←	←	
⚠	199	LEAD WIRE - COMP. (CN-V3)	1	ACXA61C00930	←	←	O
⚠	200	LEAD WIRE - COMP. (CN-CONTACT)	1	ACXA61C00940	←	←	O
	201	EPT SEAL	3	ACXD3A10-92	←	←	
	202	RUBBER GROMMET	1	ACXB81-00030	←	←	
	203	CAP	1	H521180	←	←	
	204	POLY - E. FOAM (FLAME PROOF)	1	ACXEN2A235-235	←	←	
	205	POLY - E. FOAM (FLAME PROOF)	1	ACXEN2A75-150	←	←	
	206	POLY - E. FOAM (FLAME PROOF)	1	ACXEN2A80-220	←	←	
	207	CAP	2	ACXH52-03610	←	←	
	208	TOOTHED LOCK WASHER	5	XWC5BV	←	←	
	209	SELF TAPPING SCREW	2	XTN4+16CFJ	←	←	
	210	BAND	20	4605008	←	←	
⚠	211	FIXED INDUCTORS	1	G0C103Z00006	←	←	O
	212	BAND	7	4605009	←	←	
	213	PACKING	1	ACXB81-07690	←	←	
	214	MACHINE SCREW & WASHER ASSY	7	ACXH55-02560	←	←	

SAFETY	REF. NO.	DESCRIPTION & NAME	QTY.	WH-WDG09ME8	WH-WDG12ME8	WH-WDG16ME8	REMARK
	215	PLUG	2	B821027	←	←	
	216	PACKING	2	ACXB81-06770	←	←	

**Note:**

- All parts are supplied from PHVACCZ, Czech (Vendor Code: 00029407).
- “O” marked parts are recommended to be kept in stock.